


CSTC-40 PCB From Start to Finish

CSTC-40 PCB 从头到尾

1.刷写固件 1. Flashing Firmware

在PCB未接入按住左上角按键,然后通电,显示FXTwink,这个U盘

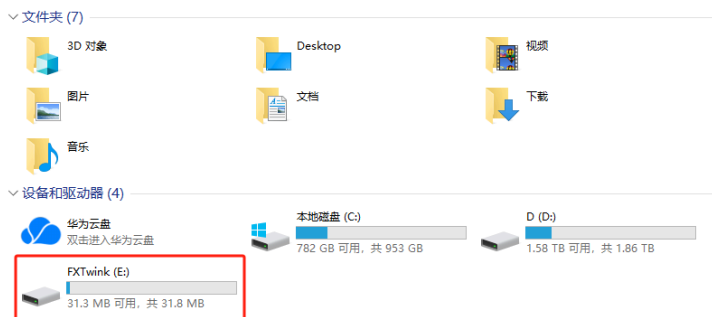

Hold down the top-left key on the PCB before connecting it to power. Once powered, it will display "FXTwink" as a USB drive.

Double-click to open the drive, drag the .UF2 firmware file into it, and do not modify any files in the drive!

双击打开,将.UF2固件拖入即可,U盘中的文件不要动!

[cstc40 vial 20240606.uf2](#)

VIAL

Web VIAL

网页版VIAL:[Vial Web](#)

Software download

软件下载:[Download - Vial](#)

网页VIAL连接 . Web VIAL connection


Web VIAL: Vial Web Go to the website and click: Start Vial

网页版VIAL:[Vial Web](#) 进入网页 点击:Start Vial



选择对应键盘

Select the corresponding keyboard

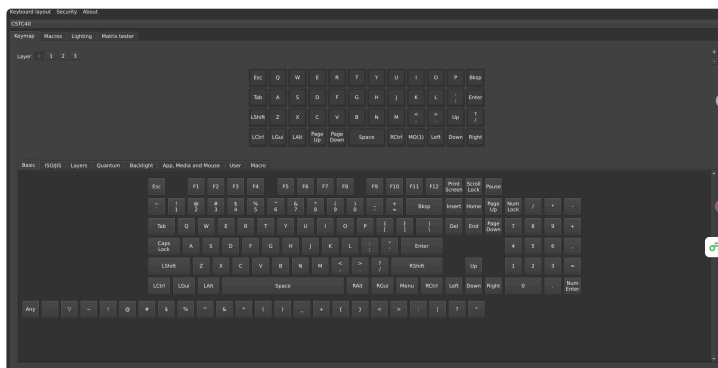

即可正常进入使用。
Then you can start using it normally.