

## Global shortcuts

Action	Shortcut
Track settings	Shift+Track Sel
Clip settings	Shift+Clip
Sound settings	Shift+Sound
System menu	Shift+Filter
Motion editor	Shift+Mod
Copy clip/track	Shift+FX
Clear clip	Shift+Project+Track Sel
Quick write project	Shift+Tempo
Scatter settings	Shift+Scatter
Quantize settings	Shift+Record
Multi FX settings	Shift+Multi FX
Select C1 parameter	Sound+C1
Select C2 parameter	Filter+C2
Select C3 parameter	Mod+C3
Select C4 parameter	FX+C4
Storage mode	Project+power on device



# Roland MC-101

## Scene shortcuts

Action	Shortcut
Store Scene	Clip+Pad1-Pad8
Recall Scene	Clip+ long press Pad1-Pad8

## Playback shortcuts

Action	Shortcut
Mute/Unmute drum part	Note+Pad (for clip) or Track Sel+Pad (for track)
Select key of tone track	Note+Pad
Select pitch of looper track	Note+Pad
Random sequence	Track Sel+>
Reverse sequence	Track Sel+<
Tap tempo	Shift+Exit
Stutter/top of pattern	Shift+Play while playing
Stop/play current clip	Clip+Sel while playing
Multi FX parameter select	Multi FX+FX Prim
Multi FX parameter depth	Multi FX+FX Depth
View knob value	Shift+C1-C4

## Sequence editing shortcuts

Action	Shortcut
Copy/Paste Step	Select Pad to copy, Shift+FX, Select Pad to paste, Shift+FX
Delete Step	Shift+Project+Pad
Pad edit	Shift+Note
Duplicate measure	Seq+>
Add drum substep	Seq+Pad
Clear clip	Shift+Project+Clip
Edit measure length	Shift+> or Shift+<
Auto-advance mode (tone track only)	Pad, Record + Pad of 1st step
Note edit	Seq, Pad, C1-C4 to change values
Note edit alternative	Seq, Pad, hold Sound or Filter or Mod or FX, Value to change value.
First/last step mode	Shift+Seq
Cancel first/last step	Shit+Project while in first/last step mode