

Temperature Control Heating Stage

VCC = +5V
 VIN / GND = external power supply
 V+ / V- = controlled power supply to the system
 RTD- / RTD+ / F- / F+ = connect to pt100

Drawn By: Bhaskar Jyoti Gogoi

