


OVERVIEW

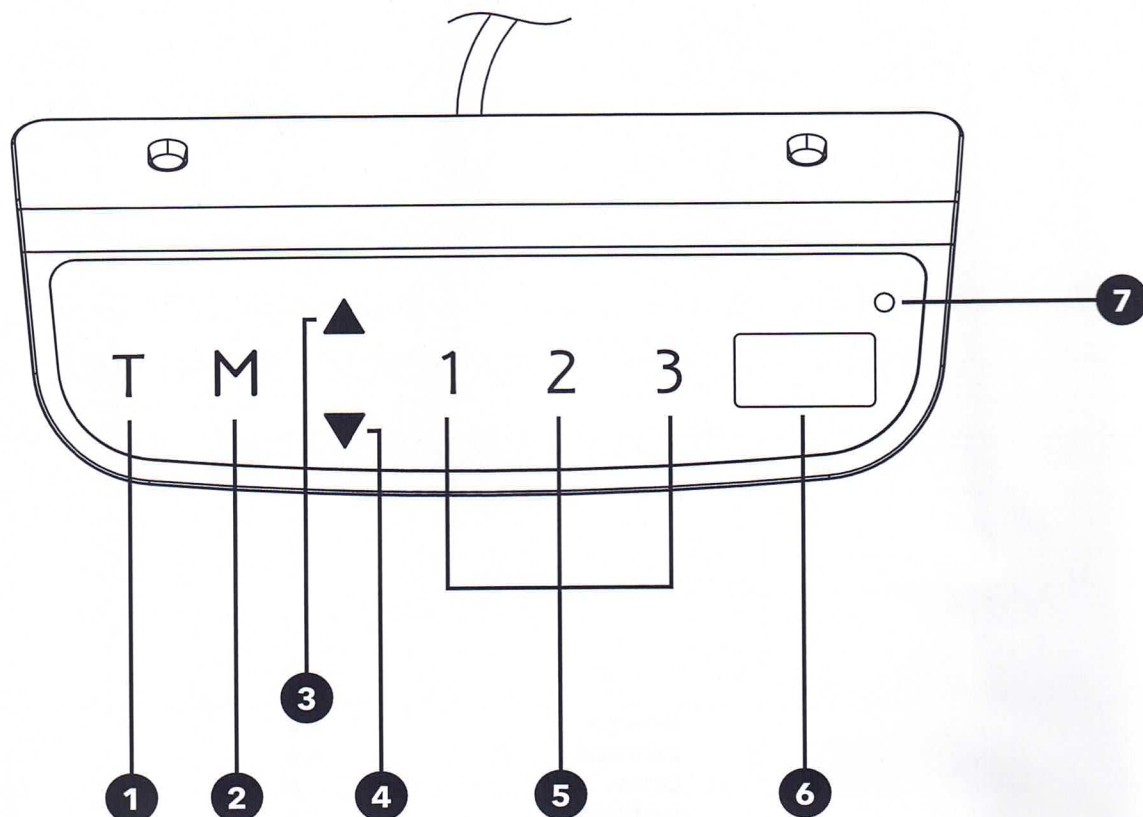

- | | | |
|---|-------------------------------|---|
| 1 | Timer | Setting timer to change the working position |
| 2 | Lock/Pre-set Setting | Unlock/lock the control panel and saving pre-set settings |
| 3 | Up | Adjusting the table height |
| 4 | Down | Adjusting the table height |
| 5 | Pre-set Settings 1/2/3 | Adjusting the table height to one of the three pre-set settings |
| 6 | Display | Shows the table height and other relevant information |
| 7 | Indicator | Shows the timer setting |

HOW TO USE THE CONTROL PANEL

Safety Standby Mode

If you wish to prevent changes to the settings, hold down the **M** button for 3 seconds to **lock** the control panel. Safety standby mode is activated as soon as --- appears on the display.

The safety standby mode is also automatically activated when there's no activity performed after 60 seconds.

To **unlock** the control panel, hold down the **M** button for 3 seconds.

Changing the Table Height

To adjust the table height, use the **up** or **down** buttons to the preferred position.

Pre-set Setting

To save a given height as a pre-set setting, press the **M** button. The display will show **S-**. Afterwards, press one of the buttons **1**, **2** or **3** within 5 seconds. Each of these buttons (1, 2 and 3) allow you to save a pre-set table height setting.

To activate the given pre-set setting, just press down on one of the buttons that you have previously set (1, 2 and 3).

Please Note: Press any of the buttons (other than the **T** button) to stop the table from adjusting in height.

Reset

To reset, press the **up** and **down** buttons at the same time. Do not release the buttons during the process. The table top goes down to the lowest possible height and then up a little.

Timer

The timer is used to indicate a change in a working position. As soon as the set timer elapses, a beep will sound.

To activate the timer, press the **T** button. The display will flash with **0.5h**. To extend the timer in 30 minute intervals, press the **T** button again. The timer can be set up to 2 hours. The timer is set as soon as the display stops flashing with the set time interval, and the indicator in the upper right hand corner of the control panel lights up. As soon as the set time interval passes, you'll hear a beeping sound that indicates that the timer has run out.

To **cancel** the timer, press the **T** button repetitively until the indicator light turns off in the upper right hand corner of the control panel.

Changing the Units

The control panel display is pre-set with the units in centimetres.

To change the units press down the **T** button down for 8 seconds. The units will change to inches, which is indicated with two beeping noises.

If you'd like to change the units back to centimetres, repeat the steps mentioned above. You'll know that the units have changed to centimetres when you hear one beep.

TROUBLESHOOTING

The table contains error messages that may show up on the control panel display, and their solutions. If the message persists, contact support.

Error message	Description	Solution
E01/E07	System has diagnosed non-specific electronic error	Unplug the table from the power source for 30 seconds
E02/E08	Different leg heights	Perform a reset
E04	Error in control panel connection	Unplug the table from the power source and check the control panel's connection
E05	Sensors have detected a collision	Release the button
E06	Electronic error	Replace control box
E11	Motor connection error	Check connection of motor cable M1
E12/E22	Unusual current	Replace control box
E13/14	Defective motor cable	Check motor cable M1 and replace it
E15	Short circuit	Replace motor M1
E16/E26	Motor error	Perform a reset
E17	Table top moves in the wrong direction	Replace motor cable M1
E18/E28	Table overload	Reduce table load
E21	Motor connection error	Check connection of motor cable M2
E23/E24	Defective motor cable	Check motor cable M2 and replace it
E25	Short circuit	Replace motor M2
E27	Table top moves in the wrong direction	Replace motor cable M2
E42	Memory error	Replace control box
E43	Error in anti-collision system sensors	Replace control box
HOT	System overheat	Do not change the table height for 18 minutes – let the system cool

Warning: Never disconnect the power cable while overheat protection is activated.

SETTINGS

Settings	Description	Factory value	Value range
S-1	Set the minimum table height	62 cm 24.4"	62 to 118 cm 24.4" to 46.4"
S-2	Set the maximum table height	128 cm 50.4"	72 to 128 cm 28.3" to 50.4"
S-3	Sensitivity settings for anti-collision sensor sensitivity when the table top moves up	4	0 to 8
S-4	Sensitivity settings for anti-collision sensor sensitivity when the table top moves down	4	0 to 8
S-5	Settings for gyroscopic sensor sensitivity	4	0 to 8
S-6	Settings for table top thickness for correct table height display		
S-7	Control panel lock setting	1	0 (off) 1 (on)

How to change settings

1. To access the settings, press the **M** and **T** at the same time for 5 seconds until the acoustic signal sounds and the display shows **S-1**.
2. Select the desired setting using the **up** and **down** buttons and confirm by pressing the **M** button.
3. Using the **up** and **down** buttons, set the desired value.
4. To change other settings, you can go back by pressing the **T** button and continuing from point 2.
5. To save the settings, press the **M** button. If saving is successful, the display will show **X-S**; if it is unsuccessful, it will show **X-F**.
6. You can leave the settings by pressing the **T** button.
7. You can reset to the factory values by pressing the buttons **M**, **T** and **up** for 5 seconds.

Note: Settings are automatically ended after 10 seconds of inactivity.