



+BATT connect to +12V Battery
GND1 connect to -12V Battery
+5V Power for RPi
GND Power for RPi
+3.3VP for IMU, GPIO-Bedieneinheit

