



User

Part Number

Tracking Number

Admin

IK01627480

1403960000

Test Lab

BCM Soft.Vr

CAS Soft.Vr

EKS

02.44

1.25

Network

BCM_CAN_High Speed



BCM_LIN_Front



BCM_CAN_Low Speed



BCM_LIN_Rear





CAS

CAS_CAN_Low Speed



SSB LIN For IMMO



Kick Sensor LIN



TPMS Rx Test



RKE Rx Test



LF Tx Test



R_DHS_Lock



R_DHS_UnLock



L_DHS_Lock



L_DHS_UnLock



Inputs

Front Wash Pump SW



Front High Speed Wiper SW



Front Low Speed Wiper SW



Front Intermittent Wiper SW





| | | | |
|----------------------------|--------------------------|--------------------------|--------------------------|
| Front Wiper Zero Position | <input type="checkbox"/> | Rear Wash-Wipe SW | <input type="checkbox"/> |
| Front Auto Wiper SW | <input type="checkbox"/> | Front Wiper MIST SW | <input type="checkbox"/> |
| Rear Intermittent Wiper SW | <input type="checkbox"/> | Auto Light SW | <input type="checkbox"/> |
| Hazard SW | <input type="checkbox"/> | Side Lamp SW | <input type="checkbox"/> |
| Dipped Lamp SW | <input type="checkbox"/> | Main Lamp SW | <input type="checkbox"/> |
| Front Fog Lamp SW | <input type="checkbox"/> | Rear Fog Lamp SW | <input type="checkbox"/> |
| Head Lamp Passing Light SW | <input type="checkbox"/> | RH Indicator SW | <input type="checkbox"/> |
| LH Indicator SW | <input type="checkbox"/> | Trip Key SW | <input type="checkbox"/> |
| Horn SW | <input type="checkbox"/> | Master Lock SW | <input type="checkbox"/> |
| Bonnet Status SW | <input type="checkbox"/> | Trunk Lid Open SW | <input type="checkbox"/> |
| BSD Activation SW | <input type="checkbox"/> | 360 Camera Activation SW | <input type="checkbox"/> |



Engine Oil Pressure SW



Brake Oil Level SW



Seat-belt Front Passenger



FLH Door Status SW



FRH Door Status SW



PAS Activation SW



Roof Lamp SW



RLH Door Status SW



RRH Door Status SW



FLH Door Lock SW



FRH Door Lock SW



Crash Unlock SW



Rear Wiper Zero Position



Driver Seat Belt SW



Brake Pedal SW



CAS Input



Brake Pedal SW



Start Relay Feedback



ACC Relay Feedback



ON Relay Feedback



Trunk Switch IN



SSB SW2 IN



SSB SW1 IN



Analog Input

Fuel Gauge Input



BCM Output



| | | | |
|--------------------------|---|------------------------------|---|
| LH Dipped Lamp | 0 | RH Dipped Lamp | 0 |
| RH Front Main lamp | 0 | LH Front Main lamp | 0 |
| AC Compressor Clutch | 0 | Front RH Side Lamp + DRL | 0 |
| Front LH Side Lamp + DRL | 0 | Rear Fog Lamp | 0 |
| Brake Lamp | 0 | Left Indicator Lamp | 0 |
| Right Indicator Lamp | 0 | Reverse Lamp + RPAS Power | 0 |
| Rear RH Side Lamp | 0 | Rear LH Side Lamp | 0 |
| Backlight For All Switch | 0 | Roof Lamp | 0 |
| Doors Lamp | 0 | Rear Window Winder Backlight | 0 |
| Front Washer Motor | 0 | Rear Washer Motor | 0 |
| ECO Relay | 0 | Front LH Fog Lamp | 0 |



Front RH Fog Lamp

0

Rear Screen Heater +
Mirror Heater

0

Rear Wiper Motor

0

Central Lock

0

Central Unlock

0

Licence Plate Lamp

0

RH Turning (Corner) Lamp

0

LH Turning (Corner) Lamp

0

Trunk Lamp

0

CAS Output

ESCL Micro Power

0

ESCL Motor Power

0



BCM Digital Output

Front Wiper Control Relay
CommandFront Wiper Speed Relay
Command

Sunroof Auto Close



Horn Relay Command



Right BSD Indicator



PAS Activation SW LED



Left BSD Indicator



Master Lock Switch LED



Hazard Function LED



Trunk Lid Open SW LED



CAS Digital Output

SSB Backlight



Start Relay Command (HO)

ACC Realy Command
(HO)

ON Relay Command (HO)

