

Pump Repair Manual

Step 1: Disconnect power

Step 2: Inspect pump

Step 3: Replace seal