

Motor Troubleshooting Guide

Check wiring

Measure resistance

Replace faulty coils