

WJ-HD616/716 update Procedure


1, Insert SD Memory Card

Insert SD Memory Card into the SD Memory Card slot on front panel.

2. Update firmware from "Maintenance" Menu


2-1 Press [SETUP/ESC] button for 2 seconds or more to open Setup Menu

2-2 Open the following [Maintenance] and [Settings Management] window by using cursor operation buttons such as [←→↑↓], [SET] and [ESC] button.

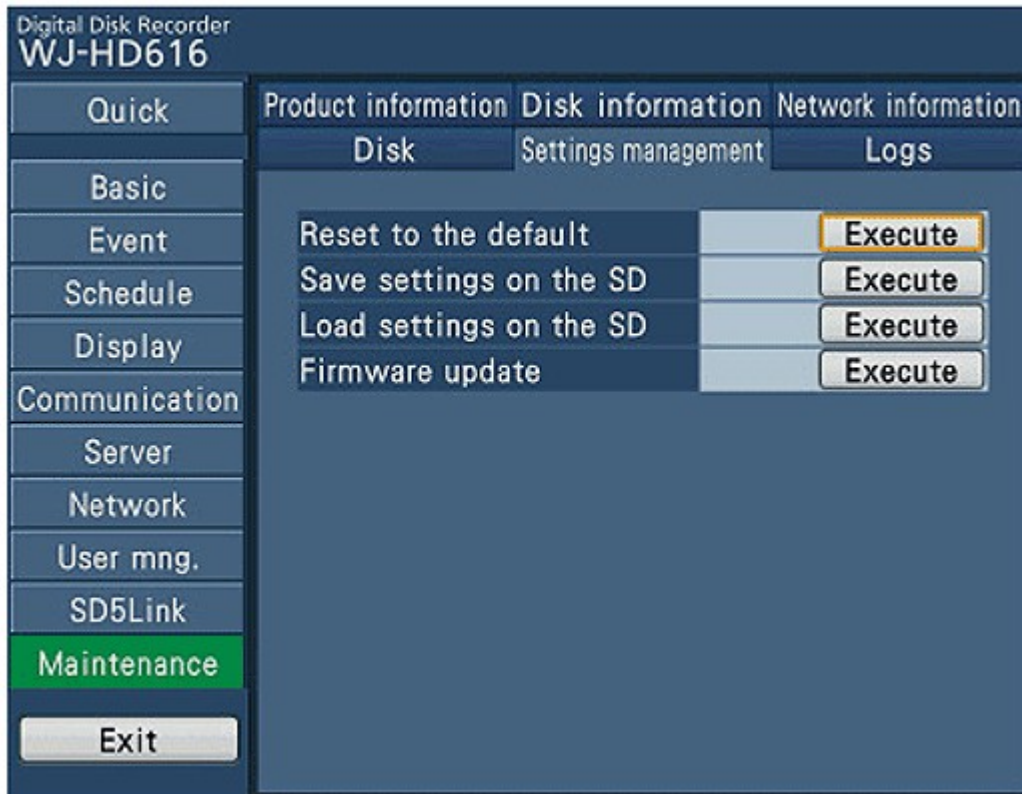


2-3 Move the cursor to [Execute] of [Firmware Update] and press the [SET] button.

2-4 Move the cursor to [OK] and press [SET] button on the "Confirmation" window as below image.

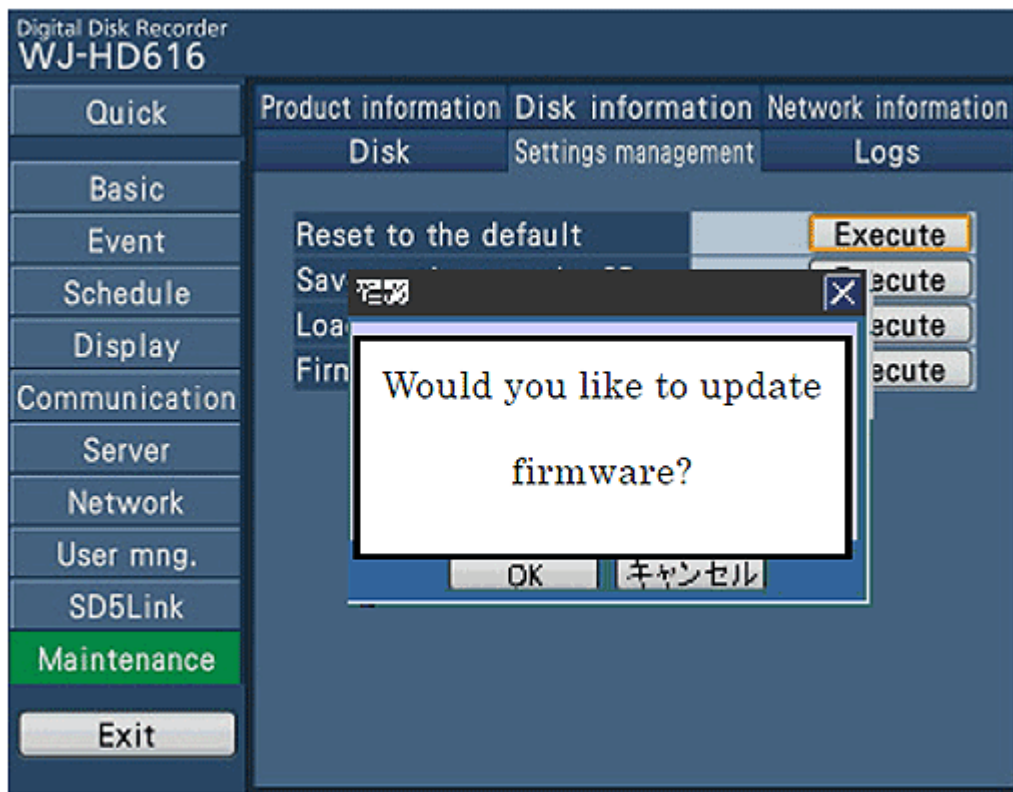

2-5 Setup Menu closes automatically and "Upgrading" is displayed on pop-up window like below image. At the same time, both green and orange color LED of CH1 - 16 buttons starts blinking.

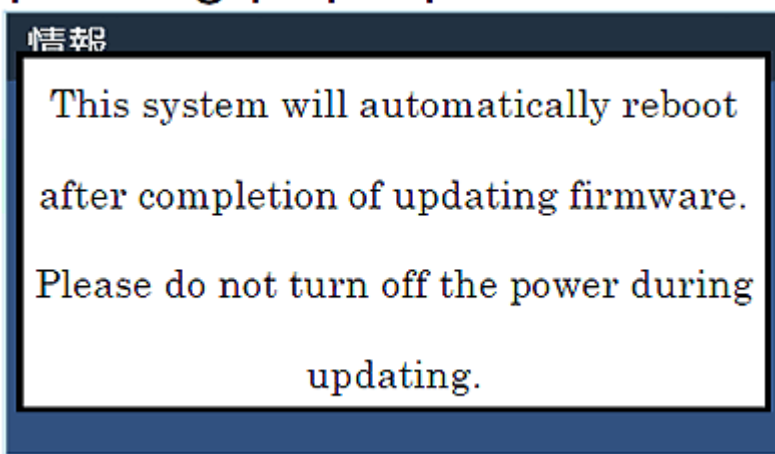

3. End of procedure

After LED stops blinking, HD616/HD716 will reboot automatically. The "SplashScreen" will appear and operating window follows.



4. Confirm the upgrade result

4-1 Click "Setup" tab, then [Maintenance] menu will appear, and select [Product Information].

Digital Disk Recorder
WJ-HD616

Quick	Disk	Settings management	Logs
Basic	Product information	Disk information	Network information
Event	Version information		
Schedule	Software version1	V0.02	
Display	Software version2	V0.45/V-./V0.69	
Communication	Software version3	V-./	
Server	Hardware version	V0.36	
Network	Software version of extension units		
User mng.	Ext.1	V-./	
SD5Link	Ext.2	V-./	
Maintenance	Ext.3	V-./	
Exit	Product information		
	DVD drive	Not available	
	RAID board	Not available	
	Serial number		

▲ Prev page 1/2 Next page ▼

Was this content helpful for you?



