

Moving the Cursor:

To move the cursor up and down, move your hand up and down. To move it left or right, move your hand left or right. Keep your hand in a relaxed position and in the general area at least 2 inches above the sensor.

Clicking:

To **click**, make your hand in a **grabbing motion (right)** and hold for about **2 seconds**

To **double click**, hold for a total of **4 seconds**

To **click and drag**, keep your hand in the grabbing motion for **about 6 seconds and move your hand around**

To **right click**, face your palm up and perform the **grabbing motion for about half a second**.



Enter text:

To enter text, flip your hand so your **palm is facing up** and hold until you see the microphone in the bottom right (for about **half a second**)

Continue holding this position until you say your text, then promptly remove the hand from this position

You can either use your cursor hand, or your other hand



Enter keys:

All voice operated key entries are preceded by **'enter text' hand motion**. Hold the position for about 2 seconds then say the command.

The current supported keys are:

'Enter', 'Backspace', 'Tab'

Voice Commands:

All commands are preceded by the **'enter text' hand motion**. Hold the position for about 2 seconds then say the command.

The current commands available are: 'Exit Tab', 'Exit window', 'Save file', 'Undo', 'Redo', 'Open file', 'Help'

