



The Delux Measure Main Window

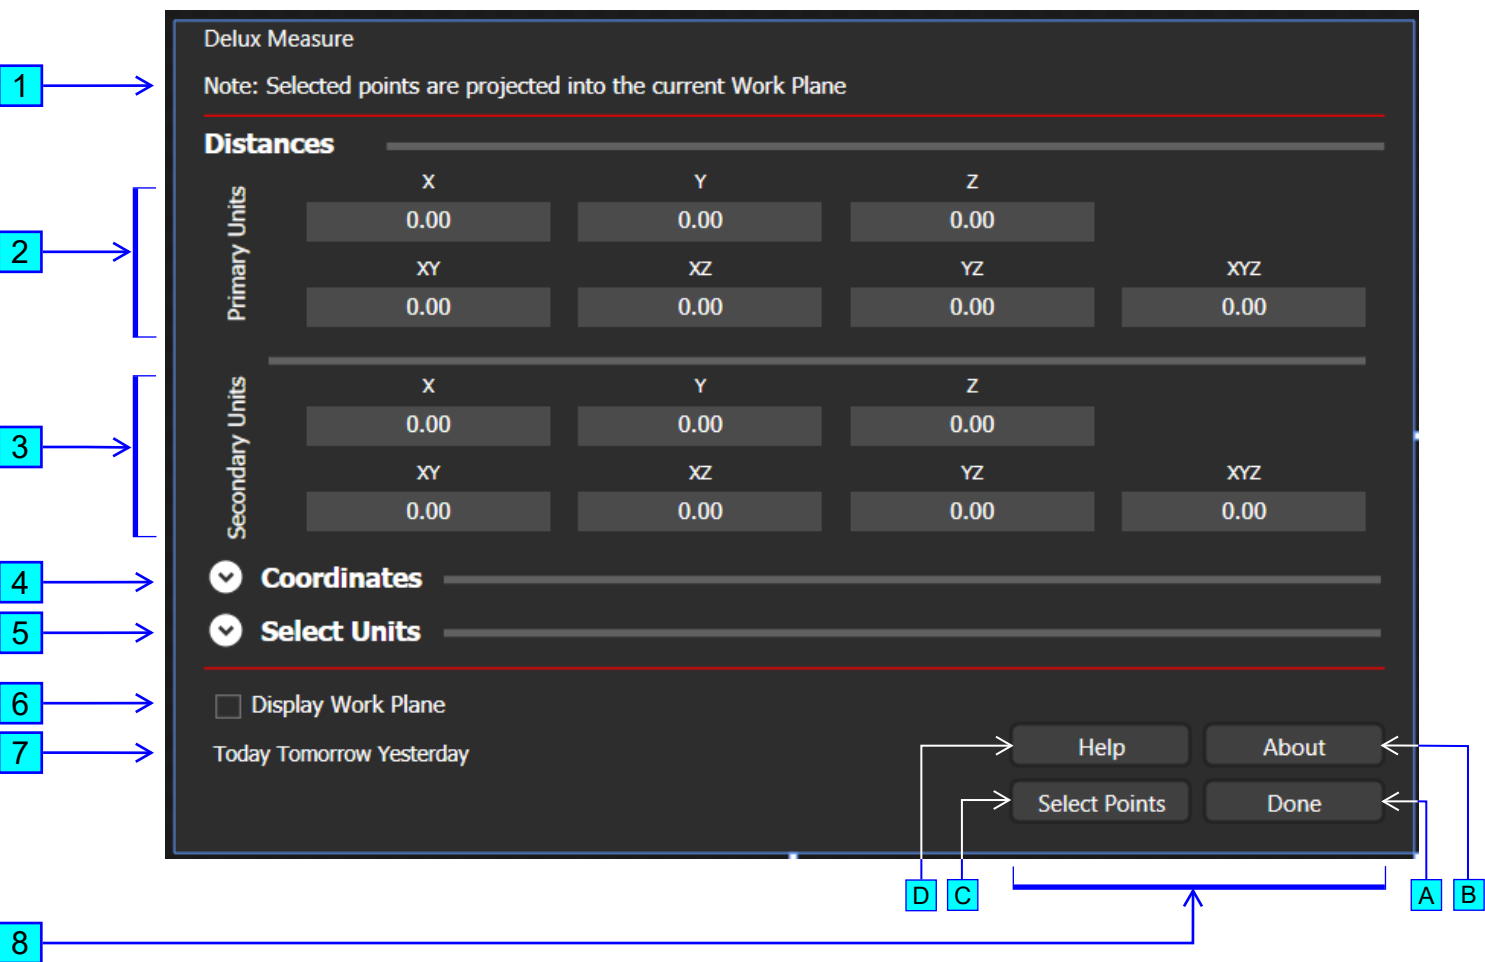

Window Element Description

- 1 Note about how Revit projects selected points into the current Work Plane - See below for additional information
 - 2 This section shows all of the distances using the selected **Primary Units**
 - 3 This section shows all of the distances using the selected **Secondary Units**
 - 4 This section, when expanded, shows the X, Y, and Z coordinates for each of the two selected points
 - 5 This section, when expanded, allow selecting the unit style for the **Primary Units** and **Secondary Units**
 - 6 Toggle to turn on and turn off the display of the work plane
 - 7 Message area
 - 8 Window control buttons
- | | | |
|---|----------------------|---------------------------------------|
| A | Done button | Closes the Delux Measure window |
| B | About button | Displays the About dialog box |
| C | Select Points button | Select a new set of points to measure |
| D | Help button | Displays this help information |


Unit Style Selection

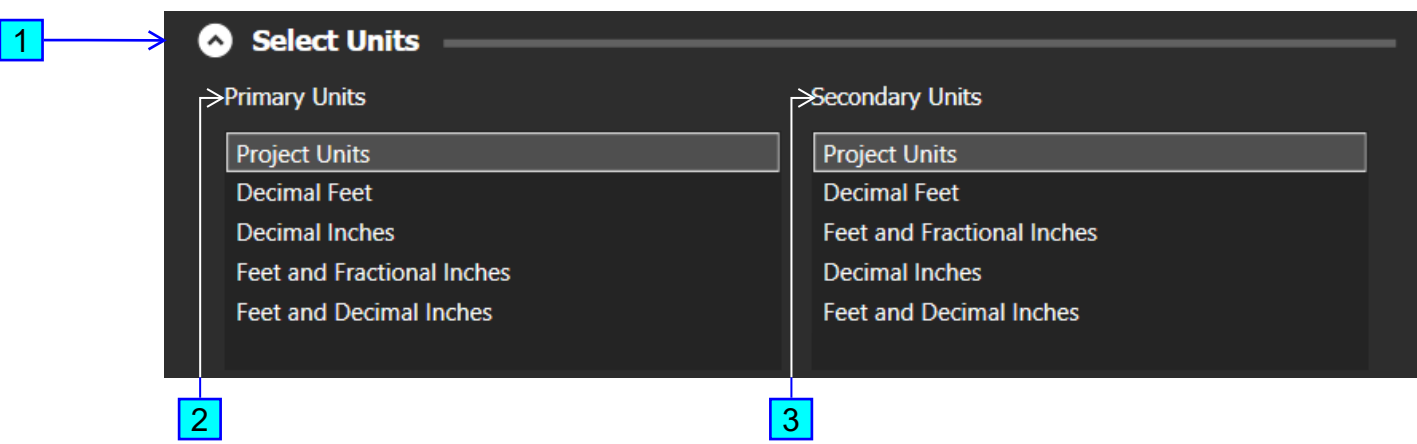

Unit Style Selection Descriptions

- 1 When selected, the Select Units section expands to reveal the Primary Units and Secondary Units lists
 - 2 **Primary Units**: The Unit Style selected determines the unit format for the **Primary Units** in Distances above
 - 3 **Secondary Units**: The Unit Style selected determines the unit format for the **Secondary Units** in Distances above
- Note: Use the Unit Styles Manager to add and remove Unit Styles as well as rearrange their order in the list

Point Coordinates

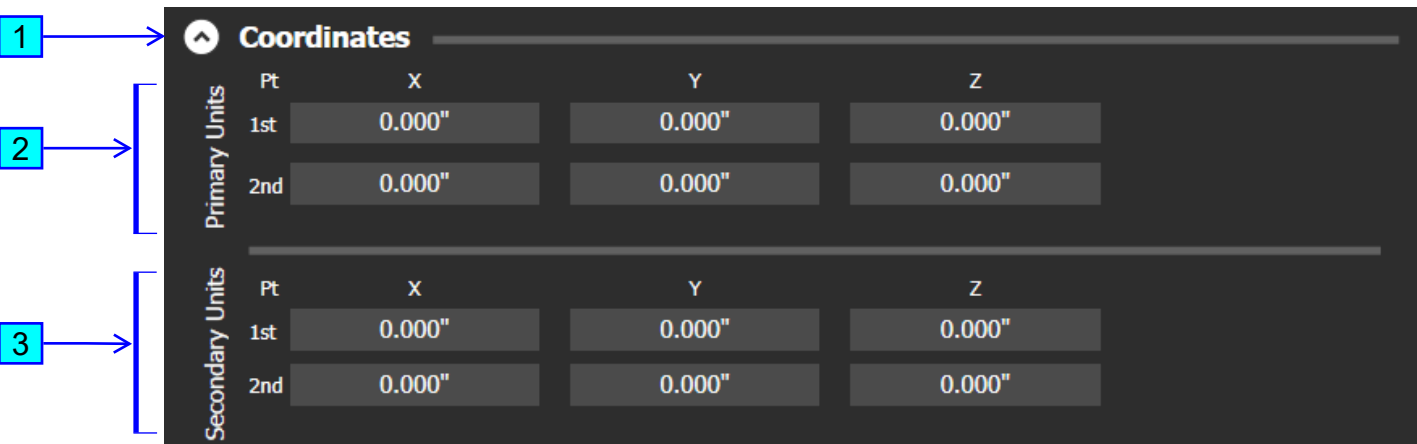

Point Coordinates Descriptions

- 1 When selected, the Coordinates section expands to reveal the X,Y, & Z values for each point in both Unit Styles
- 2 The X, Y, & Z values for both points in the **Primary Unit** format.
- 3 The X, Y, & Z values for both points in the **Secondary Unit** format.