


Speicherung von analogen Min. / Max. Werten Storing analog min. / max. values

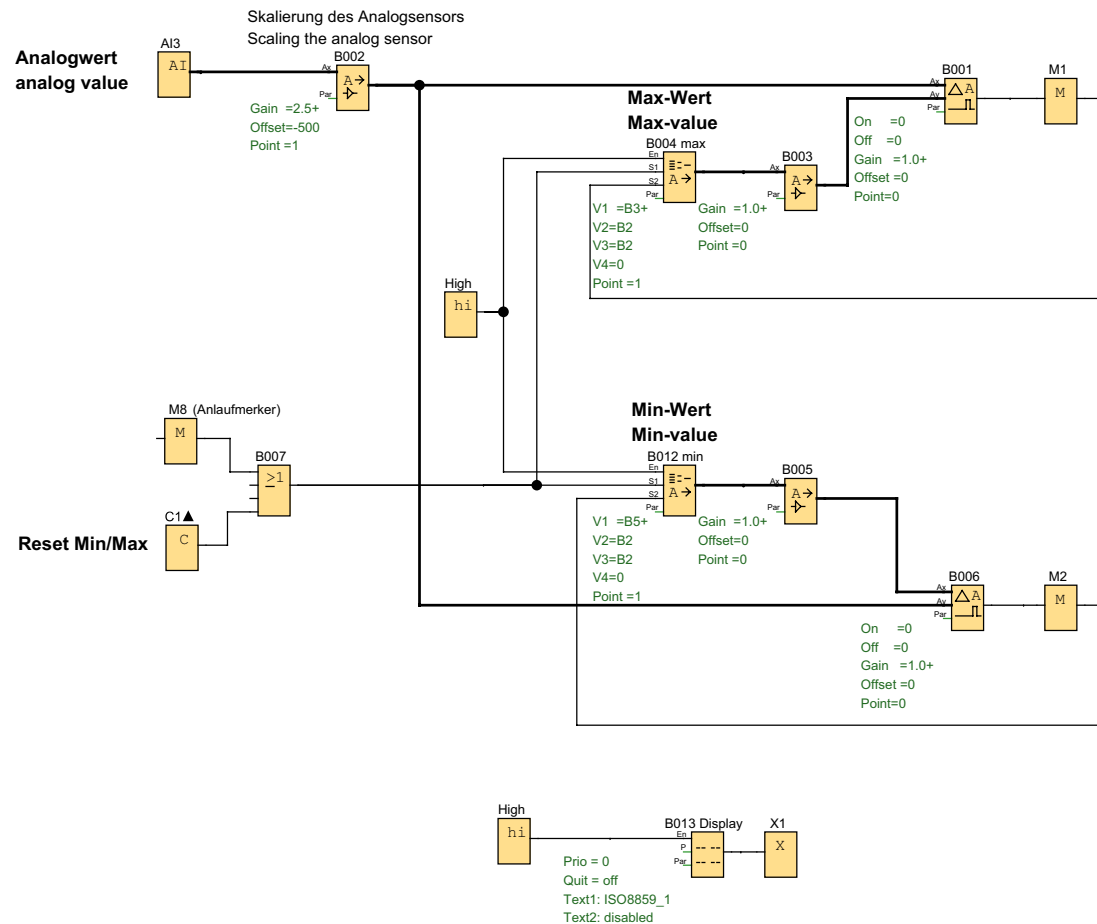

SIEMENS AG- Beispielprogramm

Warnung und Haftungsausschluss

Siemens AG
Programmbeispiel ohne Gewähr

Warnung:
Steuerungen können bei unsicheren Betriebszuständen ausfallen und dadurch den unkontrollierten Betrieb der gesteuerten Geräte verursachen.Solche gefährliche Ereignisse können zu tödlichen und/oder schweren Verletzungen und/oder Sachschaden führen.Sorgen Sie daher für eine NOT-AUS-Funktion, elektrische oder andere redundante Sicherheitseinrichtungen, die von Ihrem Automatisierungssystem unabhängig sind.

Haftungsausschluss:
Jeder Anwender ist für den sachgemäßen Betrieb seines LOGO-Systems selbst verantwortlich. Dieses Programm enthebt Sie nicht der Verpflichtung zu sicherem Umgang bei Anwendung, Instalation, Betrieb und Wartung. Durch die Nutzung dieses von der Siemens AG erstellten Programm-Beispieles erkennen Sie an, daß die Siemens AG unter keinen Umständen für möglicherweise infolge der Nutzung auftretende Sach- und/oder Personenschäden haftbar gemacht werden kann.

SIEMENS AG- Example Program

Warning and Disclaimer of Liability

Siemens AG
Example Program without Liability

Warning:
Unsafe operating conditions can cause controllers to fail, resulting in unchecked operation of controlled devices.
Such hazardous events can cause death and/or serious injury and/or material damage.You must therefore provide an emergency stop function and electric or other redundant safety devices that are independent of your automation system.

Disclaimer of Liability:
Users are solely responsible for the correct operation of their LOGO! systems. This program does not relieve you of the obligation to observe safe practices during implementation, installation, operation, and maintenance. By using this example program created by Siemens AG, you acknowledge that Siemens AG cannot under any circumstances be held liable for any possible personal injury or material damage resulting from the use of this program.

Block Number (Type)			Parameter			
B001 (Analog Comparator) :			On =0 Off =0 Gain =1.0+ Offset =0 Point=0			
B002 (Analog Amplifier) : Skalierung des Analogensors Scaling the analog sensor			Gain =2.5+ Offset=-500 Point =1			
B003 (Analog Amplifier) :			Gain =1.0+ Offset=0 Point =0			
B004 max(Analog MUX) :			V1 =B3+ V2=B2 V3=B2 V4=0 Point =1			
B005 (Analog Amplifier) :			Gain =1.0+ Offset=0 Point =0			
B006 (Analog Comparator) :			On =0 Off =0 Gain =1.0+ Offset =0 Point=0			
B012 min(Analog MUX) :			V1 =B5+ V2=B2 V3=B2 V4=0 Point =1			
B013 Display(Message texts) :			Prio = 0 Quit = off Text1: ISO8859_1 Text2: disabled --> Ticker setting - Character by character - Line1: N - Line2: N - Line3: N - Line4: N Message Destination - Both			
<div><div><div>A C t .</div><div>A →</div><div>B002 : Ax, amplified</div><div>-50.0</div></div><div>M a x .</div><div>A →</div><div>B004 max - Aq am...</div><div>0.0</div></div> <div>M i n .</div> <div>A →</div> <div>B012 min - Aq am...</div> <div>0.0</div> <div>R e s e t :</div> <div>E S C +</div> <div>▲</div> <div>Line1.5 Param: B002 - Ax, amplified Line2.5 Param: B004 max - Aq amplified Line3.5 Param: B012 min - Aq amplified</div>						
Creator:	adbejo0	Project:		MinWert / MaxWert Speicherung	Customer:	SIEMENS AG
Checked:	Beyer	Installation:		Storing min / max values	Diagram No.:	
Date:	8/10/06 5:03 PM/11/9/10 3:52 PM	File:		storing_analog_min_max_values	Page:	3