

Packet Tracer - Troubleshoot Connectivity Issues

Addressing Table

Device	Interface	IP Address	Subnet Mask	Default Gateway
R1	G0/0	172.16.1.1	255.255.255.0	N/A
	G0/1	172.16.2.1	255.255.255.0	N/A
	S0/0/0	209.165.200.226	255.255.255.252	N/A
R2	G0/0	209.165.201.1	255.255.255.224	N/A
	S0/0/0 (DCE)	209.165.200.225	255.255.255.252	N/A
PC-01	NIC	172.16.1.3	255.255.255.0	172.16.1.1
PC-02	NIC	172.16.1.4	255.255.255.0	172.16.1.1
PC-A	NIC	172.16.2.3	255.255.255.0	172.16.2.1
PC-B	NIC	172.16.2.4	255.255.255.0	172.16.2.1
Web	NIC	209.165.201.2	255.255.255.224	209.165.201.1
DNS1	NIC	209.165.201.3	255.255.255.224	209.165.201.1
DNS2	NIC	209.165.201.4	255.255.255.224	209.165.201.1

Objectives

In this Packet Tracer activity, you will troubleshoot and resolve connectivity issues, if possible. Otherwise, the issues should be clearly documented so they can be escalated.

Background / Scenario

Users are reporting that they cannot access the web server, www.cisco.pka after a recent upgrade that included adding a second DNS server. You must determine the cause and attempt to resolve the issues for the users. Clearly document the issues and any solution(s). You do not have access to the devices in the cloud or the server www.cisco.pka. Escalate the problem if necessary.

Note: Router R1 can only be accessed using SSH with the username **Admin01** and password **cisco12345**. Router R2 is in the ISP cloud and is not accessible by you.

Instructions

Step 1: Determine connectivity issues from PC-01.

- On PC-01, open the command prompt. Enter the command **ipconfig** to verify what IP address and default gateway have been assigned to PC-01. Correct as necessary according to the Addressing Table.
- After verifying/correcting the IP addressing issues on PC-01, issue pings to the default gateway, web server, and other PCs. Were the pings successful? Record the results.

Ping to default gateway (172.16.1.1)?

Yes, successful.

To web server (209.165.201.2)?

Yes, successful.

Ping to PC-02?

Yes, successful.

To PC-A?

No

To PC-B?

No

- c. Use the web browser to access the web server on PC-01. Access the web server by first entering the URL <http://www.cisco.pka> and then by using the IP address 209.165.201.2. Record the results.

Can PC-01 access www.cisco.pka?

Yes.

Using the web server IP address?

Yes.

- d. Document the issues and provide the solution(s). Correct the issues if possible.

The PC-01 ip was configured incorrectly , so by going to the ip configuration we need to reset that.

Step 2: Determine connectivity issues from PC-02.

- a. On PC-02, open the command prompt. Enter the command **ipconfig** to verify the configuration for the IP address and default gateway. Correct as necessary.
- b. After verifying/correcting the IP addressing issues on PC-02, issue pings to the default gateway, web server, and other PCs. Were the pings successful? Record the results.

Ping to default gateway (172.16.1.1)?

Yes

To web server (209.165.201.2)?

Yes

Ping to PC-01?

yes

To PC-A?

no

To PC-B?

no

- c. Navigate to www.cisco.pka using the web browser on PC-02. Record the results.

Questions:

Can PC-02 access www.cisco.pka?

Yes

Using the web server IP address?

Yes

- d. Document the issues and provide the solution(s). Correct the issues if possible.

The PC-02 Default gateway was configured incorrectly , so by going to the ip configuration we need to reset that.

Step 3: Determine connectivity issues from PC-A.

- a. On PC-A, open the command prompt. Enter the command **ipconfig** to verify the configuration for the IP address and default gateway. Correct as necessary.
- b. After correcting the IP addressing issues on PC-A, issue the pings to the web server, default gateway, and other PCs. Were the pings successful? Record the results.

Questions:

To web server (209.165.201.2)?

No

Ping to default gateway (172.16.2.1)?

No

Ping to PC-B?

YES

To PC-01?

NO

To PC-02?

No

- c. Navigate to www.cisco.pka using the web browser on PC-A. Record the results.

Questions:

Can PC-A access www.cisco.pka?

No

Using the web server IP address?

no

- d. Document the issues and provide the solution(s). Correct the issues if possible.

This PCA cannot even go to the first hop or R1, So by going to the R1 using PC1 using ssh we can see the R1's G0/1 ip address was wrong and we just need to reset that.

PCA -> `tracert 209.165.201.2`

PC1 -> `ssh -l Admin01 172.16.1.1`

PC1 -> R1 -> show ip interface brief
PC1 -> R1 -> configure terminal
PC1 -> R1 -> interface G0/1
PC1 -> R1 -> ip address 172.16.2.1 255.255.255.0
PC1 -> R1 -> no shutdown

Step 4: Determine connectivity issues from PC-B.

- On PC-B, open the command prompt. Enter the command **ipconfig** to verify the configuration for the IP address and default gateway. Correct as necessary.
- After correcting the IP addressing issues on PC-B, issue the pings to the web server, default gateway, and other PCs. Were the pings successful? Record the results.

Questions:

To web server (209.165.201.2)?

Yes

Ping to default gateway (172.16.2.1)?

Yes

Ping to PC-A?

yes

To PC-01?

yes

To PC-02?

yes

- Navigate to www.cisco.pka using the web browser. Record the results.

Questions:

Can PC-B access www.cisco.pka?

No

Using the web server IP address

Yes

- Document the issues and provide the solution(s). Correct the issues if possible.
We can access the server using ip address 209.165.201.2 but not with the name www.cisco.pka
- Could all the issues be resolved on PC-B and still make use of DNS2? If not, what would you need to do?
No, but to resolve the problem we can use the DNS1.

Step 5: Verify connectivity.

Verify that all the PCs can access the web server www.cisco.pka.

Your completion percentage should be 100%. If not, verify that the IP configuration information is correct on all devices and that it matches what is shown in the addressing table.

End of document