


- Zone 0
- Zone 1
- Zone 2
- Zone 3
- Zone 4
- Zone 5
- Zone 6
- Zone 7

Note: The connection to the 0th receiver on each zone comes from inside the room in bixi, we'll need to mount cable to the bars connecting the room to the outer dome

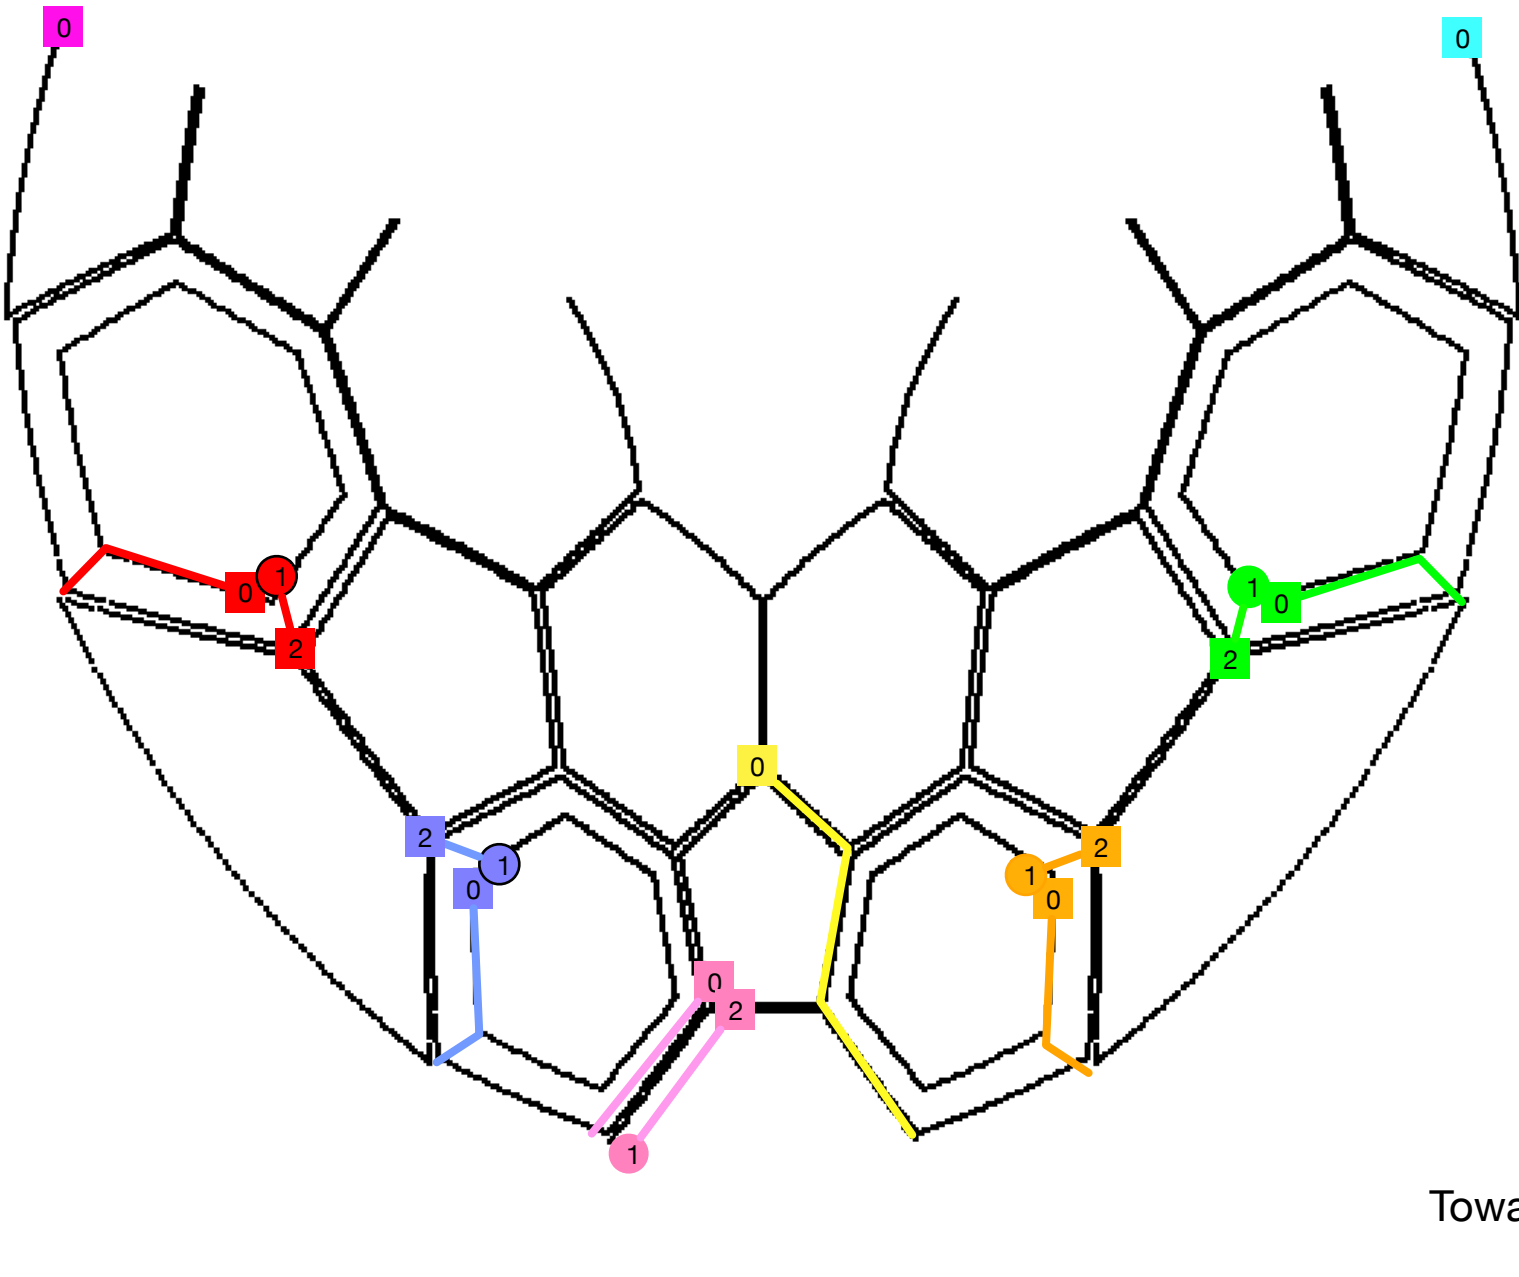

Bixi Dome Data Map (Bird's Eye View)

- Transmitter (LED to Ethernet)
- Receiver (Ethernet to LED)
- Ethernet Cable