

1. Server and port number setting

Get server address from device

#server?

Set new server IP to device

#server=IP address,port number

exp.

#server=111.111.111.111,32000

2. APN for SIM provider

Get the apn from device

#apn?

Set apn to device

#apn=apn address,,

exp.

#apn=airtelgprs.com,,

for Airtel

#apn=internet,,

for Idea

3. Set UnitID

#unitid=1000000000

10-digit

4. Relay 1 On/Off

#setout1=1

Relay ON

#setout1=0

Relay OFF

5. Get GSM information

#gsm?