

## **Valve control**

### **Z-Wave Command Classes :**

COMMAND\_CLASS\_BASIC

COMMAND\_CLASS\_VERSION

COMMAND\_CLASS\_ZWAVEPLUS\_INFO

COMMAND\_CLASS\_MANUFACTURE\_SPECIFIC

COMMAND\_CLASS\_DEVICE\_RESET\_LOCALLY

COMMAND\_CLASS\_POWERLEVEL

COMMAND\_CLASS\_ASSOCIATION

COMMAND\_CLASS\_ASSOCIATION\_GROUPINFO

COMMAND\_CLASS\_SWITCH\_BINARY

COMMAND\_CLASS\_SWITCH\_ALL