

The *LIGHTNING* Display Range of  
***SUPER-HIGH-BRIGHTNESS DIGITAL VIDEO PROJECTORS***

*LIGHTNING 22sx, LIGHTNING 25sx, LIGHTNING 28sx,*  
*LIGHTNING 8gv, LIGHTNING 10gv, LIGHTNING 22gv*

# ***USER MANUAL***

Revision C - 01/03/03

Part Number: LBV00056





## Declaration of Conformity

### Directives covered by this Declaration

89/336/EEC Electromagnetic Compatibility Directive, amended by 92/31/EEC & 93/68/EEC.

73/23/EEC Low Voltage Equipment Directive, amended by 93/68/EEC.

### Products covered by this Directive

Large Screen Projector types **LIGHTNING 8gv** (20 series chassis) and **LIGHTNING 22sx**.

### Basis on which Conformity is being declared

The products identified above comply with the protection requirements of the above EU directives, and the manufacturer has applied the following standards:-

EN 55022: 1998 - Limits and Methods of Measurement of Radio Disturbance Characteristics of Information Technology Equipment.


EN 55024:1998 - Limits and Methods of Measurement of Immunity Characteristics of Information Technology Equipment.

EN 55103:1997 - Product Family Standard for Audio, Video, Audio-Visual and Entertainment Lighting Control apparatus for Professional Use.

EN 60950: 1992 - Specification for Safety of Information Technology Equipment, including Electrical Business Equipment.

The technical documentation required to demonstrate that the products meet the requirements of the Low Voltage Directive has been compiled by the signatory below and is available for inspection by the relevant enforcement authorities. The CE mark was first applied in May 2002.

 Signed: \_\_\_\_\_



Authority: D.J. Quinn, Product Development Director

Date: 9th May 2002

### Attention!

The attention of the specifier, purchaser, installer, or user is drawn to special measures and limitations to use which must be observed when these products are taken into service to maintain compliance with the above directives. Details of these special measures are available on request, and are also contained in the product manuals.



## Declaration of Conformity

### Directives covered by this Declaration

89/336/EEC Electromagnetic Compatibility Directive, amended by 92/31/EEC & 93/68/EEC.  
73/23/EEC Low Voltage Equipment Directive, amended by 93/68/EEC.

### Products covered by this Declaration

Large screen video projector types **LIGHTNING 22gv**, **LIGHTNING 25sx**  
and **LIGHTNING 28sx**.

### Basis on which Conformity is being declared

The products identified above comply with the protection requirements of the above EU directives, and the manufacturer has applied the following standards:-

EN 55022:1998 - Limits and Methods of Measurement of Radio Disturbance Characteristics of Information Technology Equipment.


EN 55024:1998 - Limits and Methods of Measurement of Immunity Characteristics of Information Technology Equipment.

EN 55103:1997 - Product family Standard for Audio, Video, Audio-Visual and Entertainment Lighting Control apparatus for Professional Use.

EN 60950: 1992 - Specification for Safety of Information Technology Equipment, including Electrical Business Equipment.

The technical documentation required to demonstrate that the products meet the requirements of the Low Voltage Directive has been compiled by the signatory below and is available for inspection by the relevant enforcement authorities. The CE mark was first applied in March 2002.

 Signed: \_\_\_\_\_



Authority: D.J. Quinn, Product Development Director

Date: 4th March 2002

### Attention!

The attention of the specifier, purchaser, installer, or user is drawn to special measures and limitations to use which must be observed when these products are taken into service to maintain compliance with the above directives. Details of these special measures are available on request, and are also contained in the product manuals.



## Revision Record





# Introduction

## Please read the following before proceeding

---

The Digital Projection **LIGHTNING displays** are Super-High-Brightness Video Projectors capable of producing images of superb brightness and clarity with the minimum of set-up time and operating support. The User Interface via the On Screen Display is designed to allow the novice user rapid access to basic projector operation while providing the expert with the ability to tailor the performance to his exact requirements.

An Outline of Contents is given overleaf which provides an overview of the five sections, A to E, in this manual and lists all the major topics covered along with their location. This outline allows the user to direct themselves to the appropriate section of this manual where a detailed contents page will provide the exact location of the topic required. Section identifiers are also provided on the outside edge of the pages to allow the quick location of individual sections.

The user is strongly recommended to read Section A: Overview before unpacking or switching on the projector, paying particular attention to the safety warnings on pages A—3 and A—4.

**Disclaimer** Digital Projection makes a sincere effort to ensure accuracy and quality of its published materials; however, no warranty, expressed or implied, is provided. Digital Projection disclaims any direct or indirect damages resulting from the use of any information in this manual.

**Digital Projection Limited,**

Greenside Way, Middleton, Manchester M24 1XX, UK.

Registered in England No. 2207264, Registered Office: As Above

Tel: +44 (0) 161 947 3300

Fax: +44 (0) 161 684 7674

Email: [enquiries@digitalprojection.co.uk](mailto:enquiries@digitalprojection.co.uk), [service@digitalprojection.co.uk](mailto:service@digitalprojection.co.uk)

Website: [www.digitalprojection.co.uk](http://www.digitalprojection.co.uk)

**Digital Projection Inc.**

55 Chastain Road, Suite 115, Kennesaw, GA 30144. USA

Tel: (USA) 770 420 1350

Fax: (USA) 770 420 1360

Email: [powerinfo@digitalprojection.com](mailto:powerinfo@digitalprojection.com)

Website: [www.digitalprojection.com](http://www.digitalprojection.com)

# Outline of Contents

## Section A: Overview

Packaging .....	A—1
Safety Advice .....	A—2
Initial Preparation .....	A—5
Components .....	A—8

## Section B: System Installation

Installation Guidelines .....	B—1
Switching On .....	B—9

## Section C: System Operation

Remote Control - Overview .....	C—1
LED Indicators .....	C—6
Menu Operation .....	C—7
Main Menu - Overview .....	C—11
Channel Set-up Function .....	C—13
Image Mode .....	C—28
User Preferences .....	C—29
Test Patterns .....	C—31
Projector Status .....	C—33
Set Projector Address .....	C—34
Add Computer .....	C—35
Applying a New Signal Source .....	C—41
Adjusting the Displayed Image .....	C—44
Addressing Multiple Projectors .....	C—47

**Section C: System Operation**

Computer Control.....	C—48
Switcher Operation.....	C—53
Palm Pilot Control Utility Operation .....	C—55

**Section D: Advanced User Information**

Screen Illuminance .....	D—1
DMD™ Operation and Usage .....	D—2
Operational Flowcharts.....	D—5
Lenses .....	D—15
Lens Adapters.....	D—26
Cables & Connections .....	D—28
Technical Specification .....	D—32

**Section E: Fault Finding & Maintenance**

Trouble Shooting .....	E—1
Maintenance .....	E—4

**Appendix**

Quick Set-up Reference .....	i
Menu System Review .....	iii

## Section A: Overview

<b>Packaging</b> .....	A—1
Removal of the Projector .....	A—1
Lens Packaging .....	A—1
<b>Safety Advice</b> .....	A—2
Compliance with Regulatory Bodies .....	A—2
Safety Warnings.....	A—3
<b>Initial Preparation</b> .....	A—5
Pre-Installation Check .....	A—5
Remote Control Unit - Battery Installation .....	A—6
Hard-Wired Remote Control Connection.....	A—7
<b>Components</b> .....	A—8
Projector Case .....	A—8
LED Indicators .....	A—9
Arc Lamp .....	A—9
Safety Procedures for Xenon Lamps.....	A—10
Lenses.....	A—11
Motorised Lens Mount.....	A—11
Electronics .....	A—12
Analogue Input Board .....	A—12
Digital Micromirror Devices™ .....	A—14
Cooling System .....	A—14
Power Supplies .....	A—15
Hard-Wired Remote Connection.....	A—15

**Components**

Integrated Keypad .....A—16

Remote Control .....A—16

# Packaging

## Unpacking the Projector

To unpack the projector, first release the two fastening clips and remove the banding. Next, using the finger holes provided, gently lift off the outer cover of the carton.

## Removal of the Projector

Due to the projector's weight (110 kgs), four people are required to lift the projector, one at each corner using the handrail provided. The purchaser is reminded to use good practice in lifting the projector to avoid risk of back injury.

All packaging should be retained to provide maximum protection during future shipping of the projector. To repack the projector, reverse the above procedure.

Contained within the packaging will be:

- |  |                           |
|--|---------------------------|
| 1 x <b>LIGHTNING display</b> Projector | 1 x Remote Control Unit   |
| 1 x Handrail (attached)                | 1 x Remote Control Cable  |
| 4 x Mounting Feet (attached)           | 1 x AC Power Cable        |
| Batteries                              | 1 x User Manual           |
|  | Certificate of Conformity |

Should any of the above components be absent, please contact the dealer who supplied the projector, or Digital Projection Limited (Digital Projection Inc. if in North America) immediately.

## Lens Packaging

Lenses are supplied as individual items and the packaging may differ depending on the version ordered. Please refer to the instructions supplied with your lens.

## Safety Advice

### Compliance with Regulatory Bodies

The **LIGHTNING 8gv**, **LIGHTNING 22gv**, **LIGHTNING 22sx**, **LIGHTNING 25sx** and **LIGHTNING 28sx** have been designed to comply with IEC950 and UL 1950 (formal UL approval in process), the International safety standards for information technology and electrical business equipment. These standards impose stringent safety requirements on the construction and operation to prevent energy hazards, access to live parts and the risk of electric shock. The safety standards also provide regulations on internal and external temperature increases, radiation levels, mechanical stability and strength, enclosure construction and fire protection.

The **LIGHTNING 8gv**, **LIGHTNING 22gv**, **LIGHTNING 22sx**, **LIGHTNING 25sx** and **LIGHTNING 28sx** have been tested and found to comply with the limits for a class A digital device, pursuant with Part 15 of the Federal Communication Commission rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area may cause harmful interference, in which case the user will be responsible for correcting any interference.



## Safety Warnings



All the safety warning in this manual are in bold italic type and can be identified by the symbol shown on the left. A list containing all the warnings is given below. It is recommended that time is taken to study these before installing or operating the projector.

*The projector should always be lifted using the handrail. Do not attempt to lift the projector by holding the covers or the lens.*

*The customer should never attempt to disassemble the lamp from its housing or to dispose of it other than by returning it to Digital Projection.*

*Do not move or tamper with any seals or ducting panels on the projector or the air flow could be disrupted and cause the projector to overheat. Always keep the air inlets and outlets clear of any obstruction.*

*High Voltage, Danger of Death - the arc lamp power supply has a 30kV strike pulse mechanism, which is active during lamp switch-on.*

*The projector should never, under any circumstances, be operated on its side with the lamp pointing upwards when viewed from the rear*

*To avoid possible damage to the prism, lens and lens mount, a lens adapter must be used if using **POWER gv** lenses on a **LIGHTNING sx** projector.*

*Never mount the projector near air conditioning or heating ducts, electrical wiring or any materials which could be affected by the projector's operational heat i.e. polystyrene ceiling tiles etc.*

*Never locate the projector where a laser beam may enter the lens, or fall on the light engine otherwise catastrophic damage will result.*

*To prevent contamination of internal optical surfaces, never locate the projector near any chemical or oil-based smoke machines or where smoke may enter the projector.*

*At least 4 people are required for safe movement of the projector. The projector is designed to be lifted using the handrail at the base. Do not attempt to lift the projector by holding the front, the side covers or the lens.*

*Care should be taken when removing or attaching the projector feet to ensure that the projector does not rest on its feet at an angle.*

*Never operate the projector with the cover removed and always switch off the mains supply and disconnect the plug before removing the cover.*

*Never look into the lamp housing or the lens, or attempt to remove the lamp from its housing when the projector is on.*

## **OTHER IMPORTANT SAFETY CONSIDERATIONS**

*In order to ensure that correct internal airflows are maintained, and that the projector complies with Electro-Magnetic Compatibility requirements, it should always be operated with all of its covers in place.*

*Ensure that nothing can be spilled on, or dropped inside the projector. If this does happen, switch off and unplug the mains supply immediately. Do not operate the projector again until it has been checked by qualified service personnel.*

*The projector must always be mounted in a manner which ensures free flow of air into its air inlets and unimpeded evacuation of the hot air exhausted from its cooling system. The air exit duct at the top of the projector can become hot during operation and should not be touched by the operator. Heat-sensitive materials should not be placed in the path of the exhausted air.*

*Do not move or tamper with any seals or ducting panels on the projector or the air flow could be disrupted and cause the projector to overheat. Always keep the air inlets and outlets clear of any obstruction.*

## Initial Preparation

### Pre-Installation Check


---

Before mounting the projector in its intended location, the following pre-installation routine must be performed:


1. Install the projector lens.
2. Ensure all the air flow inlet and outlet ducts are clear from obstruction.
3. Insert the power cord securely into the socket on the rear panel of the projector and connect to an appropriate mains supply (refer to the specification label at the rear of projector).
4. Switch on the projector and wait for approximately 30 seconds.
5. Check air is flowing out of the exit ducts on the top and left hand side of the projector.
6. Insert batteries into the remote control unit (see overleaf).
7. With the screen or a wall illuminated, confirm the Menu System is operational by pressing OSD ON then MENU on remote control (a main menu should be clearly visible).
8. Turn the lamp off by depressing the LAMP OFF button on the remote control for two seconds.
9. Power down the projector and disconnect from the mains supply.
10. Continue with the system installation.

## Remote Control Unit - Battery Installation


The Remote Control Unit can be powered by 4 AAA (HP16/RO3/LR03) alkaline batteries or by direct connection to the projector via a remote receiver or hard wire.

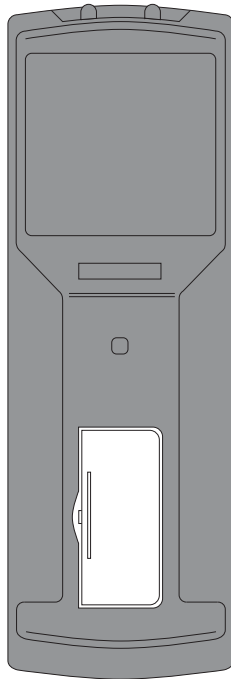

The battery compartment is located on the back of the Remote Control. To remove the compartment cover, insert a finger-nail into the recess provided to the right of the cover and push to the right. While pushing to the right, lift out the left hand side of the cover.

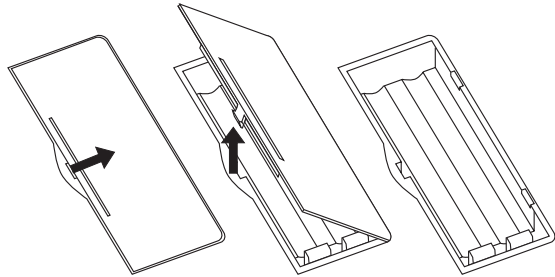

Insert the first two new batteries as shown below and slide them to the back of the compartment. Insert the remaining two batteries by pivoting them against the electrical contacts and pushing down into place.

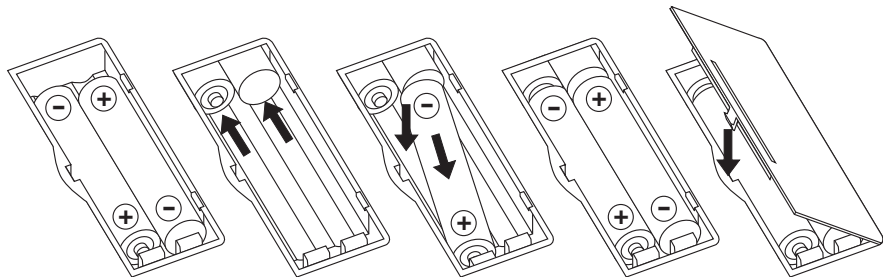

When the batteries are securely in place, replace the cover by aligning the stays on the right hand side and pushing down the left hand side until it 'clicks' into place.

## Hard-Wired Remote Control Connection

---

The hard-wired control of the projector is made using the Remote Control Unit with a cable connection directly to the projector.

The cable connects between the 3.5mm stereo jack on the remote control using the screw locking mini jack plug and the XLR connector on the projector.



*The remote control does not require batteries when directly connected to the projector. The connection to the projector may be extended using industry-standard audio XLR extension cables between the XLR on the projector and the hard-wired remote cable. The total cable length should not exceed 100m (330ft).*

For further information on the hard-wired remote adapter wiring, see Cables and Connections, D—28.

# Components

## Projector Case


The projector covers are manufactured from tough polycarbonate material and are attached to a rigid aluminium space frame by screws.



*The projector should always be lifted using the handrail. Do not attempt to lift the projector by holding the covers or the lens. Never use the handrail to ceiling mount the projector.*




*Do not remove any of the covers. No user-serviceable parts inside.*

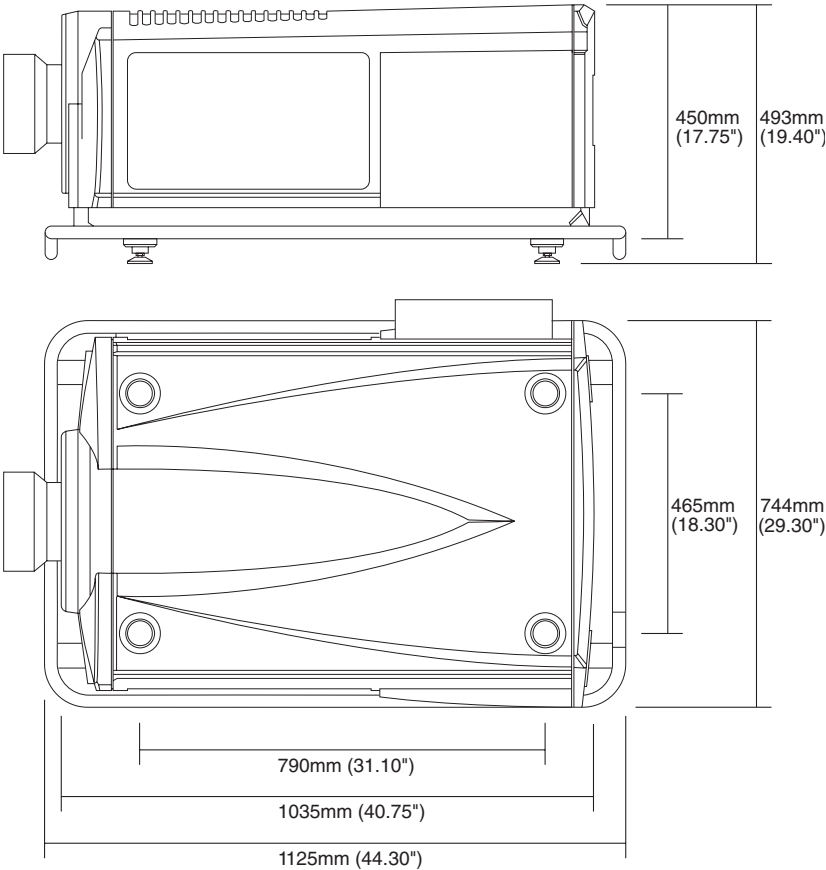

## LED Indicators

There are 3 Light Emitting Diodes on the front of the projector which indicate the status of the projector. The top red LED is used to indicate that power is applied to the projector and that it is turned on. The middle green LED indicates normal operation and flashes when the projector is receiving a signal from the remote control unit. The bottom red LED indicates that the lamp has failed or is switched off. For further information see System Operation, C—6.

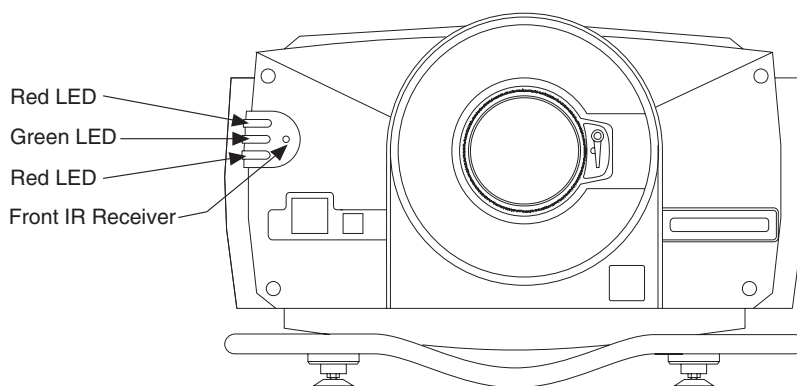

## Arc Lamp

The projector uses a specialised, high pressure xenon arc lamp designed to operate in conjunction with Digital Projection's optical condenser system and specialised power supply unit. The lamp achieves maximum brightness within 1 minute of strike and is designed for an operating life of greater than 750 hours.

The operator is advised to switch off the lamp using the 'LAMP OFF' button on the remote control, and allow the cooling system to run on for five minutes before switching off the mains supply. The lamp is contained in a special safety housing to dissipate heat and to make changing the lamp as easy as possible (see Fault Finding and Maintenance, E—6).



*The customer should never attempt to disassemble the lamp from its housing or to dispose of it other than by returning it to Digital Projection.*

## Safety Procedures for Xenon Lamps



*Xenon lamps can explode without warning because they contain gas under high pressure and are made of fused quartz, which is brittle like glass.*

*Do not allow anyone to be exposed to a Xenon lamp except when wearing the prescribed personal protective equipment detailed in Section E-6 - Lamp Safety.*

*Xenon lamps produce high intensity light and ultraviolet radiation. Never look directly into a lighted lamp or at the light emanating from the lens or lamp module. To do so may cause severe eye damage.*

*Operate Xenon lamps only when installed in the lamp module.*

*Xenon lamps are hazardous to handle and may explode at any time.*

*The lamp must always be kept in its protective container (as supplied by the manufacturer) when not in the module.*

*Before igniting a Xenon lamp, it must be installed in a module.*

*Module covers and the output window must remain installed at all times when working with an illuminated Xenon lamp.*

*Digital Projection recommends that all Xenon lamps be replaced after 750 hours of use.*

*Digital Projection will not be responsible for any damages resulting from failure to comply with this instruction.*

*See Section E-6 Lamp Safety Information for further details.*



## Lenses

Five lenses have been developed specifically for the **LIGHTNING sx** and **LIGHTNING gv** range of projectors with zoom ratios of 1.5 - 2.0:1, 2.0 - 2.5, 2.5 - 4.0:1, 4.0 - 7.0:1. In addition a fixed lens of 1.2:1 (actual 1.5:1) is available.

Using a lens adapter, the following **gv** series lenses may also be used, albeit with modified throw ratios and limited lens shift capabilities: 0.82:1 (fixed) and zoom lenses of 1.5 - 2.5:1, 2.5 - 4.0:1, 4.0 - 7.0:1 and 7.0 - 15.0:1.


## Motorised Lens Mount

The **LIGHTNING** projectors incorporate a motorised lens mount. This mounting allows you to control the zoom/focus via the remote control.

As the lens mount attaches to the lens, the mounting mechanism must be released before a lens can be fitted or removed. To release the lens mount turn the mounting lever anti-clockwise (upwards). After fitting a lens the lever should be turned clockwise to engage the mechanism.



*When engaging the lens mount, the lens may have to be rotated slightly in order for the lens mounting to connect correctly.*

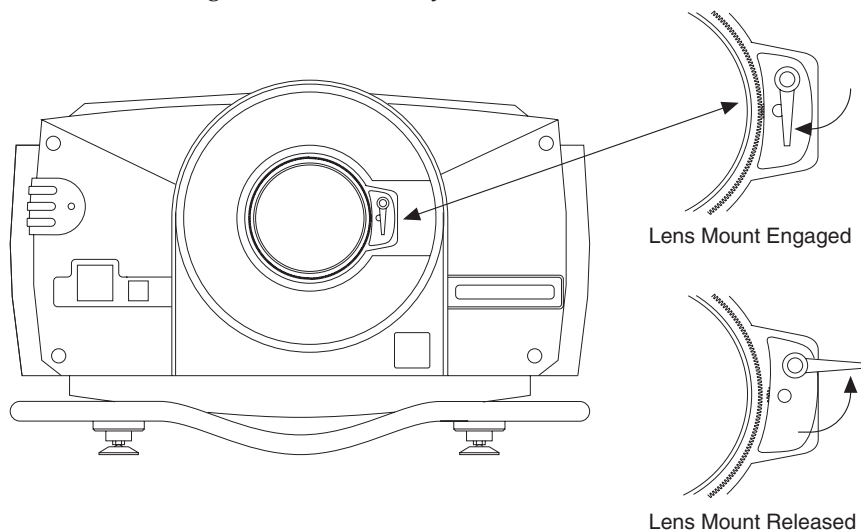

## Optics

---

The lamp faces onto a 'cold mirror' which directs the light beam into a condenser. A prism then splits the concentrated beam from the condenser into red, green and blue light using dichroic filters and directs the light onto separate DMDs™. The images produced by the three DMDs™ are then combined by the prism to form a full colour image and directed into the lens for projection.



*The optical system is precisely aligned in the factory. If it is moved there could be a reduction in light output and image display quality.*

## Electronics

---

The main electronic components of the projector are the Analogue Input Board, Digital Processing Card, Formatter Card and the three Display Boards (each of which contains a Digital Micromirror Device™).

The Analogue Input Board, situated at the rear of the projector, converts analogue inputs to digital signals and routes them to the digital processing card.


The Digital Processing Card stores the channel configurations and any on-screen adjustments such as brightness, contrast etc. These settings are applied to the incoming signal for transfer to the Formatter Card.

The Formatter Card translates the digital signal into a format that the Digital Micromirror Devices™ can read.

## Analogue Input Board

---

The Analogue Input Board located at the rear of the projector provides all the required connections for video, computer and remote control inputs. The input board is split in three main sections - Power, Source and Control (see overleaf).

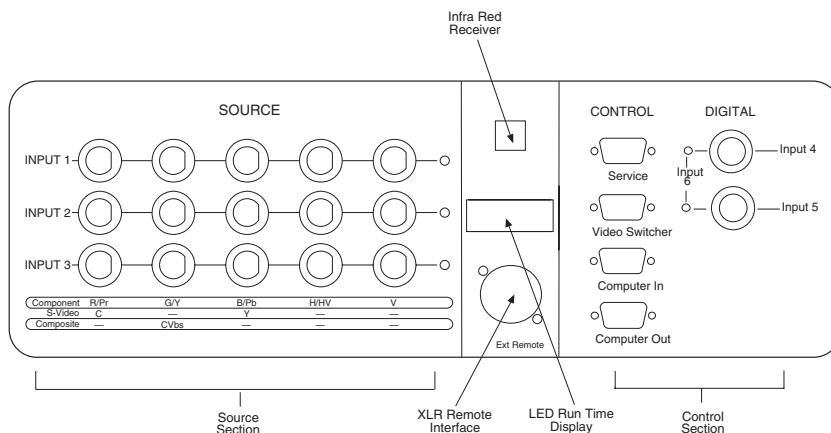

## SOURCE

**Inputs 1, 2, 3** - Each of these inputs can be used for different signal sources. RGB, Hs Vs and Hs+Vs are used with a computer input, Composite/G is used with a composite signal (such as NTSC), C and Y (S-VIDEO) are used with a VHS video player and Y Pr Pb are used with Betacam or component sources.

**Inputs 4 & 5** - These inputs provide for standard definition, 50hz and 60hz serial digital video signals.

## CONTROL

**Ext Wired Remote** - Input providing direct connection with the remote control unit.

**Video Switcher** - Control input and output for video switcher configurations.

**Service Port** - Reserved for use by authorised technical support personnel only.

**Computer (In/Out)** - Provides data input and output ports for computer control and for daisy chain connector to multiple projectors.


## Mains Input

## POWER

**Mains Input** - For connection of 208 - 240V ac @ 50 - 60Hz

## Digital Micromirror Devices™

A Digital Micromirror Device™ (DMD™) is a digital light modulator fabricated from moving aluminum mirrors. Each mirror, which acts as a pixel, is suspended between two posts by a thin torsion hinge and can be tilted to the left to produce a bright pixel or to the right for a dark pixel. There are three DMDs™ in the projector, one for each of the primary colours, each containing 786,432 mirrors arranged in a 1024 x 768 array (gv models) or 1,310,720 mirrors arranged in a 1280 x 1024 array (sx models).

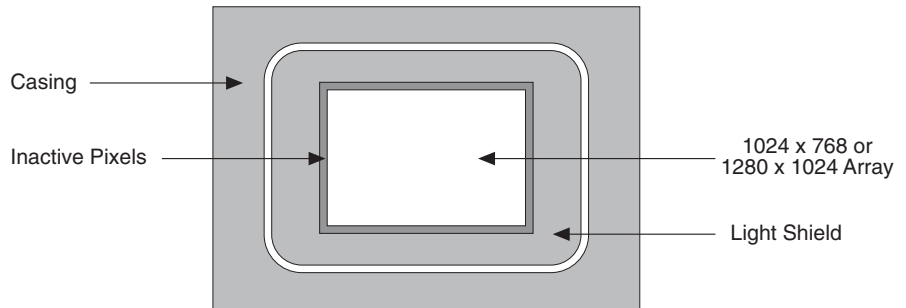

## Cooling System

During normal operation considerable heat is generated inside the projector, therefore, an air cooling system is provided. This consists of a powerful fan which draws cool air through specially designed air ducts within the case to distribute it over the lamp and other components. The cooling system provides maximum cooling whilst minimising noise output.



***Do not move or tamper with any seals or ducting panels on the projector or the air flow could be disrupted and cause the projector to overheat. Always keep the air inlets and outlets clear of any obstruction.***

## Power Supplies

---

The General Power Supply provides a range of low voltage rails to the electronics. The Xenon Arc Lamp has a separate high current power supply.



*High Voltage, Danger of Death - the arc lamp power supply has a 30kV strike pulse mechanism, which is active during lamp switch-on.*

## Hard-Wired Remote Connection

---

The hard-wired remote connection provides direct connection between the remote control and the projector. The direct hard wired connection is provided as standard with **LIGHTNING 8gv, 22sx, 22gv, 25sx** and **28sx** projectors.

This cable has an XLR plug to 3.5mm stereo locking jack plug. The cable may be extended using industry standard microphone XLR cables up to 100 metres (330ft).

## Integrated Keypad

---

An integrated keypad is provided on the rear of the projector to allow the projector to be controlled without the remote control. The operation of this keypad is identical to that of the remote control (see System Operation, C—1 for further details).

## Remote Control

---

All the functions of the **LIGHTNING display** projector are controlled using the remote control or the integrated keypad on the rear of the projector. The remote control can be connected to the projector via the remote receiver or hard-wired remote adapter. This connection simultaneously powers the control unit, illuminates the remote controls back panel and relays commands back to the projector.

To allow the operator more flexibility the remote control can be operated by four AAA batteries, producing infrared signals which are detected by sensors located at the front and rear of the projector. The Remote Control unit is designed to transmit command signals to the projector from a maximum distance of 80m (266ft).



*Very bright fluorescent lighting or Infra Red translation systems may saturate the projectors Infrared receivers rendering remote control inoperative.*

# Section B: System Installation

- Installation Guidelines** .....B—1
  - Screen Requirements .....B—1
  - Positioning the Projector .....B—4
  - Lens Options.....B—6
  - Mounting the Projector.....B—8
  - External Cable Routing .....B—8
- Switching On** .....B—11
  - Signal Sources .....B—11
  - Turning On the Lamp .....B—15
  - Picture Display .....B—13
  - Storing System Configurations.....B—17





# Installation Guidelines

This installation section explains how to install the projector for optimum results. To do this, it is necessary to determine the following:

- 1. The type of screen and whether front or rear projection is to be used.
- 2. The projector location and therefore the type of lens to be used.
- 3. The method of mounting for the projector.
- 4. The type of input source to be used with the projector.

## Screen Requirements

As virtually all commercially available screens will give a pleasing image you should choose according to your individual requirements. However, to achieve optimum results we recommend a low gain (1.2 - 1.3), non-perforated screen for front projection, this will keep hot spotting and light loss to a minimum whilst providing wide viewing angles.

Regardless of the type of screen used, it is important that your screen is of sufficient height to display the images at the aspect ratios intended to be used. Use the following tables to check that you are able to display the full image on your screen. If you have insufficient height, you will have to reduce the overall image size in order to display the full image on your screen.



Screen Width (metres)	Screen Height (metres) Needed to Display Full Image with Aspect Ratio:				
	4 x 3	5 x 4	8 x 5	14 x 9	16 x 9
2.40	1.80	1.92	1.5	1.54	1.35
3.00	2.25	2.40	1.87	1.93	1.69
3.60	2.70	2.88	2.25	2.31	2.02
4.20	3.15	3.36	2.62	2.70	2.36
4.80	3.60	3.84	3.00	3.09	2.70
6.00	4.50	4.80	3.75	3.86	3.38
10.00	7.50	8.00	6.25	6.43	5.63

Screen Width (feet)	Screen Height (feet/inches) Needed to Display Full Image with Aspect Ratio:				
	4 x 3	5 x 4	8 x 5	14 x 9	16 x 9
8' 0"	6' 0"	6' 5"	5' 0"	5' 2"	4' 6"
10' 0"	7' 6"	8' 0"	6' 3"	6' 5"	5' 8"
12' 0"	9' 0"	9' 7"	7' 6"	7' 9"	6' 9"
14' 0"	10' 6"	11' 2"	8' 9"	9' 0"	7' 11"
16' 0"	12' 0"	12' 10"	10' 0"	10' 8"	9' 0"
20' 0"	15' 0"	16' 0"	12' 6"	12' 10"	11' 4"
30' 0"	22' 6"	24' 0"	18' 9"	19' 4"	16' 11"

For optimum viewing, the screen should be a flat surface perpendicular to the floor. The bottom of the screen should be 1.2m (4 feet) above the floor and the front row of the audience should not have to look up more than 30° to see the top of the screen (see opposite).

The distance between the front row of the audience and the screen should be at least twice the screen height and the distance between the back row and the screen should be a maximum of 8 times the screen height. The screen viewing area should be within a 60° range from the face of the screen.

If you intend to use a rear projection screen you must ensure you have sufficient distance behind the screen for the projector to be correctly located (see B—4). Rear projection has the advantage that the projector cannot be seen and higher ambient light levels can be tolerated. Although the image can be flipped to rear projection using the Image Mode Menu (see system operation, C—28) and displayed without the need for extra mirrors or equipment, it makes the installation more complicated and advice should be sought from your local dealer before attempting an installation in this way.

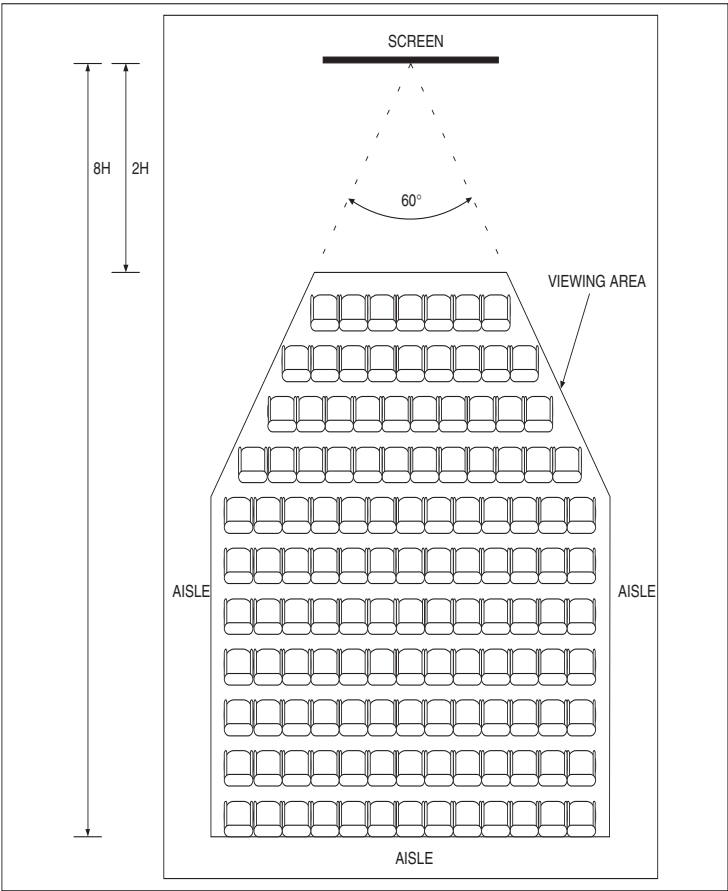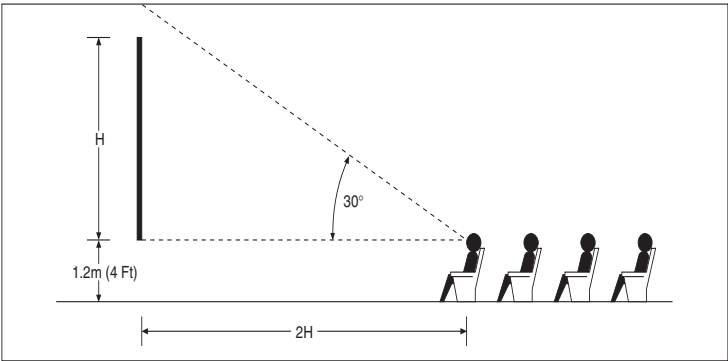

## Positioning the Projector

Correct positioning of the projector is essential to achieve the best results. Before deciding on the final location of the projector please ensure you read the following information very carefully.

The projector must be situated in a clean, dry environment and away from direct sunlight or heat. Make sure you locate the projector so that the air inlets and outlets for the cooling system are not obstructed.



*The projector should never, under any circumstances, be operated more than +/- 15° from left to right with the lamp pointing upwards (i.e. with the right hand side facing downwards).*

## PROJECTOR HEIGHT

The default height for positioning the projector is at the centre of your screen. However, you can set the projector above or below the centre and adjust the image using the 'Lens Shift' (Rising/Falling Front) facility to maintain a geometrically correct image. Typically, the projector can be located up to the top or bottom of the screen without geometrical distortions, but please refer to the lens data sheets for information on the maximum rising/falling front correction available for a particular lens. In some cases the projector may also be tilted without introducing observable distortions.

## HORIZONTAL POSITION

As with vertical positioning, the default horizontal position of the projector is at the centre of the screen. However, the projector can be mounted up to one quarter screen width left or right of image centre and the 'Horizontal Lens Shift' function used to centre the image on screen without geometric distortion.



*Vertical Lens Shift and Horizontal Lens Shift can be used in combination, however the extent of their individual ranges will be reduced according to the amount of shift used i.e. Vertical Lens Shift is maximised when Horizontal Lens Shift is centred and vice versa.*

**THROW DISTANCE - FIXED RATIO LENSES**

It is important to position the projector at the right distance from the screen. This 'Throw Distance' is defined as the distance from the screen to the front of the projector case. It is calculated by taking into account your screen width, the type of lens used, and the aspect ratio you intend to display.

If you intend to display images with different aspect ratios, it is recommended that you position the projector at a distance from the screen which will allow you to project images at the maximum fractional aspect ratio (16:9 = 1.78, 5:4 = 1.25), i.e. the image with the largest width. Failure to do so could result in smaller fractional aspect ratio images exceeding the height and/or width of your screen.

**THROW DISTANCE - ZOOM LENSES**

When using a zoom lens, exact positioning of the projector is less important because the image size can be adjusted. However, the projector must be located within the Throw Distance range imposed by the minimum and maximum lens ratios.

If you intend to display images with different aspect ratios, it is recommended that you define your own Throw Distance range. To define the minimum screen distance, use the lowest lens throw ratio associated with the smallest fractional aspect ratio used. To define the maximum screen distance, use the largest lens throw ratio associated with the largest fractional aspect ratio used.

**CALCULATING THE THROW DISTANCE**

To calculate the distance between the screen and the front of the projector case use the equation given below. The tables overleaf give the actual lens throw ratios (with tolerances) and lens extensions. Perform the calculation for each end of the zoom range to define the throw distance range. The tables also give the tolerance in throw ratio if more accurate calculations are required.

**Distance Required = (Screen Width x Actual Lens Throw Ratio) + Offset**

The following SXGA lenses may be used in conjunction with the **LIGHTNING gv** range albeit with some optical vignetting and with some reduction in optical performance. An optional sleeve adapter (P/N LA 00088A) is required for certain lenses.

SXGA (SX) Lenses Fitted to a LIGHTNING gv Projector						
Lens Nominal Throw Ratio	Actual Throw Ratio :1	Screen Distance (metres)		Offset (Pixels)		Extension (mm)
		Minimum	Maximum	Vertical	Horizontal	
0.64	0.8	3	10	384 <sup>4 6</sup>	250 <sup>4 6</sup>	116
1.2	1.5	3.6	6.2	700 <sup>6</sup>	100 <sup>6</sup>	175
1.5 - 2.0z	1.88 - 2.5	3	12	700 <sup>6</sup>	100 <sup>6</sup>	N/A
2.0 - 2.5z	2.5 - 3.13	3	25	700 <sup>6</sup>	100 <sup>6</sup>	N/A
2.5 - 4.0z	3.13 - 5.0	5	40	700 <sup>6</sup>	100 <sup>6</sup>	N/A
4.0 - 7.0z	5.0 - 8.75	8	70	700 <sup>6</sup>	100 <sup>6</sup>	N/A

The following SXGA lenses are available for use with the **LIGHTNING sx** range. An optional sleeve adapter (P/N LA 00088A) is required for certain lenses.

SXGA (SX) Lenses Fitted to a LIGHTNING sx Projector						
Lens Nominal Throw Ratio	Actual Throw Ratio :1	Screen Distance (metres)		Offset (Pixels)		Extension (mm)
		Minimum	Maximum	Vertical	Horizontal	
0.64	0.64	3	10	150 <sup>4 6</sup>	130 <sup>4 6</sup>	116
1.2	1.2	3.6	6.2	512	N/A	N/A
1.5 - 2.0z	1.5 - 2.0	3	12	512	N/A	N/A
2.0 - 2.5z	2.0 - 2.5	3	25	512	N/A	N/A
2.5 - 4.0z	2.5 - 4.0	5	40	512	N/A	N/A
4.0 - 7.0z	4.0 - 7.0	8	70	512	N/A	N/A

<sup>1</sup> Limited by optical vignetting

<sup>2</sup> Limited by reduction in optical performance

<sup>3</sup> Requires Thread Adapter (Part Number: LCM 00773) and Gaiter

<sup>4</sup> Requires Sleeve Adapter (Part Number: LA 00088A)

<sup>5</sup> Mechanical Incompatibility

<sup>6</sup> Prototype - Provisional Information



*Specified luminance, uniformity and resolution may not be maintained with all projector/lens combinations.*

## Mounting the Projector

Now that you know the distance from the screen that the projector must be located you can decide on which type of mounting will best suit your requirements. The easiest method of mounting is to rest the projector on a desk or table directly in front of the display screen. If you intend to use this method, make sure that the desk or table is strong enough to support the projector's weight of 110kg safely.



*Never mount the projector near air conditioning or heating ducts, electrical wiring or any materials which could be affected by the projector's operational heat i.e. polystyrene ceiling tiles etc. The projector should never, under any circumstances, be operated on its side when viewed from the rear.*



*The projector weighs 110kg without its lens and at least 4 people are required for safe movement of the projector. The projector is designed to be lifted using the handrail at the base. Do not attempt to lift the projector by holding the front, the side covers or the lens.*



*Never locate the projector where a laser beam may enter the lens, or fall on the light engine otherwise catastrophic damage will result.*




*To prevent contamination of internal optical surfaces, never locate the projector near any chemical or oil-based smoke machines or where smoke may enter the projector.*

During normal operation considerable heat is generated inside the projector, therefore, an air cooling system is provided. This consists of a powerful fan which draws cool air through specially designed air ducts within the case to distribute it over the lamp and other components. The cooling system provides maximum cooling whilst minimising noise output.

The position of the projector's air inlets and outlets is shown opposite. When mounting the projector, always make sure the inlet and outlet ducts are kept clear of any obstructions.



*Never move or tamper with any seals or ducting panels on the projector or the air flow could be disrupted and cause the projector to overheat. Always keep the air inlets and outlets clear of any obstruction and away from walls and ceilings.*

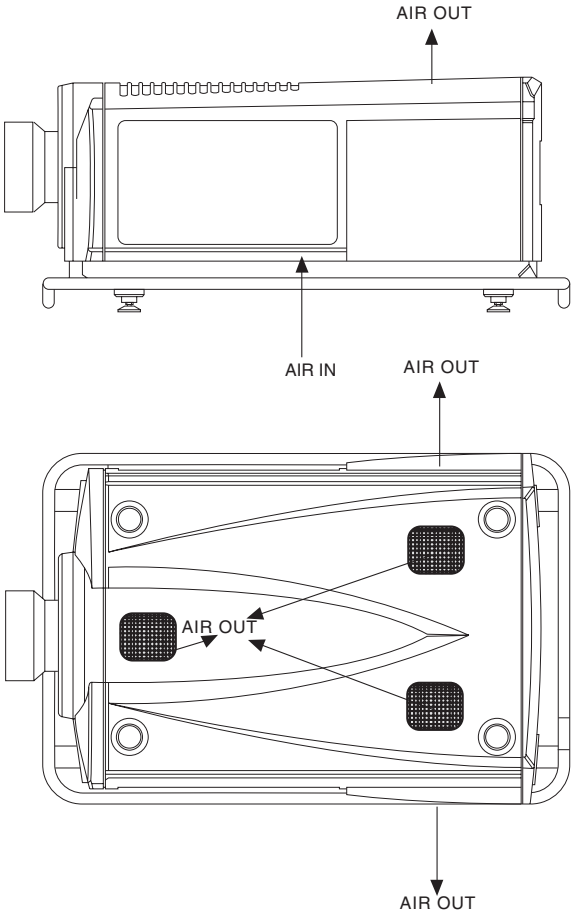

## External Cable Routing

In order to help prevent cross coupling, it is good working practice to avoid running signal cables and mains cables closely bundled together over long distances.

Where this advice is not observed, the user may experience poor picture quality, or inexplicable and spurious operation.




## MOUNTING FEET

There are four mounting points located on the underside of the projector for the attachment of the mounting feet. Each foot is screwed into the mounting points and tightened using a spanner on the flats of the foot shaft. The projector can be levelled using the black adjustment rings on each foot which allow 25mm (1 inch) of movement. The rubber foot base incorporates a ball socket connector which will form to an uneven surface to assist in mounting.



*Although the adjustment rings on the projector feet will allow the slight raising or lowering of the front of the projector, it is recommended that projector is made level and the lens shift feature is used to perform this function.*

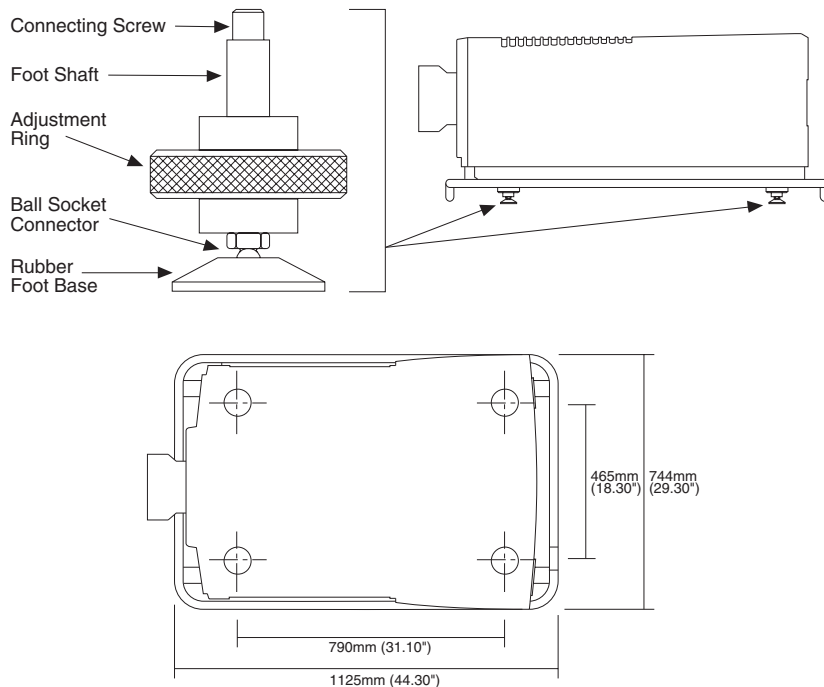

*Care should be taken when removing or attaching the projector feet to ensure that the projector does not rest on its feet at an angle.*

## Switching On

First of all, connect the video signal input source to the Analogue Input Board at the back of the projector (refer to Signal Sources for details on different sources and how to connect them). Then plug the projector into the mains supply and switch it on (using the on/off switch at the back of the projector). Switch on the video source. The projector will select the first valid signal as defined in the User Preferences and display the image using the Factory Default parameters. The quality of the image can be adjusted using the remote buttons. Refer to Adjusting the displayed Image (System Operation, C—44) for further information.



***Never operate the projector with the cover removed and always switch off the mains supply and disconnect the plug before removing the cover.***

If there is no image on the screen, check that the video source is operating and connected to the correct input, e.g. if it is a one lead composite source, then it should be plugged into the Composite/G input.

After initial power-up, you can define how the projector will subsequently start-up by using the User Preferences Menu. See System Operation, C—29.


## Signal Sources

The projector accepts composite, S-Video, YprPb RGB, Serial Digital standard definition video signals. high definition serial digital input is available as an option.

The analogue input board at the rear of the projector provides three rows of 5 input ports. Each row (input) is a universal input which can be configured to accept any of the given analogue signal types by using the appropriate port combination. The provision of three inputs (Input 1, 2 and 3) allows three signal types to be connected at any one time. The analogue input board also provides two Serial Digital Inputs (Inputs 4 and 5). If the projector is fitted with a Standard Definition version of the digital module the Inputs 4 and 5 are SD-SDI. If the projector is fitted with a High Definition version of the digital module then Input 4 is SD-SDI and 5 is HD-SDI.


**COMPOSITE SIGNALS**

PAL (Europe and Australia) and NTSC (US and Japan) signals, are composite video formats used by televisions and VCRs. They are connected by one lead to the COMPOSITE/G port in the source section on the rear panel

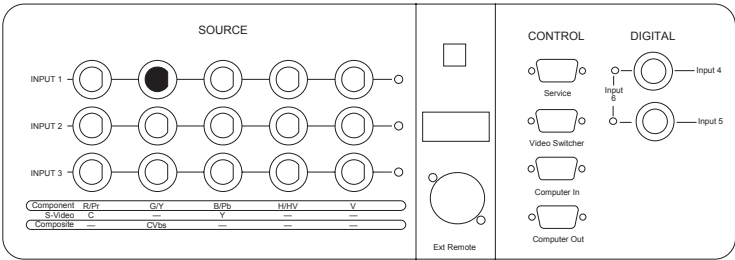


**S-VIDEO SIGNALS**

VCRs and most video cameras produce an S-Video format. They are connected to the projector ports Y and C.

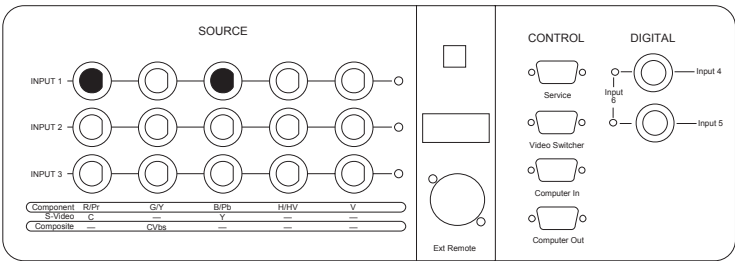


**Y Pr Pb SIGNALS**

A Betacam signal requires connection to the Y, Pr and Pb ports.

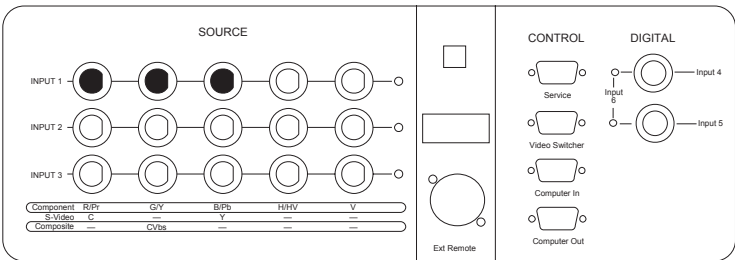


**COMPONENT VIDEO SIGNALS WITH SEPARATE SYNC**

When using a component video input which has a separate sync, and the sync is composite (combined horizontal and vertical), the connections are as shown below.

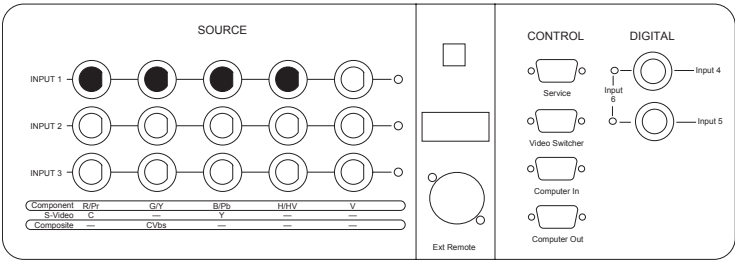


**RGB Hs+Vs AND RGB Hs Vs SIGNALS**

Computer signals are separated into R, G and B with either separate or combined horizontal and vertical syncs (Hs Vs or Hs+Vs). SVGA compatible computers, such as IBM compatible PCs, have separate syncs and should be connected as follows.

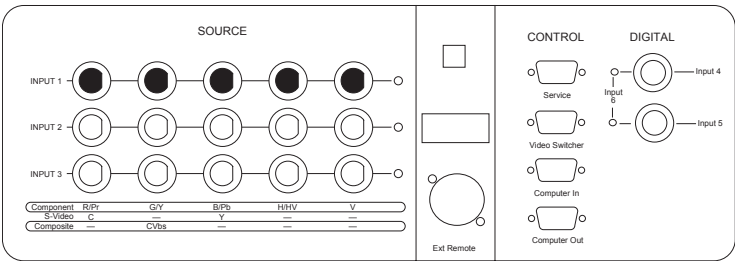


Apple Macintosh (series II) computers output a combined sync and therefore have one connection less than an SVGA computer. The R, G, B and combined horizontal and vertical syncs are connected as shown below.

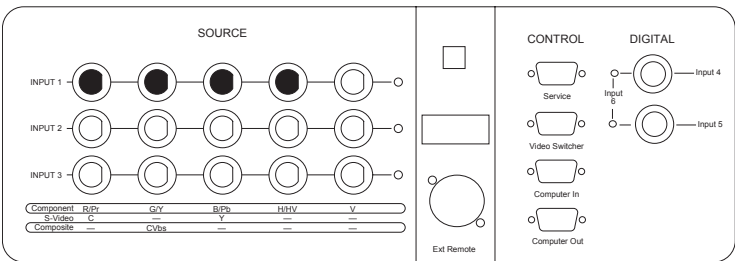

**STANDARD DEFINITION AND HIGH DEFINITION  
SERIAL DIGITAL SIGNALS**

Standard Serial Digital signals (50Hz and 60Hz) are connected to the projector by a single cable. The projector provides two separate inputs for these signals, inputs 4 and 5, either of which may be used.

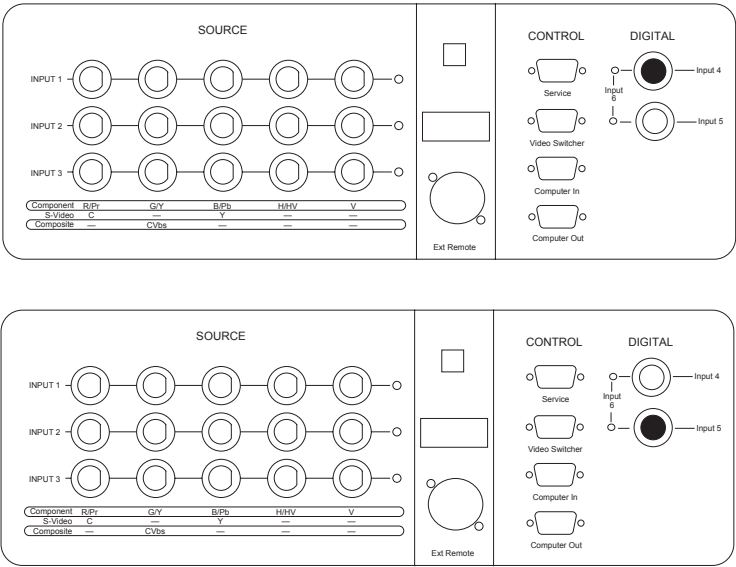

SD-SDI  
HD-SDI

For projectors fitted with SD-SDI version digital module Input 4 and 5 is SD-SDI. If the HD-SDI option is fitted the Input 4 is SD-SDI and Input 5 becomes HD-SDI.

## Turning On the Lamp

---

The lamp should light up within 25 seconds of the projector being turned on. If it has not lit, the bottom red LED at the front of the case will glow constantly and the projector should be turned off and back on again.



*Never look into the lamp housing or the lens, or attempt to remove the lamp from its housing when the projector is on.*

## Picture Display

---

The picture display can be controlled using the PIC MUTE button on the remote control. When muted the screen goes blank. Changing the lamp power when the picture is muted will cause the image to be displayed.

When unmuted the video image is displayed on screen and the lamp is set to either HIGH or LOW depending on the last selection made with the lamp power buttons. Lamp High is maximum lamp power. Lamp Low is a user set - variable power setting. This setting has 31 steps from approx. 80% of full light output to full light output.

The Picture Display can be set in the User Preferences menu for the next time the projector is switched on (see System Operation, C—29).

## IMAGE CONTROL

The image parameters determine how a picture looks on screen and are adjusted by using the remote control or the on-screen Modify menu. Adjustable parameters include Brightness, Contrast, Sharpness, Saturation, Hue, Size, Position, Pixel Number, Pixel Phase and Colour Temperature.

To adjust a parameter using the remote control, first press the appropriate command button then use the ▲, ► buttons to increase and the ▼, ◀ buttons to decrease the value (see System Operation, C—1). If the cursor buttons are not pressed within ten seconds, the function will be deactivated. If a second function is selected before the ten seconds have elapsed, the new function will be applied instead.



*The Image Parameter controls on the remote can be used when in the Menu system providing that no data fields are being edited.*

The adjusted parameter settings for an input device can be saved to a 'channel'. A channel setting also stores the input source address (see storing system configurations, B—15, for more information). This allows you to use the input device at a later date without having to reconfigure the parameters to achieve the desired image. The channel is selected in the Channel Set-up menu or by using the remote. The source image is then displayed on screen.

## LENS CONTROL

All 20 series models are fitted with a motorised lens mount as standard and have picture control features available via the remote control in the form of Focus and Lens Shift. These features are operated via the LENS button (see System Operation, C—4) and allow the user to either adjust the image Focus and/or adjust the horizontal and vertical positioning of the displayed image relative to the projector. The LENS button also includes a menu item for Zoom for future use.

## ON SCREEN DISPLAY (OSD)

The On Screen Display (OSD) displays the system menus and messages. The OSD will come on automatically at power-up if it is preset in User Preferences Menu. Alternatively it can be activated by the OSD ON remote control button.

## MENU SYSTEM

The main menu provides access to dialogue boxes which allow you to control the projector and to view system settings. If the OSD is set or switched to 'OFF' the menu system and messages will not be displayed on screen.

## Storing System Configurations

A Channel is a 'store' containing all of the parameters associated with an input and the image it displays. The projector has 63 available channels.

In addition to the channels there are three further 'stores'. They are the **Previous Store**, **Revised Store** and **Factory Pre-set**. These three stores are accessed directly from the remote using the PREV (previous store), REV (revised store) and >< (factory pre-set) buttons.

When a channel has just been selected or the factory pre-set is being used, the parameters are held in the previous store. If any changes are then made to the channel or the pre-set, they are held in the revised store.



*Modifications made to the image parameters will be applied to the revised store regardless of whether the previous or revised image is being displayed.*

At any point PREV and REV can be pressed to compare the original image with the revised image. Any final changes can be saved by pressing SAVE on the remote which will transfer the contents of the Revised store to the last channel selected.



*Pressing SAVE will save any changes made regardless of which view is being displayed.*

To clear changes held in the Revised store re-select the original channel using the numeric keypad on the remote control.

The factory pre-set contains configuration parameters which cannot be altered, however changes can be made and stored in a new channel using the Channel Set-up menu. There is a pre-set for a computer input and one for a video input. The pre-set will produce an image but not necessarily of the ultimate quality. The quality can be improved using the Modify Command. The factory pre-set channel number is 0 (zero).



*To find out which channel is currently being used, press MENU and select Channel Set-up. The current channel will be highlighted in the channel list.*



## Section C: System Operation

<b>Remote Control - Overview .....</b>	<b>C—1</b>
<b>LED Indicators .....</b>	<b>C—6</b>
<b>Menu Operation .....</b>	<b>C—7</b>
Dialogue Boxes .....	C—8
Check boxes .....	C—8
Flyout Lists .....	C—9
Soft Buttons .....	C—9
Data Entry Fields .....	C—10
Information Windows .....	C—10
Password .....	C—10
<b>Main Menu - Overview .....</b>	<b>C—11</b>
<b>Channel Set-up .....</b>	<b>C—13</b>
Select Command .....	C—15
View Command .....	C—16
Copy Command .....	C—17
New Command .....	C—19
Modify Command .....	C—21
Delete Command .....	C—27
<b>Image Mode .....</b>	<b>C—28</b>
<b>User Preferences .....</b>	<b>C—29</b>

**Test Patterns** .....C—31

**Projector Status**.....C—33

**Set Projector Address** .....C—34

**Add Computer**.....C—35

    Create/Modify Command .....C—36

    Delete Command .....C—38

    Copy Command .....C—40

**Applying a New Signal Source**.....C—41

    Configuring a Computer Channel.....C—42

    Configuring a Video Channel .....C—43

**Adjusting the Displayed Image**.....C—44

**Addressing Multiple Projectors**.....C—47

**Computer Control**.....C—48

**Switcher Operation** .....C—53

**Palm Pilot Control Utility Operation** .....C—55


# Remote Control - Overview








Both the remote control unit and the integrated keypad on the rear of the projector can be used to select channels, adjust parameters and navigate through the menu systems.

Most of the control functions have an icon and a scalar bar which are displayed on screen when the function is activated.

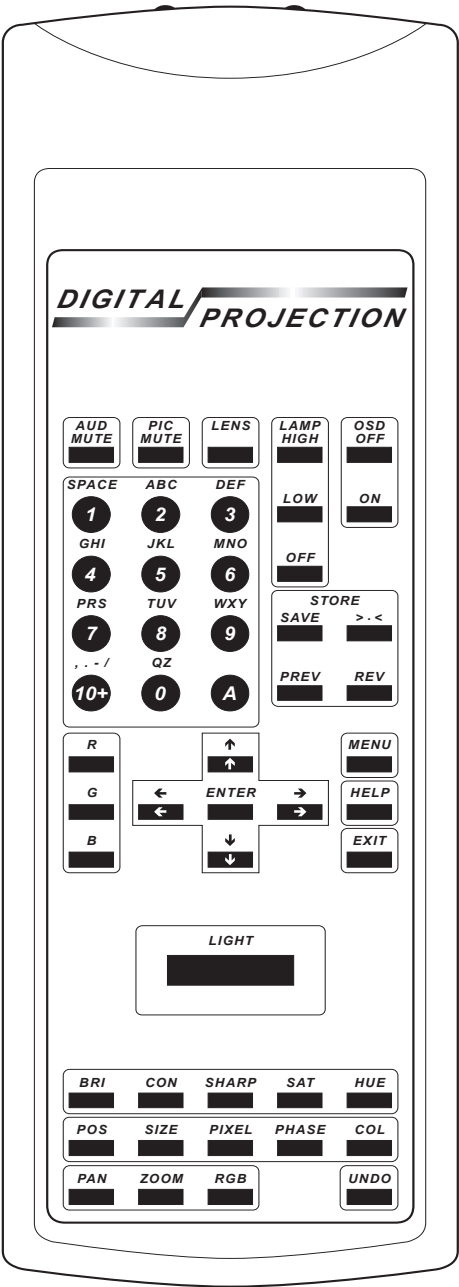


When making adjustments to the image settings, always make sure the On Screen Display is on. You can use the On Screen Display whilst showing an image to see the affects of any changes made.

As projector operation will frequently take place in a darkened room, the remote control has a built in back-light which illuminates the control panel. When the remote control is directly connected to the projector (either via the Remote Receiver or using the Hard Wire Remote Adapter) this light will be constantly illuminated allowing you to locate the buttons required. When battery operated, pressing 'LIGHT' on the remote control will illuminate the panel and activate a timer. This timer will automatically turn the back-light off after 10 seconds and is reset every time you press a button. Therefore the back-light will stay on for 10 seconds after the last operation on the remote.

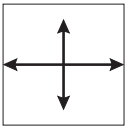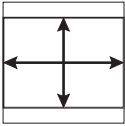

BUTTON	ICON	FUNCTION / OPERATION
PIC MUTE (Picture Mute)		PIC MUTE toggles the displayed image between the incoming signal and a blank screen.
LAMP HIGH		LAMP HIGH represents 100% lamp power and LAMP LOW is variable between 0 and 31, which corresponds to between 50% and 100%.
LAMP LOW		When LAMP LOW is pressed, a slider bar appears on screen allowing the user to define the precise setting of light output using the left and right cursor keys. LAMP HIGH and LAMP LOW can then be used to toggle between 100% and the previously defined LAMP LOW setting.
LAMP OFF		
OSD ON OSD OFF		OSD ON activates the On Screen Display allowing you to view system information on the screen. OSD OFF deactivates the display. There is no icon for OSD OFF.
POS (Position)		These buttons are used to alter the horizontal & vertical size and position of the displayed image. Press POS and use the cursor keys to alter the position of the image. The image size can be altered using the cursor keys after selecting the SIZE button.
SIZE		
PIXEL		Press PIXEL to designate the number of horizontal pixels to be sampled in the incoming signal. Movement through the range is controlled by the cursor buttons.

BUTTON	ICON	FUNCTION / OPERATION
PHASE		By pressing PHASE, then using the cursor buttons, the pixel clock phase (0 to 100) can be adjusted. This function is only used for computer input signals.
COL (Colour Temperature)		The colour temperature can be adjusted in steps of 100° from 3000° to 9,000° Kelvin. Press COL, then increase or decrease the temperature using the cursor buttons.
BRI (Brightness)		These image control buttons allow you to adjust the brightness, contrast, sharpness, saturation and hue parameters of the displayed image. Pressing one of these buttons will display its associated icon and scalar bar, adjustments can then be made using the cursor buttons.
CON (Contrast)		
SHARP (Sharpness)		
SAT (Saturation)		SHARP, SAT and HUE will have no effect on displayed image if a component or computer signal is being used. Similarly, HUE will have no effect on a PAL signal.
HUE		

BUTTON	ICON	FUNCTION / OPERATION
PREV (Previous)		These buttons are used to store channels. Pressing the PREV button will access the previously stored channel configuration and display the image on screen without any parameter changes you have made. To view the image with any changes made, press the REV button. Pressing the SAVE button will store any changes made to the channel selected regardless of which view you are looking at. The >< button restores the factory pre-set values. See B—17, Storing System Configurations for more information.
REV (Revised)		
SAVE		

><

BUTTON	FUNCTION / OPERATION
R, G, B	The Red, Green and Blue buttons toggle the individual colours on and off. These buttons are only active when the On Screen Display is on and are mainly used for fault finding.
◀, ▲, ▼, ▶ ENTER	The cursors are used to adjust image parameters directly from the remote control. When used in conjunction with the ENTER button they allow navigation through the menu system in order to select and change data.
MENU	Press MENU to display or hide the menu system. The On Screen Display must be switched on to use this function.
HELP	<i>When this feature is available pressing this button in the menu system will provide a basic explanation of the function under the cursor. Information relating to remote control buttons will also be available, when the menu system is hidden, by pressing HELP followed by the relevant button. The help screen is cleared after 15 seconds or by pressing the HELP button again.</i>

BUTTON	FUNCTION / OPERATION
EXIT	When at the Main menu, pressing EXIT will exit the menu system completely, otherwise it will return you to the previous menu.
LENS	<p>The LENS button is used to activate the Focus and Lens Shift features. It also provides access to the Zoom feature although this is not available at present.</p> <p>To Focus an image, press the LENS button until the Focus dialogue box appears on the screen and adjust using the ▲ and ▼ cursor buttons.</p> <p>Lens Shift allows the user to adjust the horizontal and vertical positioning of the displayed image relative to the projector. To use the Lens Shift feature, press the LENS button until the Lens Shift dialogue box appears on the screen then position the image using the cursor buttons.</p>
ALPHA- NUMERIC BUTTONS	These buttons are used to select channels and enter values in data fields. A channel can be selected by simply pressing the number of the channel. For channels 1 to 9, just press the number. you desire. For channels 10 and onwards, press the 10+ button first, e.g. to select channel 35 you must press 10+ followed by 3 followed by 5. When in a data field, repeatedly pressing an alphanumeric button will cycle through all the characters relevant to that button.
LIGHT	When battery operated, pressing LIGHT will illuminate the back panel on the remote control. The panel light will automatically switch off 10 seconds after the last used button is pressed.

BUTTON	FUNCTION / OPERATION
A	When using multiple projectors, it may be necessary to control all projectors collectively and individually. This is achieved by allocating an address to each projector (using the menu system C—35). All projectors will respond to the remote control when the address is set to 0. To address an individual projector, press A twice followed by the projector's address.-
PAN, ZOOM RGB, UNDO	<i>Future features, these buttons currently do not have any effect on projector operation.</i>

## LED Indicators

There are 3 Light Emitting Diodes (top - red, middle - green, bottom - red) at the front of the case which indicate the status of the projector. The top red LED, when on constantly, indicates that power is applied to the projector and that it is turned on.

The green LED, when on constantly, indicates the projector is operating normally and the lamp is lit. When flashing, the green LED shows that a valid remote control signal is being received. If the green LED is not illuminated, it indicates a fault.

When the bottom red LED is illuminated, it indicates that the lamp is switched off or has failed to strike. This could be due to lamp failure or the safety interlock switch circuit detecting a fault condition.

A rear numerical LED display provides information about projector run hours. This duplicates the unit run hours information which is shown on the On Screen Display - Projector Status Menu. See Section C-33.



## Menu Operation

The On Screen Display must be 'ON' to access the menu system, if the OSD is on but no menus are being displayed, press the 'MENU' button. This will display either the Main menu or the last screen of the menu system used (depending on whether the menus have been used since the power or the On Screen Display was last turned on). Menu operations are only active when the menu is being displayed on the screen. The active menu or window is always the window in the foreground.

Menu displays can be temporarily removed, to view images etc., by pressing 'MENU'. If a data field is being edited, pressing 'MENU' will not turn off the menu display, but will display a message box stating- "Cannot turn Menu display off while Data is being edited. Press enter or EXIT to finish edit". The menu will be removed 10 seconds after the last editing button is pressed. When the 'MENU' button is pressed again, you will be returned to the menu screen you last accessed so you can continue editing or configuring the system.

To leave the menu system entirely, either press 'EXIT' at the main menu level or 'OSD OFF' at any time. This will lose access to the Service menu along with any test pattern being displayed. When the menu system is re-entered, the entry point will be the Main menu (top level).

Movement through the menu system is cursor controlled, the ▲ and ▼ buttons can be used to move up and down the page and the ◀ and ▶ buttons to move across the page. If the cursor is moved off the edge of the page in any direction it will reappear over the nearest function on the opposite side of the page.

To select a menu, press 'ENTER' when the cursor is over the required item. To move up one menu level from a lower level press the 'EXIT' button when not entering data. Alternatively, when a menu page offers a soft 'OK' or 'CANCEL' button, move the cursor over one of these and press 'ENTER'. This will either accept changes made (OK) while in the page or ignore changes (CANCEL) and return to the higher level.

## Dialogue Boxes

---

A number of dialogue boxes allow you to enter or change data. This is done by using data entry fields, flyout lists, check boxes and soft buttons. Both the ▲ and ◀ buttons can be used to move up the page and the ▼ and ▶ buttons can be used to move down the page.

To edit a data field in a dialogue box, position the cursor over the field you want to access and press 'ENTER'. The cursor appears over the first unused character and the new characters are entered using the keys on the remote. Press the ▶ button to move the cursor to the right for the next character. Press the ◀ button to delete characters by moving the cursor one character to the left. If the data needs to be increased or decreased in value, use the ▲ and ▼ cursor buttons provided. Press 'ENTER' to accept any changes and to close the edit mode. To ignore any changes made press 'EXIT'.



*While data fields are being edited the menu cannot be switched off (see Menu Operation).*

## Check Boxes

---

A check box is used to either toggle a function on or off or select one of a number of mutually exclusive items.

**Toggling a check box on/off** - Position the cursor over the check box you want and press 'ENTER'. If the function was off, a cross will appear and the function will be turned on. If the function is already switched on, the cross will disappear and the function will be turned off.

**Selecting an exclusive check box** - Place the cursor over the check box and press 'ENTER', a cross appears in the selected box and the function will be turned on. The previous selection is cancelled.

## Flyout Lists

---

A flyout list is provided for fields that require you to choose from a long list of possible choices.

Place the cursor over the data field and press enter. The flyout list appears as a list of three items expanded from the data already displayed. The list will be in the following order: names starting with any punctuation; numeric entries in numerical order; names in alphabetical order. When the flyout list is open some fields or titles may be covered up temporarily.

Use the ▲ or ► button to scroll up the list and the ▼ or ◀ button to scroll down. Pressing an arrow button once will move the cursor by one item in that direction. Holding the button down will scroll 2 items per second for the first 5 seconds, followed by 10 per second.

Place the cursor over your choice and press 'ENTER'. The flyout list closes and the chosen data is entered. If you do not want to make any changes, press 'EXIT' and the list will close.

## Soft Buttons

---

The two most common Soft Buttons are the 'OK' and 'CANCEL' buttons. They are activated by positioning the cursor over one of them and pressing ENTER.

In active windows the 'OK' Soft Button will accept any changes made and exit that window. If there is a confirmation window this will clear and the changes will be accepted. If the button appears in a message box it will clear the box.

The 'CANCEL' Soft Button will ignore any changes and clear the window. If it is pressed in a confirmation window, it will clear leaving the underlying window displayed without any changes. The 'CANCEL' soft button is the same as the 'EXIT' button on the remote control.

## Data Entry Fields

---

Position the cursor over the data entry field and press 'ENTER'. Next, use the alphanumeric buttons to enter the required characters then press 'ENTER'. Use the (left arrow) to delete the last character.

## Information Windows

---

There are three types of information window:

**Message Boxes** - provide information or advise a course of action.

**Confirmation Boxes** - ask you to accept or reject changes made in dialogue boxes.

**Warning Boxes** - indicate possible system problems. They will repeat every 15 minutes until the fault is cleared.

## Password

---

The system password is used to gain access to the Service Set-up menu. When the Service Set-up menu is selected from the Main menu, a Password Entry field will appear with four underscore characters.

As each number of the password is entered, it will be displayed as an asterisk. If the four numbers are correct on the press of the last number you will automatically enter the Service Set-up menu. If the wrong password is entered the password underscore characters will return.


To quit password entry for any reason press 'EXIT' on the remote, this returns you to the Main menu. Pressing ▲ or ▼ will also clear the Password field but will move the cursor to another item in the menu.

If a non-numeric key, except 'EXIT', ▲ or ▼, is pressed during password entry, its action will be ignored.

## Main Menu - Overview

The main menu provides access to sub-menus which allow you to control the projector and to view any system settings.

The sub menus are Channel Set-up, Image Mode, User Preferences, Test Patterns, Projector Status, Set Projector Address, Add Computer and Service Set-up (this last function is for qualified technicians and is password protected).

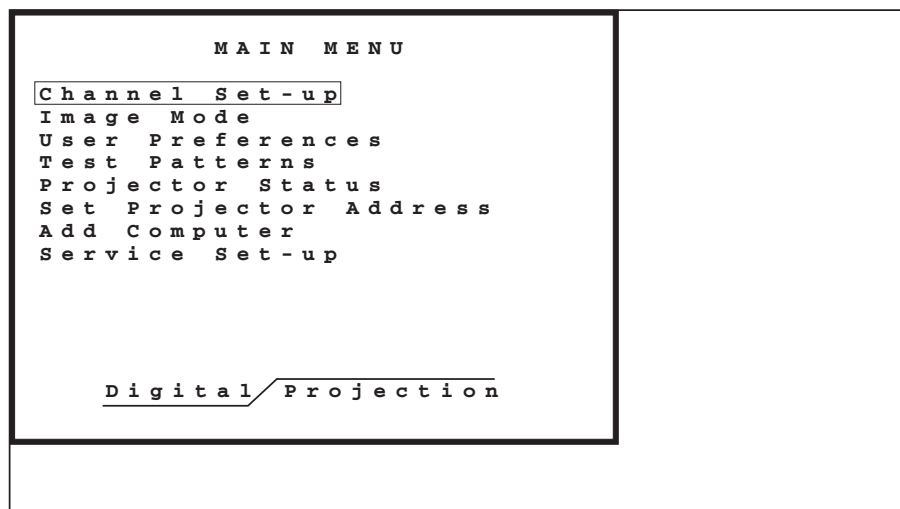

**Channel Set-up** - You can create NEW channel configurations and SELECT, VIEW, COPY, MODIFY or DELETE current channels.

**Image Mode** - Allows you to define front or rear projection and configure the projector for either TV or Film originated signal inputs.

**User Preferences** - You can decide how the projector powers up and it's general control defaults can be set.

**Test Patterns** - A range of patterns is available to enable alignment of the projector and check it's performance.

**Projector Status** - Displays lamp run time information, the projector's temperature, memory status and the last 4 warnings displayed.

**Set Projector Address** - When using multiple projectors, the individual projector address can be set using this function.

**Add Computer** - This function allows you to configure the projector to display new computer cards and add them to the projector's library.

**Service Set-up** - This is for the use of qualified technicians and is password protected.

## Channel Set-up

The Channel Set-up function allows you to create NEW channel configurations and SELECT, VIEW, COPY, MODIFY or DELETE current channels. Creating or editing channel parameters does not require the input source to be present, however for the best results it is advisable to make adjustments while viewing the image on screen.

Before you can adjust a channel you first have to select it. The only exception is when using the Copy command, when you can copy a highlighted channel configuration to another channel.

The parameters which can be accessed and edited in the Channel Set-up menu are: channel name; input number; external switcher input number; source format Y Pr Pb / RGB; video standard PAL and NTSC; computer selection; pixel resolution; pixel phase; image size and position; aspect ratio; colour temperature; signal sync source.

In addition each channel will store the selected settings for brightness, contrast, saturation, hue and sharpness where applicable. These parameters are accessed via the remote control. If they are saved using the SAVE button the settings for that particular channel will be stored in memory.

There are two factory preset channels - one for video input and one for computer input and both presets use the settings defined in the User Preferences screen.



***For a computer input, the size, position, pixel and phase will be determined by the choice of computer card and the mode selected by the input signal.***

The Channel Set-up screen which is accessed from the Main Menu is shown opposite. The screen has a row of options across the bottom and is split into 5 columns- Chan, Name , IP, ADR and Type.

C H A N N E L   S E T - U P				
C h a n	N a m e	I P	A D R	T y p e
1	V I D E O   ( R G B )	1		V I D E O
2	V I D E O   ( Y P r P b )	2		V I D E O
3	C O M P U T E R	3		C O M P U T E R
4	1 4   C H A R A C T E R S			
5				
6				
7				
8				
9				
1 0				
1 1				
1 2				
1 3				
1 4				
1 5				
S E L E C T   V I E W   C O P Y   N E W   M O D I F Y   D E L E T E				

**Chan:** This is the channel number entered on the remote control keypad to select an input. The channels are listed in numerical order and are scrollable.

**Name:** A name of up to 14 characters in length can be entered to describe each channel.

**IP:** Specifies which input connection on the rear of the projector (1, 2 or 3) will be used for a particular channel.

**ADR:** The switcher input address. If a number is preset here, the projector will command a video switcher to select that input via the RS232 serial control cable.

**Type:** Denotes the type of input source for each channel. Examples of a video input include PAL and NTSC, While computer inputs could be VIDEO7, TSENG, MATRX, etc. (for further information see B—17, Signal Sources ).



## SELECT Command

Channel selection can be made in two ways, by simply keying in the channel number on the remote control or by selection in the Channel Set-up screen. Using the remote control is quicker if you know the channel number required, but if you don't, the Channel Set-up screen will remind you.

To select a channel using the On Screen Display, first choose Channel Set-up from the the Main Menu and locate the cursor over the desired channel using the ▲ and ▼ buttons. Highlight 'SELECT' from the options at the bottom of the screen using the ◀ and ▶ buttons and press 'Enter' to display the selected channel.

If a blank channel is selected, the image display will turn black and a message box will be overlaid stating- "Channel XX not configured"

If a valid channel is selected but a source is not detected at the input, the screen will go black until the signal is connected. A message box will be overlaid stating- "Source is not Present".

If a valid channel is selected but the detected source is different from that expected, a message box will be overlaid stating- "Source is not the expected configuration".



*The system will do its best to display the image using the parameters of the selected channel.*

If a channel configured for a computer is selected and the projector does not identify a computer card mode which matches the incoming signal, the screen will display an image using the system default parameters. These parameters, such as size and position, are stored in the system memory. An on-screen message also appears stating- "New mode will be lost if not saved or if channel is changed". The display will then have to be adjusted manually to give an optimum image (Refer to Storing System Configurations, B—15 for further details).

VIEW Command

The 'VIEW' command will display information about a channel. When viewing a channel the information displayed cannot be modified.

Highlighting a channel in the Channel Set-up menu and selecting 'VIEW' will display the View Channel window (see example below). Further information can be accessed by selecting INFO, SIZE POS and COMPMODE. To exit the window and return to the Channel Set-up menu press the 'Close' soft button or 'EXIT' on the remote.

OPERATION

VIEW CHANNEL

Channel 3 Name -----

Input 3

Configuration

☐ Video

☒ PAL

☐ NTSC

☐ SECAM

☐ CPENT

☒ RGB

☐ YPrPb

☐ SVIDEO

☒ Computer

Computer

☐ Ext. Mixed

Synchs.

☐ E-zoom

☒ Film Look ON

☒ Look 1

☐ Look 2

Colour Temp

Aspect Ratio

VIDE07

MODE

Switcher

Input ---

INFO

SIZE\_POS

COMPMODE

CLOSE

SELECT

VIEW

COPY

NEW

MODIFY

DELETE

## COPY Command

The COPY command allows all or just selected parameters from a channel to be copied to another channel. To copy a channel, highlight it with the cursor in the Channel Set-up menu and select the COPY command. This displays the Copy Channel screen containing three main fields: Copy From, Copy To and Copy Parameters.

C O P Y   C H A N N E L

C o p y   F r o m   1                      N a m e                      V I D E O   ( R G B )

C o p y   T o                         N a m e  

C o p y   P a r a m e t e r s

☒ A l l                      ☐ S e l e c t e d

☐ I n p u t   C o n f i g                      ☐ S a t u r a t i o n

☐ S i z e   &   P o s i t i o n                      ☐ S h a r p n e s s

☐ C o l o u r   T e m p                      ☐ H u e

☐ S w i t c h e r   S o u r c e

☐ B r i g h t n e s s

☐ C o n t r a s t

**Copy From** - displays the name and number of the channel to be copied.

**Copy To** - displays the name and number of the destination channel.

**Copy Parameters** - allows copying of all or selected channel parameters.

To select a destination channel, place the cursor over the Copy To field and press 'ENTER'. Scroll through the flyout list using the ▲ and ▼ buttons until the desired channel is highlighted and press 'ENTER'. The name and number of the channel will appear in the Copy To field. If a blank channel is selected it can be named at this point by placing the cursor over the name field and pressing 'ENTER'. The field will then be in Data Edit mode allowing a name to be entered.

The next stage is to select which parameters you wish to copy by crossing either the 'All' or 'Selected' check boxes. If 'Selected' is chosen, the check boxes of the parameters you wish to copy must be crossed. The choices available are Input Configuration, Size & Position, Colour Temperature, Switcher Source, Brightness, Contrast, Saturation, Sharpness and Hue. With the desired parameters selected pressing 'OK' soft button will copy them to the destination channel and return you to the Channel Set-up screen.

If a destination channel has not been chosen on pressing 'OK', a message box appears stating- "No Copy To channel number has been entered". Pressing 'OK' in the message box will return you to the Copy Channel window to enter a channel.

Pressing 'OK' to copy the parameters to a destination channel that is already in use will overlay a confirmation box stating- "Destination Channel already in use press OK to Overwrite or CANCEL to return to the Copy dialogue". Selecting 'CANCEL' or pressing 'EXIT' on the remote will terminate the copying process. This is confirmed by a box stating- "Changes will be lost".

## NEW Command

The NEW command allows you to set up a channel for a new input device. When you are in the Channel Set-up menu, highlight an empty channel and select NEW. Assuming you have enough memory left in the projector, you will enter the NEW function. The default parameters as specified in the User Preferences menu will be automatically entered in the data fields. These parameters can be modified as required. If you need to define specific size, position or computer mode parameters, this can be done using the MODIFY command after creating the new channel.



*It is not essential to have the signal source present to create a new channel.*

The main areas on the screen include the channel name, input, configuration, switcher details, sync, colour temperature and aspect ratio.

NEW CHANNEL

Channel 3

Name

-----

Input 3

Configuration

☐ Video

☒ Computer

☐ PAL

☐ NTSC

☐ SECAM

☐ CPENT

☒ RGB

☐ YPrPb

☐ SVIDEO

☒ Computer

Ext. Mixed

Synchs.

E-zoom

Switcher

Input ---

☒ Film Look ON

☒ Look 1

☐ Look 2

Colour Temp 6500

Aspect Ratio MODE

CANCEL

OK

SELECT

VIEW

COPY

NEW

MODIFY

DELETE

**Name** - The channel name can be up to 14 characters

**Input** - The source input should be set according to the input to be used on the rear analogue panel.

**Switcher** - If you are using a external switcher, enter the input number here.

**Configuration** - Select either Video or Computer according to the input device. The selections for a video configuration are PAL, NTSC, SECAM, CPENT and S-VIDEO. An AUTO configuration will be applied if no selection is made.

If a CPENT video input is selected you must state the component format (RGB or Y Pr Pb). Ext. Mixed Syncs should be selected when using base band video signals with a combined sync e.g. RGBS signals. A computer configuration requires the selection of a computer card from the library. Highlighting the computer card name field and pressing 'ENTER' will access a flyout list containing all the cards in the library.

**Film Look** - When Film Look is 'ON' it enhances the appearance of 625/50 versions of film originated material. Film Look should not be used for 525/60 or similar formats. Film Look 1 or Film Look 2 should be selected according to which provides the optimum image. When Film Look is 'OFF', or when "Computer" is selected, the check boxes are greyed out and the function is disabled.

**Video Look** - When 'ON' enhances the appearance of non-film originated material.

**Colour Temperature** - The Colour Temperature can be selected from a flyout list, the choices are 3200°, 5400°, 6500° and 9300° Kelvin.

**Aspect Ratio** - A flyout list allows you to select the aspect ratio. The choices for video are RAW, 4 x 3, 5 x 4, 8 x 5, 14 x 9, 16 x 9 and User. This field is 'greyed-out' for a computer configuration and will state "Mode". The aspect ratio for individual computer card modes is selected in the Size & Position Adjust window.



*When first selecting RAW the number of pixels per line will be sampled 640 active pixels. This can be modified using COMPMODE (see System Operation, C—24).*

**E-Zoom** - When E-zoom is selected the entire image will be displayed in a window centred within the DMD™ with the area outside the DMD™ window being black. The window size can be adjusted in the Image Mode screen (see C—28). After modifying any parameters, select 'OK' to store them to the new channel and return to the Channel Set-up menu. If you have not entered an Input number a message box will remind you. If you decide not to create a new channel, you can select 'CANCEL' or press 'EXIT' on the remote at any time.

## MODIFY Command

The 'MODIFY' option in the Channel Set-up screen allows you to change certain parameters for individual channels. The definable parameters in the Modify Channel window are the same as for a new channel. At the base of the Modify Channel window there are three options (Info, Size Pos and Compmode) that are not available in the New Channel function.

The screenshot shows the 'MODIFY CHANNEL' screen. At the top, it says 'MODIFY CHANNEL'. Below that, 'Channel 03' is displayed, followed by 'Name' and a text box containing '-----'. Under 'Input', the number '3' is shown in a box. The screen is divided into two main sections: 'Configuration' and 'Switcher'. In the 'Configuration' section, there are checkboxes for 'Video' (checked), 'PAL', 'NTSC', 'SECAM', 'CPENT', 'RGB' (checked), 'YPrPb', and 'SVIDEO'. There are also options for 'Ext. Mixed', 'Synchs.', and 'E-zoom'. In the 'Switcher' section, there are checkboxes for 'Film Look ON' (checked), 'Look 1' (checked), and 'Look 2'. There are also fields for 'Colour Temp' (6500) and 'Aspect Ratio' (MODE). At the bottom of the screen, there are buttons for 'INFO', 'SIZE POS', 'COMPMODE', 'CANCEL', and 'OK'. Below the main screen, there is a row of buttons: 'SELECT', 'VIEW', 'COPY', 'NEW', 'MODIFY', and 'DELETE'.

### 'INFO' (Channel Information)


Selecting the INFO command will open the Channel Info window which displays further details about the channel under modification. This is an information window only - the parameters displayed cannot be modified.

The image Brightness, Contrast, Sharpness, Saturation and Hue are shown as percentages. The Frame and Line Rates for the input signal currently being used are automatically determined by the projector. They will state "NO SIG" if there is no input signal present.

'SIZE POS' (Channel Size and Position)

The SIZE POS function is entered by pressing a soft button located at the base of the Modify dialogue box and consists of two screens.


The first screen allows you to select a computer mode from a list or to select video. The horizontal and vertical scan rates of the computer configuration will be displayed, but for a video configuration it will simply state- "Video Configuration". To exit this screen you must use the 'Exit' button on the remote.

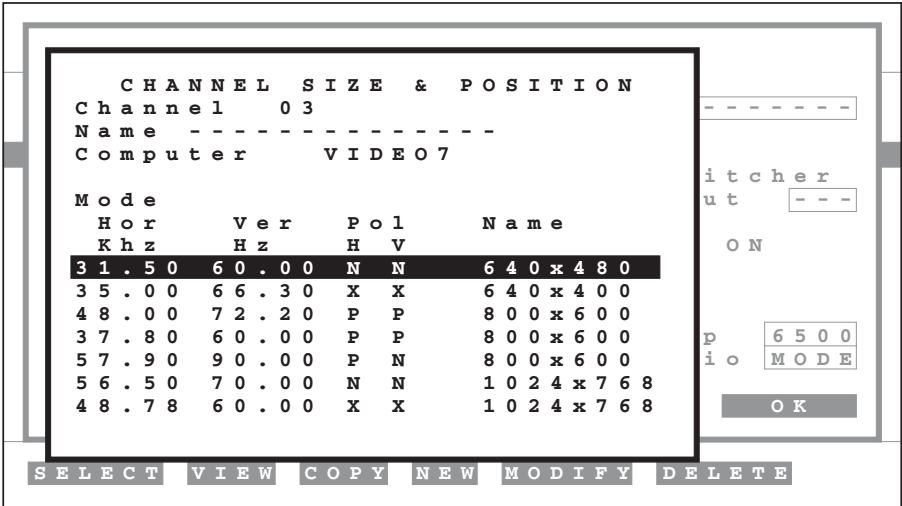

If you select a mode using the cursor keys and press 'ENTER', you will be taken to the second screen where the mode can be adjusted. This is the SIZE & POSITION ADJUSTMENT window and it appears by itself, i.e. it does not overlay the other screens. The image is displayed in the background so that you can see the changes in the image as it is adjusted (See opposite page).

Each parameter is controlled by a range of increments. A display range is changed by using the ▲ and ► buttons to increase the value and the ▼ and ◀ to decrease it. Single presses will adjust in single increments. Holding down the button will step 1 increment per second for 5 seconds followed by 10 increments per second. After adjustment, select 'OK' to accept the changes and return to the previous screen.



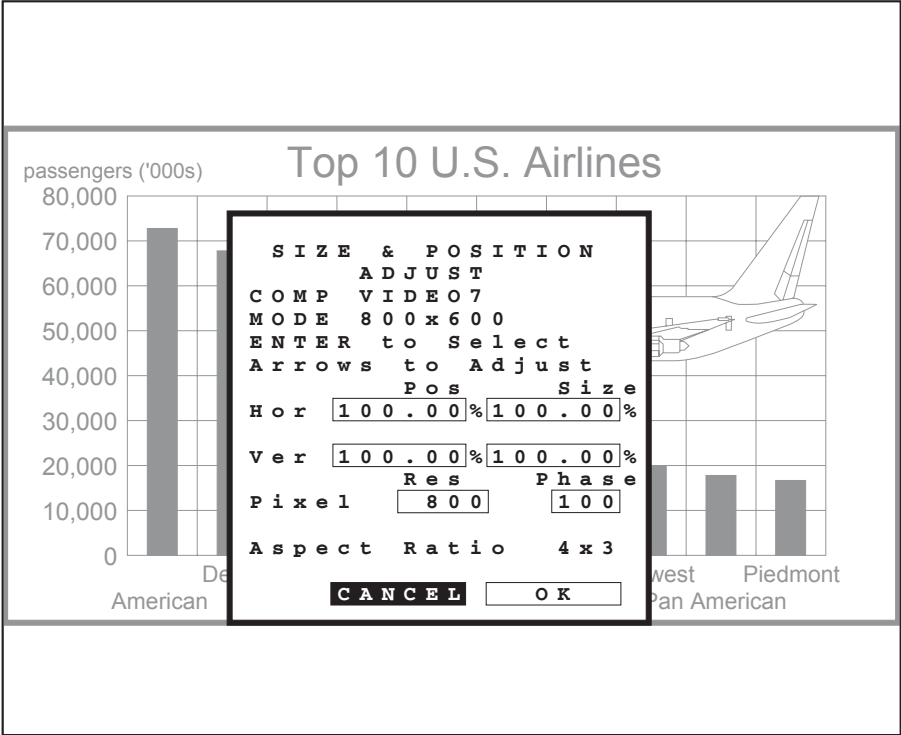

**Horizontal Position:** Measured as a percentage, 0 is far left and 100 is far right.

**Vertical Position:** 0% is the bottom and 100% is the top.

**Horizontal & Vertical Size:** Size is also measured as a percentage with 0 being the smallest image and 100 the largest.

**Pixel Phase & Resolution:** The pixel phase is the point in the line timing where the pixel sample is taken and is represented as a number between 0 and 100. The Resolution can be set from 630 to 1280 and defines the number of pixels in a scan line.

**Aspect Ratio:** This is the ratio of picture width to height and is chosen from a flyout list.

# OPERATION

The Channel Computer Mode screen is split into two main areas. The top of the screen displays the channel number, channel name and the computer card. The remainder of the screen provides a list of available modes with the current mode highlighted. The list provides horizontal and vertical scan rates, sync pulse polarity and a name to help you select the required mode. To exit this screen you must use the 'Exit' button on the remote.

CHANNEL COMPUTER MODE

Channel 03

Name - - - - -

Computer VIDEO7

Mode

Hor	Ver	Pol	Name
Khz	Hz	H V	
31.50	60.00	N N	640x480
35.00	66.30	X X	640x400
48.00	72.20	P P	800x600
37.80	60.00	P P	800x600
57.90	90.00	P N	800x600
56.50	70.00	N N	1024x768
48.78	60.00	X X	1024x768

itcher

ut

ON

6500

MODE

OK

SELECT

VIEW

COPY

NEW

MODIFY

DELETE

Modifications in the Mode Parameters window can have a serious effect upon whether or not the mode can be used. Therefore a message box will appear upon entry stating - "CAUTION Changes in this dialogue may prevent the Mode from being selected by a Computer signal".

The screenshot shows a 'Mode Parameters' menu with the following settings:

- Computer:** Video 7
- Mode Name:** 800x600
- Scan:**
  - Hor: 31.50 kHz
  - Ver: 60.00 Hz
- Sync Polarity:**
  - Hor: ☐ Pos ☒ Neg ☐ N/A
  - Ver: ☐ Pos ☒ Neg ☐ N/A
- Active Pixels:**
  - Res: 800
  - Phase: 100
- Aspect Ratio:** 4x3
- Buttons:** SAVE AS, CANCEL, OK
- Footer:** SELECT, VIEW, COPY, NEW, MODIFY, DELETE

**Mode Name** - You can re-name the mode (maximum of nine characters).

**Scan** - The projector will automatically determine the horizontal and vertical frequencies of the mode from the incoming signal.

**Sync polarity** - Check boxes are used to select the polarity of the horizontal and vertical syncs. The N/A (not applicable) choice will cause the polarity to be ignored in the selection of the mode. This is necessary in the case of Apple Macintosh computers which do not utilise sync polarity.


**Active Pixels** - The pixel resolution can be set between 630 and 1280. The pixel phase is defined by a number between 0 and 100.

**Aspect Ratio** - The aspect ratio is chosen from a flyout list.

When the mode parameters have been modified press the 'SAVE AS' button located at the foot of the screen, to enter the SAVE AS window.

SAVE AS

This command can save any changes made to the parameters. The SAVE AS screen allows you to edit the mode name in order to save your changes as an additional mode for the computer card. The window also displays the amount of user memory available to store new modes.

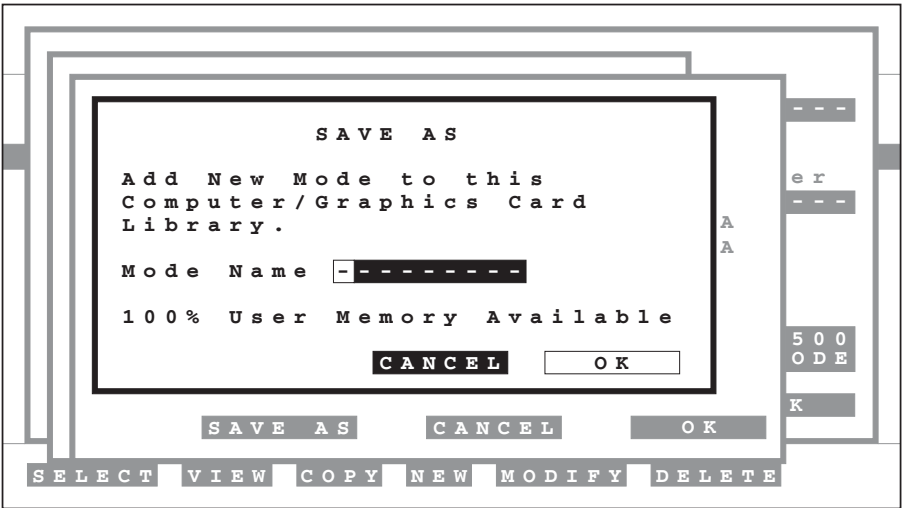

If there is insufficient memory, a message box will appear upon entry to the SAVE AS window stating - "Cannot create Computer Mode due to insufficient memory. Need to delete a COMPUTER entry from the library of Computer Cards. Go to ADD COMPUTER Dialogue in Menu. (New Mode will be lost if Channel is Changed.). On pressing 'OK', the message box and Save As window will close and you will return to the previous level in the menu system.

If the Card Data Set is in ROM (i.e. it is a factory preset) then the whole set will be copied to non-volatile memory along with the New Mode. It will be saved with the same name as the computer card but with an asterix ( \* ) appended to distinguish it from the factory preset version.

## DELETE Command

The DELETE command allows you to delete any unwanted channels. To delete a channel highlight it in the Channel Set-up menu and select 'DELETE' from the bottom of the screen. You will enter the 'Delete Channel' screen which will confirm the name and number of the channel to be deleted.

DELETE CHANNEL

Channel 04                      Name - - - - -

W I L L   B E   D E L E T E D

CANCEL

OK

1 1

1 2

1 3

1 4

1 5

SELECT

VIEW

COPY

NEW

MODIFY

DELETE

If this channel is the one you wish to delete select 'OK'. A confirmation box will appear stating: "Are you sure you want to DELETE Channel XX? Press "OK" to Delete or "CANCEL" to ignore". This is your last chance to prevent the channel being deleted.


If the channel to be deleted is being displayed, pressing 'OK' will blank the screen.



*Channels 1, 2 and 3 are factory defaults and cannot be deleted.*

# Image Mode

Image Mode is chosen from the Main menu. This screen has two sections: Flip and Gamma. All the parameters are defined using check boxes.

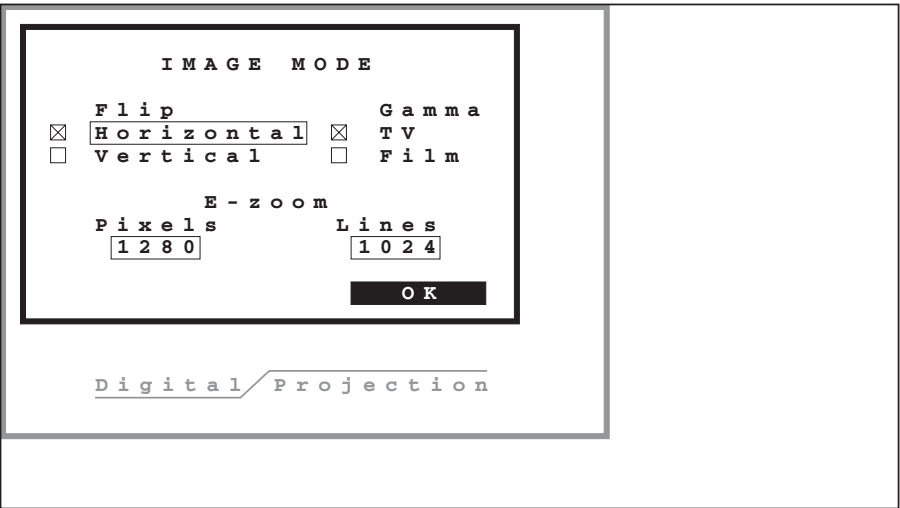

**FLIP** - Allows configuration for front or rear projection by horizontally or vertically reversing the projected image.

**GAMMA** - Corrects the degree of contrast in your input signal to provide an optimum image and should be set according your signal type.

**E-ZOOM** - Defines the E-Zoom window size on the DMD™ within which the entire image will be displayed. The window width in defined in pixels and the height in lines.

Select the “OK” button to return to the the Main menu, saving any changes that have been made.

## User Preferences

The User Preferences window allows you to set a number of system defaults and is split into three main areas: At Power Up, Default Configuration and Other.

When all changes have been made in the User Preferences, press the EXIT button on the remote to execute. This will save the changes and return to the Main menu.

USER P R E F E R E N C E S			
<b>At Power Up</b> Input <input checked="" type="checkbox"/> <b>Last Used</b> <input type="checkbox"/> Preset 02 <input type="checkbox"/> First Sync		<b>Display</b> <input checked="" type="checkbox"/> Pic Mute <input type="checkbox"/> OSD Off <input type="checkbox"/> Audio <input type="checkbox"/> Aud Mute	
<b>Default Configuration</b> <input type="checkbox"/> Video <input checked="" type="checkbox"/> Computer <input type="checkbox"/> PAL Computer Video 7 <input type="checkbox"/> NTSC <input type="checkbox"/> Ext. <input checked="" type="checkbox"/> Film Look ON <input type="checkbox"/> SECAM Mixed <input checked="" type="checkbox"/> Look 1 <input type="checkbox"/> CPENT Syncs. <input type="checkbox"/> Look 2 <input checked="" type="checkbox"/> RGB Input <input type="checkbox"/> YPrPb Colour Temp 6500 <input type="checkbox"/> SVIDEO <input type="checkbox"/> E-zoom Aspect Ratio MODE		<b>Other</b> <b>Background</b> <input checked="" type="checkbox"/> Normal <input type="checkbox"/> Clear Language English	

### AT POWER UP

This section defines what will be displayed when the projector is switched on.

**Input** - You can set the projector to display the last input channel that was used, preset a channel by entering a channel number or let the projector display the first input signal it finds.

**Display** - With 'Pic mute' off the incoming signal will be displayed, if 'Pic mute' is on the screen will be black and the lamp will be at low. With the 'OSD off' check box uncrossed the menu system will be displayed when the projector is switched on.

## DEFAULT CONFIGURATION

This sets the default values for any new channels created.

**Video** - PAL, NTSC and CPENT video configurations are available as defaults. A configuration will be automatically chosen, if you do not make a selection, however it is advisable to select the appropriate check box for your signal to improve the screen image. If a CPENT video input is selected you must also state the component format (RGB or Y Pr Pb).

**Computer** - Selecting computer also requires the selection of a computer card from the library. Highlighting the computer card name field and pressing 'ENTER' will access a flyout list containing all the cards in the library.

**Ext Mixed Syncs** - This setting should be selected when using base band video signals with a combined sync e.g. RGBS.

**E-Zoom** - Activates the E-Zoom feature.

**Input** - 1, 2 or 3 may be entered.

**Colour Temp** - 3200°, 5400°, 6500° or 9300° can be selected from the flyout list.

**Aspect Ratio** - A flyout list provides RAW, 4 x 3, 5 x 4, 14 x 9, 16 x 9, 8 x 5 and USER options. Contact your dealer for details on configuring a USER aspect ratio.

**Film Look** - When checked Film Look is 'ON' and a choice of Look 1 or Look 2 is provided. Whichever look produces the best image should be selected.

## OTHER


**Background** - The On Screen Display colour can be set to normal (the given colours) or clear (transparent). When set to clear only the lowest level of dialogue box will be visible but warning boxes will maintain the same colours.

**Languages** - *Future Feature, provision has been made to allow multiple languages for the display. When available the languages will be selected from a flyout list.*



## Test Patterns

A number of test patterns are provided to check the operation of the projector. Selected from the Main menu the Test Pattern window is as shown below.

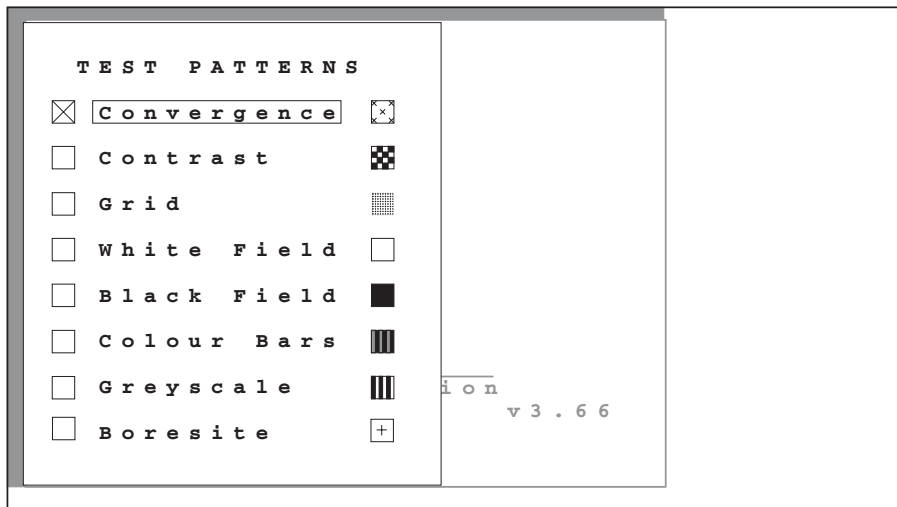

**Convergence** - a cross pattern generated by the digital board and used by factory set-up staff for converging the DMD light valve. This pattern is also useful to confirm projector alignment.

**Contrast** - a 4 by 4, black and white checked pattern generated by the digital board electronics and used to measure contrast ratio.

**Grid** - a grid generated by the digital board electronics consisting of white lines on a black background that performs a similar function to convergence.

**White Field** - a digital white field generated by the digital board electronics to check full field contrast ratio.

**Black Field** - a digital black field generated by the digital board electronics to check full field contrast ratio.

**Colour Bars** - an analogue colour pattern generated by the analogue board to verify the colour balance.

**Greyscale** - generated by the analogue board to assist in the correct setting of colour balance, this is an 8 step greyscale ranging from black on the left to white on the right.

**Boresite** - generated on the digital board and used to centre the projector on the screen and establish the correct optical centre of the image.

To select a test pattern, position the cursor over the required pattern and press enter to put a cross in the check box. Only one pattern can be selected at a time and it will be displayed over any input images.

The convergence, colour bars and grey scale test patterns leave the menu system on screen. To view one of these patterns without the menu, press MENU on the remote. To reactivate the menu system, press MENU again; you will be returned to the test pattern screen.

To remove a pattern, toggle the check box again to remove the cross and to return any input signal to the screen.



*In the event of a processing fault, selecting various patterns may help identify on which component the fault is located. The user should select each test pattern in turn and report the results to their service manager.*

To exit the Test Pattern menu press the EXIT button on the remote.

## Projector Status

The Projector Status function is accessed through the Main menu. Information about the lamp, the projector temperature, the user memory and the last warning messages issued can be viewed here. To leave the Projector Status screen and return to the Main menu select OK or press the EXIT button on the remote control.

The screenshot shows a monochrome display with the following text:

```

      P R O J E C T O R   S T A T U S

S o f t w a r e   V e r s i o n                3 . 5 9

U n i t   R u n   - T h i s   U n i t           0 0 0 1 H o u r s
U n i t   S t r i k e s   - T h i s   U n i t    0 0 5 T o t a l
L a m p   S t a t u s           O K           T e m p e r a t u r e   O K
U s e r   M e m o r y   A v a i l a b l e    1 0 0 %

      W A R N I N G   M E S S A G E S

L A S T
M e s s a g e   1
M e s s a g e   2
M e s s a g e   3
M e s s a g e   4
  
```

At the bottom right of the screen, there are two buttons: **I N F O** and **O K**.

**Software Version** - Displays the version number of the software in use.

**Unit Run-This Unit** - The number of hours the current lamp has run is displayed.

**Lamp Strikes-This Unit** - Displays the number of times the current lamp has struck.


**Lamp Status** - If “OK” is displayed, the lamp is operating as normal. If “REPLACE” is displayed, the lamp is coming to the end of its useful life.

**User Memory Available** - This displays the percentage of user memory available for storing additional or updated Factory Supplied Computer Cards and Modes.

**Warning Messages** - The last four warning messages are displayed with the most recent at the top of the list.

## Set Projector Address

The Set Projector Address is accessed through the Main menu and it allows you to set a unique address for the projector. This will enable it to respond to commands received from an external computer or from the remote control when using multiple projectors.

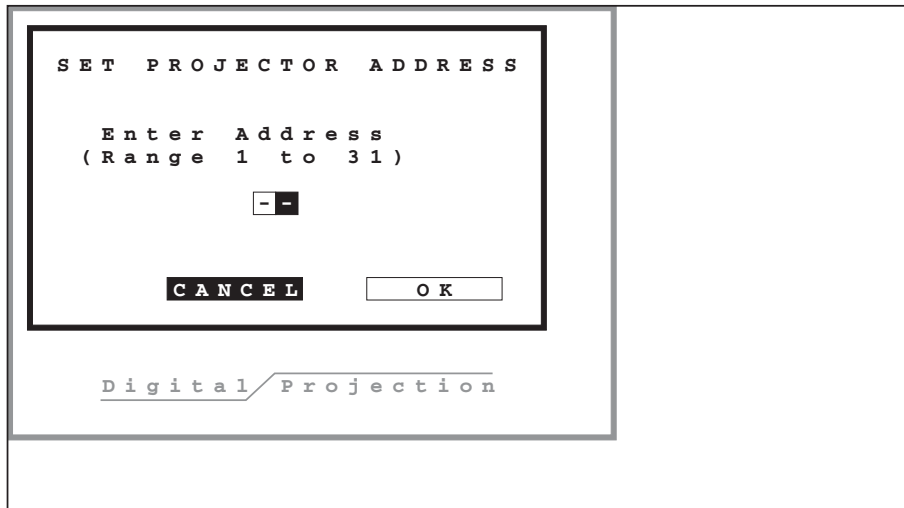

**Enter Address** -Enter the address of the projector as a numeric value between 1 and 31 using the remote control. In addition to this value the projector will always respond to an address of zero. The number will be preceded by 0 (zero), but you are not required to key this in.

Press the “OK” soft button to save the address and to return to the Main menu.

Press the EXIT button on the remote or “CANCEL” to keep the same address and to return to the Main menu.

## Add Computer

The **Add Computer** function allows groups of computer modes to be created and saved to the projector under a collective name. Other options available through this function include the modification of existing mode parameters, the deletion of a computer card or mode and the copying and renaming of a complete computer card.

After selection from the Main Menu the **Add Computer** screen will be displayed. This screen can be divided into three main areas: Computer Name, Available Memory and Function Options.

ADD COMPUTER

Computer Name

User Memory Available 100%

**Computer Name:** By default the computer name field will display "NEW". This field contains a fly-out list of all the computers stored in the projectors library and is accessed by pressing 'Enter' on the remote control when the field is highlighted.

**Available Memory:** The user memory available to create additional cards/modes is displayed as a percentage.


**Function Options:** The options at the bottom of the screen can be selected using the cursor and 'Enter' keys on the remote control.

## CREATE/MODIFY Command

The 'CREATE/MODIFY' command is used to create (add) a new computer mode to the projectors library or modify an existing computer mode.

### CREATING A NEW COMPUTER

In order to add a new computer to the projectors library select 'CREATE/MODIFY' from the **Add Computer** screen. The "Computer Name" window will open asking you to enter the name of the new computer.

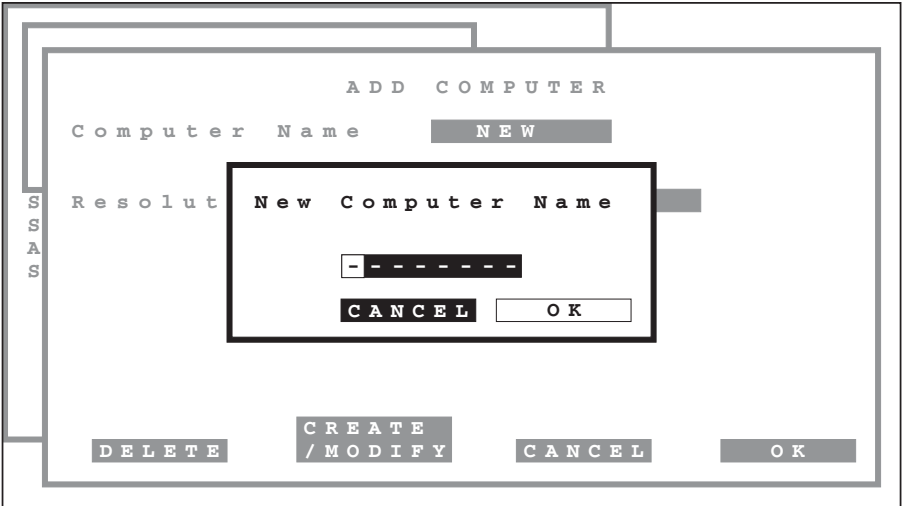

Assuming you have sufficient memory, entering a new computer name will return you to the **Add Computer** screen where the New Computer Name is displayed and a Resolution Mode field has appeared stating "NEW". If there is insufficient memory available you will be prompted to delete any unwanted entries from the library of computer cards to make room for the new card. If you enter a name that already exists a confirmation message will appear stating - "Duplicate computer card name - Press 'OK' to Edit". Select 'OK' to duplicate the name and enter the 'MODE PARAMETERS' window or 'CANCEL' to return to the 'Computer Name' window in order to enter a different name.

The duplication of a computer name allows you to save a different set of mode parameters for the same computer. If a card using the factory defaults is selected, a duplicate will be made using the same name but with an asterix ( \* ) at the end.

The next step is to set the new computer's Resolution Mode, this is done by selecting 'CREATE/MODIFY'. The 'MODE PARAMETERS' window will open (see below) and you should enter the following information.

**Mode Name** - Name the set of mode parameters.

**Scan Rates** - Enter the scan rates stated in your computer card specifications.

**Sync Polarity** - Defines the polar values for the horizontal and vertical syncs as stated in your computer card specifications.

**Size and Position** - Set values (shown as percentages) for the horizontal and vertical size and position.

**Active pixels** - In these fields define the number of active pixels across the display and the phase of each pixel from the start of one pixel period to the end.

**Aspect Ratio** - From this fly-out list select an aspect ratio.

The screenshot shows a 'Mode Parameters' window with the following fields and values:

- Computer**: Mode Name
- Video**: 800x600
- Scan**: Hor 31.50 kHz, Ver 60.00 Hz
- Sync Polarity**: Hor ☐ Pos ☒ Neg, Ver ☐ Pos ☒ Neg
- Active Pixels**: Res 800, Phase 100
- Aspect Ratio**: 4x3
- Buttons**: SAVE AS, CANCEL, OK
- Footer**: SELECT, VIEW, COPY, NEW, MODIFY, DELETE

After entering the required information select 'OK', a confirmation box will appear stating "Computer graphics card will be created/updated. Press 'OK' to proceed or 'CANCEL' to ignore". Select 'OK' to save the new mode.

## MODIFYING AN EXISTING COMPUTER CARD MODE

Having selected an existing computer card it is possible to modify a specific mode for that card. After selecting the mode to be modified from the resolution mode fly-out list you will enter the 'MODE PARAMETERS' window. The computer and mode names will be displayed along with the previously defined parameters.

When all the changes have been made press the 'OK' button to execute the changes. A confirmation box will appear stating- "Computer/Graphics Card will be Updated. Press 'OK' to proceed or 'CANCEL' to ignore". This is your last chance to cancel the changes to the mode.

## DELETE Command

It is possible to delete a single mode contained within a Computer Card or all the modes contained within a card effectively deleting the complete card. Deletion of a Computer Card takes place in the **Add Computer** screen as the most likely reason for deleting a card is that there is insufficient memory available to add a new card.

Only Computer Cards you have created are valid for deletion, factory supplied cards cannot be deleted. "NEW" is also an invalid option as it represents a card which has still to be created, therefore cannot be deleted. If you try to delete an invalid card a message box will appear advising you that the card you have selected cannot be deleted.

Whether deleting all modes or a single mode from a Computer Card the first step is to select the card from the fly-out menu in the Add Computer screen using the remote control. Assuming you have selected a valid Computer Card selecting "DELETE" from the screen options will open the 'DELETE COMPUTER' window.



The 'DELETE COMPUTER' screen (below) displays the card name for verification and gives you the choice of deleting all modes or a single mode by 'checking' the appropriate box.

```

      DELETE  COMPUTER

Computer Card DIAMOND

☐ Delete All Modes
☒ Delete Single Mode

Select Mode 1 0 2 4 x 7 6 8

      Scan      Sync  Polarity
Hor 62.56 kHz ☒ Pos  ☐ Neg  ☐ N / A
Ver 65.00 Hz  ☐ Pos  ☒ Neg  ☐ N / A

      CANCEL      OK

DELETE  COPY  / MODIFY  CANCEL  OK
  
```

**Delete All Modes:** When you 'Check' this box the Select Mode option along with the mode information will be greyed out. Select 'OK' to display a confirmation box stating "Computer Card xx is about to be deleted. Press 'OK' to proceed or 'CANCEL' to abort.". This is your last chance to cancel the deletion.

**Delete Single Mode:** With this box 'Checked' you can choose a mode to delete from the Select Mode fly-out menu, the Scan, Sync and Polarity for the chosen mode will be displayed underneath to assist in your selection. When you select 'OK' a confirmation box stating "Mode yyy on Computer Card xx is about to be deleted. Press 'OK' to proceed or 'CANCEL' to abort".

## COPY Command

The Copy function in the Add Computer screen permits the user to make a copy of an existing computer card with all its associated modes and give it a different name. It is not possible to copy an individual mode, either within a computer card or between cards.

To copy a computer card it is necessary to select it from the computer name fly-out list and press 'COPY'. Assuming you have sufficient memory available you will enter the 'COPY COMPUTER' window (See below). If you don't have enough memory to make a copy you will be prompted to remove any unwanted computer cards from the library to make room.

OPERATION

ADD COMPUTER

Computer NameNEW

COPY COMPUTER

Enter New Computer Name

DIAMOND-

CANCELOK

DELETECOPYCREATE / MODIFYCANCELOK

User Me

The 'COPY COMPUTER' window requires you to enter a name for the new version of the computer card. After naming the new version select 'OK' to execute the copy. If the computer card name is duplicated then a message box will appear stating- "Duplicate Computer card Name - Must Enter a Unique Name. Press 'OK' to Continue", pressing 'OK' will return you to the "COPY COMPUTER' window so you can enter a different name.

## Applying a new signal source

If a New computer signal is applied when the selected channel is configured for computer and the computer signal does not identify a mode which matches, the screen will display an image using default Size, Position, Number of Pixels, Pixel Phase and Aspect Ratio. These default parameters will be supplied from ROM. A message will also appear stating- "New Mode will be lost if not saved or if Channel is changed".

The display may then have to be adjusted manually to give an optimum image.



*These default parameters will be applied to the Revised Store. See Storing System Configurations.*

If SAVE is then pressed on the remote or "Save" is selected in the menu system and there is insufficient memory to store a new mode, a message box will be overlaid stating- "Cannot create Computer Mode due to insufficient Memory. Need to delete an unwanted COMPUTER Entry from the library of Computer Cards. Go to ADD COMPUTER Dialogue in Menu. (New Mode will be lost if Channel is Changed.)"

## Configuring a Video Channel

1. Set Gamma in Image Mode to Preferred Value
2. In the Channel Set-up Menu select the correct input, aspect ratio, colour temperature and format (i.e. PAL, NTSC, S-Video, Component RGB or Component Y Pr Pb).
3. Using either the Size & Position sub menu or the single press remote control buttons, adjust the size and position until the image fills the screen exactly.
4. Apply a Pluge Test Pattern (or a test signal or tape which has near blacks and near saturated whites).
5. Using the single press buttons on the remote control adjust the Brightness so that the -2% bar disappears but the +2% is still visible. If using a tape, adjust the Brightness up and then down until the darkest part of the tape stops getting any darker.
6. Adjust the Contrast upwards so that the white bar of the Pluge pattern or a saturated piece of tape is just saturating and then reduce again until this stops.
7. If using an NTSC source adjust the Hue to give correct colours.
8. Adjust Saturation to taste (50% is usually acceptable).



***Saturation will have no effect on RGB sources.***

9. Adjust Sharpness to taste.



***Phase has no effect on video sources.***

## Configuring a Computer Channel

1. Set Gamma in Image Mode Menu to Preferred Value
2. In the Channel Set-up Menu select Computer Source and Colour Temperature.
3. Apply intended computer input.
4. Select Size & Position.
5. The cursor should be over the correct rate mode, press ENTER.
6. Set Pixels to equal the number of pixels per line in the signal source.
7. Define the appropriate aspect ratio.
8. Adjust the Horizontal and Vertical Size until beating patterns minimise or disappear (use an alternate pixel pattern from Paintbrush to emphasise errors).
9. Some Horizontal bars may remain, remove them by adjusting the Pixel Phase.



***No Vertical Size adjustment should be required for a Raw source.***

10. Adjust the Position to centre the image on the DMD™ display.
11. Use Pluge as per the Video channel set-up (previous page) to set up the Brightness and Contrast.



***Computer outputs cannot have negative values and therefore computer pluge bars are +2% and +4% and should both be visible. An acceptable set-up pattern can be created using Paintbrush.***



***Sharp, Hue and Saturation will have no effect on computer sources.***

## Adjusting the Displayed Image

The function buttons, located at the bottom of the remote control, allow you to adjust (where applicable) the brightness, contrast, sharpness, saturation, hue, position, size, pixel resolution, pixel phase and colour temperature of the channel currently being displayed. If a motorised lens mount is fitted to the projector the focus and horizontal/vertical position of the displayed image may also be adjusted using the 'LENS' button.

Although it is not a necessity, it is recommended that the On Screen Display should be ON before adjusting any of the channel parameters as you can then be sure which function (if any) has been activated.

When the OSD is ON, pressing a function button will bring up it's icon and a scalar bar indicating the current setting. This value can then be adjusted using the cursor keys. The current channel is displayed in the background so that you can see the changes in the image as it is adjusted. All of the functions operate a 'Hold Live' system which deactivates the function after 5 seconds if no further buttons are pressed (or 5 seconds after the last adjustment was made).



***The cursor keys are repeat action buttons and will keep changing a setting until released or the parameter limits have been reached.***

After making your adjustments to the channel image you can toggle between the original and revised parameter settings using the 'PREV' (previous) and 'REV' (revised) buttons on the remote control. To save your new settings press the 'SAVE' button, the save icon will appear for 5 seconds along with a message stating, "Channel XX updated successfully" (where XX is the channel number currently being displayed).

As factory preset channels are mapped to specific inputs it is not possible to change a factory preset channels input. Should you wish to use a modified version of these channels using a different physical input the modifications must be saved a new channel using Channel Set Up.

**BRI, SAT, SHARP, CON, HUE**

These function buttons are used to select and adjust the image parameters. When selected their associated icon and a numerical field will appear. The settings are adjusted using the cursor keys with the ▲ and ► cursors increasing the value and the ◀ and ▼ cursors decreasing it.

**POS**

Sets the horizontal and vertical position of the image. Pressing a cursor key will move the image in that direction.

**SIZE**

Sets the horizontal and vertical image size. The width is increased with the ► cursor and decreased with the ◀ cursor. The height can be increased using the ▲ cursor and decreased using the ▼ cursor.

**PIXEL**

This function is used to adjust the number of horizontal pixels being sampled in the incoming image and is only relevant for channels configured for computers. The ▲ and ► cursors can be used to increase the value or the ◀ and ▼ cursors can be used to decrease it.

**PHASE**

This function is only relevant to computer channels and is used to adjust the phase of the pixel clock with the ▲ and ► cursors increasing the value and the ◀ and ▼ cursors decreasing it.

**COL**

This function adjusts the colour temperature setting in steps of 100° (or 500°) from 3000° to 9900°. When this function is selected the colour temperature icon will appear along with a numerical field showing the current temperature. The ▲ and ► cursors can be used to increase the value or the ◀ and ▼ cursors can be used to decrease it. Holding down a cursor key for up to 5 seconds will automatically step 100° per second, after 5 seconds the value will change in 500° steps.

## LENS SHIFT

Adjusts the horizontal and vertical position of the displayed image relative to the projector. To select Lens Shift press LENS until the Lens Shift dialogue box appears on the screen. The horizontal shift can then be adjusted using the ◀ and ▶ cursors. The vertical shift (rising/falling front) is adjusted by using the ▲ and ▼ cursors.

Vertical and horizontal shift can be used in combination, however the extent of their individual ranges will be reduced depending on the amount of shift used i.e. vertical shift is maximised when horizontal shift is centred and vice versa. When the extent of the range reaches its limit, it is possible that there will be a slight distortion of the lens position which may result in additional flare. If this position is reached, reduce the lens shift until the distortion is removed.

## ZOOM

The LENS button on the remote control also has a Zoom option.

## E-ZOOM

A means of setting a window, centred within the DMD™, of independently adjustable height and width. The entire image will be displayed inside the window and the area of the DMD™ outside the window will be black (see C—28).

## FOCUS

To select Focus press LENS until the Focus dialogue box appears on the screen and then make any adjustments using the ▲ and ▼ cursor buttons.

Focus adjustment starts very slowly and may not be immediately obvious, therefore the cursor buttons should be held down until the focus visibly changes. To achieve optimum focus it may be necessary to repeat the adjustment a couple of times until the operation of the feature feels comfortable to use.



## Addressing Multiple Projectors

Multiple projectors are used to produce a brighter image, to join up two or more images or to display two or more images side by side.

When using multiple projectors it may be necessary to control all projectors at once, or to operate an individual projector. This is achieved through the use of the Infra-red remote control or a computer.

Each projector has its own unique address which is set using the remote control or a computer (see Set Projector Address, C—35 & Computer Control, opposite). The remote control can operate up to 32 projectors and a computer is capable of operating up to 127.

The 'A' button on the remote control is used to program the remote control unit to send a command to all operating projectors, or to an individual projector, see the examples below.

### **To activate only projector #1:**

1. Press 'A' twice.
2. Press '1'.
3. Use control buttons to operate projector #1.

### **To address all of the projectors:**

1. Press 'A' twice.
2. Press '0' (zero is the global address).
3. Use control buttons to operate all projectors.



*You must press the 'A' button twice within three second in order for the function to be recognised and the function will be automatically de-selected if you do not issue any commands within 10 seconds.*

All of the remote commands, apart from 'A', can be global or individual. If you use the remote for an individual projector, you will need to make sure that only that projector receives the command.

# Computer Control

To control the projector by computer, it is necessary to set up certain parameters within the control device and then connect the projector via a suitable cable to the computer (see D—19, Cables & Connections). The cable should be plugged into the ‘Computer In’ port on the projector and extra projectors may be connected, in ‘Daisy Chain’ fashion, using the ‘Computer Out’ port. A maximum number of 127 individually addressed projectors may be connected in this way.

The projector and computer send data to each other at RS232 levels. The following protocol must be specified for the computer’s serial port:-

- Data Rate:** 19,200 baud
- Data bits:** 8
- Stop bits:** 1
- Parity:** None
- Handshake:** None



*The Data Rate can be changed to 9,600. For more information contact your dealer.*

Data transfer to and from the projector is made up as a series of ASCII coded hexadecimal characters formed into message packets using the structure below:-

Address	Header	Data Length	Data	Checksum	Delimiter
<b>Address</b>	Projector address (01 - 127) consisting of two characters.				
<b>Header</b>	Command instruction consisting of two characters.				
<b>Data Length</b>	A two character number representing the data string length.				
<b>Data</b>	Variable length string of characters.				
<b>Checksum</b>	Two least significant digits of sum generated by adding all previous pairs of characters.				
<b>Delimiter</b>	Carriage return.				

It is recommended that the checksum calculation is used, however, it can be avoided by substituting two lower case ‘x’s instead of two calculated digits. This tells the projector to ignore the checksum and treat the message as being correctly received.

The headers, or command instructions, perform the actions described below. Any subsequent implications are also described where appropriate. This information is to be read in conjunction with the appropriate protocol documents.

Header	Action	Implication
00	Set lamp power level	Level of ff will switch lamp on or to full power and a level of 00 will switch lamp off. Values in between will be translated to nearest power setting.
01	Sets projector mutes	None
03	Lock/unlock the user interface	The projector will ONLY respond to computer control if the lock command is issued.
04	Queries projector capability	Useful to determine the maximum input frequencies.
05	Queries projectors settings	Without using this command it is difficult to determine exactly what the projector is set to.
06	Queries model information	Useful to differentiate between different resolutions of the light engine.
07	Wipes memory in projector	This wipes all information out of the projector including colour balance and all set up channels except 1, 2 and 3. It may lock the projector up which will require a power reset to correct.
08	Changes channel	Black screen if non-set up channel or no source on channel selected. It takes 2 or 3 seconds to lock to new channel.

Header	Action	Implication
0a	Displays box on screen	Possible to overwrite menu area. Results will vary according to the aspect ratio selected.
0b	Displays text on screen	As above.
0c	Displays icons on screen	As above.
0d	Simulates zapper command	If OSD is switched on, it is possible to switch the DMD's off.
0f	Simulates en port command	Messages can be confusing as they vary between software releases.
10	Grabs engineering messages	As above.
11	Display Test Patterns	Ramp pattern not available via menu system so cannot be switched off except by computer.
12	Changes image orientation	Could cause text to be back to front.
13	Selects gamma	None
14	Downloads new gamma	Overwrites current gamma table. Needs 256 separate values to be correctly calculated and entered along with the relevant checksum. Once in, the projector must be restarted to utilise them.
15	Sets projector's colour balance	Note, no password required to enter new colour balance. This then stops accurate black body curve tracking, leading to incorrect colour temperatures.

<b>Header</b>	<b>Action</b>	<b>Implication</b>
16	Sets projector's colour clip	As above, however it only affects saturated colours and the projector must be re-started to take effect.
17	Sets engineering password	Could effectively disable colour balance, colour clip and projector password changes via zapper if new password not written down or remembered. Note there is no confirmation of new password, and changes happen immediately.
18	Sets Projector address	Could lead to subsequent messages being sent to the wrong projector. May also effectively disable remote control.
19	Sequences addresses	As above, but work on all projectors connected in a chain. Potentially catastrophic if projectors already arranged in groups.
20	Set to value	Care should be taken in selecting start up mutes and preset channel number in case either result in black display on start up.
21	Save settings	This saves settings to memory which are currently in the revised buffer and not necessarily the current displayed image.
22	Previous settings	This will use the settings in the previous buffer to display an image.
23	Revised settings	This will use the settings in the revised buffer to display an image.

Header	Action	Implication
24	Preset settings	This will use the factory default settings to display an image. It will overwrite all previous changes for the currently selected channel.
30	Download channel data	This will overwrite all existing channel data for the specified channel. Care should be exercised in ensuring that wanted data is not deleted from memory.
31	Download computer card data	This command could potentially use large amounts of users memory.
32	Download submode data	Care should be taken to ensure that the settings do not exceed given ranges, otherwise use of new submode could produce unusable images.
33	Begin download card list	This command tells the projector to over write the existing computer card list and the associated submodes. Care should be taken if existing data needs to be kept.
34	Add computer card	Adds a new computer card to the current list. It does not overwrite any existing data.
35	Structure transfer complete	Tells the projector that no more channel/ card and submode data is forthcoming.
36	Upload channel data request	Data uploaded from the projector in this way cannot be modified and sent back to the projector as a new channel without changing the status of the read/write byte.

## Switcher Operation

Using an appropriate RS232 interface (see D—28, Cables & Connections) the projector can be used in conjunction with a third party switching device. Currently ‘Extron System 8’ and ‘Extron System 10’ are compatible with the projector.

The projector and external switching device communicate at RS232 levels using the following protocols:-

- Data Rate:** 9,600 baud
- Data bits:** 8
- Stop bits:** 1
- Parity:** None
- Handshake:** None

At present, an external switcher will allow you to control the lamp power, picture mute and channel change functions. Messages transferred to and from the projector are made up as a series of ASCII coded hexadecimal characters formed into message packets using the structure below:-

Header	Data Length	Data	Checksum
Header	Represents data type according to the table below.		
Data Length	Will indicate the amount of variable length data to follow, in bytes, not including the checksum.		
Data	Variable length string of characters.		
Checksum	A checksum of XX will indicate that the checksum should be ignored and the message treated as correctly received.		

Header	Message	Data	Meaning
04	Lamp Power	XX	Change lamp power to specified value. 00 = minimum power and FF = maximum.
07	Picture Unmute	-	Unmutes the Picture.

Header	Message	Data	Meaning
08	Picture Mute	-	Mutes the Picture.
0a	Channel Change	XX	Change to logical channel number.

All messages sent to the projector will receive a standard ASCII ACK (06 hex) or NACK (15 hex) character in response.

For further information on switcher connection and operation please refer to the documentation supplied with your switching device.



## Palm Pilot Control Utility Operation

The Palm Pilot Control Utility has been designed to allow extensive operational control of the projector without using the on-screen menu system.

The Palm Pilot connects to the projectors computer port via a straight wired 9 pin male to female cable and uses the following settings - 19,200 baud, 8 bits, no parity, 1 stop bit, no flow control.

Assuming the connection to the projector is set up correctly, when you activate the Power Control Utility the Function screen will be displayed. This screen allows selection between control of DV Series or GV Series projectors or to use the Lens and Lumen Calculation functions.

Upon selection of a projector, the utility will establish a connection with the projector and the Main Screen will appear providing the main controls - Chan, Lamp, PMute, Addr, Quit, Query, Pic adj and Geo Adj.

**Chan** - allows you to directly select a projector channel. To select channels one through nine the corresponding button should be used. To select channels 10 and above, first press 10+ then the sequence for the required channel. The current channel (or the status of the channel change) will be displayed above the channel selection buttons.

**Lamp** - sets the lamp power to high, low or off. The current setting will be displayed above the lamp power buttons.

**PMute** - sets the picture muting. The current setting will be displayed.

**Addr** - allows you to define the projector address you want to control when using multiple projectors.

It is only possible to query one projector at a time with the Palm Pilot program and the addresses of the individual projectors must be pre-defined before they can be controlled. If you define an address of 0 with multiple projectors connected, your return values will be invalid.

**Query** - allows you to request the projectors current settings. To the left of this button a timer is displayed. When this timer reaches 0 the utility automatically queries the projectors settings and sends an OSD Off command to prevent any menus being accidentally displayed on screen.

**Pic Adj** - displays a new screen with provision for brightness, contrast, sharpness, hue, saturation and colour temperature adjustment.

**Geo Adj** - displays a new screen with provision for size, position, pixel count and pixel phase adjustment.

## Section D: Advanced User Information

<b>Screen Illuminance .....</b>	<b>D—1</b>
<b>DMD™ Operation and Usage.....</b>	<b>D—2</b>
<b>Operation Flowcharts .....</b>	<b>D—5</b>
Creating a New Channel.....	D—5
Copying a Channel.....	D—7
Modifying a Channel.....	D—9
Adding a Computer .....	D—11
Modifying a Computer Card.....	D—13
<b>Lenses.....</b>	<b>D—15</b>
SXGA 1.2:1 Fixed Wide Angle Lens.....	D—15
SXGA 1.5 - 2.0:1 Zoom Lens.....	D—16
SXGA 2.0 - 2.5:1 Zoom Lens.....	D—17
SXGA 2.5 - 4.0:1 Zoom Lens.....	D—18
SXGA 4.0 - 7.0:1 Zoom Lens.....	D—19
SXGA 0.82:1 Short Throw Lens.....	D—20
<b>Lens Adapters.....</b>	<b>D—21</b>

**Cables & Connections** .....D—23

    Switcher Control .....D—23

    Hard-Wire Remote Connection.....D—24

**Technical Specification**.....D—26

    SX Projectors.....D—26

    GV Projectors.....D—28

## Screen Illuminance

The projector's arc lamp emits a *luminous flux* measured in **lumens**. This flux is directed at the screen and illuminates it, the *illuminance* (E) can be measured in **Lux** (lumens/m<sup>2</sup>) or **Foot Candles** (lumens/ft<sup>2</sup>). The *illuminance* of the screen is calculated by dividing the incident flux by the illuminated screen area.

The brightness of the screen, known as the screen *luminance* (B) is determined by the amount of light reflected from it (or transmitted through it if using a rear projection screen). If the screen is diffuse, the incident light is reflected into a hemisphere. If the screen has a *reflectivity* (R), the screen *luminance* in candela/m<sup>2</sup> is given by  $(R \times E) / \pi$ , where E is measured in Lux. If E is measured in Foot-Candles, the screen *luminance* is in Foot-Lamberts, and is given by  $R \times E$ .

### Examples:

- 1) A 6' x 4' 6" diffuse screen, with a reflectivity of 0.8 is illuminated by a projector emitting 3000 lumens.

The screen illuminance (E) =  $F / A = 3000 / 27 = \underline{111 \text{ Foot-Candles}}$

The screen luminance (B) =  $R \times E = 0.8 \times 111 = \underline{89 \text{ Foot Lamberts}}$


- 2) A 4m x 3m screen with a reflectivity of 0.85 is illuminated by a projector emitting 3500 lumens.

The screen illuminance (E) =  $F / A = 3500 / 12 = \underline{292 \text{ Lux}}$


The screen luminance (B) =  $(R \times E) / \pi = (0.85 \times 292) / \pi = \underline{79 \text{ Candela/m}^2}$

## DMD™ Operation and Usage

A DMD™ (Digital Micromirror Device™) is a true digital light modulator and it utilises 786,432 (**LIGHTNING gv** models) or 1,310,720 (**LIGHTNING sx** models) moving aluminium mirrors, with each one representing a pixel in the final projected image. Each mirror is suspended over address electrodes by a torsion hinge between two posts. Depending on the voltage polarity applied, each mirror will either tilt to left or to the right. When light is applied to the complete DMD™, only the light redirected from a mirror tilting to the left is projected.

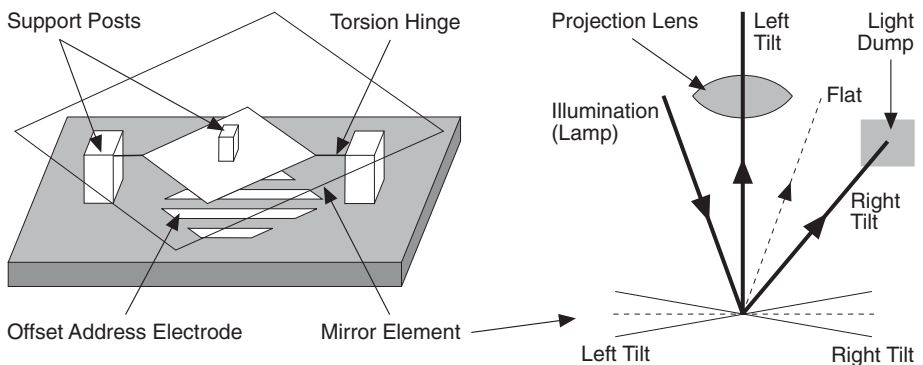


The projector optically filters white light from the lamp into its constituent red, green and blue. Each colour illuminates a separate DMD™ whose modulated output is then recombined with the other two to form the projected full colour image.

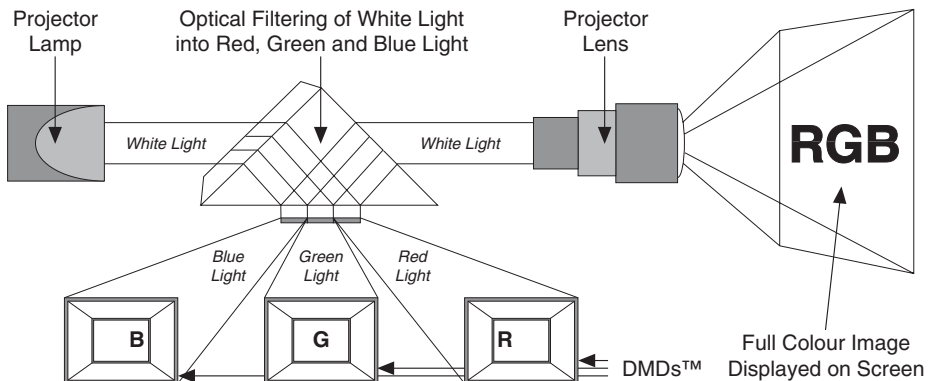

## Aspect Ratios - sx Projectors




In **LIGHTNING 22sx**, **LIGHTNING 25sx** and **LIGHTNING 28sx** projectors, the mirrors in the DMD™ are arranged in a 1280 x 1024 array allowing images of all aspect ratios to be displayed. However, the proportion of the DMD™ effectively used will differ depending on the aspect ratio of the image. The diagrams below show the DMD™ usage for each aspect ratio (4 x 3, 5 x 4, 8 x 5, 14 x 9 and 16 x 9) with the shaded areas representing redundant mirrors.

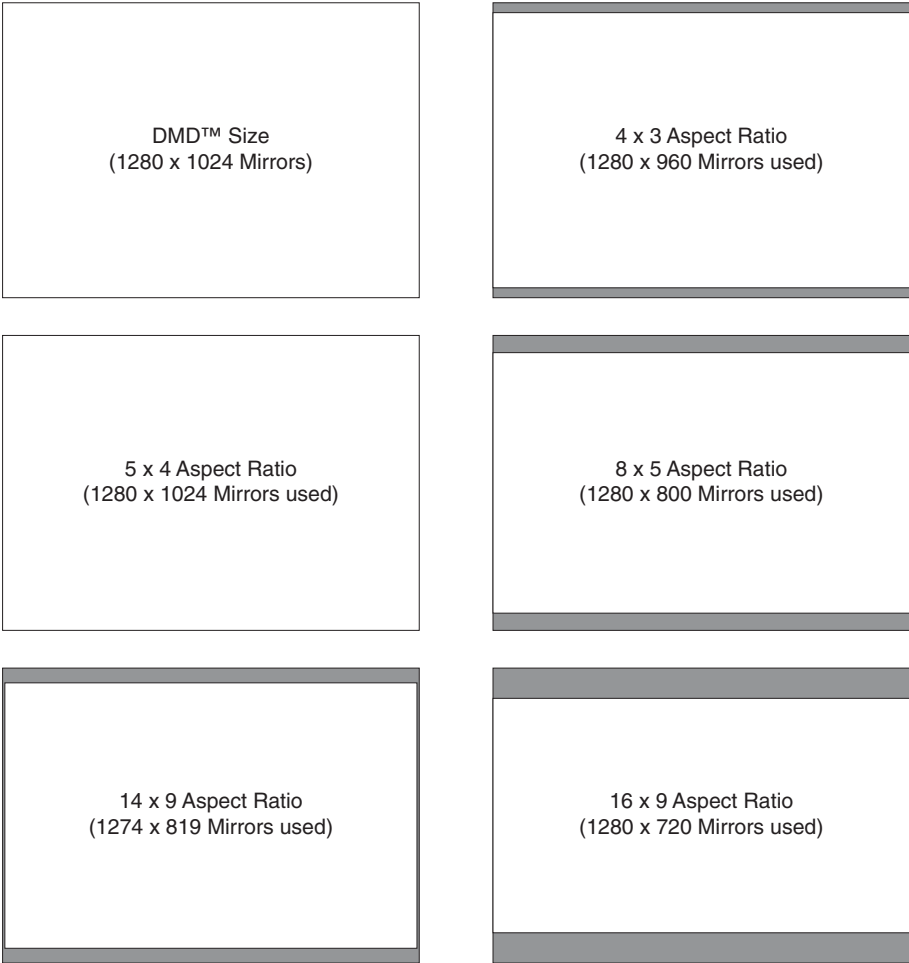

ADVANCED

## Aspect Ratios - gv Projectors


In **LIGHTNING 8gv** and **LIGHTNING 22gv** projectors, the mirrors in the DMD™ are arranged in a 1024 x 768 array allowing images of all aspect ratios to be displayed. However, the proportion of the DMD™ effectively used will differ depending on the aspect ratio of the image. The diagrams below show the DMD™ usage for each aspect ratio (4 x 3, 5 x 4, 8 x 5, 14 x 9 and 16 x 9) with the shaded areas representing redundant mirrors.

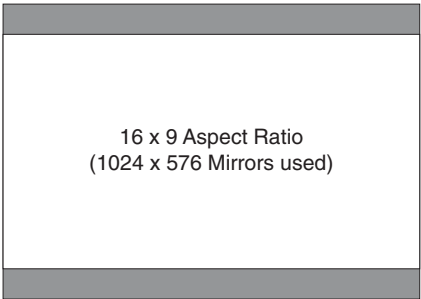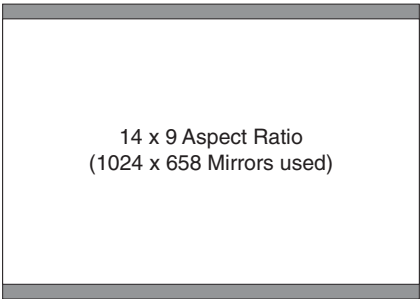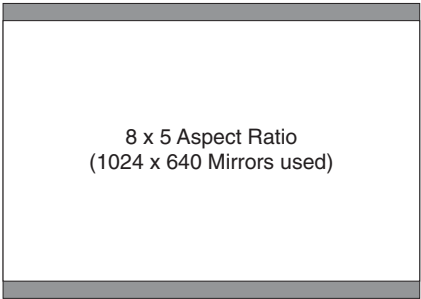




# Operation Flowcharts


## Creating a New Channel

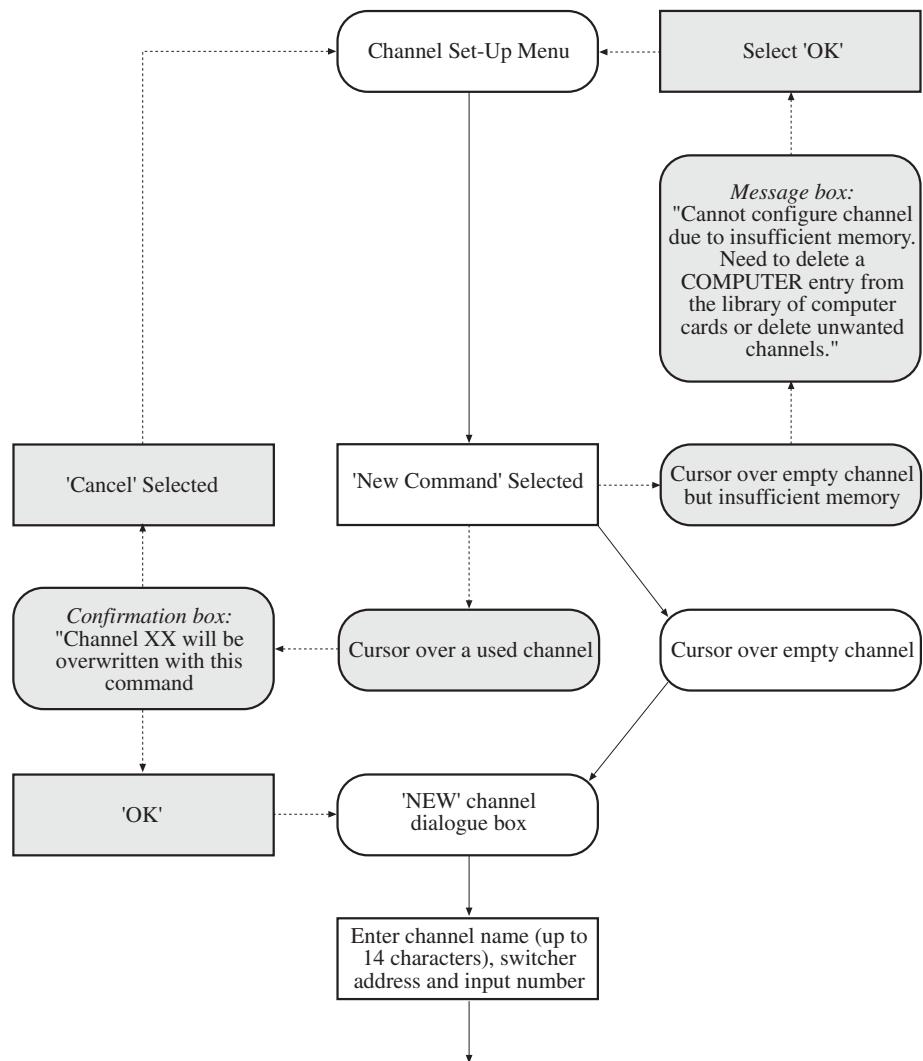


ADVANCED

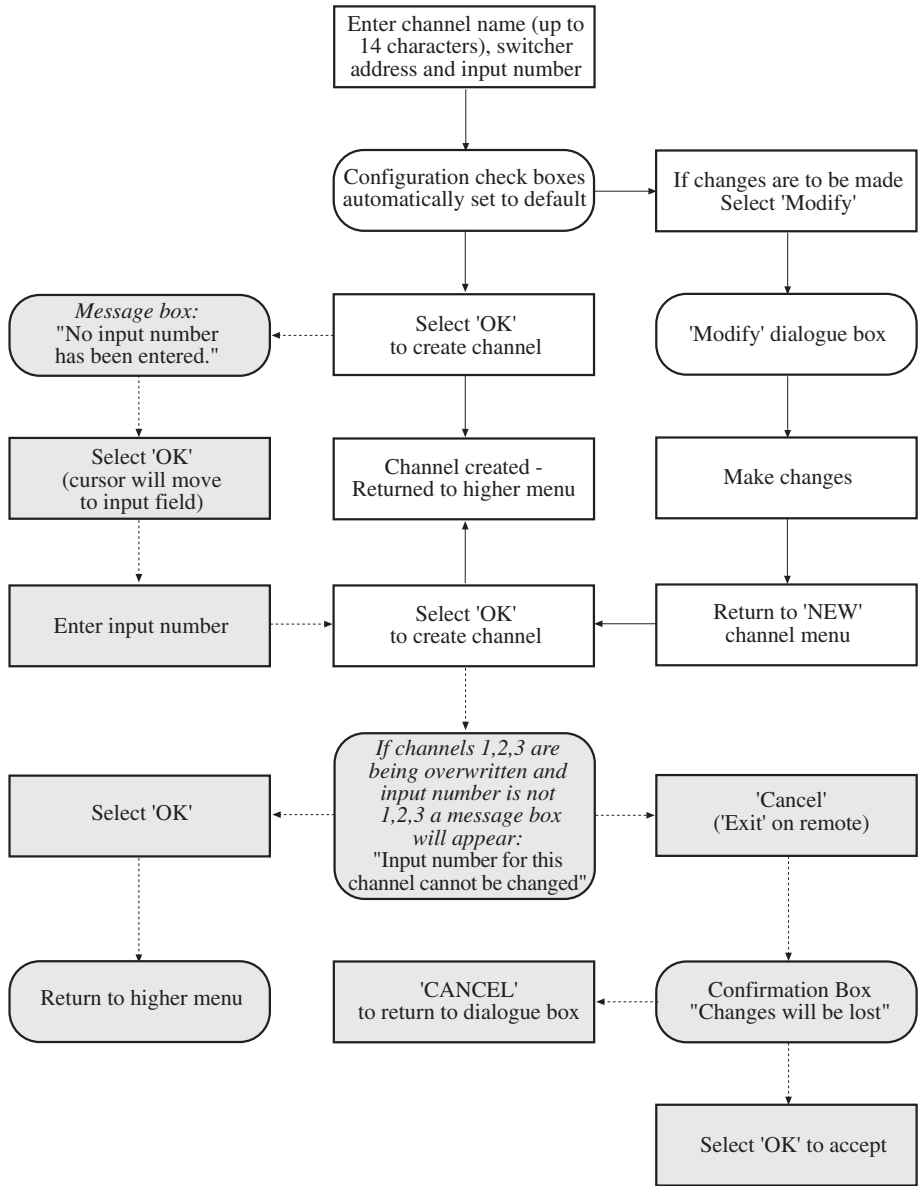


## Copying a Channel

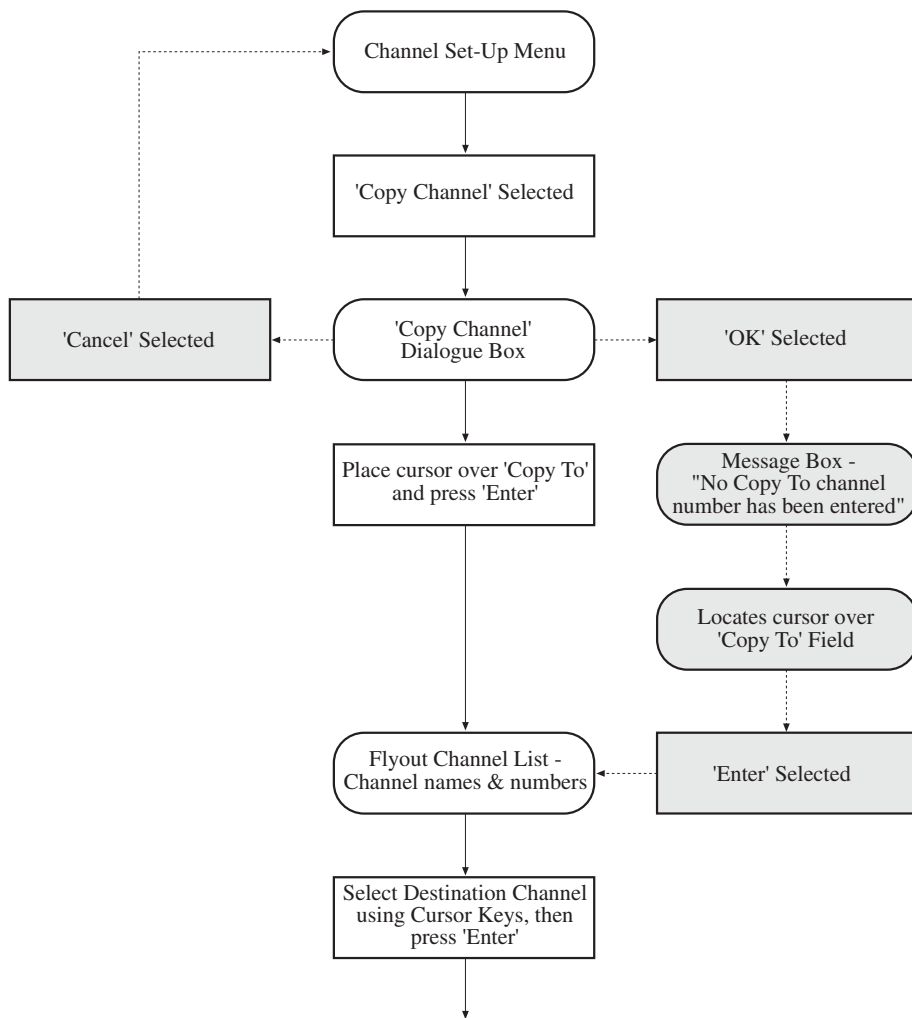


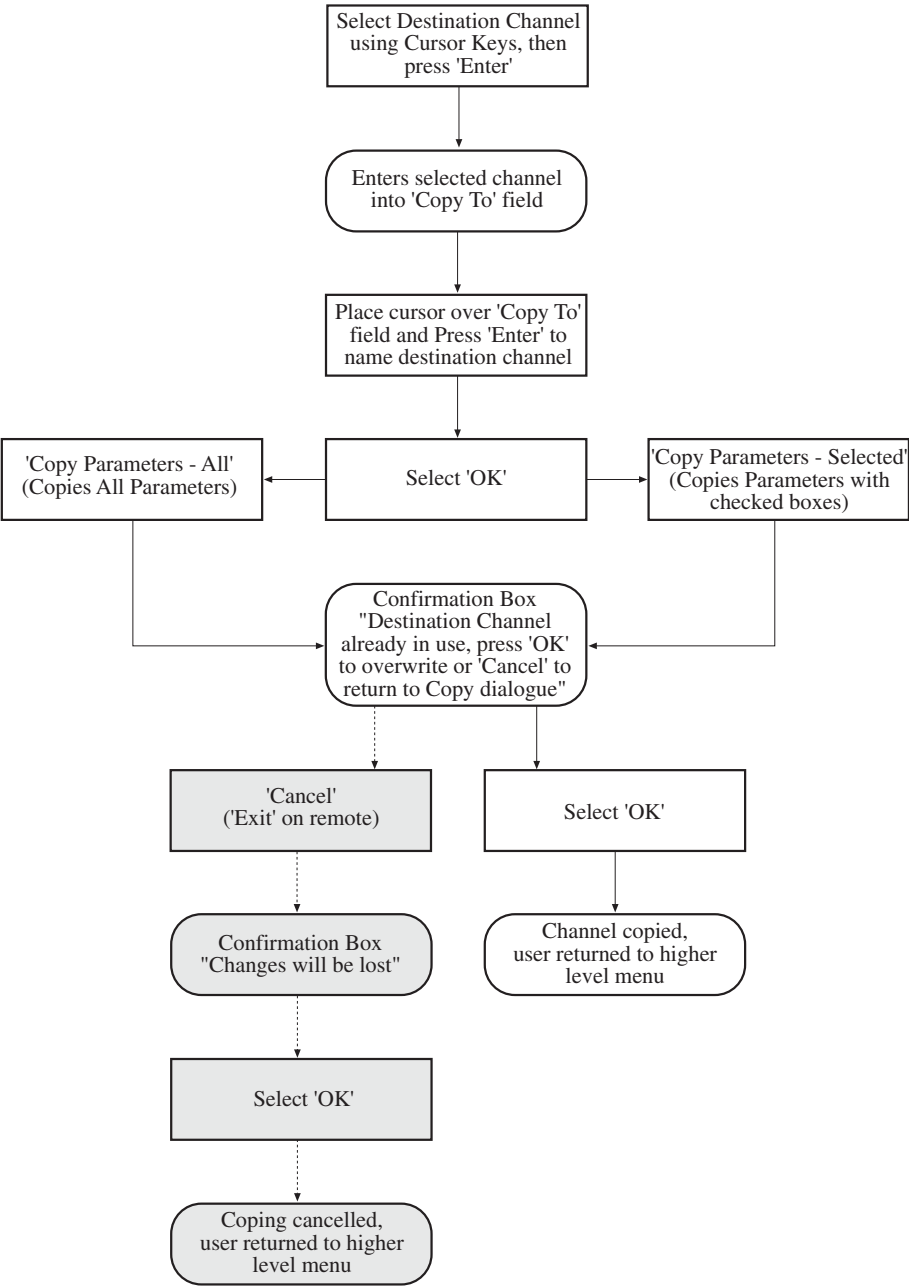


ADVANCED

## Modifying a Channel

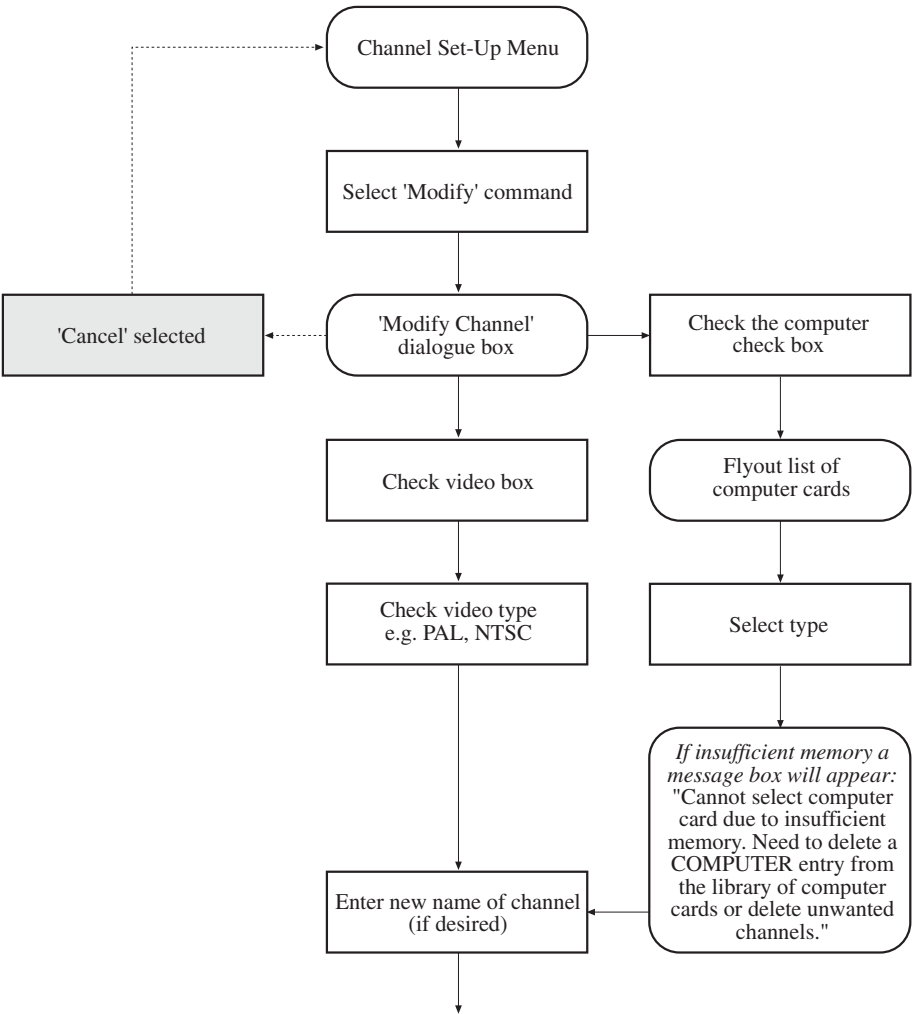


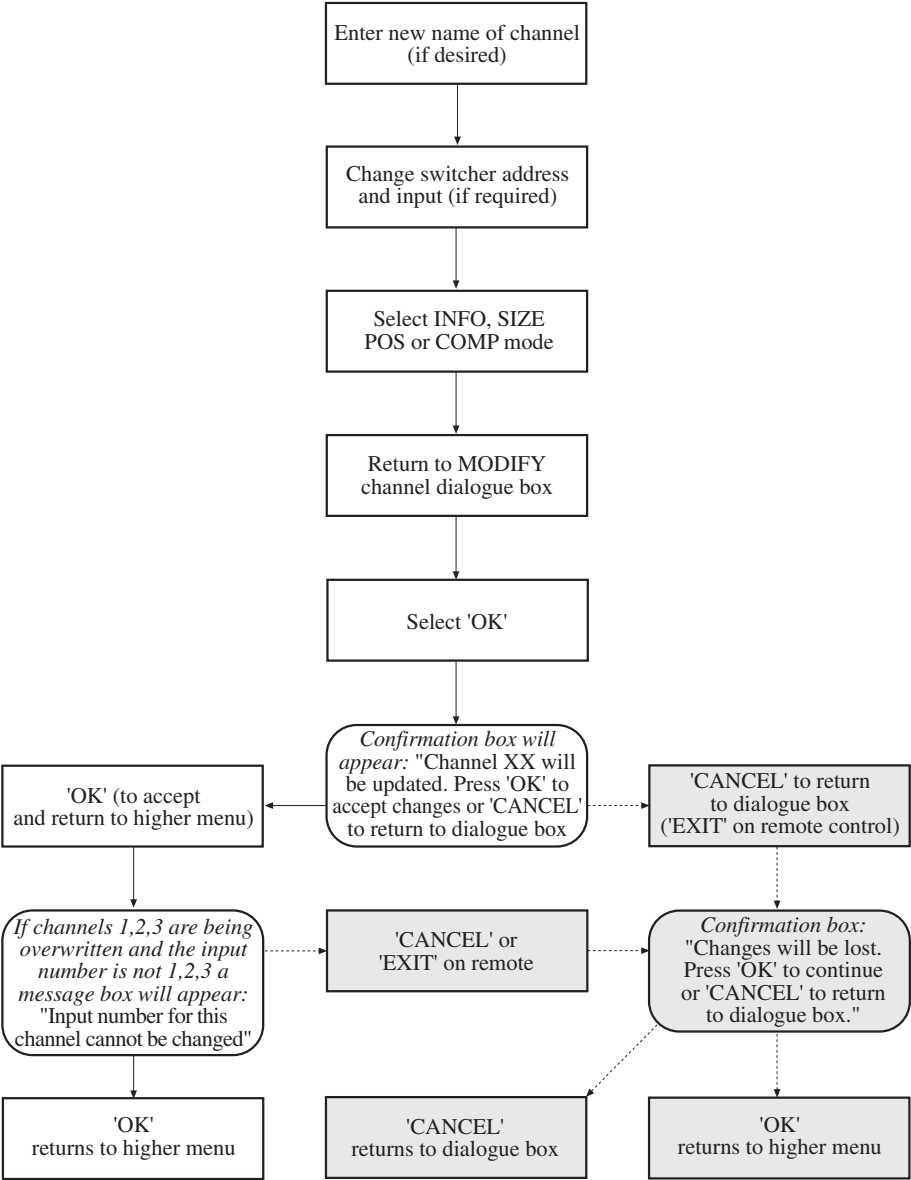

## Adding a Computer

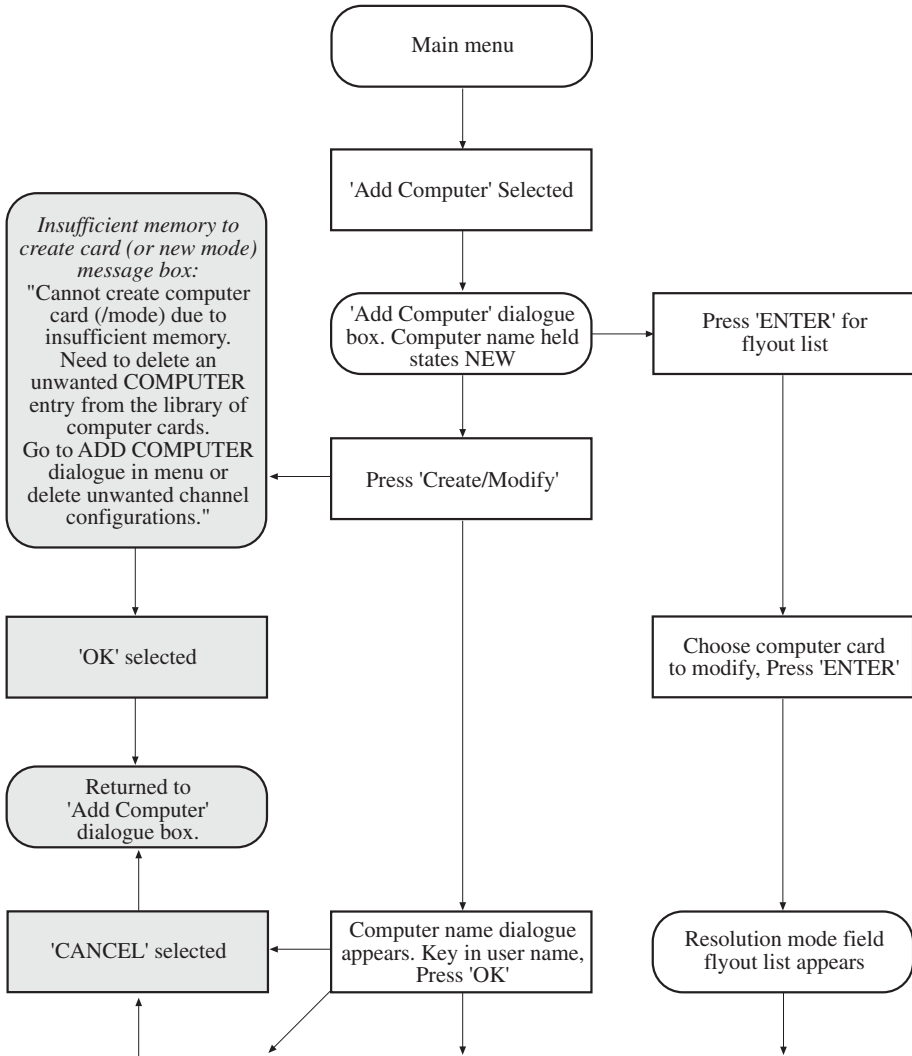



ADVANCED

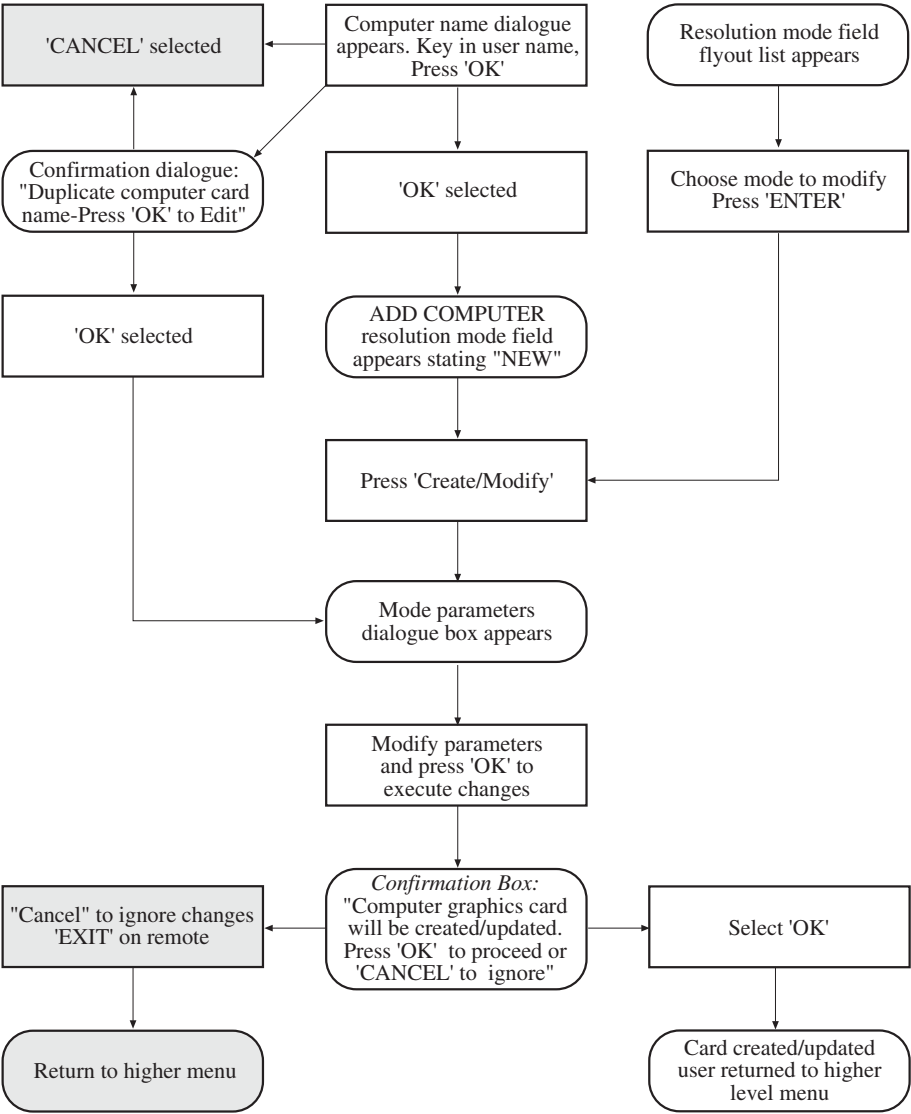



# Modifying a Computer Card

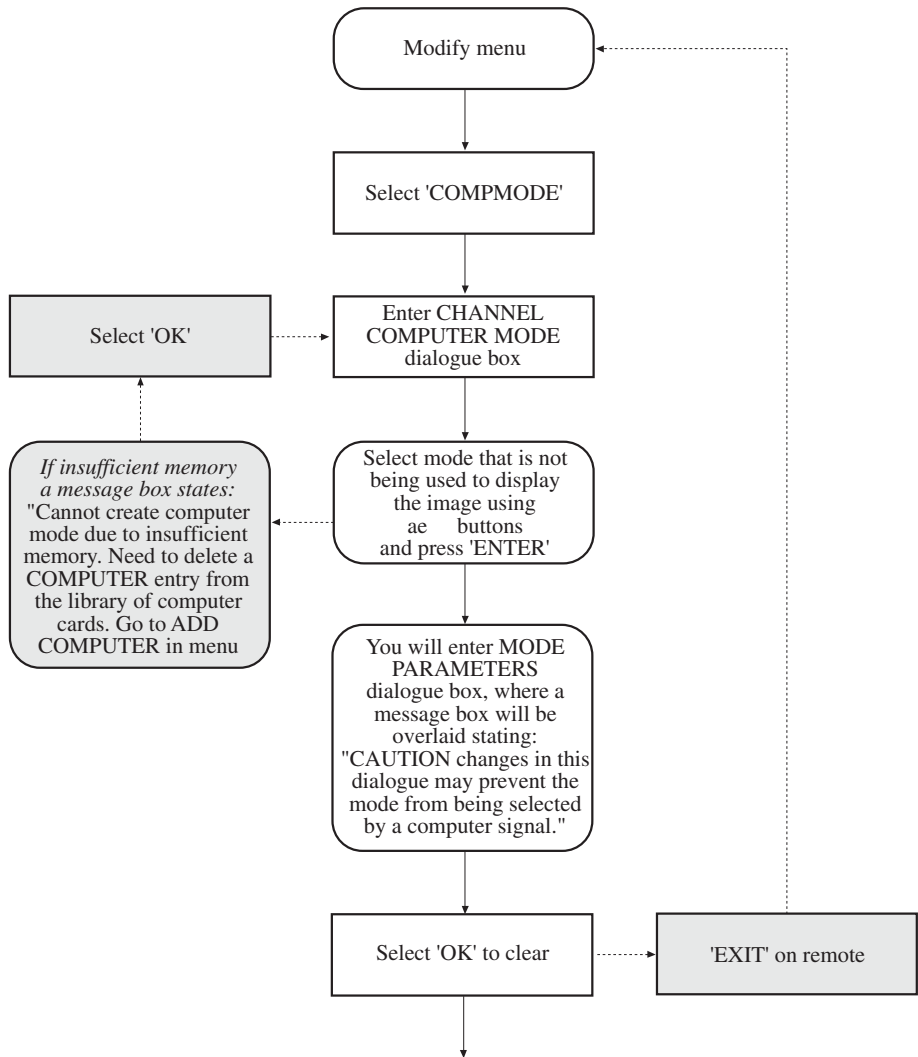

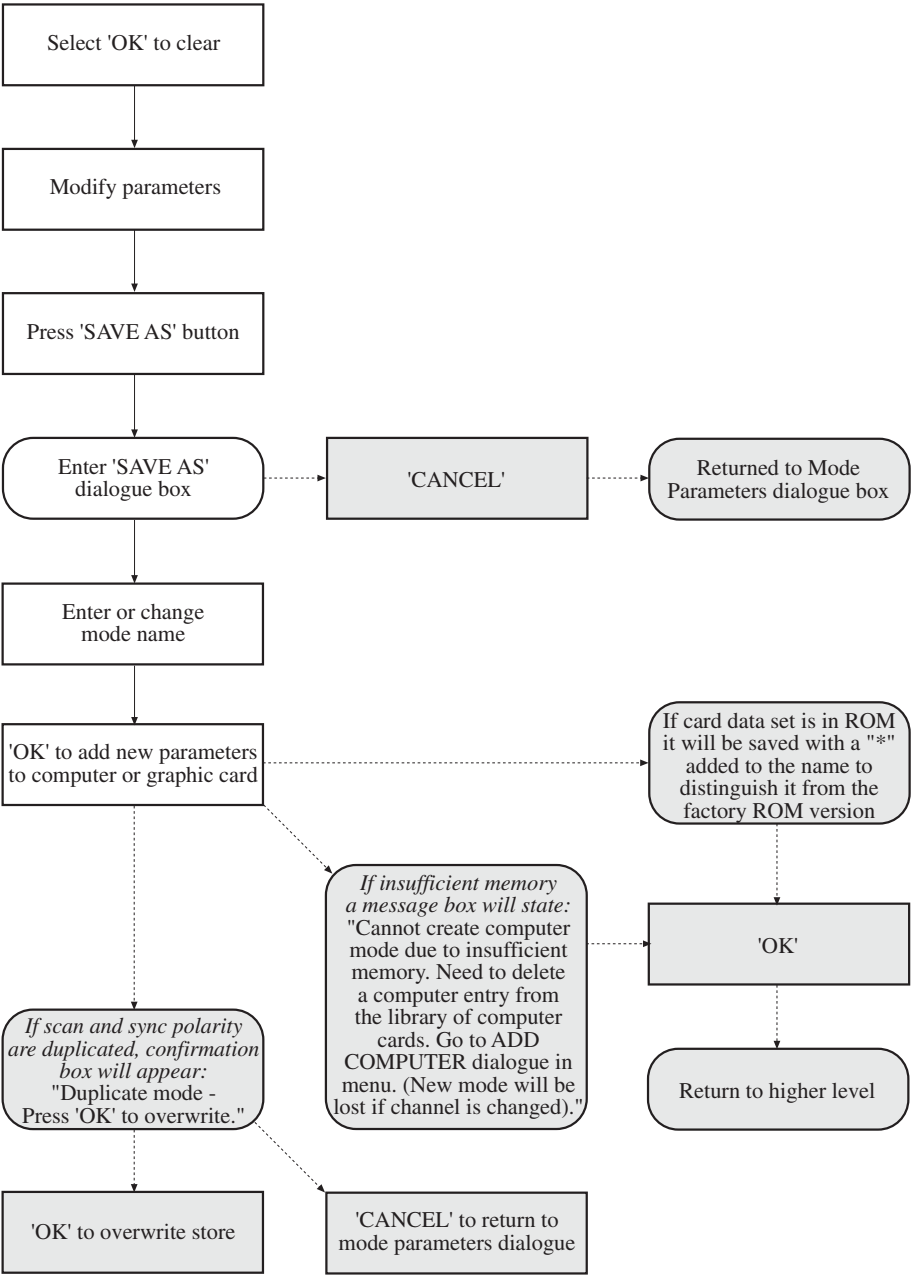

ADVANCED

Lenses

**SXGA 1.2:1 Fixed Wide Angle Lens**

**BASIC PARAMETERS**

Throw Ratio <sup>1</sup>	1.2 : 1
Minimum Screen Distance <sup>2</sup>	3.6 m (11.80 ft)
Maximum Screen Distance <sup>2</sup>	6.2 m (20.30 ft)
Full Beam Angle	22.60°
Rising/Falling Front <sup>3</sup>	±512 pixels
Aperture	F/3
Effective Focal Length	27.2 mm
Distortion <sup>4</sup>	< 1.2%
Transmission	> 92%
Centre MTF @ 33 lp/mm	> 40%
Corner MTF @ 33 lp/mm	> 30%
Maximum Object Radius	20.53 mm (0.81")

**MECHANICAL**

Lens Extension <sup>5</sup>	267 mm (10.51")
Maximum Size	N/A

*Notes*

- <sup>1</sup> Full active area width.
- <sup>2</sup> Limits for specified performance. Does not include lens extension.
- <sup>3</sup> Specification indicates maximum possible lens shift. Actual lens shift obtainable during operation will vary depending on projector model.
- <sup>4</sup> Measured at 540mm.
- <sup>5</sup> Distance from projector front panel to front of lens.

## SXGA 1.5 - 2.0:1 Zoom Lens

### BASIC PARAMETERS

Throw Ratio <sup>1</sup>	1.5 - 2.0 : 1
Minimum Screen Distance <sup>2</sup>	3 m (9.84 ft)
Maximum Screen Distance <sup>2</sup>	12 m (39.37 ft)
Full Beam Angle	36.90° - 28.07°
Rising/Falling Front <sup>3</sup>	±512 pixels
Aperture	F/3
Effective Focal Length	33.5 - 44.6 mm
Distortion <sup>4</sup>	< 1.2%
Transmission	> 85%
Centre MTF @ 33 lp/mm	> 40%
Corner MTF @ 33 lp/mm	> 30%
Maximum Object Radius	20.53 mm (0.81")

### MECHANICAL

Lens Extension <sup>5</sup>	152 mm (5.98")
Maximum Size	329 x 183 mm dia. (13" x 7.2")

#### Notes

<sup>1</sup> Full active area width.

<sup>2</sup> Limits for specified performance. Does not include lens extension.

<sup>3</sup> Specification indicates maximum possible lens shift. Actual lens shift obtainable during operation will vary depending on projector model.

<sup>4</sup> Measured at 540mm.

<sup>5</sup> Distance from projector front panel to front of lens.

**SXGA 2.0 - 2.5:1 Zoom Lens**

**BASIC PARAMETERS**

Throw Ratio <sup>1</sup>	2.0 - 2.5 : 1
Minimum Screen Distance <sup>2</sup>	3 m (9.84 ft)
Maximum Screen Distance <sup>2</sup>	25 m (82.02 ft)
Full Beam Angle	28.07° - 22.60°
Rising/Falling Front <sup>3</sup>	±512 pixels
Aperture	F/3
Effective Focal Length	44.6 - 54.5 mm
Distortion <sup>4</sup>	< 1.2%
Transmission	> 85%
Centre MTF @ 33 lp/mm	> 40%
Corner MTF @ 33 lp/mm	> 30%
Maximum Object Radius	20.53 mm (0.81")

**MECHANICAL**

Lens Extension <sup>5</sup>	159 mm (6.26")
Maximum Size	335.5 x 160 mm dia. (13.2" x 6.3")

*Notes*

<sup>1</sup> Full active area width.

<sup>2</sup> Limits for specified performance. Does not include lens extension.

<sup>3</sup> Specification indicates maximum possible lens shift. Actual lens shift obtainable during operation will vary depending on projector model.

<sup>4</sup> Measured at 540mm.

<sup>5</sup> Distance from projector front panel to front of lens.

## SXGA 2.5 - 4.0:1 Zoom Lens

### BASIC PARAMETERS

Throw Ratio <sup>1</sup>	2.5 - 4.0 : 1
Minimum Screen Distance <sup>2</sup>	5 m (16.4 ft)
Maximum Screen Distance <sup>2</sup>	40 m (131.2 ft)
Full Beam Angle	22.60° - 14.25°
Rising/Falling Front <sup>3</sup>	±512 pixels
Aperture	F/3
Effective Focal Length	44.6 - 54.5 mm
Distortion <sup>4</sup>	< 1.2%
Transmission	> 85%
Centre MTF @ 33 lp/mm	> 40%
Corner MTF @ 33 lp/mm	> 30%
Maximum Object Radius	20.53 mm (0.81")

### MECHANICAL

Lens Extension <sup>5</sup>	108 mm (4.25")
Maximum Size	270.7 x 150 mm dia. (10.66" x 5.9")

#### Notes

<sup>1</sup> Full active area width.

<sup>2</sup> Limits for specified performance. Does not include lens extension.

<sup>3</sup> Specification indicates maximum possible lens shift. Actual lens shift obtainable during operation will vary depending on projector model.

<sup>4</sup> Measured at 540mm.

<sup>5</sup> Distance from projector front panel to front of lens.

## SXGA 4.0 - 7.0:1 Zoom Lens

### BASIC PARAMETERS

Throw Ratio <sup>1</sup>	4.0 - 7.0 : 1
Minimum Screen Distance <sup>2</sup>	8 m (26.3 ft)
Maximum Screen Distance <sup>2</sup>	70 m (229.7 ft)
Full Beam Angle	14.25° - 8.17°
Rising/Falling Front <sup>3</sup>	±512 pixels
Aperture	F/3
Effective Focal Length	44.6 - 54.4 mm
Distortion <sup>4</sup>	< 1.0%
Transmission	> 85%
Centre MTF @ 33 lp/mm	> 40%
Corner MTF @ 33 lp/mm	> 30%
Maximum Object Radius	20.53 mm (0.81")

### MECHANICAL

Lens Extension <sup>5</sup>	206 mm (8.11")
Maximum Size	383 x 145 mm dia. (15.08" x 5.7")

#### Notes

<sup>1</sup> Full active area width.

<sup>2</sup> Limits for specified performance. Does not include lens extension.

<sup>3</sup> Specification indicates maximum possible lens shift. Actual lens shift obtainable during operation will vary depending on projector model.

<sup>4</sup> Measured at 540mm.

<sup>5</sup> Distance from projector front panel to front of lens.

# XGA 0.82 : 1 Short Throw Lens

## BASIC PARAMETERS

Throw Ratio <sup>1</sup>	0.82 : 1
Minimum Screen Distance <sup>2</sup>	2 m (6.56 ft)
Maximum Screen Distance <sup>2</sup>	10 m (32.80 ft)
Full Beam Angle	62.3°
Rising/Falling Front <sup>3</sup>	±30 pixels
Aperture	F/3
Effective Focal Length	14.67 mm
Distortion <sup>4</sup>	<1.8%
Transmission	>88%
Centre MTF @ 33 lp/mm	>55%
Corner MTF @ 33 lp/mm	>25%
Maximum Object Radius	10.88 mm (0.42")

## MECHANICAL

Mass	5.1 kg (11.24 lb)
Lens Extension <sup>5</sup>	145 mm (5.70")
Maximum Size	350 x 190 mm dia. (13.7" x 7.48")

### Notes

<sup>1</sup> Measured at a distance of 2m from the screen with full active area width.

<sup>2</sup> Limits for specified performance. Does not include lens extension.

<sup>3</sup> Specification indicates maximum possible lens shift. Actual lens shift obtainable during operation will vary depending on projector model.

<sup>4</sup> Measured at 540mm.


<sup>5</sup> Distance from projector front panel to front of lens.





## Lens Adapters

The introduction of higher resolution SXGA projectors has resulted in a requirement for larger projection lenses which have a larger mounting thread diameter and will not fit earlier projectors. Earlier lenses will also not fit in the new Intelligent Lens Mount (ILM) that is fitted to **LIGHTNING display** projectors.

**LIGHTNING sx** and **gv** projectors are capable of a wide range of lens options by using the optional thread and sleeve adapters shown below.

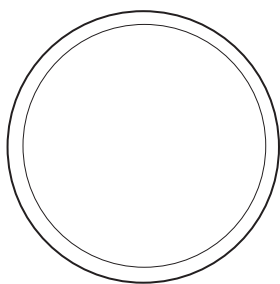

 SXGA Lens-6sx  
Lens Thread Adapter  
Part No. LCM00773

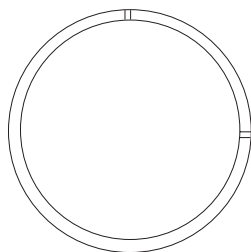

XGA-SXGA Lens  
Sleeve Adapter  
Part No. LA00088

The sleeve adapter fits around the rear body of an XGA lens and is fastened in place by 2 grub screws. It provides a larger diameter body for insertion into a **LIGHTNING display** projector.



*Not all earlier lenses can handle the larger object size of the SXGA DMD. Please refer to Technical Bulletin 1.00.014 before using GV lenses.*

An extra thread within the lens mount of a **LIGHTNING display** projector makes it possible to use a limited number of the lenses designed for XGA resolution projectors. This enables current owners to utilise the XGA lenses by using the sleeve adapter although the different size of the DMD changes the lens throw ratio.

For example, the 2.5 - 4.0:1 zoom lens from an XGA projector becomes a 2.0 - 3.2:1 zoom lens if fitted to an SXGA projector. This is calculated as follows:

$$\text{SXGA throw ratio} = \frac{\text{XGA throw ratio} \times 1024}{1280}$$



*The physical dimensions of the lenses designed for XGA and SXGA projectors are different. In particular the length of the rear section of the lens is greater for an XGA lens. The correct set-up of the lens mount parameters of a **LIGHTNING** projector ensures that an SXGA lens cannot touch the glass prism assembly. XGA lenses used in a **LIGHTNING display** projector can touch and seriously damage the glass prism assembly.*

If using an XGA lens make sure that the focus is such that the lens mount is fully forward within the projector. The rear section of an XGA lens is longer than that of an SXGA lens and it can contact the prism assembly causing damage. The lens should be inserted and screwed home carefully without using excessive force. Never use the focus drive motor when the lens is in contact with the prism assembly or serious damage may result.

An adapter ring fitted to the rear section of an XGA lens causes the lens to sit further forward in the lens mount by the correct amount to prevent the lens from contacting the prism assembly in use and during lens insertion. The adapter ring must always be used when fitting XGA lenses into **LIGHTNING display** projectors.

To allow XGA lenses to focus at long throw ratios may require a re-calibration of the lens mount. Please contact your dealer for details.




*The glass prism assembly is expensive and physical damage will not be covered under warranty.*

## Cables & Connections

 
### Remote Computer Control

The projector end of this cable must be fitted with a ‘male’ 9-pin D-type connector. If using a ‘laptop’ computer, the other end of the cable should be fitted with a ‘female’ 9-pin D-type connector (or a ‘female’ 25-pin connector). The cable should be a standard RS232 serial cable in which all connections are straight through.

Projector End	Signal	Computer End (9-pin)	Computer End (25-pin)
Pin 2	RX	Pin 2	Pin 2
Pin 3	TX	Pin 3	Pin 3
Pin 5	Ground	Pin 5	Pin 7



MALE 9-PIN 'D' STYLE CONNECTOR

 

FEMALE 9-PIN 'D' STYLE CONNECTOR

### Switcher Control

The connection requirements for the projector end of the switcher control cable are identical to that for remote computer control. For information on the switcher end of the cable, please refer to the documentation supplied with your switching device.


## Hard-Wire Remote Connection

The hard-wire remote connection uses a cable which connects the remote control unit to the projector.

The cable has a 3-pole ‘XLR’ audio/ video plug at one end and a 3.5mm stereo Jack Plug at the remote control end.

Audio/Video Connector	Signal	Remote Control End
Pin 2	+15V	Screen
Pin 3	Signal	Centre
Pin 1	Ground	Tip

The cable connection can be extended using a standard 3-pole audio/ visual XLR Cable. The maximum cable length should not exceed 100m (330ft).

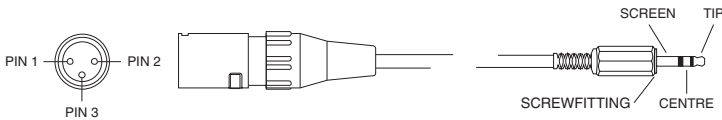


**XLR Socket**

**LIGHTNING sx** and **gv** projectors now include an XLR connector for hard-wire connection of the remote control unit.

**Four-Digit Display**

This display shows the projector run hours.

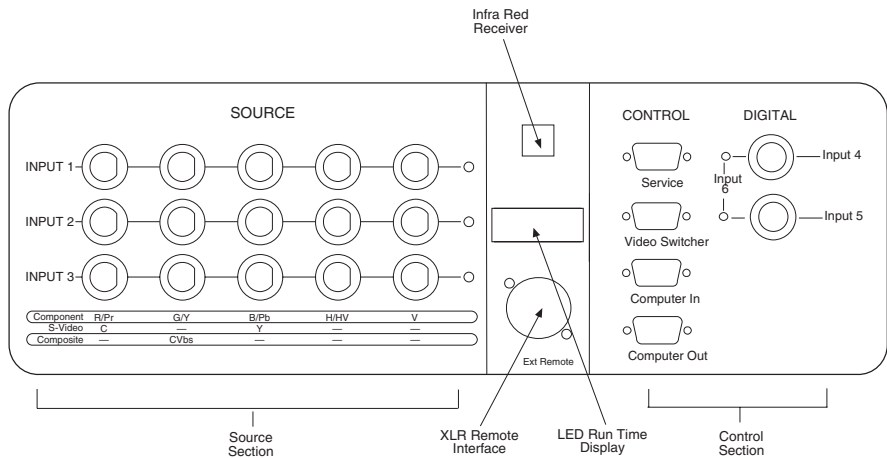

## Technical Specification - ***LIGHTNING*** sx Range

	<i>LIGHTNING 22sx</i>	<i>LIGHTNING 25sx</i>	<i>LIGHTNING 28sx</i>
Lamp Type	Proprietary Xenon Arc		
ANSI Output	12,000 Lumens $\pm$ 10%	14,000 Lumens $\pm$ 10%	16,000 Lumens $\pm$ 10%
Lamp Life	750 Hours		
Brightness Linearity	95% Edge to Centre	90% Edge to Centre	90% Edge to Centre ( $\pm$ 10%)
Colour Temperature	3000°K - 9300°K Adjustable		
Contrast Ratio	275:1 $\pm$ 10% ANSI Checkerboard		
	500:1 Full Field ( $\pm$ 10%)	500:1 Full Field ( $\pm$ 10 %)	450:1 Full Field ( $\pm$ 10%)
Display Type	3 x DMD (one per R, G & B)		
DMD Specification	1280 x 1024 Pixels 16.3 $\mu$ m x 16.3 $\mu$ m Pixel size 17 $\mu$ m x 17 $\mu$ m Pixel pitch 21.8mm x 17.4mm DMD size		
Fill Factor	92% Pixel fill factor		
Input Specification	3 independently configurable inputs - selectable via remote control. BNC Connectors 525/60, 625/50, PAL, NTSC, HDTV, SVGA, VGA, XGA, SXGA & MAC SD-Serial Digital Input (Standard)		
RGBS	RGB = 700mV/75 $\Omega$ S = 0.7V-5V Sync on G, Separate H&V, Composite Sync Auto Select		
Component Video	Y = 700mV + 300mV/75 $\Omega$ Pr, Pb = 700mV p-p/75 $\Omega$		
Y/C (S Video)	Y = 700mV + 300mV/75 $\Omega$ C = 300mV p-p/75 $\Omega$		
Composite	1V p-p/75 $\Omega$		
Computer	H = 15kHz to 90kHz		
Source Compatibility	V = 24Hz to 100Hz up to 1600 x 1200		
Display Rate	same as input rate up to maximum of 72Hz		

	<i>LIGHTNING 22sx</i>	<i>LIGHTNING 25sx</i>	<i>LIGHTNING 28sx</i>
Remote Control	IR Receivers front and rear Hard-wire link to handset 3-Pin female XLR		
Automation	RS232 input/ output: loop through, 3-pin female XLR		
Switcher	Video Switcher output - RS232, 9-Pin D type		
Mounting	Floor Mount (standard), Flying Frame (optional) Rigging Frame (optional), Stacking Frame (optional)		
Lens Options	SX Lenses 1.2:1 Fixed, 1.5-2.0:1 Zoom - 2.5:1 Zoom 2.5 - 4.0:1 Zoom 4.0 - 7.0:1 Zoom		
Lens Mount	Motorised and programmable focus, zoom, horizontal and vertical lens shift accessed via remote control, light shutter		
Power Requirements	208 - 240V AC, 50 - 60Hz		
Factor Correction	0.95		
Power Consumption	3,000 watts 10,230 BTU/hr	4,200 watts 14,230 BTU/hr	4,200 watts 14,230 BTU/hr
Physical Dimensions	481mm (19") height 764mm (29") width 1125mm (44") length		
Weight (Chassis only)	110kg (243lbs)		
Maximum Operating Temperature	40°C		

# Technical Specification - ***LIGHTNING GV Range***

<i>LIGHTNING 8gv</i>	<i>LIGHTNING 22gv</i>
----------------------	-----------------------

Lamp Type	Proprietary Xenon Arc	
ANSI Output	9,000 Lumens $\pm$ 10%	11,000 Lumens $\pm$ 10%
Lamp Life	750 Hours	
Brightness Linearity	95% Edge to Centre	
Colour Temperature	3000°K - 9300°K Adjustable	
Contrast Ratio	275:1 $\pm$ 10% ANSI Checkerboard	
	500:1 Full Field ( $\pm$ 10%)	450:1 Full Field ( $\pm$ 10 %)

Display Type	3 x DMD (one per R, G & B)
DMD Specification	1024 x 768 Pixels 16.3 $\mu$ m x 16.3 $\mu$ m Pixel size 17 $\mu$ m x 17 $\mu$ m Pixel pitch 17.4mm x 13.1mm DMD size
Fill Factor	92% Pixel fill factor

Input Specification	3 independently configurable inputs - selectable via remote control. BNC Connectors 525/60, 625/50, PAL, NTSC, HDTV, VGA, SVGA, XGA, SXGA & MAC SD-Serial Digital Input (Standard)
RGBS	RGB = 700mV/75 $\Omega$ S = 0.7V-5V Sync on G, Separate H&V, Composite Sync Auto Select
Component Video	Y = 700mV + 300mV/75 $\Omega$ Pr, Pb = 700mV p-p/75 $\Omega$
Y/C (S Video)	Y = 700mV + 300mV/75 $\Omega$ C = 300mV p-p/75 $\Omega$
Composite Computer	1V p-p/75 $\Omega$ H = 15kHz to 90kHz V = 24Hz to 100Hz
Source Compatibility	up to 1280 x 1024
Display Rate	same as input rate up to maximum of 72Hz

ADVANCED



<i>LIGHTNING 8gv</i>	<i>LIGHTNING 22gv</i>
----------------------	-----------------------

Remote Control	IR Receivers front and rear Hard-wire link to handset 3-Pin female XLR	
Automation	RS232 input/ output:	
Switcher	loop through, 9-pin D type Video Switcher output - RS232, 9-Pin D type	
Mounting	Floor Mount (standard), Flying Frame (optional) Rigging Frame (optional), Stacking Frame (optional)	
Lens Options	SX Lenses (Motorised Focus & Zoom) 1.2:1 Fixed (actual 1.5:1), 1.5-2.0:1 Zoom (actual 1.88-2.5:1) 2.0-2.5:1 Zoom (actual 2.5-3.13:1) 2.5 - 4.0:1 Zoom (actual 3.13-5.0:1) 4.0 - 7.0:1 Zoom (actual 5.0-8.75:1)	
Lens Mount	Motorised and programmable focus, zoom, horizontal and vertical lens shift accessed via remote control, light shutter	
Power Requirements	208 - 240V AC, 50 - 60Hz	
Factor Correction	0.95	
Power Consumption	3,200 watts 10,230 BTU/hr	4,200 watts 14,230 BTU/hr
Physical Dimensions	481mm (19") height 764mm (29") width 1125mm (44") length	
Weight (Chassis only)	110kg (243lbs)	
Maximum Operating Temperature	40°C	



# Section E: Fault Finding and Maintenance

<b>Troubleshooting</b>	E—1
<b>Maintenance</b>	E—4
Lamp Replacement	E—4
Lamp Life Timer	E—5
Conserving Lamp Life	E—6
Handling and Working with Xenon Lamps	E—6
Stuck Lenses	E—9

Troubleshooting

PROBLEM	POSSIBLE CAUSE	SOLUTION
The projector will not power-up.	The projector is not plugged in correctly.	Check mains plug and projector switch.
The projector shuts down or lamp goes out.	Thermal shut down devices have cut power due to overheating.	Check if air ducts are clear, clean/replace filters.
Front Red LED illuminated.	The lamp has reached the end of its life.	Replace the lamp.
	The lamp is switched off.	Press Lamp High or Lamp Low on Remote Control.
No Image is displayed.	Lamp has not lit (the red LED will be illuminated).	Switch off the projector and power-up again.
	No input source.	Connect an input source.
	Input source incorrectly connected.	Refer to 'Signal Sources' for correct connections.
	PIC MUTE is on.	Press the PIC MUTE button on the remote control to turn it off.
	Channel has not been selected.	Select a channel.

PROBLEM	POSSIBLE CAUSE	SOLUTION
The lamp is lit but no image is being displayed.	DMDs™ have been shut down due to overheating or pic mute.	Check if air ducts are clear, clean/replace filters.
No image is displayed and a LED is flashing on the input board.	Input device is connected to wrong input.	Connect input to the row with flashing LED.  Change the input number of selected device in the Channel Set-up.
	No input source.	Connect input source.
Image does not fit onto screen.	The wrong aspect ratio has been set.	Change the aspect ratio in CHANNEL SET-UP.
	Projector is in the wrong position.	Check the throw distance is correct.
Uneven focusing.	Projector not positioned correctly.	Re-position the projector to be perpendicular to the screen and re-focus.
Picture flicker.	Incorrect sync selected.	Set sync to match the input devices sync.
	The lamp may be reaching the end of its life.	Replace Lamp.


PROBLEM	POSSIBLE CAUSE	SOLUTION
Distorted image from a computer input.	The computers pixel phase and resolution differ from that of the projector.	Use the PIXEL and PHASE buttons on the remote control to match them with the projector.
No menus are displayed when pressing MENU on the remote control.	The On Screen Display is turned off.	Press the OSD ON button on the remote control.
Uneven light distribution.	Screen may be wrinkled or incorrectly installed.	Ensure screen is flat and securely mounted.
The projector is not responding to commands from the remote control.	The batteries are flat.	Replace batteries.
	The remote cable is not connected properly.	Ensure the cable is connected properly.
The back light on the remote control will not illuminate.	The batteries are flat.	Replace batteries.
	The remote cable is not connected properly.	Ensure the cable is connected properly.


## Maintenance

### Lamp Replacement

To remove the existing lamp follow the procedure below:-

1. Turn off the existing lamp using the LAMP OFF button on the remote control unit and to allow the cooling fan to run for 10 minutes.
2. Disconnect the projector from the mains supply and wait 5 minutes for the projector to cool down.
3. Undo the six screws on the right hand side cover using a flat-head screw driver and remove cover.
4. Unscrew the three retaining screws securing the lamp in position (see diagram opposite).
5. Using the handle provided on the lamp housing slide out the lamp and remove to a safe location.

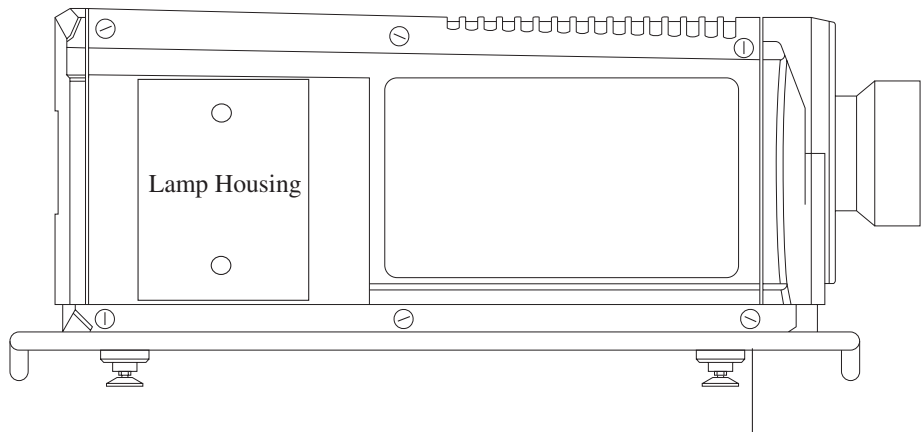

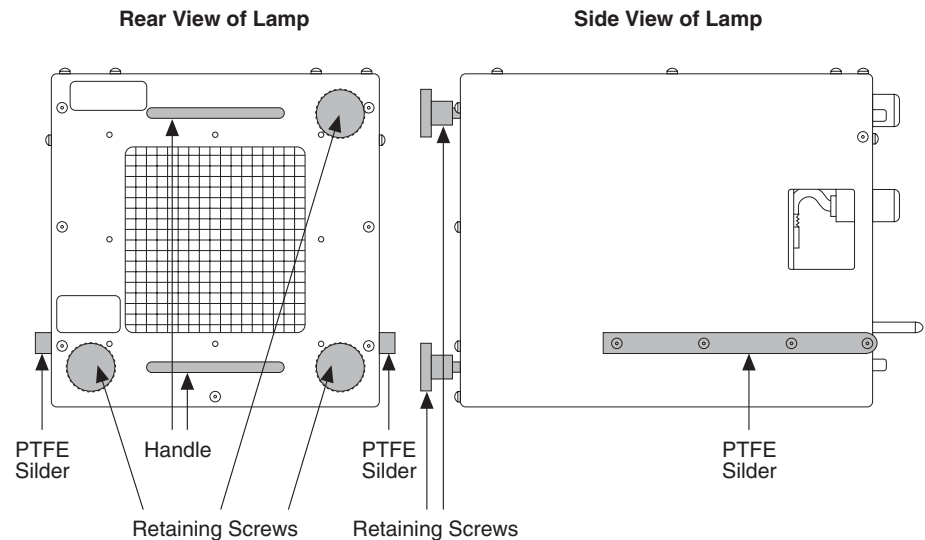


To fit a new lamp:-

1. Lift the lamp into position on the right hand side of the projector and align the PTFE sliders on each side of the lamp between the two sliders on each side of the lamp bay in the projector.
2. Push the lamp back into the projector and secure in position by tightening the three retaining screws. Replace the lamp access cover and secure the retaining screws firmly in place with a flat-head screwdriver and test for normal operation

## Lamp Life Timer

The lamp incorporates a passive mercury lamp life timer. This timer has an unmarked scalar bar which indicates 0 to 1000 hours of lamp use with graduation marks every 50 hours. The current lamp usage is indicated by a black mark on the mercury bar (shown in diagram at 750 hours).

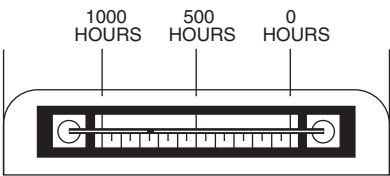



## Conserving Lamp Life

---

As with all Xenon arc lamps, the Digital Projection lamp requires a very high strike voltage (>30kV) to initiate the arc. This high voltage strike causes minute amounts of material to be lost from the electrode tips. It has been identified that lamps with a higher number of strikes can fail earlier.

To conserve lamp life, it is recommended that the user reduces the amount of strikes as much as possible. For example, if the projector is not required for 10 minutes during a presentation it would be beneficial to keep the lamp running (in Picture Mute if necessary) rather than turning the lamp off and then back on again.

Recent increases in the projector light output mean that the image may be brighter than required for a given application. In such instances, using the projector on 'Lamp Low' can still give an acceptable performance with the added benefit of increasing the life of your lamp.

## Handling and Working with Xenon Lamps

---

Xenon lamps can explode without warning because they contain gas under high pressure and are made of fused quartz which is brittle, like glass. Keep replacement lamps in their protective packaging until required and do not subject to shock, impact or excessive force. Leave cooling fans running for at least 10 minutes after switching off the lamp to allow the module to cool before handling it. The normal running temperature of the lamp module is over 1200°C.



***Xenon lamps produce high intensity light and ultra-violet radiation. NEVER look directly into a lighted lamp or at the light emanating from the lens or lamp module. To do so may cause severe eye damage. Do not touch window area and never point the output window of the module towards any person or oneself.***



***Do not allow anyone to be exposed to a Xenon lamp except when wearing the prescribed personal protective equipment detailed opposite.***

## Protective Measures

When handling Xenon Arc Lamps always wear the following prescribed personal protective equipment:

- a) CSA approved safety glasses or, if a higher standard, as per local legislated safety standards. In Europe safety glasses should be CE marked.
- b) Thermoplastic - polycarbonate protective face shield that extends below the neck.
- c) Welding jacket or lab coat.
- d) Heavy protective leather, Kevlar or puncture resistant nitrile gloves.

When working in a test room, or on location (i.e. a theatre projection booth) with an exposed xenon lamp, ensure that the sign on the door indicates:

**XENON LAMP EXPOSED. DO NOT ENTER  
UNLESS WEARING PRESCRIBED  
PERSONAL PROTECTIVE EQUIPMENT**

These signs should be on all access doors to test rooms and projection booths. Ensure that all doors that access the exposed xenon lamp area are closed.

## Storage of Xenon Lamps

All xenon lamps should be stored in their original shipping package (which includes a plastic case, surrounded by foam insert and packed in cardboard box) and in a designated area away from traffic. Ensure that the exterior of the box indicates:

**CAUTION - FRAGILE  
XENON LAMP ENCLOSED**

The number of hours of use of a xenon lamp should be recorded on the outside of its box, whether the lamp is a new one or an old one that is used for testing.



*Digital Projection recommends that all xenon lamps be replaced after 750 hours of use. Digital Projection will not be responsible for any damages resulting from failure to comply with this instruction. They must not run past 750 hours, otherwise catastrophic failure will occur.*

## Internal Projector Adjustments

---

The internal parts of the projector are set in the factory and adjustment should not be attempted by the user. Only properly authorised personnel should carry out such adjustments which normally need to be done with the projector switched on and the covers removed.

## Lamp Explosions

---

In the event of a lamp explosion a cloud of white quartz dust is released and the module window may break. Do not inhale the dust. Short-term exposure to the dust is not considered a problem but repeated exposure may be hazardous.

Evacuate the room where the lamp is located and place the lamp module into its protective packaging for return to supplier. Wear suitable protective gloves to prevent injury from broken glass and dust.

Remove glass dust and any other debris from the projector wearing protective gloves and allow dust to settle for 2 - 3 hours.

When entering the projector environment following a lamp explosion, wear full respiratory protection with dust filters. A half-mask respirator with Class 3 type (highest efficiency) particle filter is recommended. Particle filters are marked "P" and are colour coded white.

Remove dust from projector room using a vacuum cleaner to avoid disturbing the dust as much as possible.

## Stuck Lenses

---

Due to the introduction of physically larger lenses, over-tightening the lens, rotating the lens too quickly in the lens mount or the presence of dirt in the threads of the lens or mount may cause the lens to become stuck in the lens mount.

In order to prevent incidents of this nature, a fibre washer is now fitted to all new lenses before shipping. Users with lenses shipped prior to the introduction of this washer are advised to request them when placing their next order. Digital Projection also recommends the following installation procedure for all lenses.

1. Check the fibre washer is in place and the lens is in good condition.
2. Check the lens and lens mount screw threads are free from dirt and metal shavings.
3. Ensure the motorised lens mount is in the disengaged position.



*If fitting a **POWER** gv lens, ensure the correct lens adapter is fitted.*

4. Fully support the weight of the lens while offering it up to the lens mount.
5. Carefully guide the rear of the lens into the guide ring at the rear of the mount.
6. Continuing to support the weight of the lens (especially at the front) apply a slight rearward pressure and rotate counter-clockwise until a click is heard.
7. Slowly rotate the lens clockwise until it seats against the lens mount (do not over-tighten).
8. Turn the lens mount lever clockwise to engage.

Appendix

**Quick Set-up Reference** .....i

    Setting Up the Projector .....i

    On Screen Display .....i

    If there is no Image.....ii

    Correcting Distorted Images.....ii

**Menu System Review** .....iii

    The On Screen Display (OSD).....iii

    The Menu System .....iii



## Quick Set-up Reference

*This guide assumes the projector has been previously installed and configured in accordance with the System Installation guidelines in this Manual.*

### Setting Up the Projector

---

Check that the input source you wish to display is connected to the back of the projector. If it is not, and you are unsure how to connect the source, refer to System Installation, B—11.

Connect the projector and the input device to the mains supply and switch on (the projector's power button is located at the back, on the left hand side). After turning the projector on, check that air is flowing out of the vent on the top of the projector case, if it isn't, turn the projector off immediately and contact your dealer.

If after 25 seconds the projector lamp has not lit (and the red LED is illuminated on the front of the projector), switch off the projector and turn it back on again.

When the projector starts up, it will display images using the settings defined by the 'At Power Up' section of the User Preferences - you may need to select new settings.

### On Screen Display

---

The On Screen Display (OSD) displays the menu system and messages and unless pre-set to OFF in the User Preferences, will appear when the projector starts up.

The OSD must be turned ON if you wish to make changes to the projector set-up. If it is OFF, it can be activated using the OSD ON button on the remote control.

When OSD is ON, the menu system can be temporarily removed by pressing MENU on the remote control. To re-activate the menu system, press MENU again and you will be returned to the last menu screen used.

## **If there is no Image**

---

### **Ensure the input source is sending a signal.**

Check the input source is correctly connected, a LED will flash on the input board at the rear of the projector if you have incorrectly connected the input device. Check that a signal is being sent (e.g. if it is a video recorder, it is set to play).

### **Ensure the correct input and channel numbers have been selected.**

Check the type of input source and the input number you have connected the device to, then, select the appropriate settings in the Channel Set-up Function.

### **Ensure Pic Mute has not been inadvertently selected.**

If Pic Mute is ON, press the Pic Mute button on the remote control to toggle it OFF.

## **Correcting Distorted Images**

---

### **The image is out of focus.**

Activate the On Screen Display then press the LENS button on the remote control until the Focus dialogue box appears. Next, use the ▲ and ▼ keys to focus the image (the ▲ key will focus closer and the ▼ key will focus further away).

### **The image does not fit the screen.**

Ensure the projector is placed in the correct position, then select the channel with the required aspect ratio for the image you want to display. The aspect ratio can be changed using the Modify option in the Channel Set-up function.

### **The image is stretched horizontally or vertically.**

The image is being displayed with the wrong aspect ratio. Before changing the aspect ratio, ensure you have selected the correct channel for your input device and the horizontal and vertical sizes are correct.



## Menu System Review

### The On Screen Display (OSD)

---

A menu system is provided to access the projector's system and image input settings. In order to access the menu system OSD must be turned 'ON'. If OSD is ON but no menus are displayed press the MENU button on the remote control. The MENU button temporarily removes or replaces the menu display allowing you to exit the menu system and re-enter at the same point. To leave the menu system completely, either press EXIT at the main menu or OSD OFF at any time. When the menu system is re-entered, you will be at the Main Menu. Movement through the menu system is controlled by the cursor and enter buttons on the remote control.

### The Menu System

---

The **MAIN MENU** provides access to the sub-menus which allow you to control the projector and to view any system settings. A brief description of each sub-menu is given below.

**CHANNEL SET UP** - allows you to create NEW channel configurations, SELECT a channel and VIEW, COPY, MODIFY or DELETE that channel.

#### **NEW**

The NEW command allows you to set up a channel for a new input device. Highlight a channel and select NEW, a new channel with the default parameters as specified in the USER PREFERENCES menu will be automatically created. These parameters can then be modified to meet your requirements.

#### **SELECT**

Channel selection can be made in two ways, by simply keying in the channel number on the remote control or by selection in the Channel Set Up screen. To select a channel using the On Screen Display, highlight both the desired channel and SELECT using the cursors then press ENTER.

**VIEW**

The VIEW command will display information about the selected channel, the information cannot be modified in this function. To select a channel, highlight it using the cursors and select VIEW.

**COPY**

The COPY command allows all or just selected parameters from a channel to be copied to another channel. To copy a channel highlight both the desired channel and COPY using the cursors then press ENTER. Next, enter the destination channel and the parameters to be copied.

**MODIFY**

The MODIFY option allows you to change individual channel configurations. As the Size & Position and Computer Mode parameters are defaults when you create a new channel you can re-define them using this option.

**DELETE**

The DELETE command allows to delete any unwanted channels (except the factory defaults). To delete a channel highlight it in the Channel Set Up screen and select DELETE. For safety, you will be asked to confirm the deletion.

**ADD COMPUTER** - allows you to configure the projector to display different computer card outputs. It also allows groups of computer modes to be created and saved under a collective name. Other options include the modification, deletion and copying of computer cards.

**DELETE**

It is possible to delete a single mode contained within a computer card or all modes contained within a card (effectively deleting the complete card). Select the card from the fly-out list in the Add Computer Screen, only computer cards you have created are valid for deletion - factory supplied cards cannot be deleted. Assuming you have selected a valid computer card, selecting DELETE will open the 'Delete Computer' window allowing you to select the appropriate modes.

**MODIFY/CREATE**

If you select an existing computer card it is possible to modify a specific mode for that card. After selecting the mode to be modified from the resolution mode fly-out list you will enter the 'Mode Parameters' window. The computer and mode names will be displayed along with the previously defined parameters.

If you select NEW, the 'Computer Name' window will open asking you to enter the name of the new computer. After entering the name and selecting OK, the mode parameters window will appear to allow you to define its configuration.

**COPY**

The COPY function permits the user to make a copy of an existing computer card with all its associated modes and give it a different name. It is not possible to copy an individual mode, either within a computer card or between cards. To copy a computer card, select it from the fly-out list and press COPY. After naming the new version select OK to execute the copy.

**IMAGE MODE** - allows you to configure the projector for front or rear projection and to define gamma correction for TV or Film inputs.

**USER PREFERENCES** - enable you to define the general defaults to be applied when the projector is turned on.

**TEST PATTERNS** - are used to check the projector's alignment and performance.

**SET ADDRESS** - defines an individual projector's address when using multiple projectors.

**PROJECTOR STATUS** - displays lamp information along with the projectors temperature and memory status. The last four warnings issued are also displayed.

**SERVICE SET UP** - is for qualified technicians only and is password-protected.

