



FortiToken 410 Manager

For FortiToken 410 Token

v1.0

10/07/2025

FortiToken_410_Manager

Table of Contents

Getting Started.....	1
Compatible Security Key.....	1
Enabling & Disabling the HOTP Feature.....	2

Getting Started

FortiToken 410 Manager is a tool used to enable and disable HOTP features on a FortiToken 410 which already has FIDO features implemented. HOTP refers to an event-based one-time password protocol and is an additional feature that can be implemented on a FortiToken 410. This application is only for use with the enabling and disabling of the HOTP feature and will not affect the security key's FIDO features.

No installation process is required for FortiToken 410 Manager. You can run the application directly from the folder in which it's stored.

IMPORTANT: The application must always be run as an administrator to receive full functionality.

Compatible Security Key


Only the FortiToken 410 is compatible with FortiToken 410 Manager.

Enabling & Disabling the HOTP Feature


To enable/disable the HOTP feature on the FortiToken 410, ensure the token is plugged in first. Then, either the “Enable HOTP” or “Disable HOTP” buttons will be clickable, which is based on the follows:

- If the HOTP feature is **enabled**, the “Disable HOTP” button will be clickable.
- If the HOTP feature is **disabled**, the “Enable HOTP” button will be clickable.


FortiToken 410 not inserted UI

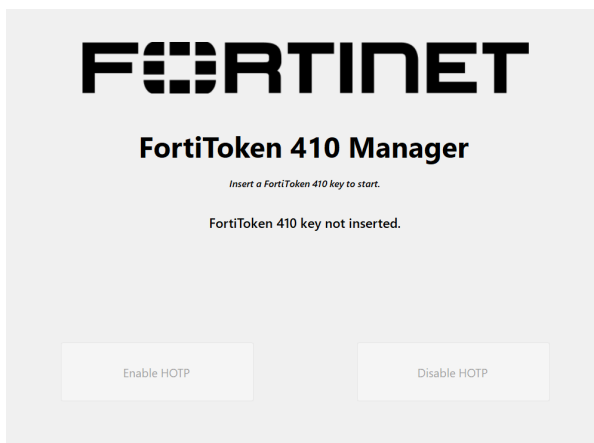

FortiToken 410 inserted UI

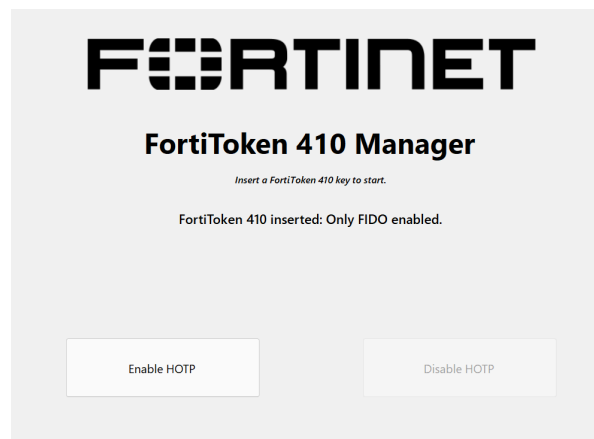


To either enable or disable the HOTP feature on the FortiToken 410, click the button that is not blurred out. You will be given a confirmation message:

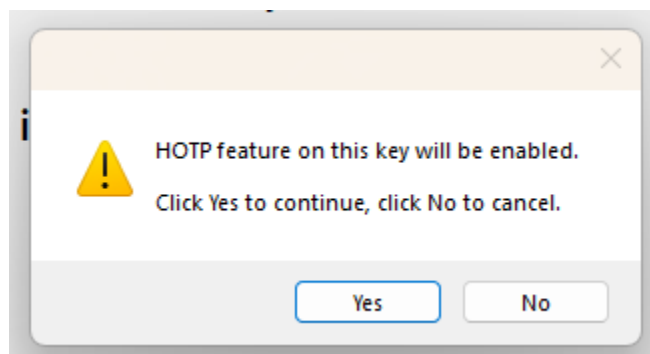


Click “yes” to enable/disable the HOTP feature.

If the operation is successful, you will be shown a success message that reads:

“Enable/Disable HOTP successful”

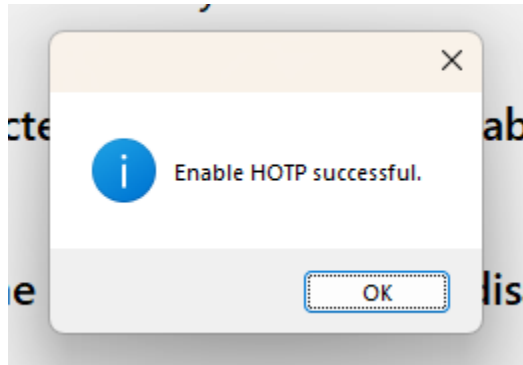

After enabling/disabling the HOTP feature once, you will be shown the following screen:

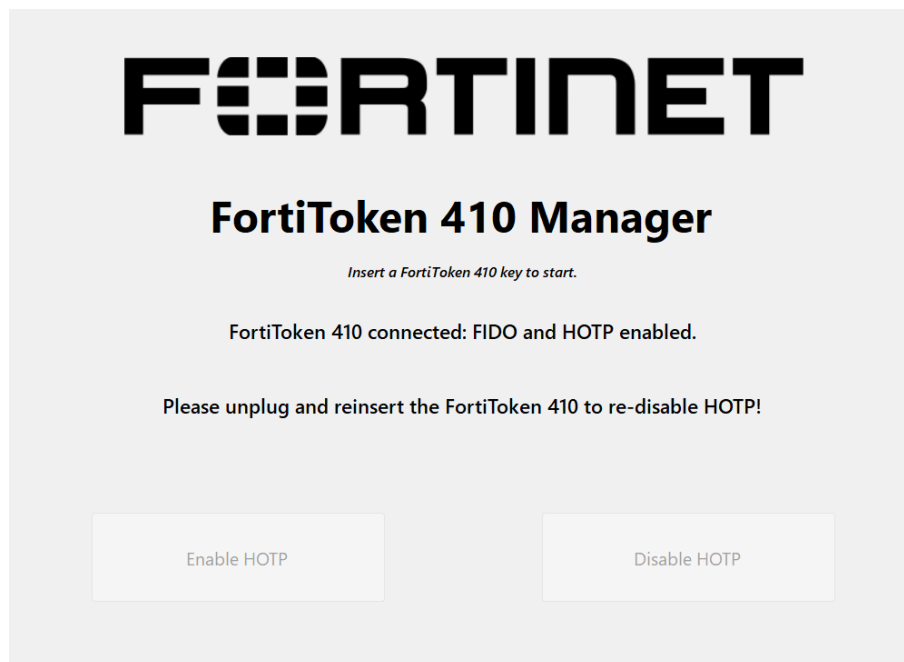

IMPORTANT: After you enable/disable the FortiToken 410, to undo the operation, you will be greeted with a screen below that says:

“Please unplug and reinsert the FortiToken 410 to re-enable/re-disable HOTP!”.

In that case, all you have to do is to unplug and reinsert the FortiToken 410 to change the status of the HOTP again.
