

# Player/configurator: PB22SEXB5

**Description:** Harmony XB5 pushbuttons, 22 mm

**Country:** IND

**Project/software::** ANY

**Language:** EN

**Has following characteristics/criterias:**

- **Characteristic Name: Device presentation**

**Characteristic Values:**

- Basic elements
- Monolithic product
- Basic sub-assemblies
- Complete product

- **Characteristic Name: Type of Operator**

**Characteristic Values:**

- Spring Return
- Latching
- Trigger Action and Mechanical Latching
- Push-push
- Stay Put
- n/a

- **Characteristic Name: Operator Profile**

**Characteristic Values:**

- 2 Flush Push-Buttons
- Flush
- Standard Handle
- Projecting
- Key Switch
- Mushroom Ø 40 mm
- Mushroom Ø 60 mm
- Toggle switch
- Mushroom Ø 30 mm
- 2 Flush Push-Buttons - 1 Central Pilot Light
- Long Handle
- 1 Flush - 1 Projecting Push-Buttons
- Without cap

- 1 Flush - 1 Projecting Push-Buttons - 1 Central Pilot Light
- Recessed
- 54 mm long operating shaft
- n/a
- Knurled Knob
- 2 Flush - 1 Central Projecting STOP Push-Buttons

- **Characteristic Name: [Us] rated supply voltage**

**Characteristic Values:**

- 440...480 V
- 110...230 V
- ≤ 250 V
- 12...24 V
- 220...240 V
- 24...120 V
- 110...120 V
- 120 V
- 440...460 V
- 400 V
- 12 V
- 550...600 V
- 24 V
- 230...240 V
- n/a

- **Characteristic Name: Product or component type**

**Characteristic Values:**

- Illuminated Double-Headed Push-Button
- Selector Switch
- Joystick controller
- Triple-Headed Push-Button
- Illuminated Selector Switch
- Push-Button
- Pilot Light
- General safe stop
- Timer
- Panel Mounted USB Port
- Potentiometer
- Annunciator
- Manual overload reset push-button
- Hour counter
- Emergency Stop Push-Button
- Panel Mounted RJ45 Port
- Illuminated Push-Button
- harsh environment
- n/a
- Double-Headed Push-Button

- **Characteristic Name: Operator Position Information**

**Characteristic Values:**

- 5 positions
- n/a
- 2 Positions 90°
- 3 Positions +/- 45°
- 3 positions

**• Characteristic Name: Connections - terminals****Characteristic Values:**

- Screw clamp terminals
- Faston terminals
- n/a

**• Characteristic Name: Supply circuit type****Characteristic Values:**

- AC
- AC/DC
- n/a
- DC

**• Characteristic Name: Cap/operator or lens colour****Characteristic Values:**

- Green
- Red
- Orange
- Yellow
- Blue
- Clear
- Without
- 5 colours choice
- n/a
- White
- Black
- Grey

**• Characteristic Name: Product compatibility****Characteristic Values:**

- For use with Ø 6 mm shaft
- n/a
- For use with Ø 6.35 mm shaft

**• Characteristic Name: Shape of signaling unit head**

**Characteristic Values:**

- Hemispherical
- Rectangular
- Square
- Round

**• Characteristic Name: Light source colour****Characteristic Values:**

- n/a
- White

**• Characteristic Name: Reset****Characteristic Values:**

- Push-Pull
- Key Release
- Turn to Release
- n/a

**• Characteristic Name: Operators Description****Characteristic Values:**

- Black pushes without cap
- White unmarked - black unmarked
- White "up arrow" - white "down arrow" - red "STOP"
- Green "I" - green "II" - red "STOP"
- Green "up arrow" - green "down arrow" - red "STOP"
- White "up arrow" - black "down arrow"
- Black "up arrow" - black "down arrow" - red "STOP"
- Black "I" - red "O"
- White "I" - black "O"
- Green "I" - red "O"
- n/a
- Green unmarked - red unmarked
- White "+" - white "-"
- White "up arrow" - black "down arrow" - red "STOP"
- White "right arrow" - black "left arrow" - red "STOP"

**• Characteristic Name: Key withdrawal position****Characteristic Values:**

- Left
- Right
- Left and center
- Left and right
- In any position

- Center
- n/a

- **Characteristic Name: ProductSubset**

**Characteristic Values:**

- Pilot light
- Emergency stop pushbutton
- Mushrooms
- Multiple heads
- Selector switch
- Harsh environment
- Help me choose
- Joystick controller
- Specific
- Pushbutton

- **Characteristic Name: Type of keylock**

**Characteristic Values:**

- Ronis 455
- Dom 4A185
- Ronis 458A
- Ronis 3131A
- Ronis 421E
- n/a
- Ronis 520E
- Dom 8D1

- **Characteristic Name: Time delay range**

**Characteristic Values:**

- 3...60 min
- 0.5...10 min
- 0.5...10 s
- n/a
- 3...60 s

- **Characteristic Name: Light source**

**Characteristic Values:**

- Incandescent
- protected led
- Protected LED
- Bulb not included
- n/a

- **Characteristic Name: Ohmic value**

**Characteristic Values:**

- 100000  $\Omega$
- 4700  $\Omega$
- 10000  $\Omega$
- 1000  $\Omega$
- Custom
- n/a

- **Characteristic Name: Marking**

**Characteristic Values:**

- Up Arrow
- Up and down arrows
- Bell symbol
- Down Arrow
- T
- Unmarked
- ARRET
- Light symbol
- R
- I
- STOP
- OFF
- n/a
- II
- O
- START
- ON

- **Characteristic Name: Operator additional information**

**Characteristic Values:**

- With plain lens
- With grooved lens
- White lever
- Red lever
- With illuminated ring
- Coloured boot
- High guard
- For insertion of legend
- Black lever
- None
- Clear boot for insertion of protected legend within head
- Clear boot
- With plain lens, for insertion of legend
- n/a

- **Characteristic Name: Return**

**Characteristic Values:**

- To 0 position
- Right to left
- Left to centre
- Turn to Release
- n/a
- Right to centre
- To centre

- **Characteristic Name: Head type**

**Characteristic Values:**

- Built-in-flush
- Standard

- **Characteristic Name: Contacts type and composition**

**Characteristic Values:**

- 1 NO + 1 NC
- Custom
- 2 NC + 1 NO
- 2 NO + 1 NC
- n/a
- 3 NC
- 2 NC
- 1 NO
- 2 NO
- 1 NC

- **Characteristic Name: Activating distance**

**Characteristic Values:**

- 17...120 mm
- 120...257 mm
- n/a

**Has following core references:**

- **XB5AD41** with description as Selector switch, Harmony XB5, plastic, black, 22mm, 2 positions, spring return right to left, 1NO
- **XB5AT845** with description as Emergency stop switching off, Harmony XB5, plastic, red mushroom 40mm, 22mm trigger latching push pull, 1NO+1NC
- **ZB5AA432** with description as Head for non illuminated push button, Harmony XB5, plastic, flush, red, 22mm, spring return, marked O
- **ZB5AZ102** with description as Single contact block with body fixing collar, Harmony XB5, plastic, screw clamp terminal, 1NC
- **XB5AW33B5** with description as Illuminated push button, Harmony XB5, plastic, green flush, 22mm, universal LED, plain lens, 1NO + 1NC, 24V AC DC
- **ZB5AD4** with description as Head for selector switch, Harmony XB5, plastic, black, 22mm, 2 positions, spring return from right to left

- **ZB5AG2D** with description as Key switch selector head, Harmony XB5, plastic, black, 22mm, key n 8D1, 2 positions, stay put, key withdrawal in any position
- **XB5AK135M5** with description as Illuminated selector switch, Harmony XB5, grey plastic, orange handle, 22mm, universal LED, 3 positions, 1NO + 1NC, 230...240V AC
- **XB5KS2B4** with description as Annunciator, Harmony XB5, Illuminated buzzer, plastic, red, 22mm, continuous or intermittent tone, 24V AC DC
- **XB5AA42** with description as Push button, Harmony XB5, plastic, flush, red, 22mm, spring return, unmarked, 1NC
- **ZB5AL3** with description as Head for non illuminated push button, Harmony XB5, plastic, projecting, green, 22mm, spring return, unmarked
- **ZBE102** with description as Single contact block, Harmony XB4, silver alloy, screw clamp terminal, 1NC
- **ZB5AG214** with description as Head for key selector switch, Harmony XB5, Harmony XALF, black key, 22mm, 2 positions, left key withdrawal, key 520E
- **ZB5AD506** with description as Head for selector switch, Harmony XB5, XB4, blue Ø22 mm 3 position spring return
- **ZB5AL434** with description as Projecting push button head 40mm, Harmony XB5, plastic, red, 22mm, spring return, marked STOP
- **ZB5AA253** with description as black flush pushbutton head Ø22 spring return "light symbol"
- **XB5AW34B5** with description as Illuminated push button, Harmony XB5, plastic, red flush, 22mm, universal LED, plain lens, 1NO + 1NC, 24V AC DC
- **XB5AW31G5** with description as Illuminated push button, Harmony XB5, plastic, flush, white, 22mm, universal LED, plain lens, 1NO + 1NC, 110...120V AC
- **ZB5AR5** with description as Head for non illuminated push button, Harmony XB5, yellow Ø 60 mushroom pushbutton Ø22 mm spring return
- **ZBV5B** with description as Transformer block, Harmony XB4, for light block with integral LED, 400V
- **ZB5AR216** with description as Head for non illuminated push button, Harmony XB5, black mushroom 60mm, 22mm, spring return, unmarked
- **ZB5AD922** with description as Potentiometer head, Harmony XB5, plastic, black, 22mm, for use with 6.35mm shaft
- **ZB5AW13** with description as Head for illuminated push button, Harmony XB5, XB4, green projecting pushbutton Ø22 mm spring return BA9s bulb
- **ZB5AZ103** with description as Single contact block with body fixing collar, Harmony XB5, plastic, screw clamp terminal, 2NO
- **XB5EVG3** with description as Monolithic pilot light, Harmony XB5, grey plastic, green, 22mm, universal LED, plain lens, 110...120V AC
- **ZB5AW7A3741** with description as Illuminated double headed push button head, Harmony XB5, plastic, 22mm, 1 green flush marked I + 1 pilot light + 1 red flush marked O
- **ZB5AG610** with description as Head for key selector switch, Harmony XB5, black key, 22mm, 2 positions, left key withdrawal, spring return, key 458A
- **ZB5AS834** with description as Emergency stop head, Harmony XB5, switching off, plastic, red mushroom 30mm, 22mm, trigger latching turn to release
- **ZB5AA333** with description as Head for non illuminated push button, Harmony XB5, plastic, flush, green, 22mm, spring return, marked START
- **ZB5AK1213** with description as Head for illuminated selector switch, Harmony XB5, dark grey plastic, white handle, 22mm, universal LED, 2 positions
- **ZB5AG4** with description as Head for key selector switch, Harmony XB5, plastic, black, 22mm, key 455, 2 positions, stay put
- **ZB5AV003S** with description as Head for pilot light, Harmony XB5, 5 colours choice, 22mm, with grooved lens, integral LED
- **ZB5AA435** with description as Head for non illuminated push button, Harmony XB5, red flush pushbutton Ø22 mm spring return "OFF"



- **ZB5AA56** with description as Head for non illuminated push button, Harmony XB5, yellow recessed, 22mm, spring return, unmarked
- **ZB5AA0** with description as Head for non illuminated push button, Harmony XB5, plastic, 22mm, spring return, without cap
- **ZB5AP2** with description as Head for non illuminated push button, Harmony XB5, plastic, projecting, black, 22mm, spring return, booted, unmarked
- **ZB5AA79** with description as Head for double headed push button, Harmony XB5, 2 rectangular flush, without cap, 22mm, spring return, unmarked
- **ZB5AA433** with description as Head for non illuminated push button, Harmony XB5, red flush pushbutton Ø22 mm spring return "ARRET"
- **XB5AV5B3** with description as Pilot light, Harmony XB5, green, plastic, 22mm, universal LED, plain lens, 400V
- **ZB5AS944** with description as Emergency stop head, Harmony XB5, switching off, plastic, red mushroom 40mm, 22mm, trigger latching key release
- **XB5AW36G5** with description as Illuminated push button, Harmony XB5, plastic, blue flush, 22mm, universal LED, plain lens, 1NO + 1NC, 110...120V AC
- **ZB5AC38023** with description as Head for push button, Harmony XB5, XB4, pushbutton harsh environment, green, with marking
- **XB5AA86202** with description as Manual overload reset push button, Harmony XB5, plastic, for 120...257mm actuation distance, flush, blue, 22mm, marked R
- **ZB5AD7** with description as Head for selector switch, Harmony XB5, plastic, black, 22mm, 3 positions, spring return from left to center
- **XB5AVM4** with description as Pilot light, Harmony XB5, grey plastic, red, 22mm, universal LED, plain lens, 230...240V AC
- **XD5PA14** with description as Joystick controller, Harmony XB5, 22mm, 4 direction, stay put, 1NO per direction
- **XB5FK123B5** with description as Illuminated selector switch, Harmony XB5, grey plastic, green handle, 30mm, universal LED, 2 positions, 1NO + 1NC, 24V AC DC
- **XB5AA55** with description as Push button, Harmony XB5, yellow flush complete pushbutton  $\tilde{\sim}$ 22 mm spring return 1NO+1NC unmarked
- **ZB5AC34** with description as Head for non illuminated push button, Harmony XB5, green mushroom 30mm, 22mm, spring return, unmarked
- **XB5AG61** with description as Key switch selector, Harmony XB5, plastic, black, 22mm, key 455, 2 positions, spring return right to left, 1NO
- **XB5AL73415** with description as Double headed push button, Harmony XB5, plastic, 22mm, 1 green flush marked I + 1 red projecting marked O, 1NO+1NC
- **ZB5AA341** with description as Head for non illuminated push button, Harmony XB5, green flush, 22mm, spring return, white marked ON
- **XB5AW35G5** with description as Illuminated push button, Harmony XB5, plastic, orange flush, 22mm, universal LED, plain lens, 1NO + 1NC, 110...120V AC
- **ZB5AZ101** with description as Single contact block with body fixing collar, Harmony XB5, plastic, screw clamp terminal, 1NO
- **XB5KSG** with description as Annunciator, Harmony XB5, Complete buzzer, plastic, 22mm, continuous or intermittent tone, 110...120V AC
- **ZB5AA4** with description as Head for non illuminated push button, Harmony XB5, plastic, flush, red, 22mm, spring return, unmarked
- **ZB5AG612** with description as Head for key selector switch, Harmony XB5, plastic, black, 22mm, key 421E, 2 positions, spring return right to left
- **XB5AA31** with description as Push button, Harmony XB5, plastic, flush, green, 22mm, spring return, unmarked, 1NO
- **XB5AA86102** with description as Push button reset for 17...120mm actuation distance, Harmony XB5, plastic, flush, blue, 22mm, marked R
- **XB5AW3445** with description as Illuminated push button, Harmony XB5, plastic, red flush, 22mm, spring return, 1NO + 1NC, 220...240V

- **ZB5AW061** with description as Light block with body fixing collar, Harmony XB5, plastic, blue, for BA9s bulb, lt 250V, 1NO
- **XB5AA4322** with description as Push button, Harmony XB5, plastic, flush, red, 22mm, spring return, marked O, 1NC
- **ZB5AG6** with description as Head for key selector switch, Harmony XB5, plastic, black, 22mm, key 455, 2 positions, spring return right to left
- **ZB5AL4** with description as Head for non illuminated push button, Harmony XB5, plastic, projecting, red, 22mm, spring return, unmarked
- **ZB5AC44** with description as Head for non illuminated push button, Harmony XB5, red mushroom 30mm, 22mm, spring return, unmarked
- **ZB5AC5** with description as Head for non illuminated pushbutton, Harmony XB5, plastic, yellow, mushroom 40mm, 22mm, spring return
- **XB5AA61** with description as Push button, Harmony XB5, plastic, flush, blue, 22mm, spring return, unmarked, 1NO
- **XB5AW31B5** with description as Illuminated push button, Harmony XB5, plastic, white flush, 22mm, universal LED, plain lens, 1NO + 1NC, 24V AC DC
- **ZB5AG210** with description as Head for key selector switch, Harmony XB5, plastic, black, 22mm, key 458A, 2 positions, stay put
- **XB5AA3311** with description as Push button, Harmony XB5, plastic, flush, green, 22mm, spring return, marked I, 1NO
- **XB5AK124B5** with description as Illuminated selector switch, Harmony XB5, grey plastic, red handle, 22mm, 2 positions, universal LED, 1NO + 1NC, 24V AC DC
- **XB5EV57L4** with description as Monolithic pilot light, Harmony XB5, 3 phases Voltage, indicator with 3 LED, white, 400V AC
- **XB5AV44** with description as Pilot light, Harmony XB5, red incandescent, plastic, 22mm, plain lens, BA9s bulb, 220...240V
- **ZB5AG08** with description as Key switch selector head, Harmony XB5, plastic, black, 22mm, key 455, 3 positions, spring return from right to center, key withdrawal left
- **ZB5AD28** with description as Toggle switch head, Harmony XB5, plastic, black, 22mm, 2 positions, stay put
- **ZB5AZ009** with description as Body fixing collar, Harmony XB5, for electrical block, plastic
- **XB5AL84101** with description as Manual overload reset push button, Harmony XB5, red projecting, 22mm, for 17...120 mm actuation distance
- **ZB5AS42** with description as Mushroom push button head 30mm, Harmony XB5, plastic, black, 22mm, latching turn release
- **ZB5AA7340** with description as Head for double headed push button, Harmony XB5, 2 rectangular green/red flush, 22mm, spring return, unmarked
- **ZB5AW0M15** with description as Complete body contact assembly and light block, Harmony XB5, XB4, with body fixing collar, universal LED, 230...240V, 1NO + 1NC
- **ZB5AS934** with description as Emergency stop head, Harmony XB5, switching off, plastic, red mushroom 30mm, 22mm, trigger latching key release
- **ZB5AVG1** with description as Complete body light block assembly, Harmony XB5, plastic, universal LED, screw clamp terminals, 110...120V AC
- **ZB5AD806** with description as Head for selector switch, Harmony XB5, XB4, blue Ø22 mm 3 position spring return
- **ZB5AL5** with description as Head for non illuminated push button, Harmony XB5, yellow projecting, 22mm, spring return, unmarked
- **ZB5AS94410** with description as Head for emergency stop push button, Harmony XB5, switching off, plastic, red mushroom 40mm, 22mm, trigger/latching key release, key 458A
- **XB5AVG4** with description as pilot light, Harmony XB5, grey plastic, red, 22mm, universal LED, plain lens, 110...120V AC
- **ZB5AA5** with description as Head for non illuminated push button, Harmony XB5, plastic, flush, yellow, 22mm, spring return, unmarked

- **ZB5AH2** with description as Head for non illuminated push button, Harmony XB5, black projecting, 22mm, spring return, unmarked
- **XB5AVM6** with description as Pilot light, Harmony XB5, grey plastic, blue, 22mm, universal LED, plain lens, 230...240V AC
- **ZB5AK1513** with description as Head for illuminated selector switch, Harmony XB5, dark grey plastic, white handle, 22mm, universal LED, 3 positions,
- **XB5AK133M5** with description as Illuminated selector switch, Harmony XB5, grey plastic, green handle, 22mm, universal LED, 3 positions, 1NO + 1NC, 230...240V AC
- **ZBE101** with description as Single contact block, Harmony XB4, silver alloy, screw clamp terminal, 1NO
- **ZB5AA26** with description as Head for non illuminated push button, Harmony XB5, black recessed, 22mm, spring return, unmarked
- **XB5EVG1** with description as Monolithic pilot light, Harmony XB5, grey plastic, white, 22mm, universal LED, plain lens, 110...120V AC
- **XB5AV45** with description as Pilot light, Harmony XB5, orange incandescent, plastic, 22mm, plain lens, BA9s bulb, 220...240V
- **ZB5AG412** with description as Head for key selector switch, Harmony XB5, key switch selector head, plastic, black, 22mm, key 421E, 2 positions, stay put
- **ZB5AW7A1721** with description as Illuminated double headed push button head, Harmony XB5, plastic, 22mm, 1 white flush marked I + 1 pilot light + 1 black flush marked O
- **ZB5AVB1** with description as Complete body light block assembly, Harmony XB5, plastic, universal LED, body fixing collar, 24V AC DC
- **ZB5AG3D** with description as Head for key selector switch, Harmony XB5, 22mm 3 positions stay put Dom 8D1, key withdrawal at center position
- **ZB5AA232** with description as Head for non illuminated push button, Harmony XB5, black flush, 22mm, spring return, white marked O
- **XB5PUSB3** with description as Panel mounted USB port, Harmony XB5, 3.0 port, plastic, 22mm, for USB interface jack type A
- **XB5AA45** with description as Push button, Harmony XB5, plastic, flush, red, 22mm, spring return, unmarked, 1NO+1NC
- **ZB5AW0B12** with description as Complete body contact assembly and light block, Harmony XB5, XB4, with body fixing collar, universal LED, 24V 1NC
- **ZB5AG7** with description as Head for key selector switch, Harmony XB5, plastic, black, 22mm, key 455, 3 positions, spring return to center
- **XB5EVG4** with description as Monolithic pilot light, Harmony XB5, grey plastic, red, 22mm, universal LED, plain lens, 110...120V AC
- **XB5EVM5** with description as Monolithic pilot light, Harmony XB5, grey plastic, orange, 22mm, universal LED, plain lens, 230...240V AC
- **XB5AW73731G5** with description as Illuminated double headed push button, Harmony XB5, plastic, 22mm, 1 green flush I + 1 pilot light + 1 red projecting O, 120V AC DC, 1NO + 1NC
- **ZB5AC48021** with description as Head for push button, Harmony XB5, harsh environment, red, 22mm, spring return, marked
- **XD5PA22** with description as Joystick controller, Harmony XB5, 22mm, 2 direction, spring return, 1NO per direction
- **XB5AA831** with description as Manual overload reset push button, Harmony XB5, green flush, 22mm, for 17...120 mm actuation distance
- **XB5DSM** with description as Hour counter, Harmony XB5, plastic, 22mm, mechanical 5 digit display, 230...240V AC
- **ZB5AG6D** with description as Head for key selector switch, Harmony XB5, black key, 22mm, 2 positions, left key withdrawal, spring return, Dom 8D1
- **ZB5AA434** with description as Head for non illuminated push button, Harmony XB5, plastic, flush, red, 22mm, spring return, marked STOP
- **ZB5AJ2** with description as Head for selector switch, Harmony XB5, plastic, black, 22mm, long handle, 2 positions, stay put

- **ZB5APA2** with description as Head for non illuminated push button, Harmony XB5, XB4, black flush pushbutton Ø22 mm spring return unmarked
- **ZB5AS844** with description as Emergency stop head, Harmony XB5, switching off, plastic, red mushroom 40mm, 22mm, trigger and latching turn to release
- **XB5AA51** with description as Push button, Harmony XB5, plastic, flush, yellow, 22mm, spring return, unmarked, 1NO
- **ZB5AW7L3740** with description as Head for illuminated double headed push button, Harmony XB5, 1 green flush/ 1 red projecting, 22mm, unmarked
- **ZB5AG420** with description as Head for key selector switch, Harmony XB5, black key, 22mm, 2 positions, key withdrawal in any position, key 3131A
- **XB5AVM1** with description as Pilot light, Harmony XB5, grey plastic, white, 22mm, universal LED, plain lens, 230...240V AC
- **ZB5AC54** with description as Head for non illuminated push button, Harmony XB5, yellow Ø 30 mushroom pushbutton Ø22 mm spring return
- **XB5EVM8** with description as Monolithic pilot light, Harmony XB5, grey plastic, yellow, 22mm, universal LED, plain lens, 230...240V AC
- **ZB5AP4** with description as Head for non illuminated push button, Harmony XB5, plastic, projecting, red, 22mm, spring return, booted, unmarked
- **ZB4BZ105** with description as Single contact block with body fixing collar, Harmony XB4, metal, screw clamp terminal, 1NO+1NC
- **XB5AJ33** with description as Selector switch, Harmony XB5, plastic, black, 22mm, long handle, 3 positions, stay put, 2 NO
- **ZB5AG03D** with description as Head for key selector switch, Harmony XB5, Ø22 mm 3 position spring return Dom 8D1
- **XB5KS2B8** with description as Annunciator, Harmony XB5, Illuminated buzzer, plastic, yellow, 22mm, continuous or intermittent tone, 24V AC DC
- **XB5AA731327** with description as Triple headed push button, Harmony XB5, plastic, 22mm, marked, 1 green flush I + 1 red projecting STOP + 1 green flush II, 2 NO + 1 NC
- **ZB5AA73134** with description as Head for triple headed push button, Harmony XB5, XB4, green flush/red projecting/green flush pushbutton Ø22 mm with marking
- **XB5AD912R1K** with description as Complete potentiometer, Harmony XB5, plastic, 22mm, 1K
- **ZB5AA650** with description as Head for non illuminated push button, Harmony XB5, plastic, blue flush, 22mm, spring return, white marked up and down arrow
- **XB5KSB** with description as Annunciator, Harmony XB5, Complete buzzer, plastic, 22mm, continuous or intermittent tone, 24V AC DC
- **ZB5AC6** with description as Head for non illuminated pushbutton, Harmony XB5, plastic, blue, mushroom 40mm, 22mm, spring return
- **XB5AVB4** with description as pilot light, Harmony XB5, grey plastic, red, 22mm, universal LED, plain lens, 24V AC DC
- **XB5DTGM5** with description as Panel mounted timer monofunction, Harmony XB5, plastic, 22mm, time delay 3...60min, 100...240V AC DC
- **ZB5AA66** with description as Head for non illuminated push button, Harmony XB5, XB4, blue recessed pushbutton Ø22 mm spring return unmarked
- **ZB5AD2804** with description as Head for selector switch, Harmony XB5, red Ø22 mm 2 position stay put
- **XB5PRJ45** with description as Panel mounted RJ45 port, Harmony XB5, plastic, 22mm, for ethernet interface, RJ45 jack
- **ZB5AC680** with description as Head for push button, Harmony XB5, harsh environment, dark blue, 22mm, spring return, unmarked
- **ZB5AG614** with description as Head for key selector switch, Harmony XB5, black key, 22mm, 2 positions, left key withdrawal, spring return, key 520E
- **ZB5AV03** with description as Head for pilot light, Harmony XB5, metal, green, 22mm, plain lens for BA9s bulb

- **XB5AK123G5** with description as Illuminated selector switch, Harmony XB5, grey plastic, green handle, 22mm, universal LED, 2 positions, 1NO + 1NC, 110...120V AC
- **ZB5AC180** with description as Head for push button, Harmony XB5, XB4, pushbutton harsh environment, white, without marking
- **ZB5AD912** with description as Potentiometer head, Harmony XB5, plastic, black, 22mm, for use with 6mm shaft
- **ZB5AW513** with description as Head for illuminated push button, Harmony XB5, white flush, 22mm, universal LED, spring return, clear boot, unmarked
- **XB5AP31** with description as Push button, Harmony XB5, plastic, projecting, green, 22mm, spring return, booted, unmarked, 1NO
- **ZB5AP6S** with description as Head for non illuminated push button, Harmony XB5, XB4, blue flush pushbutton Ø22 mm spring return unmarked
- **XB5AVG1** with description as pilot light, Harmony XB5, grey plastic, white, 22mm, universal LED, plain lens, 110...120V AC
- **XB5AVM3** with description as Pilot light, Harmony XB5, grey plastic, green, 22mm, universal LED, plain lens, 230...240V AC
- **ZBVB1** with description as Light block, Harmony XB4 XB5, white, for head 22mm, universal LED, screw clamp terminals, 24V AC DC
- **ZB5AJ5** with description as Head for selector switch, Harmony XB5, plastic, black, 22mm, long handle, 3 positions, spring return to center
- **XB5DTB23** with description as Panel mounted timer monofunction, Harmony XB5, plastic, 22mm, time delay 3...60s, 24V DC
- **XB5AJ21** with description as Selector switch, Harmony XB5, plastic, black, 22mm, long handle, 2 positions, stay put, 1NO
- **XB5DTGM2** with description as Panel mounted timer monofunction, Harmony XB5, plastic, 22mm, time delay 0.5...10s, 100...240V AC DC
- **XB5AA861** with description as Manual overload reset push button, Harmony XB5, blue flush, 22mm, for 17...120 mm actuation distance
- **XB5AP51** with description as Push button, Harmony XB5, plastic, projecting, yellow, 22mm, spring return, booted, unmarked, 1NO
- **XB5AV61** with description as Pilot light, Harmony XB5, white, plastic, 22mm, plain lens, BA9s bulb, 250V
- **ZB5AS94412** with description as Head for emergency stop push button, Harmony XB5, switching off, plastic, red mushroom 40mm, 22mm, trigger/latching key release, key 421E
- **XB5AVG5** with description as pilot light, Harmony XB5, grey plastic, orange, 22mm, universal LED, plain lens, 110...120V AC
- **ZB5AW7A3740** with description as Illuminated double headed push button head, Harmony XB5, plastic, 22mm, 1 green flush + 1 pilot light + 1 red flush, unmarked
- **ZB5AP38** with description as Head for non illuminated push button, Harmony XB5, XB4, green flush pushbutton Ø22 mm spring return unmarked
- **XB5AW34M5** with description as Illuminated push button, Harmony XB5, plastic, red flush, 22mm, universal LED, plain lens, 1NO + 1NC, 230...240V AC
- **ZB5AL7341** with description as Head for double headed push button, Harmony XB5, plastic, 22mm, 1 green flush marked I + 1 red projecting marked O
- **ZB5AK1813** with description as Head for illuminated selector switch, Harmony XB5, dark grey plastic, white handle, 22mm, universal LED, 3 positions, right to center
- **XB5AK135B5** with description as Illuminated selector switch, Harmony XB5, grey plastic, orange handle, 22mm, universal LED, 3 positions, 1NO + 1NC, 24V AC DC
- **ZB5AA6** with description as Head for non illuminated push button, Harmony XB5, plastic, flush, blue, 22mm, spring return, unmarked
- **ZB5AA7341** with description as Head for double headed push button, Harmony XB5, plastic, 22mm, 1 green flush marked I + 1 red flush marked O
- **ZB5AV04** with description as Head for pilot light, Harmony XB5, metal, red, 22mm, plain lens for BA9s bulb

- **ZB5AA791** with description as Head for triple headed push button, Harmony XB5, 2 flush without cap, 1 red projecting, 22mm, marked STOP
- **XB5AW3365** with description as Illuminated push button, Harmony XB5, plastic, flush, green, 22mm, plain lens for BA9s bulb, spring return, lower than 250V, 1NO + 1NC
- **ZBVBG1** with description as Light block, Harmony XB4, Harmony XB5, for head 22mm, universal LED, screw clamp terminals, 24...120V AC DC
- **ZB5AA334** with description as Head for non illuminated push button, Harmony XB5, plastic, flush, white, 22mm, spring return, marked UP ARROW
- **ZB5AW34** with description as Head for illuminated push button, Harmony XB5, plastic, flush, red, 22mm, spring return, plain lens for BA9s bulb
- **ZB5AV3** with description as Light block with body fixing collar, Harmony XB5, plastic, with BA9s bulb, 110...120V AC
- **ZB5AL432** with description as Projecting push button head 40mm, Harmony XB5, plastic, red, 22mm, spring return, marked O
- **XD5PA12** with description as Joystick controller, Harmony XB5, 22mm, 2 direction, stay put, 1NO per direction
- **XB5AVB5** with description as pilot light, Harmony XB5, grey plastic, orange, 22mm, universal LED, plain lens, 24V AC DC
- **XB5AG21** with description as Key switch selector, Harmony XB5, plastic, black, 22mm, key 455, 2 positions, stay put, 1 NO
- **ZB5AS94414** with description as red Ø40 Emergency stop, switching off head Ø22 trigger and latching key release
- **XB5AK125B5** with description as Illuminated selector switch, Harmony XB5, grey plastic, orange handle, 22mm, universal LED, 2 positions, 1NO + 1NC, 24V AC DC
- **XB5EVB3** with description as Monolithic pilot light, Harmony XB5, grey plastic, green, 22mm, universal LED, plain lens, 24V AC DC
- **ZB5AS52** with description as Mushroom push button head 40mm, Harmony XB5, plastic, black, 22mm, latching turn release
- **ZB5AVBG1** with description as Complete body light block assembly, Harmony XB5, plastic, universal LED, body fixing collar, 24...120V AC DC
- **XB5AW31M5** with description as Illuminated push button, Harmony XB5, plastic, white flush, 22mm, universal LED, plain lens, 1NO + 1NC, 230...240V AC
- **ZB5AV04S** with description as Head for pilot light, Harmony XB5, red Ø22 mm grooved lens ba9s bulb
- **ZB5AW7A9** with description as Head for illuminated double headed push button, Harmony XB5, 2 flush whitout cap, 22mm, 1 central pilot light, unmarked
- **ZB5AA72124** with description as Head for triple headed push button, Harmony XB5, black flush/red projecting/black flush pushbutton Ø22 mm with marking
- **XB5AD912R100K** with description as Complete potentiometer, Harmony XB5, plastic, 22mm, 100K
- **XB5EVM1** with description as Monolithic pilot light, Harmony XB5, grey plastic, white, 22mm, universal LED, plain lens, 230...240V AC
- **ZB5AT5** with description as Head for non illuminated push button, Harmony XB5, yellow mushroom 40mm, 22mm, latching, push-pull to release, unmarked
- **ZB5AL232** with description as Head for non illuminated push button, Harmony XB5, black projecting, 22mm, spring return, white marked O
- **XB5AVB6** with description as pilot light, Harmony XB5, grey plastic, blue, 22mm, universal LED, plain lens, 24V AC DC
- **ZB5AV05** with description as Head for pilot light, Harmony XB5, metal, orange, 22mm, plain lens for BA9s bulb
- **ZB5AA24** with description as Head for non illuminated push button, Harmony XB5, XB4, black flush pushbutton Ø22 mm spring return unmarked
- **ZB5CV013** with description as Head for pilot light, Harmony XB5, square white, 22mm, with plain lens, universal LED

- **XB5AVB3** with description as pilot light, Harmony XB5, grey plastic, green, 22mm, universal LED, plain lens, 24V AC DC
- **ZB5AV5** with description as Complete body/light block assembly, Harmony XB5, XB4, light, with body/fixing collar, BA9s, incandescent bulb, 400V AC
- **ZB5AW35** with description as Head for illuminated push button, Harmony XB5, XB4, orange flush pushbutton Ø22 mm spring return BA9s bulb
- **XB5AV5B1** with description as Pilot light, Harmony XB5, grey plastic, white, 22mm, universal LED, plain lens, 400V AC
- **ZB5AZ104** with description as Single contact block with body fixing collar, Harmony XB5, plastic, screw clamp terminal, 2NC
- **ZB5CH313** with description as Head for illuminated push button, Harmony XB5, square white flush, 22mm, universal LED, push to release, unmarked
- **XB5AW33M5** with description as Illuminated push button, Harmony XB5, plastic, green flush, 22mm, universal LED, plain lens, 1NO + 1NC, 230...240V AC
- **ZB5AS62** with description as Head for non illuminated push button, Harmony XB5, black mushroom 60mm, 22mm, latching, turn to release, unmarked
- **ZB5AG02** with description as Head for key switch selector, Harmony XB5, plastic, black, 22mm, key 455, 2 positions, stay put
- **ZB5AV013E** with description as Head for pilot light, Harmony XB5, white, 22mm, with plain lens, universal LED
- **XB5AA25** with description as Push button, Harmony XB5, plastic, flush, black, 22mm, spring return, unmarked, 1NO+1NC
- **ZB5AH06** with description as Head for non illuminated push button, Harmony XB5, XB4, blue flush pushbutton Ø22 mm unmarked
- **ZB5AA331** with description as Head for non illuminated push button, Harmony XB5, plastic, flush, green, 22mm, spring return, marked I
- **XB5DTB25** with description as Panel mounted timer monofunction, Harmony XB5, plastic, 22mm, time delay 3...60min, 24V DC
- **ZB5AG710** with description as Head for key selector switch, Harmony XB5, XB4, Ø22 mm 3 position spring return 458 A
- **ZB5AH05** with description as Head for non illuminated push button, Harmony XB5, yellow flush, 22mm, spring return, unmarked
- **ZB5AD2801** with description as Head for selector switch, Harmony XB5, black toggle switch, white lever, 22mm, 2 positions, stay put
- **ZB5AD39** with description as Head for selector switch, Harmony XB5, black knurled knob, 22mm, 3 positions, stay put
- **XB5AW73731M5** with description as Illuminated double headed push button, Harmony XB5, plastic, 22mm, 1 green flush I + 1 pilot light + 1 red projecting O, 240V AC DC, 1NO + 1NC
- **ZB5AG0814** with description as Head for key selector switch, Harmony XB5, XB4, Ø22 mm 3 position spring return 520E
- **ZB5AA7121** with description as Head for double headed push button, Harmony XB5, plastic, 22mm, 1 white flush marked I + 1 black flush marked O
- **ZB5AK1413** with description as Head for illuminated selector switch, Harmony XB5, universal LED, white handle, 22mm, 2 positions, spring return
- **ZB5AJ7** with description as Head for selector switch, Harmony XB5, XALF, XB4, black Ø22 mm 3 position spring return
- **XB5AW35B5** with description as Illuminated push button, Harmony XB5, plastic, orange flush, 22mm, universal LED, plain lens, 1NO + 1NC, 24V AC DC
- **XB5AD912R4K7** with description as Complete potentiometer, Harmony XB5, plastic, 22mm, 4K7
- **ZBVG1** with description as Light block, Harmony XB4, Harmony XB5, for head 22mm, universal LED, screw clamp terminals, 110...120V AC
- **ZB5AS55** with description as Mushroom push button head 40mm, Harmony XB5, plastic, yellow, 22mm, latching turn release

- **ZBV6** with description as Light block for head 22mm, Harmony XB4, for BA9s bulb, It 250V, screw clamp terminal
- **XB5AS8442** with description as Emergency stop switching off, Harmony XB5, plastic, red mushroom 40mm, 22mm, trigger latching turn to release, 1NC
- **XB5AC21** with description as Push button, Harmony XB5, plastic, black mushroom 40mm, 22mm, spring return, unmarked, 1NO
- **ZB5AG212** with description as Head for key selector switch, Harmony XB5, Harmony XALF, key switch selector head, plastic, black, 22mm, key 421E, 2 positions, stay put
- **ZBV8B** with description as Transformer block, Harmony XB4, for light with integral LED, 24V AC, 440...460V 60Hz
- **ZB5AW0B11** with description as Complete body contact assembly and light block, Harmony XB5, plastic, universal LED, body fixing collar, 1NO, 24V AC DC
- **XB5AVM5** with description as Pilot light, Harmony XB5, grey plastic, orange, 22mm, universal LED, plain lens, 230...240V AC
- **XB5AS8445** with description as Emergency stop switching off, Harmony XB5, plastic, red mushroom 40mm, 22mm, trigger latching turn to release, 1NO+1NC
- **ZB5AV6** with description as Light block with body fixing collar, Harmony XB5, plastic, for BA9s bulb, It 250V
- **ZB5AG5** with description as Head for key selector switch, Harmony XB5, Harmony XB4, 22mm 3 positions stay put key 455
- **ZB5AD2** with description as Head for selector switch, Harmony XB5, plastic, black, 22mm, 2 positions, stay put
- **ZB5AD501** with description as Head for selector switch, Harmony XB5, white Ø22 mm 3 position spring return
- **ZB5AG220** with description as Head for key selector switch, Harmony XALF, Harmony XB5, 22mm, 2 positions, stay put, key 3131A
- **ZB5AT2** with description as Head for non illuminated pushbutton, Harmony XB5, plastic, black, mushroom 40mm, 22mm, latching push pull
- **ZB5AW7A1724** with description as Head for illuminated double headed push button, Harmony XB5, 2 white black flush, 22mm, 1 central pilot light, marked up down arrow
- **XB5AJ53** with description as Selector switch, Harmony XB5, plastic, black, 22mm, long handle, 3 positions, spring return to center, 2 NO
- **XB5AA65** with description as Push button, Harmony XB5, blue flush complete pushbutton Å~22 mm spring return 1NO+1NC unmarked
- **XB5EVB6** with description as Monolithic pilot light, Harmony XB5, grey plastic, blue, 22mm, universal LED, plain lens, 24V AC DC
- **XB5AK134B5** with description as Illuminated selector switch, Harmony XB5, grey plastic, red handle, 22mm, 3 positions, universal LED, 1NO + 1NC, 24V AC DC
- **XB5KS2M4** with description as Annunciator, Harmony XB5, Illuminated buzzer, plastic, red, 22mm, continuous or intermittent tone, 230...240V AC
- **XB5AG41** with description as Key switch selector, Harmony XB5, plastic, black, 22mm, key 455, 2 positions, stay put, 1 NO
- **ZB5AW0B13** with description as Complete body contact assembly and light block, Harmony XB5, plastic, universal LED, body fixing collar, 2NO, 24V AC DC
- **ZB5CW313** with description as Head for illuminated push button, Harmony XB5, plastic, white square flush, 22mm, universal LED, for insertion of legend
- **XB5EVB5** with description as Monolithic pilot light, Harmony XB5, grey plastic, orange, 22mm, universal LED, plain lens, 24V AC DC
- **ZB5APA3** with description as Head for non illuminated push button, Harmony XB5, XB4, green flush pushbutton Ø22 mm spring return unmarked
- **XB5AD25** with description as Selector switch, Harmony XB5, plastic, black, 22mm, 2 positions, stay put, 1NO+1NC
- **ZB5AH0183** with description as Head for illuminated push button, Harmony XB5, round white flush, 22mm, integral LED, push to release, unmarked



- **ZB5APA1** with description as Head for non illuminated push button, Harmony XB5, XB4, white flush pushbutton Ø22 mm spring return unmarked
- **ZB5AD301** with description as Head for selector switch, Harmony XB5, XB4, white Ø22 mm 3 position stay put
- **ZB5AV013** with description as Head for pilot light, Harmony XB5, plastic, white, 22mm, universal LED, plain lens
- **ZB5AD59** with description as Head for selector switch, Harmony XB5, black Ø22 mm 3 position spring return
- **ZB5AJ8** with description as Head for selector switch, Harmony XB5, XALF, XB4, black Ø22 mm 3 position spring return
- **XB5AW33G5** with description as Illuminated push button, Harmony XB5, plastic, flush, green, 22mm, universal LED, plain lens, 1NO + 1NC, 110...120V AC
- **ZB5AG0D** with description as Head for key selector switch, Harmony XB5, 22mm 3 positions stay put Dom 8D1, key withdrawal in any position
- **ZB5AG1** with description as Head for key selector switch, Harmony XB5, plastic, black, 22mm, key 455, 3 positions, spring return from left to center
- **ZB5AW313S** with description as Head for illuminated push button, Harmony XB5, white flush, 22mm, universal LED, spring return, grooved lens, unmarked
- **XB5AD33** with description as Selector switch, Harmony XB5, plastic, black, 22mm, 3 positions, stay put, 2 NO
- **ZB5AA36** with description as Head for non illuminated push button, Harmony XB5, green recessed, 22mm, spring return, unmarked
- **ZB5AG9** with description as Head for key selector switch, Harmony XB5, plastic, black, 22mm, key 455, 3 positions, stay put
- **XB5EVM3** with description as Monolithic pilot light, Harmony XB5, grey plastic, green, 22mm, universal LED, plain lens, 230...240V AC
- **ZB5AP3** with description as Head for non illuminated push button, Harmony XB5, plastic, projecting, green, 22mm, spring return, booted, unmarked
- **ZB5AC24** with description as Head for non illuminated pushbutton, Harmony XB5, plastic, black, mushroom 30mm, 22mm, spring return
- **ZB5AK1313** with description as Head for illuminated selector switch, Harmony XB5, grey plastic, white handle, 22mm, universal LED, 3 positions, stay put
- **ZB5APA4** with description as Head for non illuminated push button, Harmony XB5, red flush push button 22mm spring return unmarked
- **ZB5AA71123** with description as Head for triple headed push button, Harmony XB5, 1 white flush, 1 red projecting, 1 black flush, 22mm, marked
- **ZB5AZ105** with description as Single contact block with body fixing collar, Harmony XB5, plastic, screw clamp terminal, 1NO+1NC
- **XB5AA801** with description as Manual overload reset push button, Harmony XB5, pushbutton Ø22 mm for 17...120 mm actuation distance
- **XB5AA11** with description as Push button, Harmony XB5, plastic, flush, white, 22mm, spring return, unmarked, 1NO
- **ZB5AR2** with description as Head for non illuminated pushbutton, Harmony XB5, plastic, black, mushroom 60mm, 22mm, spring return
- **XB5AW3345** with description as Illuminated push button, Harmony XB5, plastic, flush, green, 22mm, plain lens for BA9s bulb, spring return, 220 to 240V AC, 1 NO + 1 NC
- **ZB5AW913** with description as Head for illuminated push button, Harmony XB5, white flush, 22mm, universal LED, spring return, illuminated ring
- **XB5AW35M5** with description as Illuminated push button, Harmony XB5, plastic, orange flush, 22mm, universal LED, plain lens, 1NO + 1NC, 230...240V AC
- **ZB5AK1713** with description as Head for illuminated selector switch, Harmony XB5, dark grey plastic, white handle, 22mm, universal LED, 3 positions, left to center
- **XB5EVB8** with description as Pilot light, Harmony XB5, grey plastic, yellow, 22mm, universal LED, plain lens, 24V AC DC

- **ZB5AC380** with description as Head for push button, Harmony XB5, harsh environment, green, 22mm, spring return, unmarked
- **XB5EVG8** with description as Pilot light, Harmony XB5, grey plastic, yellow, 22mm, universal LED, plain lens, 110...120V AC
- **ZB5AA335** with description as Head for non illuminated push button, Harmony XB5, plastic, flush, black, 22mm, spring return, marked DOWN ARROW
- **XB5AV5B4** with description as Pilot light, Harmony XB5, red, plastic, 22mm, universal LED, plain lens, 400V
- **ZB5AS944D** with description as Head for emergency stop push button, Harmony XB5, switching off, plastic, red mushroom 40mm, 22mm, trigger/latching key release, Dom 4A185
- **ZB5AG2** with description as head for key selector switch, Harmony XB5, plastic, black, 22mm, key 455, 2 positions, stay put
- **XB5EVB1** with description as Monolithic pilot light, Harmony XB5, grey plastic, white, 22mm, universal LED, plain lens, 24V AC DC
- **ZB5AA14** with description as Head for non illuminated push button, Harmony XB5, XB4, white flush pushbutton Ø22 mm spring return unmarked
- **ZB5AD203** with description as Head for selector switch, Harmony XB5, green handle, 22mm, 2 positions, stay put
- **ZB5AG02D** with description as Head for key selector switch, Harmony XB5, plastic, black, 22mm, key 8D1, 2 positions, stay put
- **ZB5AA18** with description as Head for illuminated push button, Harmony XB5, plastic, white flush, 22mm, universal LED, for insetion of legend
- **ZB5AG8** with description as Head for key selector switch, Harmony XB5, black key, 22mm, 3 positions, center key withdrawal, spring return, key 455
- **ZB5AA71114** with description as Head for triple headed push button, Harmony XB5, XB4, white flush/red projecting/white flush pushbutton Ø22 mm with marking
- **ZB5AD206** with description as Head for selector switch, Harmony XB5, XB4, blue Ø22 mm 2 position stay put
- **ZB5AS12** with description as Head for non illuminated push button, Harmony XB5, black Ø 40 mushroom pushbutton Ø22 mm latching key release
- **ZB5AV01** with description as Head for pilot light, Harmony XB5, metal, white, 22mm, plain lens for BA9s bulb
- **XB5DTGM3** with description as Panel mounted timer monofunction, Harmony XB5, plastic, 22mm, time delay 3...60s, 100...240V AC DC
- **ZB5AW7A1720** with description as Head for illuminated double headed push button, Harmony XB5, 2 white/black flush, 22mm, 1 central pilot light, unmarked
- **ZB5AVM1** with description as Complete body light block assembly, Harmony XB5, plastic, universal LED, body fixing collar, 230...240V AC
- **XB5EVM6** with description as Monolithic pilot light, Harmony XB5, grey plastic, blue, 22mm, universal LED, plain lens, 230...240V AC
- **ZB5AH02** with description as Head for non illuminated push button, Harmony XB5, black flush, 22mm, spring return, unmarked
- **ZB5AL2** with description as Head for non illuminated push button, Harmony XB5, plastic, projecting, black, 22mm, spring return, unmarked
- **XB5AS8444** with description as Emergency stop switching off, Harmony XB5, plastic, red mushroom 40mm, 22mm, trigger latching turn to release, 2NC
- **ZB5AD303** with description as Head for selector switch, Harmony XB5, green Ø22 mm 3 position stay put
- **XB5AS9445** with description as Emergency stop switching off, Harmony XB5, plastic, red mushroom 40mm, 22mm trigger latching key release, 1NO+1NC
- **XB5AA3351** with description as Push button, Harmony XB5, plastic, flush, black, 22mm, spring return, marked DOWN ARROW, 1NO
- **ZB5AG0** with description as Head for key switch selector, Harmony XB5, plastic, black, 22mm, key 455, 3 positions, stay put

- **ZB5AW0B15** with description as Complete body contact assembly and light block, Harmony XB5, plastic, universal LED, body fixing collar, 1NO + 1NC, 24V AC DC
- **XB5DTGM4** with description as Panel mounted timer monofunction, Harmony XB5, plastic, 22mm, time delay 0.5...10min, 100...240V AC DC
- **ZB5AW7L3741** with description as Illuminated double headed push button head, Harmony XB5, plastic, 22mm, 1 green flush I + 1 pilot light + 1 red projecting O
- **XB5AD912R10K** with description as Complete potentiometer, Harmony XB5, plastic, 22mm, 10K
- **ZB5AW7A1715** with description as Head for illuminated double headed push button, Harmony XB5, 2 white flush, 22mm, black marked + and -
- **XB5DTB22** with description as Panel mounted timer monofunction, Harmony XB5, plastic, 22mm, time delay 0.5...10s, 24V DC
- **XB5AV65** with description as Pilot light, Harmony XB5, plastic, orange, 22mm, plain lens for BA9s bulb, It 250V
- **ZB5AS864** with description as Emergency stop head, Harmony XB5, switching off, plastic, red mushroom 60mm, 22mm, trigger latching turn to release
- **XB5AL42** with description as Push button, Harmony XB5, plastic, projecting, red, 22mm, spring return, unmarked, 1NC
- **XB5AA3341** with description as Push button, Harmony XB5, plastic, flush, white, 22mm, spring return, marked UP ARROW, 1NO
- **XB5AVB1** with description as pilot light, Harmony XB5, grey plastic, white, 22mm, universal LED, plain lens, 24V AC DC
- **ZB5AA245** with description as Head for non illuminated push button, Harmony XB5, XB4, black flush pushbutton Ø22 mm spring return "T"
- **XB5DSB** with description as Hour counter, Harmony XB5, plastic, 22mm, mechanical 5 digit display, 12...24V AC DC
- **XB5AA84101** with description as Manual overload reset push button, Harmony XB5, red flush pushbutton Ø22 mm marked O for 17...120 mm actuation distance
- **XB5AG33** with description as Key switch selector, Harmony XB5, plastic, black, 22mm, key 455, 3 positions, stay put, 2 NO
- **XB5AVG3** with description as pilot light, Harmony XB5, grey plastic, green, 22mm, universal LED, plain lens, 110...120V AC
- **XB5AP42** with description as Push button, Harmony XB5, plastic, projecting, red, 22mm, spring return, booted, unmarked, 1NC
- **XB5AW34G5** with description as Illuminated push button, Harmony XB5, plastic, red flush, 22mm, universal LED, plain lens, 1NO + 1NC, 110...120V AC
- **ZB5AD503** with description as Head for selector switch, Harmony XB5, XB4, green Ø22 mm 3 position spring return
- **ZB5AA145** with description as Head for non illuminated push button, Harmony XB5, plastic, flush, white, 22mm, spring return, marked T
- **XB5AV64** with description as Pilot light, Harmony XB5, plastic, red, 22mm, plain lens for BA9s bulb, It 250V
- **ZB5AA3** with description as Head for non illuminated push button, Harmony XB5, plastic, flush, green, 22mm, spring return, unmarked
- **ZB5AA551** with description as Head for non illuminated push button, Harmony XB5, plastic, yellow flush, 22mm, spring return, black marked bell symbol
- **XB5AW36B5** with description as Illuminated push button, Harmony XB5, plastic, blue flush, 22mm, universal LED, plain lens, 1NO + 1NC, 24V AC DC
- **XB5AA35** with description as Push button, Harmony XB5, plastic, flush, green, 22mm, spring return, unmarked, 1NO+1NC
- **ZB5AC480** with description as Head for push button, Harmony XB5, harsh environment, red, 22mm, spring return, unmarked
- **ZB5AH04** with description as Head for non illuminated push button, Harmony XB5, plastic, flush, red, 22mm, push push, unmarked

- **ZB5AA234** with description as Head for non illuminated push button, Harmony XB5, black flush, 22mm, spring return, white marked STOP
- **ZB5AF** with description as Head for non illuminated push button, Harmony XB5, knurled pushbutton Ø22 mm turn release without cap
- **ZB5AA336** with description as Head for non illuminated push button, Harmony XB5, green flush, 22mm, spring return, white marked II
- **XD5PA24** with description as Joystick controller, Harmony XB5, 22mm, 4 direction, spring return, 1NO per direction
- **ZB5AD5** with description as Head for selector switch, Harmony XB5, plastic, black, 22mm, 3 positions, spring return to center
- **ZB5AW313** with description as Head for illuminated push button, Harmony XB5, plastic, white flush, 22mm, universal LED, spring return, plain lens
- **XB5DTB24** with description as Panel mounted timer monofunction, Harmony XB5, plastic, 22mm, time delay 0.5...10min, 24V DC
- **XB5AG03** with description as Key switch selector, Harmony XB5, plastic, black, 22mm, key 455, 3 positions, stay put, 2 NO
- **XB5AK123B5** with description as Illuminated selector switch, Harmony XB5, dark grey plastic, green handle, 22mm, universal LED, 2 positions, 1NO + 1NC, 24V AC DC
- **ZB5AJ3** with description as Head for selector switch, Harmony XB5, plastic, black, 22mm, long handle, 3 positions, stay put
- **ZB5AC580** with description as Head for push button, Harmony XB5, XB4, pushbutton harsh environment, yellow, without marking
- **ZB5AW0G11** with description as Complete body/contact assembly and light block, Harmony XB5, XB4, with body/fixing collar, universal LED, 110...120V, 1NO
- **XB5AA841** with description as Manual overload reset push button, Harmony XB5, red flush, 22mm, for 17...120 mm actuation distance
- **ZB5AG4D** with description as Head for key selector switch, Harmony XB5, plastic, black, 22mm, key 8D1, 2 positions, stay put, key withdrawal left
- **ZB5AV05S** with description as Head for pilot light, Harmony XB5, orange Ø22 mm grooved lens ba9s bulb
- **ZB5AC280** with description as Head for push button, Harmony XB5, harsh environment, black, 22mm, spring return, unmarked
- **ZB5AA1** with description as Head for non illuminated push button, Harmony XB5, plastic, flush, white, 22mm, spring return, unmarked
- **XB5AA21** with description as Push button, Harmony XB5, plastic, flush, black, 22mm, spring return, unmarked, 1NO
- **XB5AV43** with description as Pilot light, Harmony XB5, green incandescent, plastic, 22mm, plain lens, BA9s bulb, 220...240V
- **ZB5AC2** with description as Head for non illuminated pushbutton, Harmony XB5, plastic, black, mushroom 40mm, 22mm, spring return
- **ZB5AD8** with description as Head for selector switch, Harmony XB5, plastic, black, 22mm, 3 positions, spring return from right to center
- **ZB5AVJ1** with description as Complete body light block assembly, Harmony XB5, XB4, with body fixing collar, universal LED, 12V AC
- **XB5AS9442** with description as Emergency stop switching off, Harmony XB5, plastic, red mushroom 40mm, 22mm trigger latching key release, 1NC
- **ZB5AD3** with description as Head for selector switch, Harmony XB5, plastic, black, 22mm, 3 positions, stay put
- **XB5FW36B5** with description as Illuminated push button, Harmony XB5, antimicrobial, plastic, blue, 30mm, universal LED, 1NO + 1NC, 24V AC DC
- **ZB5AW14** with description as Head for illuminated push button, Harmony XB5, red projecting, 22mm, BA9s bulb, spring return, unmarked
- **ZB5AS842Y** with description as Head, Harmony XB5, black mushroom 30mm, 22mm, trigger and latching, turn to release, unmarked

- **XB5AA15** with description as Push button, Harmony XB5, white flush, plastic, 22mm, spring return, 1NO + 1NC, unmarked
- **ZB5AT84** with description as Emergency stop head, Harmony XB5, switching off, plastic, red, mushroom 40mm, 22mm, trigger latching push pull
- **ZB5AW15** with description as Head for illuminated push button, Harmony XB5, XB4, orange projecting pushbutton Ø22 mm spring return BA9s bulb
- **XB5AD21** with description as Selector switch, Harmony XB5, plastic black, 22mm, 2 positions, stay put, 1NO
- **ZB5CV003** with description as Head for pilot light, Harmony XB5, plastic, 5 square colour, 22mm, universal LED, plain lens
- **ZB5AA2** with description as Head for non illuminated push button, Harmony XB5, plastic, flush, black, 22mm, spring return, unmarked
- **XB5AK133B5** with description as Illuminated selector switch, Harmony XB5, grey plastic, green handle, 22mm, 3 positions, universal LED, 1NO + 1NC, 24V AC DC
- **ZB5AC4** with description as Head for non illuminated pushbutton, Harmony XB5, plastic, red, mushroom 40mm, 22mm, spring return
- **ZB5AX84** with description as Emergency stop head, Harmony XB5, switching off, plastic, red mushroom 60mm, 22mm, trigger latching push pull
- **ZB5AC64** with description as Head for non illuminated push button, Harmony XB5, blue Ø 30 mushroom pushbutton Ø22 mm spring return
- **XB5AT842** with description as Emergency stop switching off, Harmony XB5, plastic, red mushroom 40mm, 22mm trigger latching push pull, 1NC
- **XB5KSM** with description as Annunciator, Harmony XB5, Complete buzzer, plastic, 22mm, continuous or intermittent tone, 230...240V AC
- **XB5AV63** with description as Pilot light, Harmony XB5, plastic, green, 22mm, plain lens for BA9s bulb, It 250V
- **XB5AD53** with description as Selector switch, Harmony XB5, plastic, black, 22mm, 3 positions, spring return to center, 2 NO
- **ZB5AW035** with description as Complete body/contact assembly and light block, Harmony XB5, XB4, with body/fixing collar, BA9s incandescent bulb, 110...120V, 1NO + 1NC
- **ZB5AC3** with description as Head for non illuminated pushbutton, Harmony XB5, plastic, green, mushroom 40mm, 22mm, spring return
- **ZB5AS72** with description as Head for non illuminated push button, Harmony XB5, black mushroom 30mm, 22mm, latching, key to release, unmarked
- **ZB5AG012** with description as Head for key selector switch, Harmony XB5, XB4, Ø22 mm 3 position stay put 421E
- **ZB5CA432** with description as Head for non illuminated push button, Harmony XB5, red square flush pushbutton Ø22 mm spring return "O"
- **ZBE000** with description as Dummy contact block, Harmony XB4, for head 16mm without pins for PCB
- **ZB5AV8** with description as Light block with body fixing collar, Harmony XB5, plastic, with BA9s bulb, 440...480V AC
- **ZB5AW33** with description as Head for illuminated push button, Harmony XB5, plastic, flush, green, 22mm, spring return, plain lens for BA9s bulb
- **ZB5AW063** with description as Complete body/contact assembly and light block, Harmony XB5, XB4, with body/fixing collar, BA9s bulb, 250V, 2NO
- **XB5AW3465** with description as Illuminated push button, Harmony XB5, plastic, flush, red, 22mm, plain lens for BA9s bulb, spring return, lower than 250V, 1NO + 1NC
- **ZB5AA8** with description as Head for non illuminated push button, Harmony XB5, grey flush, 22mm, spring return, unmarked
- **XB5EVM4** with description as Monolithic pilot light, Harmony XB5, grey plastic, red, 22mm, universal LED, plain lens, 230...240V AC
- **ZB5AW062** with description as Complete body/contact assembly and light block, Harmony XB5, XB4, with body/fixing collar, BA9s bulb, 250V, 1NC

- **XB5AVG6** with description as Pilot light, Harmony XB5, grey plastic, blue, 22mm, universal LED, plain lens, 110...120V AC
- **XB5AW73731B5** with description as Illuminated double headed push button, Harmony XB5, plastic, 22mm, 1 green flush I + 1 pilot light + 1 red projecting O, 1 NO + 1 NC
- **ZBVM1** with description as Light block, Harmony XB4, Harmony XB5, for head 22mm, universal LED, screw clamp terminals, 230...240V AC
- **XB5AP21** with description as Push button, Harmony XB5, plastic, projecting, black, 22mm, spring return, boot, unmarked, 1NO
- **ZB5AD305** with description as Head for selector switch, Harmony XB5, XB4, yellow Ø22 mm 3 position stay put
- **ZB5AP1** with description as Head for non illuminated push button, Harmony XB5, XB4, white projecting, with clear boot, 22mm, spring return, unmarked
- **ZB5AG0820** with description as Head for key selector switch, Harmony XB5, XB4, Ø22 mm 3 position spring return 3131 A
- **ZB5AD201** with description as Head for selector switch, Harmony XB5, plastic, white, 22mm, 2 positions, stay put
- **XB5AK123M5** with description as Illuminated selector switch, Harmony XB5, grey plastic, green handle, 22mm, universal LED, 2 positions, 1NO + 1NC, 230...240V AC
- **ZB5AH03** with description as Head for non illuminated push button, Harmony XB5, green flush, 22mm, spring return, unmarked
- **ZB5AA71124** with description as Triple headed push button head, Harmony XB5, plastic, 22mm, 1 white flush UP ARROW + 1 red projecting STOP + 1 black flush DOWN ARROW
- **XB5EVB4** with description as Monolithic pilot light, Harmony XB5, grey plastic, red, 22mm, universal LED, plain lens, 24V AC DC