


# Remote Control

The remote control can be used to execute the most common actions such as changing the station and adjusting volume. The remote control requires two AAA batteries. Rechargeable batteries are a good option if you expect to use the remote control frequently.

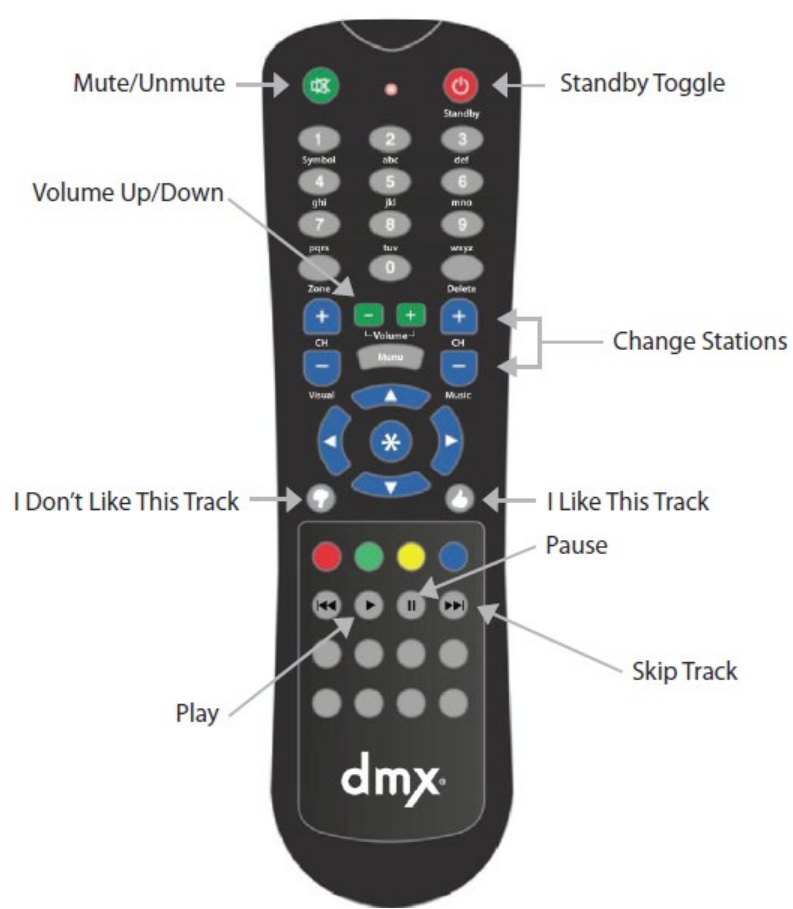

**NOTE: Weak batteries, scratched or dirty lenses, fluorescent lights and sunlight may interfere with remote control operation. Make sure the remote control has fresh batteries that are properly inserted. Shade the front panel of the player from direct light sources. Ensure the remote control and player IR lenses are clean/clear.**

BUTTON	FUNCTION
Standby Toggle	Switches between Playback and Standby modes. Standby mode stops all playback and puts player into a low-power state. The player can receive configuration updates in Standby mode.
Mute/Unmute	Mutes and unmutes audio
Volume Up/Down	Controls the volume from the player
Change Stations	Changes the Pandora station
I Don't Like This Track	Immediate fade into new track, and blocks the track from playing again on the current station.
I Like This Track	Refine your station. More tracks like the track will play on this station.
Play	Resumes playback when paused
Pause	Pauses playback
Skip Track	Immediate fade into a new track, if skips are available. Track will not play for 4 hours on this station

