



Network IP Configuration


1. Select Appropriate Network.
2. Right click and click Properties. It Shows Network properties window

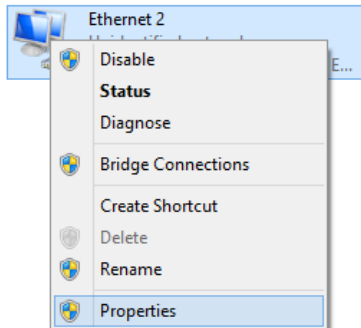


3. Select Internet Protocol Version 4 (TCP/IPv4). Click Properties, It shows IPv4 Properties.

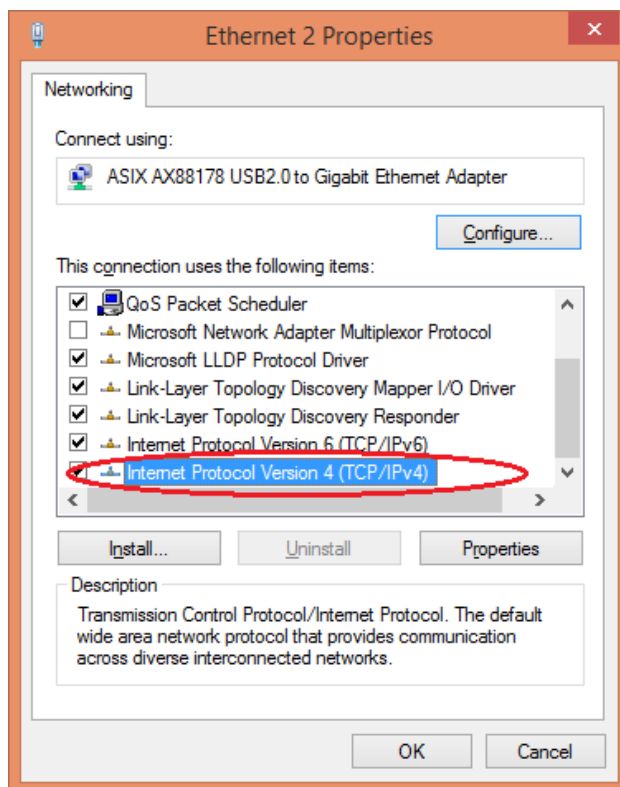


4. Click advanced button at bottom Right. And it shows Advanced IP Settings window.

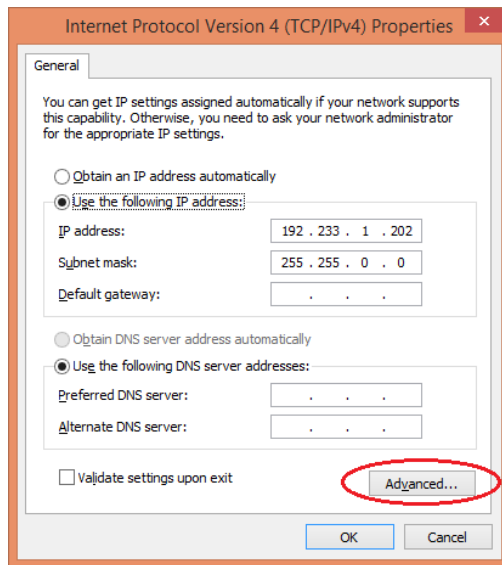

5. Click Add Button in IP Addresses Group.

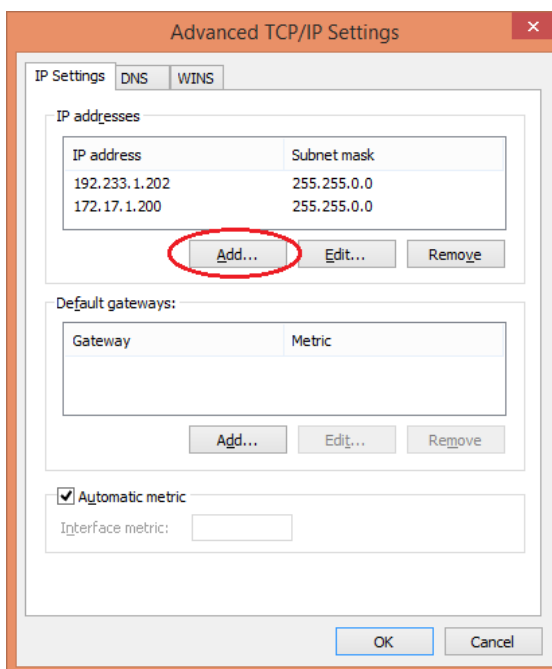

6. Enter the ip that match with processors ip

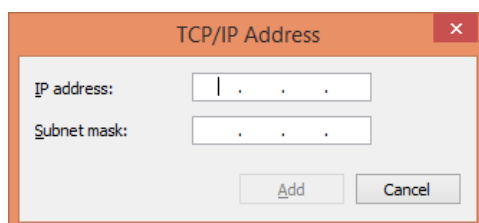

7. Finally click ok to all windows.