

R672CT Water Timer Instructions



INSTALL BATTERIES *not included*

1. Remove Battery Tray
2. Install Batteries 2 AAA Alkaline Type

NOTE: Use only fresh alkaline batteries at the beginning of each season. Do not use rechargeable batteries.



PROGRAM TIMER

1. Set Frequency [how often] Hours (or 1 week)
2. Set Run Time [how long] Minutes

NOTE: Make program dial settings at the hour of the day you want watering to start. The first watering will begin X hours later; where X is the Frequency hours.


EXAMPLE 1: To water 2 times a day for 30 minutes, set Frequency to 12 and Run Time to 30. First watering will occur 12 hours after the dials are set.

EXAMPLE 2: To water 1 time a day for 60 minutes, set Frequency to 24 and Run Time to 60. First watering will occur 24 hours after the dials are set.



EXAMPLE 1:

If watering is to start at 8:00 am, then make program settings at the 8:00 pm hour of the day (12 hours prior).

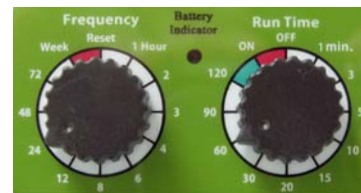

EXAMPLE 2:

If watering is to start at 5:00 am, then make program settings at the 5:00 am hour of the day (24 hours prior).

When Making Changes After Initial Programming

- Changing Frequency to 12 hours or less WILL change start time
- Changing Frequency to 24 hours or greater WILL NOT change start time
- Changing Run Time WILL NOT change start time

ATTACH TIMER TO OUTDOOR FAUCET

1. Remove Faucet Adapter
2. Attach Adapter to Faucet
3. Attach Timer to Adapter
 - Connect your drip system
 - Turn water faucet on



MANUAL WATERING

1. To start manual watering, set Run Time to ON
2. To stop watering, set Run Time to OFF
3. When done, set Run Time to desired setting

NOTE: Original start time will be retained after Run Time dial is turned off and set to the desired setting.



BATTERY INDICATOR LIGHT *yellow*

Good Batteries: Light flashes once every 4 seconds
Weak Batteries: Light flashes rapidly or on steady

TROUBLESHOOTING

Water does not come on

POSSIBLE PROBLEM	SOLUTION
Water off	Turn water on
Battery power low	Replace batteries
Batteries not installed properly	Correct battery installation
Run Time is longer or the same as Frequency	Increase frequency or reduce run time. <i>EXAMPLE: If Frequency dial is set to 1-hour, then Run Time dial must be 30 minutes or less.</i>

CAUTION *For outdoor use only*

AVOID DAMAGE TO TIMER

- Protect timer during winter season or freezing conditions and if not used for extended periods of time. Remove from faucet, remove batteries, and store indoors.
- Timer is water resistant, not water proof. Install timer above ground where not submerged in water.
- Do not pull on hose while attached to timer.

Be sure to visit **RAINDRIP.COM**
for **SPECIAL OFFERS** on other Raindrip products.

WARRANTY: Limited one year warranty from date of purchase. (original receipt required for warranty claim)

2855 S. East Ave., Fresno
Technical Service: 888-825-4716
www.raindrip.com