


Snake game

User manual

1. Menu

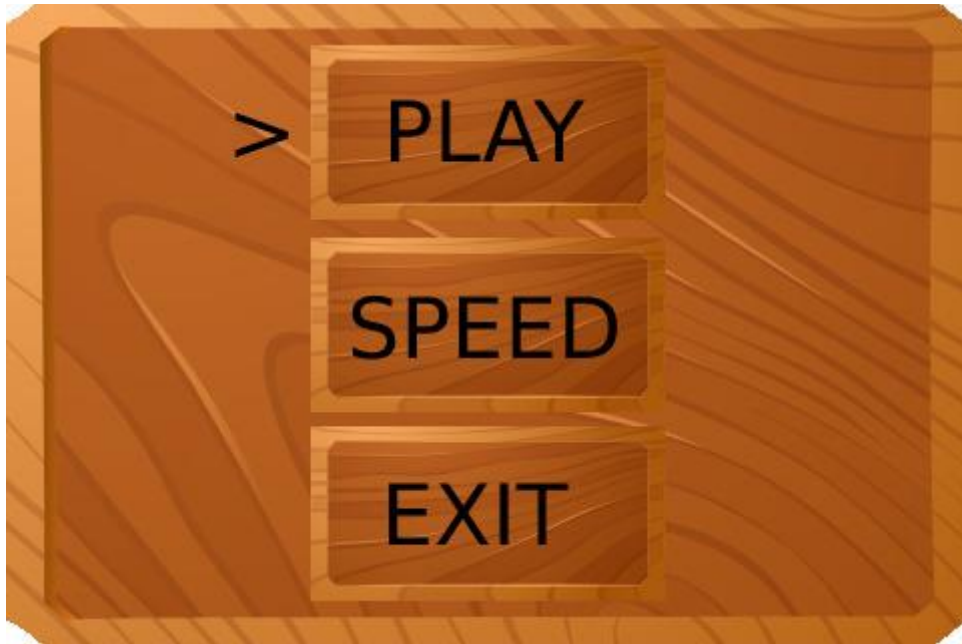

Menu screen

Change the selected option by pressing the **blue** (down) or **green** (up) rotary selector. The arrow shows the currently selected option.

Activate the selected option by pressing the **red** rotary selector. The button will turn white when it is activated.



Button / Active button

PLAY option will start the game.

EXIT option will end the program.

SPEED option will start the “Speed setting mode”.

In the “Speed setting mode”, the speed for the next game can be selected by rotating the **red** rotary selector. The minimum speed is 0, maximum speed is 8, this will be displayed on the LED line (4 LEDs = 1 speed point).

Exit the “Speed setting mode” by pressing the **green** rotary selector.

2. Gameplay



Game screen

- 1) Turn right or left by pressing the **blue** or **green** rotary selector.
- 2) Eat fruits and grow.
- 3) Make the enemy crash into you.