



# Chapter 1: Routing Concepts

CCNA Routing and Switching


Routing and Switching Essentials v6.0



# 1.1 Router Initial Configuration


# Router Functions

## Why Routing?

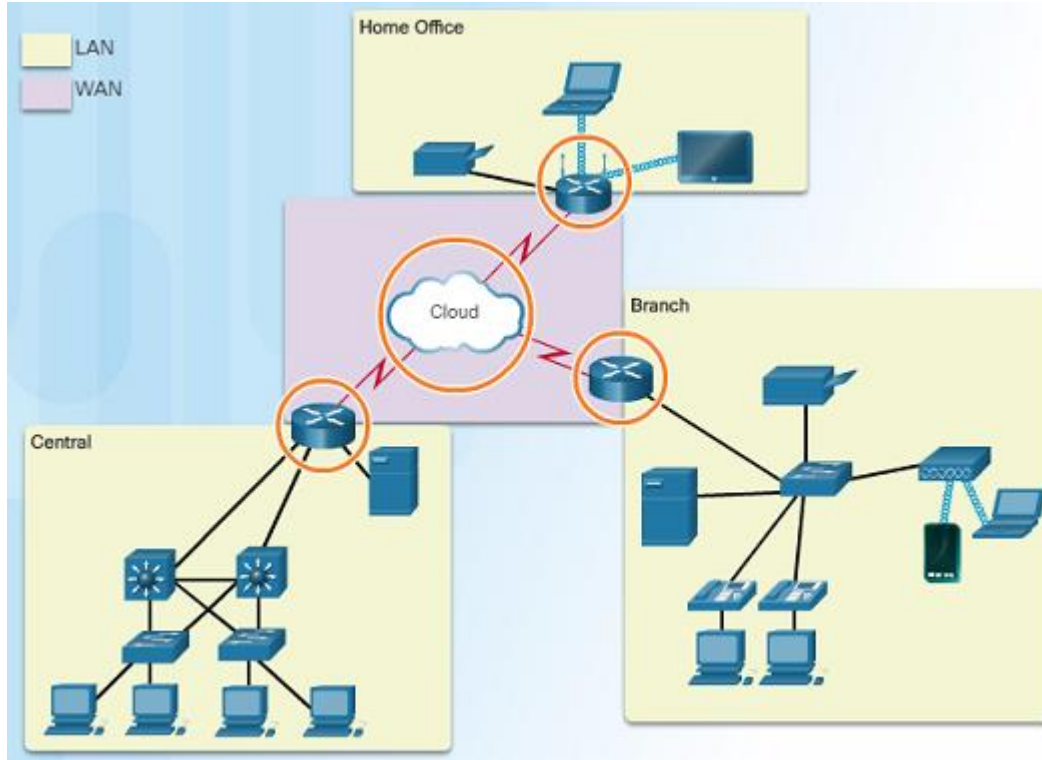

- Router:
  - Connects one network to another network
  - Determines the best route to the destination before forwarding traffic to the next router along the path
  - Responsible for routing traffic between network
  - Routing table used to determine the most efficient path to reach the destination

# Routers Are Computers

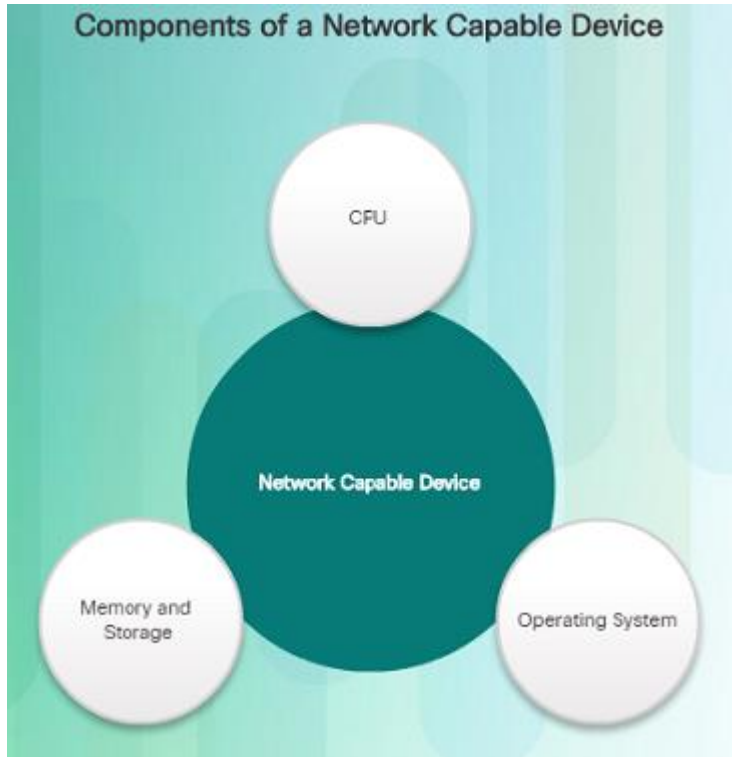


- A router is a specialized computer and requires the same components to operate as computers including:
  - Central Processing Unit (CPU)
  - Operating System (OS)
    - A desktop computer might use the Windows Operating System, but a Cisco Router uses the Cisco Internetwork Operating System (IOS).
  - Memory and storage (RAM, ROM, NVRAM, Flash, hard drive)
    - Non-volatile vs. volatile memory
    - Which one requires constant power to retain content?
- Routers have specialized ports and network interface cards to interconnect devices to other networks

# Router Functions


## Routers Are Computers (Cont.)

Memory	Description
Random Access Memory (RAM)	Volatile memory that provides temporary storage for various applications and processes including: <ul style="list-style-type: none"><li>• Running IOS</li><li>• Running configuration file</li><li>• IP routing and ARP tables</li><li>• Packet buffer</li></ul>
Read-Only Memory (ROM)	Non-volatile memory that provides permanent storage for: <ul style="list-style-type: none"><li>• Bootup instructions</li><li>• Basic diagnostic software</li><li>• Limited IOS in case the router cannot load the full featured IOS</li></ul>
Non-Volatile Random Access Memory (NVRAM)	Non-volatile memory that provides permanent storage for the: <ul style="list-style-type: none"><li>• Startup configuration file</li></ul>
Flash	Non-volatile memory that provides permanent storage for: <ul style="list-style-type: none"><li>• IOS</li><li>• Other system-related files</li></ul>

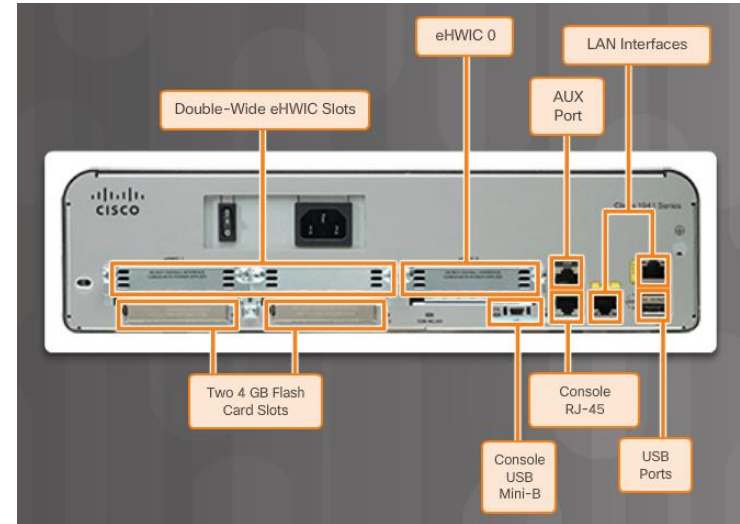

# Connect Devices


## Default Gateways

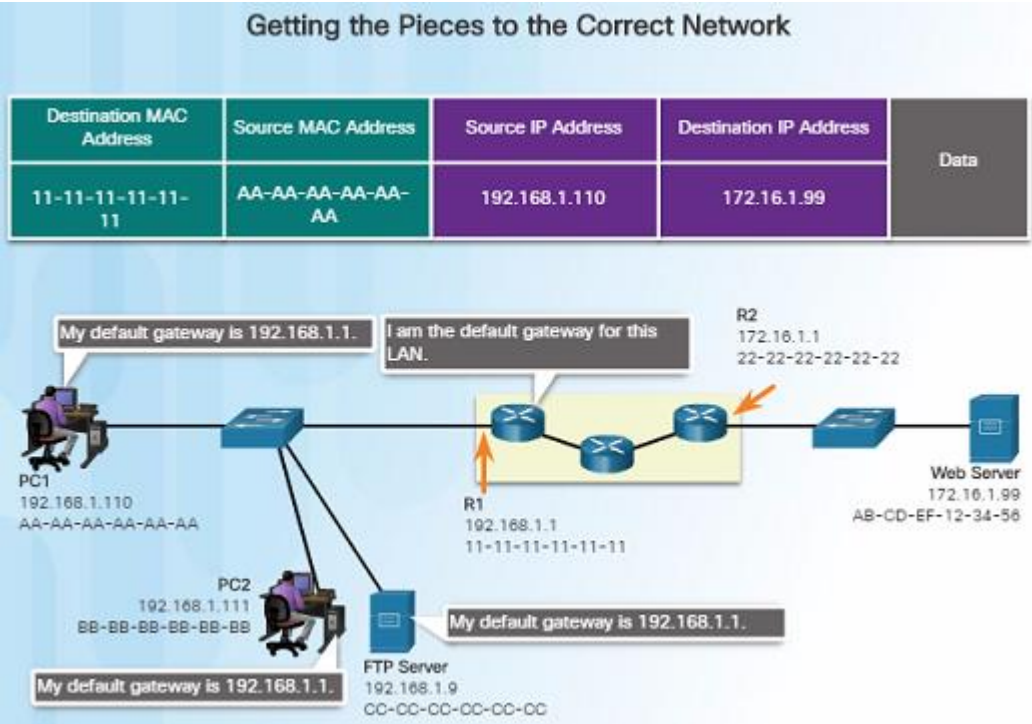

- Routers are also usually configured with their own default gateway.


- Devices need the following information for network access: IP address, subnet mask, and default gateway.
- When a host sends a packet to a device that is on the same IP network, the packet is forwarded out the host interface to the destination device. The router does not need to get involved.
- When a host sends a packet to a device on a different IP network, the packet is forwarded to the default gateway because the host device cannot communicate with devices outside of the local network.
- The default gateway is the device that routes traffic from the local network to devices on remote networks, such as devices on the Internet.

# Document Network Addressing

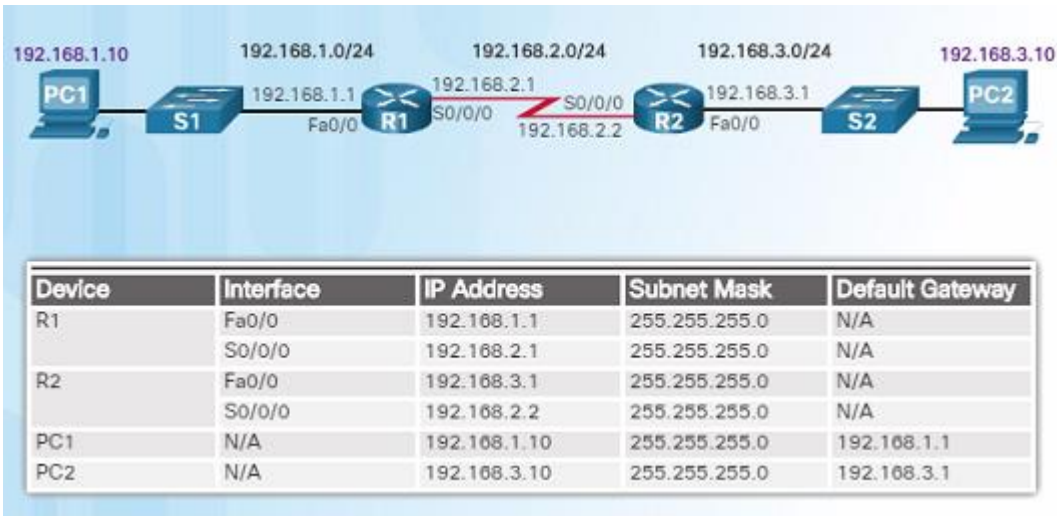

- When designing a new network or mapping an existing one, the documentation should identify:
  - Device names
  - Interfaces used in the design
  - IP addresses and subnet masks
  - Default gateway addresses
- The figure in the left shows two useful documents:
  - Topology diagram – provides a visual reference that indicates the physical and logical Layer 3 addressing.
  - An addressing table – captures device names, interfaces, IPv4 addresses, subnet masks, and default gateway addresses.


# Enable IP on a Host

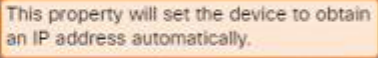

- **Statically –**
  - Manually configure the IP address, subnet mask, default gateway and probably the DNS server IP address.
  - Servers and printers commonly use static address assignment.
- **Dynamically –**
  - IP address information is obtained from a Dynamic Host Configuration Protocol (DHCP) server.
  - DHCP server provides an IP address, subnet mask, default gateway and probably the DNS server information.
  - Most host devices use DHCP.




# Console Access

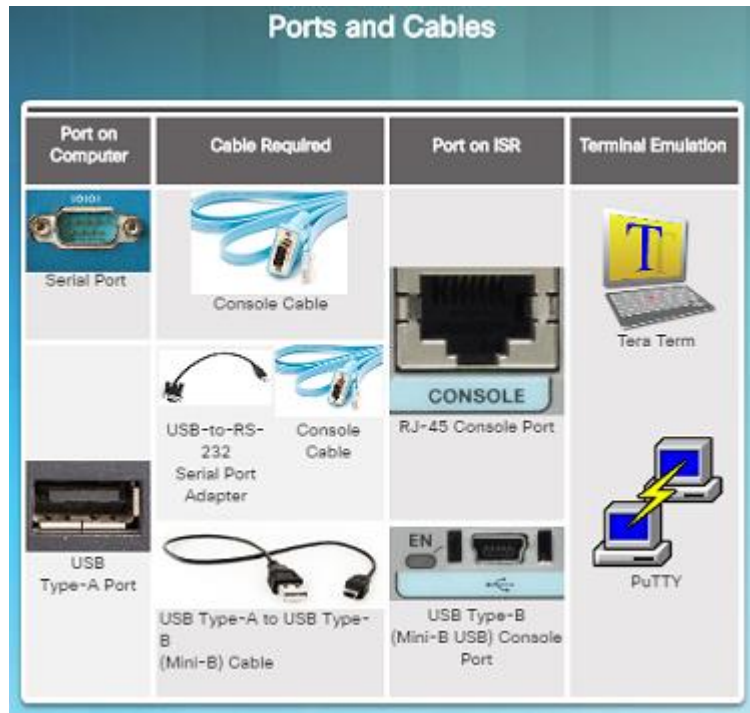


- Devices including routers and switches are commonly accessed using Secure Shell (SSH) or HyperText Transfer Protocol Secure (HTTPS).
- Console access is usually only required when initially configuring a device, or if remote access fails.
- Console access requires:
  - Console cable – RJ-45 to DB-9 serial cable or a USB serial cable.
  - Terminal emulation software – Tera Term, PuTTY, or HyperTerminal
- Cable is connected between the serial port of the host and the console port on the device.
  - If a host does not have a serial port, use the USB port and a USB-to-RS-232 adapter.

# Enable IP on a Switch

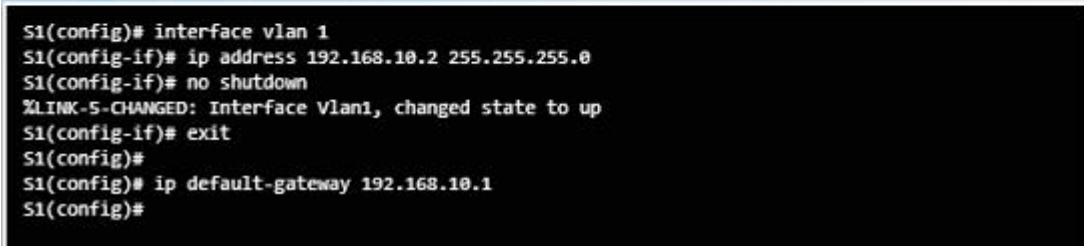

- Network devices require IP addresses in order for the network administrator to connect to the devices using Telnet, SSH, HTTP, or HTTPS.
- A switch requires an IP address to be configured on a virtual interface, called the switched virtual interface (SVI).
- Commands in the figure to the left should be used to configure the IP address on vlan 1 and also the default-gateway information.


# Configure Basic Router Settings

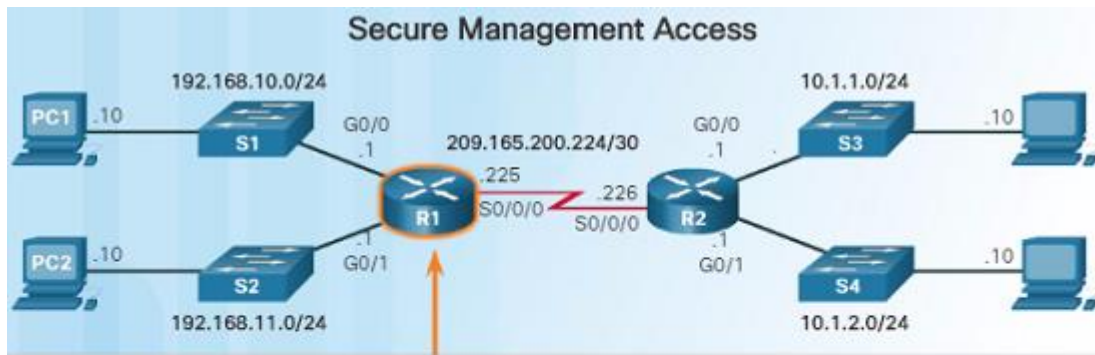

```
R1(config)# enable secret class
R1(config)#
R1(config)# line console 0
R1(config-line)# password cisco
R1(config-line)# login
R1(config-line)# exit
R1(config)#
R1(config)# line vty 0 4
R1(config-line)# password cisco
R1(config-line)# login
R1(config-line)# exit
R1(config)#
R1(config)# service password-encryption
R1(config)#
```

- Cisco routers and switches have similar initial configuration steps:
  - Name the device in order to distinguish it from other devices in the network using the **hostname** command in global config mode.
  - Secure management access as shown in the figure to the left in order to secure privileged EXEC, user EXEC, and remote access.
  - Configure a banner to provide legal notification of unauthorized access in global config mode: **banner motd**  
**\*\* Authorized Access Only! \*\***
- Always save your configuration changes and verify your settings:  
**R1# copy running-config startup-config**


# Configure an IPv4 Router Interface

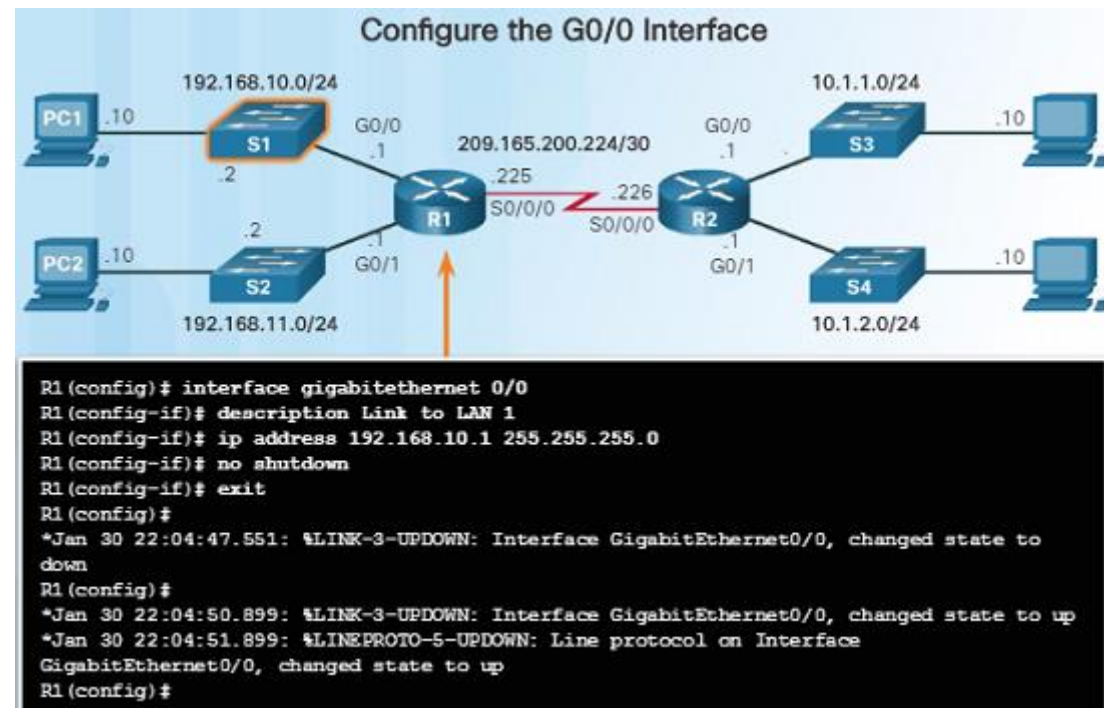

- Layer 2 switches support LANs and have multiple FastEthernet or Gigabit Ethernet ports.
- Routers support LANs and WANs and have many types of interfaces including Gigabit Ethernet and High-Speed WAN Interface Card (HWIC) slots to support WAN connections.
- As shown in the figure to the left, an interface must be configured with an IP address, subnet mask, and activated with the **no shutdown** command.

Note: In a lab environment, the serial interface with the cable end labeled DCE needs to be configured with a **clock rate** command.

# Configure an IPv6 Router Interface

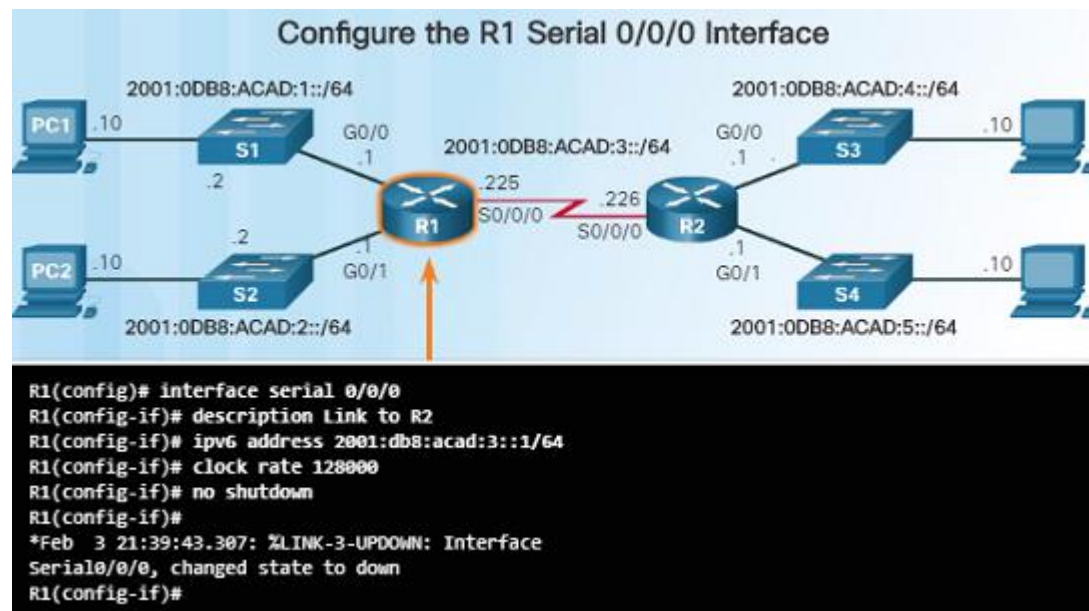


- The **clock rate 128000** command was used since this is being configured in a lab environment.

- To configure host PC1, statically assign an IPv6 address to the host under Internet Control Protocol Version 6 (TCP/IPv6) Properties.
- Configuring an IPv6 interface is very similar to configuring an IPv4 interface, use the **ipv6 address** command.
- As shown in the figure, configure the interface with an IPv6 address and subnet mask prefix.
- Activate the interface with the **no shutdown** command.
- An interface can generate its own IPv6 link-local address without having a global unicast address by using the **ipv6 enable** interface config command.



# Configure an IPv6 Router Interface (Cont.)

Configure the R1 Serial 0/0/0 Interface

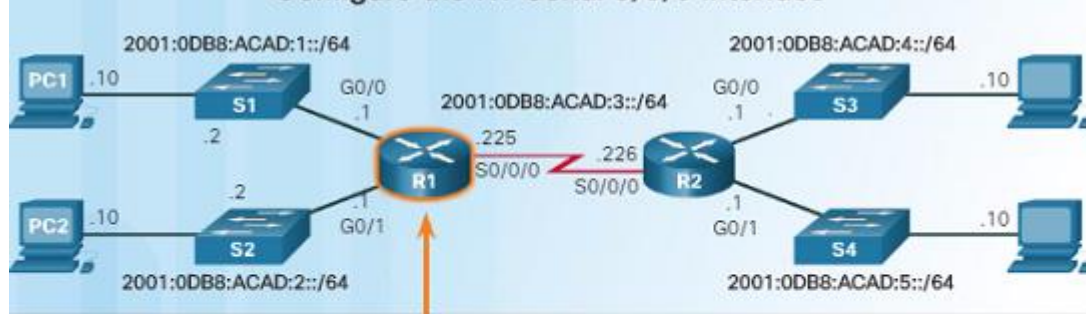


```
R1(config)# interface serial 0/0/0
R1(config-if)# description Link to R2
R1(config-if)# ipv6 address 2001:db8:acad:3::1/64
R1(config-if)# clock rate 128000
R1(config-if)# no shutdown
R1(config-if)#
*Feb 3 21:39:43.307: %LINK-3-UPDOWN: Interface
Serial0/0/0, changed state to down
R1(config-if)#
```

- Unlike IPv4, IPv6 interfaces will typically have more than one IPv6 address.
- An IPv6 device must have an IPv6 link-local address but will most likely also have an IPv6 global unicast address.
- An interface can also have multiple IPv6 global unicast addresses from the same subnet.
- These commands can be used to create a global unicast or link-local IPv6 address:
  - **ipv6 address** ipv6-address/prefix-length
  - **ipv6 address** ipv6-address/prefix-length eui-64
  - **ipv6 address** ipv6-address/prefix-length link-local

# Configure an IPv4 Loopback Interface

Configure the Loopback0 Interface

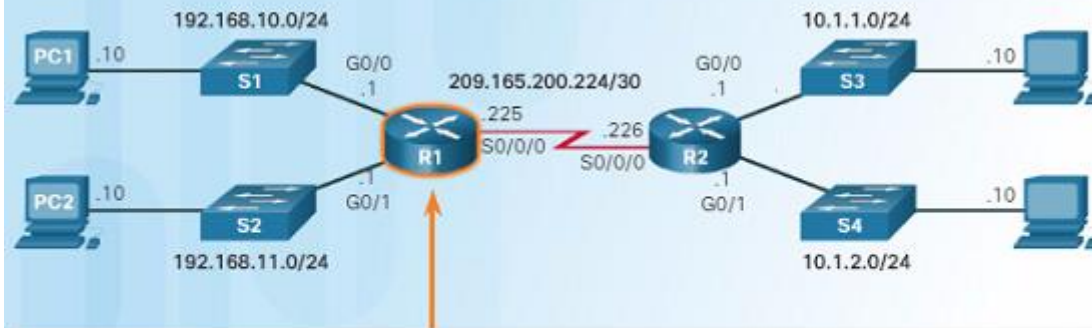


```
R1(config)# interface loopback 0
R1(config-if)# ip address 10.0.0.1 255.255.255.0
R1(config-if)# exit
R1(config)#
*Jan 30 22:04:50.899: %LINK-3-UPDOWN: Interface loopback0, changed state to up
*Jan 30 22:04:51.899: %LINEPROTO-5-UPDOWN: Line protocol on Interface loopback0, changed state to up
```

- An IPv4 loopback interface is typically configured on a router for testing and management purposes.
- A loopback interface is a logical interface internal to the router.
  - It is not assigned to a physical port and can not be connected to any other device.
  - It is a software interface that is automatically placed in an “up” state as long as the router is functioning.
- Some routing protocols such as OSPF require an address for identification, the loopback address can be used rather than an interface address which might go down on occasion, disrupting OSPF routing.

# Verify Connectivity of Directly Connected Networks

## Verify Interface Settings

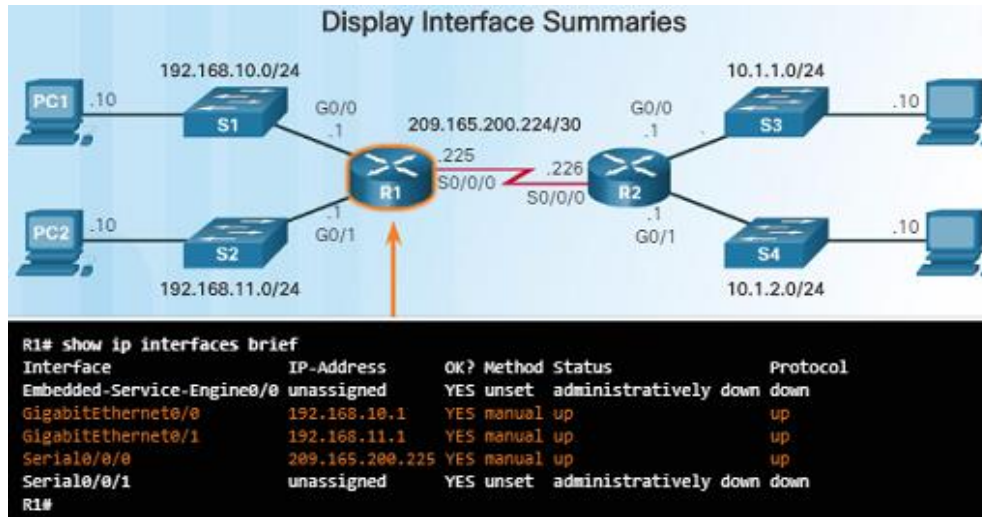


- The following commands are used to verify the operation and configuration of an interface:
  - **show ip interface brief** – Displays a summary for all interfaces including the IPv4 address of the interface as well as the current operational status.
  - **show ip route** – Displays the contents of the IPv4 routing table.
  - **show running-config interface *interface-id*** – Displays the commands configured on the specified interface.
- The following commands can be used to gather more detailed interface information:
  - **show interfaces** – Displays interface information and packet flow counts.
  - **show ip interface** – Displays the IPv4 related information for all interfaces on a router.



# Verify Connectivity of Directly Connected Networks

## Verify IPv6 Interface Settings

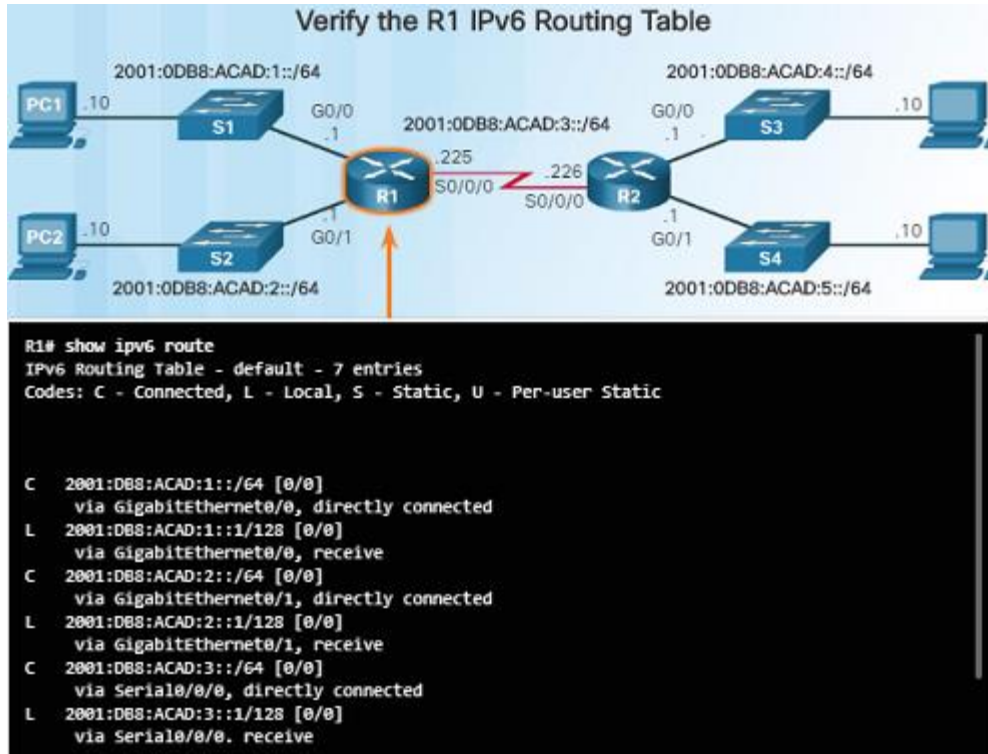


- IPv6 commands used for interface configuration verification are similar to IPv4.
  - **show ipv6 interface brief** – If the output shows up/up, this shows that Layers 1 and 2 are operational
  - **show ipv6 interface interface-id** – Shows the interface status and all of the IPv6 addresses that belong to the interface.
  - **show ipv6 route** – Verifies that IPv6 networks and specific IPv6 interface addresses have been installed in the IPv6 routing table.
- As shown in the figure to the left, a 'C' next to a route indicates that this is a directly connected network.
  - When the router interface is configured with a global unicast address and is in the "up/up" state, the IPv6 prefix length is added to the IPv6 routing table as a connected route.

# 1.2 Routing Decisions

# Switching Packets Between Networks

## Send a Packet

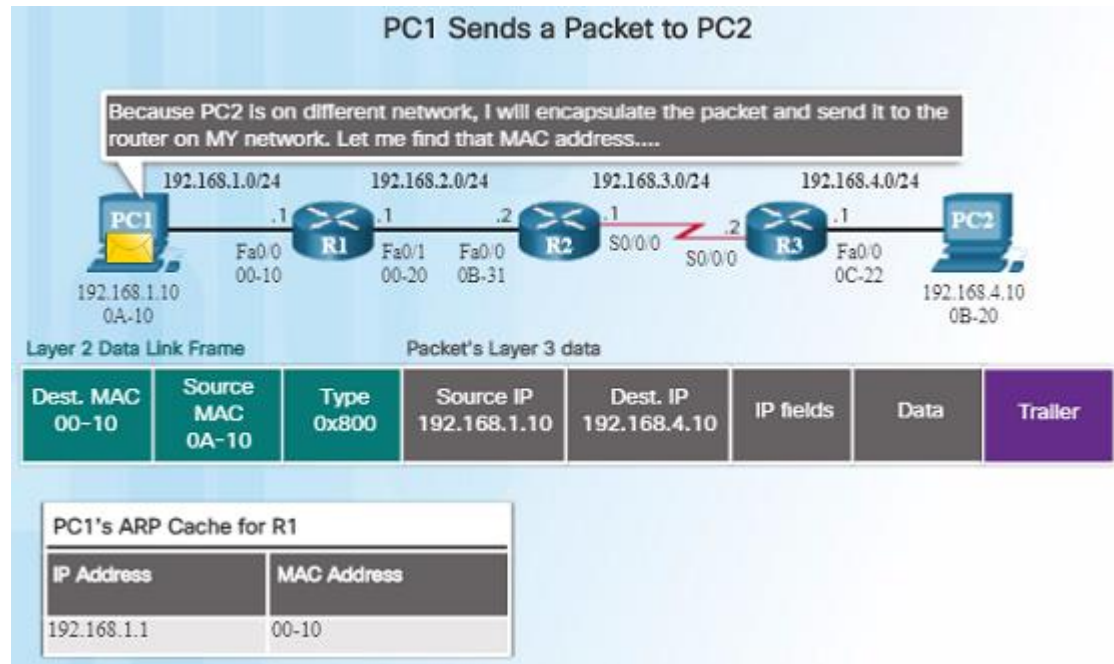


- For PC1 to send a packet to PC2, the following occurs:
  - PC1 must determine if the destination IPv4 address is on the same network. If it is on the same network, PC1 will obtain the destination MAC address from its ARP cache or use an ARP request.
  - Because the destination network is on a different network, PC1 forwards the packet to its default gateway.
  - To determine the MAC address of the default gateway, PC1 checks its ARP table for the IPv4 address of the default gateway and its corresponding MAC address. An ARP request is sent if it is not found.
  - When PC1 has the MAC address of Router R1, it can forward the packet.

# Switching Packets Between Networks

## Forward to the Next Hop


R1 Forwards the Packet to PC2

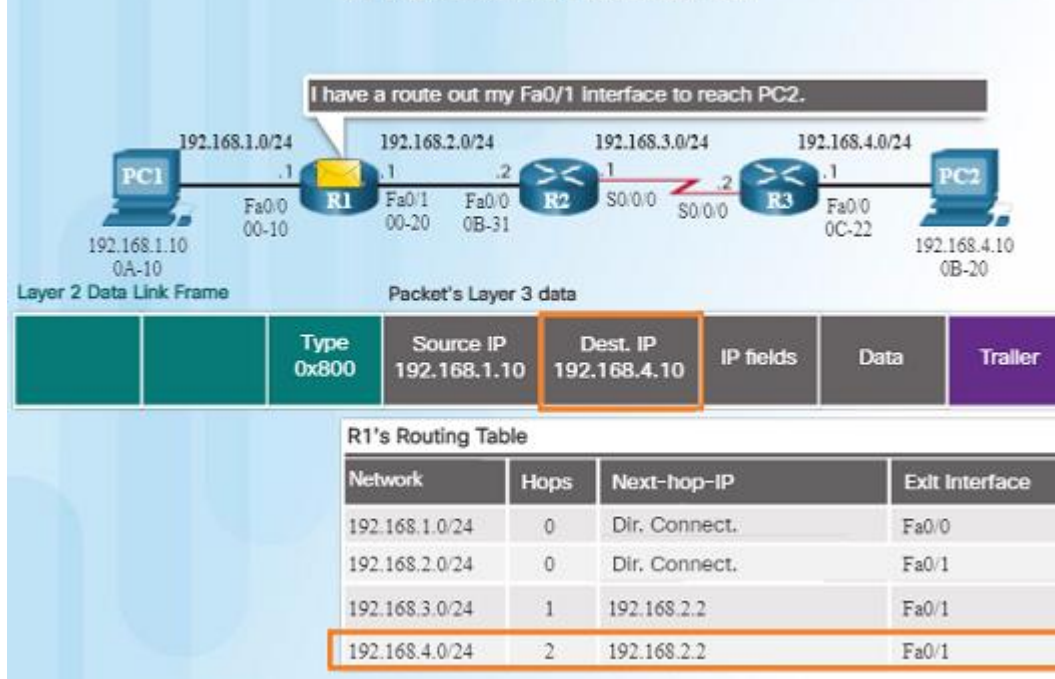

- When R1 receives the Ethernet frame from PC1, the following occurs:
  - R1 examines the destination MAC address which matches the MAC address of the receiving interface and copies the frame into its buffer.
  - R1 identifies the Ethernet Type field as 0x800 which indicates that the Ethernet frame contains an IPv4 packet in the data portion of the frame.
  - R1 de-encapsulates the Ethernet frame.
  - Because the destination IPv4 address of the packet, 192.168.4.10, does not match any of the directly connected networks on R1, R1 searches the routing table for a corresponding route.
  - R1's Routing Table has a route for the 192.168.4.0/24 network.

# Switching Packets Between Networks

## Forward to the Next Hop (Cont.)

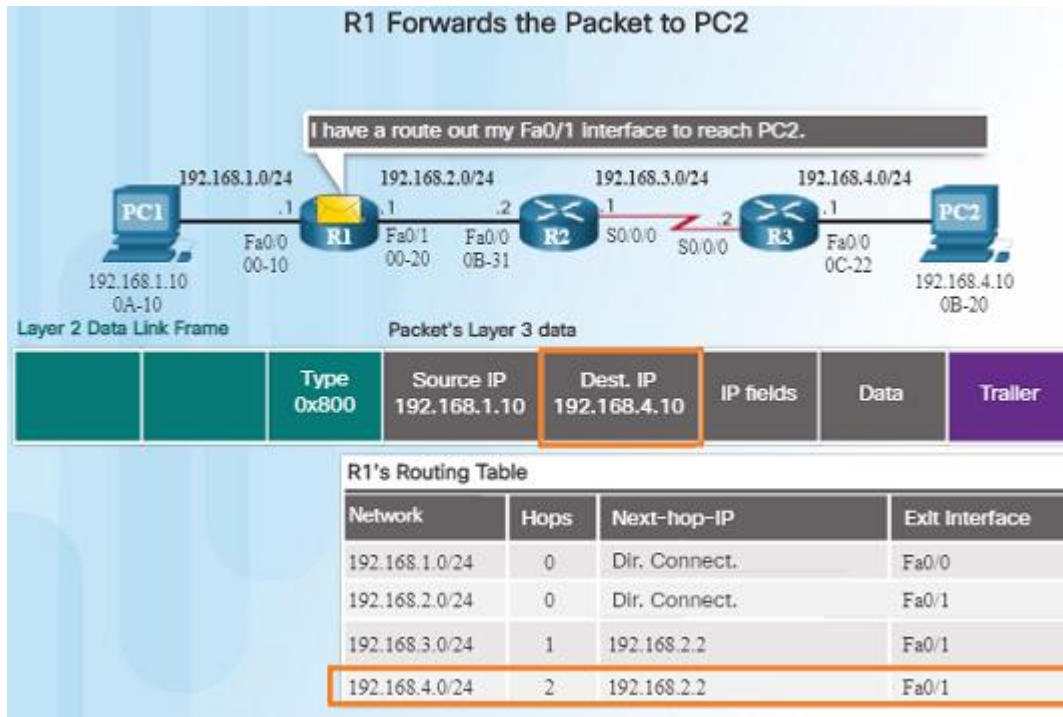


- When R1 receives the Ethernet frame from PC1, the following occurs:
  - The route that R1 finds to the 192.168.4.0/24 network has a next-hop address of 192.168.2.2 and an exit interface of FastEthernet 0/1.
  - This will require that the IPv4 packet be encapsulated in a new Ethernet frame with the destination MAC address of the IPv4 address of the next-hop router, 192.168.2.2
  - Because the exit interface is on an Ethernet network, R1 must resolve the next-hop IPv4 address with a destination MAC address using ARP, assuming it is not in its ARP cache.
  - When R1 has the MAC address for the next-hop, the Ethernet frame is forwarded out of the FastEthernet 0/1 interface of R1.

# Switching Packets Between Networks

## Packet Routing

R2 Forwards the Packet to R3

A frame was sent to me by MAC address. Let me investigate further.

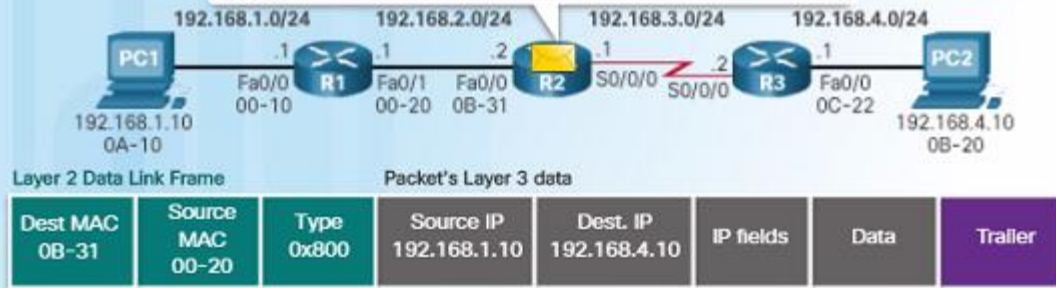

- The process outlined to the right describes what happens when router R2 receives a frame on its Fa0/0 interface that needs to be forwarded to router R3.

- R2 examines the destination MAC address. Because it matches the MAC address of its receiving interface, R2 copies the frame into its buffer.
- R2 determines that that frame contains an IPv4 packet in the data portion of the frame.
- R2 de-encapsulates the Ethernet frame.
- Because the destination IP address is on a different network, the routing table is searched to find a corresponding route for the destination IPv4 address.




# Switching Packets Between Networks

## Packet Routing (Cont.)

### R2 Forwards the Packet to R3


A frame was sent to me by MAC address. Let me investigate further.

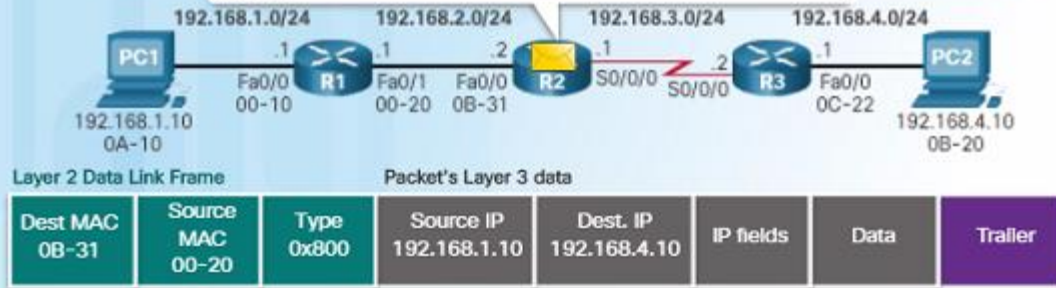

- The routing table of R2 has a route to the 192.168.4.0/24 network with a next-hop IPv4 address of 192.168.3.2 and an exit interface of Serial 0/0/0.
- Because the exit interface is not Ethernet, R2 does not have to resolve the next-hop IP-v4 address with a destination MAC address.
- The IPv4 packet is encapsulated into a new data link frame used by the exit interface and sent out the Serial 0/0/0 exit interface.
- Because there are no MAC addresses on serial interfaces, R2 sets the data link destination address to an equivalent of a broadcast.

# Switching Packets Between Networks

## Reach the Destination

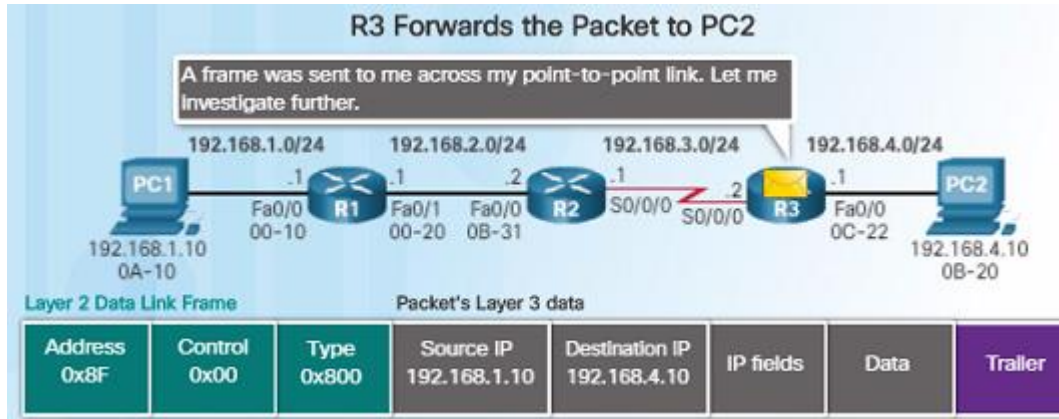


- The process outlined on the right describes what takes place when R3 receives a frame on its serial interface.

- R3 copies the data link PPP frame into its buffer.
- R3 de-encapsulates the data link PPP frame.
- R3 searches the routing table for the destination IPv4 address of the packet.
- Because the destination network is on R3's directly connected network, the packet can be sent directly and does not need to be sent to another router.
- Because the exit interface is a directly connected Ethernet network, R3 must resolve the destination IPv4 address of the packet with a destination MAC address by either finding it in its ARP cache or send out an ARP request.



# Path Determination


## Best Path

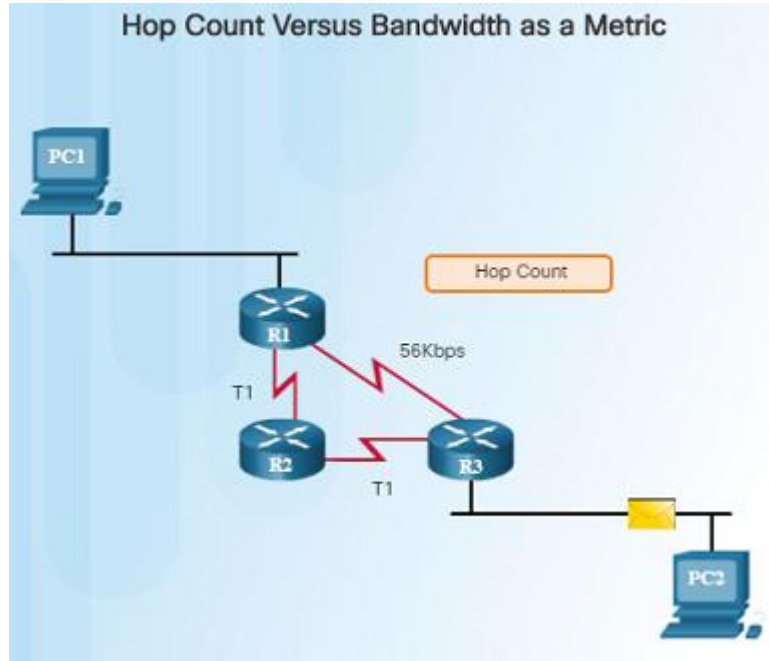

- Determining the best path to a destination network involves the evaluation of multiple paths and selecting the optimum or shortest path to reach that network.
- The best path is selected based on the metric or value that is used by the routing protocol.
- The best path to a network is the path with the lowest metric. A metric is a value that is used to measure the distance to a given network.
- Each dynamic routing protocols has their own rules and metrics to build and update routing tables. For example:
  - Routing Information Protocol (RIP) – Hop count
  - Open Shortest Path First (OSPF) – Cisco's cost based cumulative bandwidth from source to destination
  - Enhanced Interior Gateway Routing Protocol (EIGRP) – Bandwidth, delay, load, reliability

# Path Determination

## Load Balancing

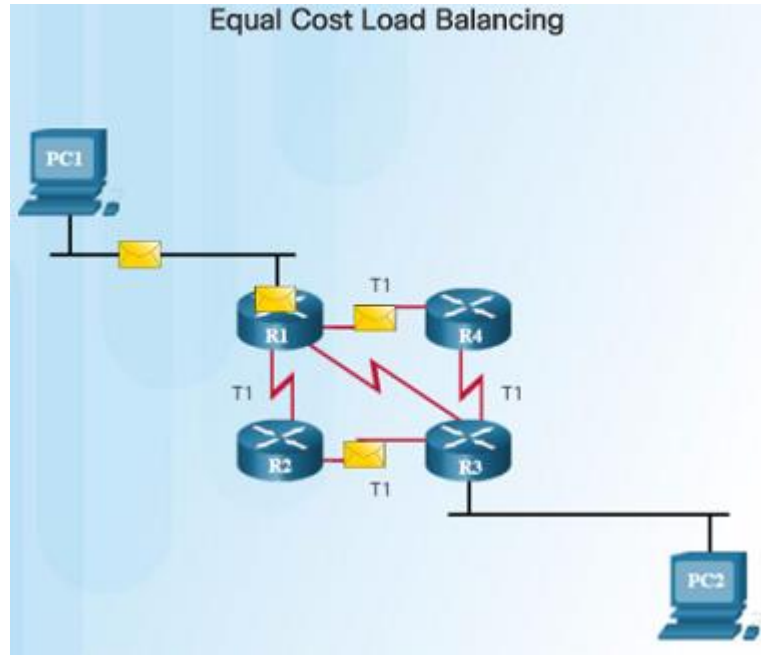

- If a router has two or more paths with identical metrics to the same destination network, the router will forward the packets using both paths equally.
- The routing table contains a single destination network, but has multiple exit interfaces – one for each equal cost path. This is referred to as equal cost load balancing.
- If configured correctly, load balancing can increase the effectiveness and performance of the network.
- Equal cost load balancing can be configured to use both dynamic routing protocols and static routes.
- EIGRP supports unequal cost load balancing.

# Administrative Distance

Default Administrative Distances

Route Source	Administrative Distance
Connected	0
Static	1
EIGRP summary route	5
External BGP	20
Internal EIGRP	90
IGRP	100
OSPF	110
IS-IS	115
RIP	120
External EIGRP	170
Internal BGP	200


- Which route source is more trustworthy, Internal EIGRP or OSPF?

- If a router has multiple routing protocols configured and static routes, it is possible that the routing table might have more than one route source for the same destination network.
- Each routing protocol might prefer a different path to reach the same destination. How does the router know which path to choose?
- The Cisco IOS uses what is known as the administrative distance (AD) to determine which route to install in the routing table.
- The AD represents the “trustworthiness” of the route. The lower the AD, the more trustworthy.

# 1.3 Router Operation

# Analyze the Routing Table


## The Routing Table

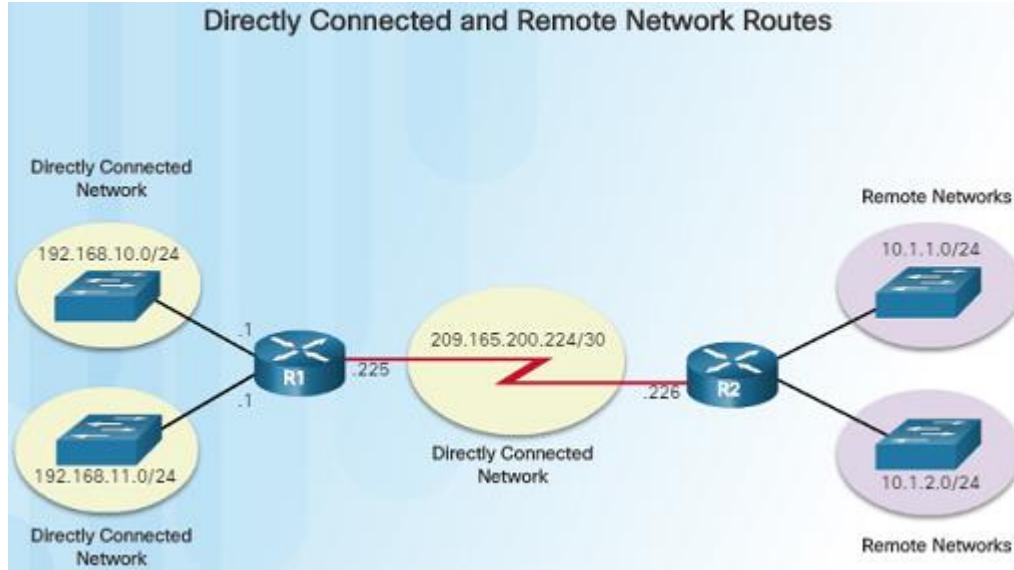

- The routing table of a router stores information about:
  - Directly connected routes – Obtained from the active router interfaces.
  - Remote routes – These are remote networks connected to other routers that are learned from dynamic routing protocols or are statically configured.
- A routing table is a data file in RAM that is used to store information about directly connected and remote networks.
- The routing table contains next hop associations for remote networks. The association tells the router what the next hop is for a destination network.

# Analyze the Routing Table


## Routing Table Sources

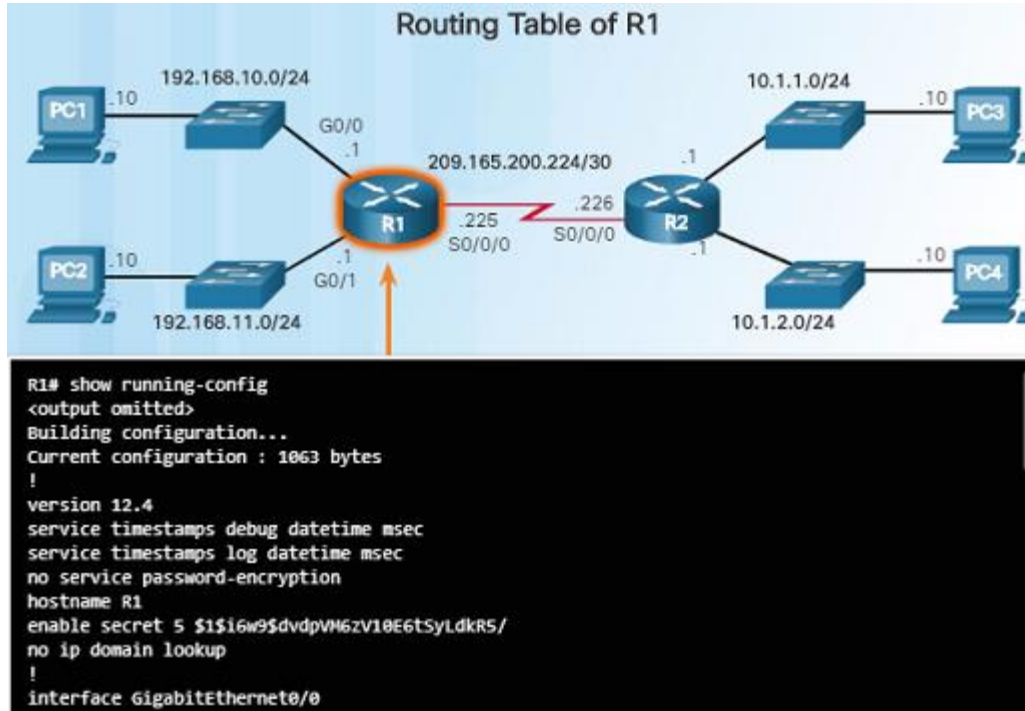

- On a Cisco router, the **show ip route** command can be used to display the IPv4 routing table.
- Additional route information is provided in the routing table including: how the route was learned, how long the route has been in the table, and which interface to send out of to reach a destination.
- Sources of the routing table entries are identified by a code:
  - L - Local Route interfaces
  - C - Directly connected interfaces
  - S - Static routes
  - D – Learned dynamically from another router using the EIGRP routing protocol.
  - O – Learned dynamically from another router using the OSPF routing protocol.

## Analyze the Routing Table

# Remote Network Routing Entries

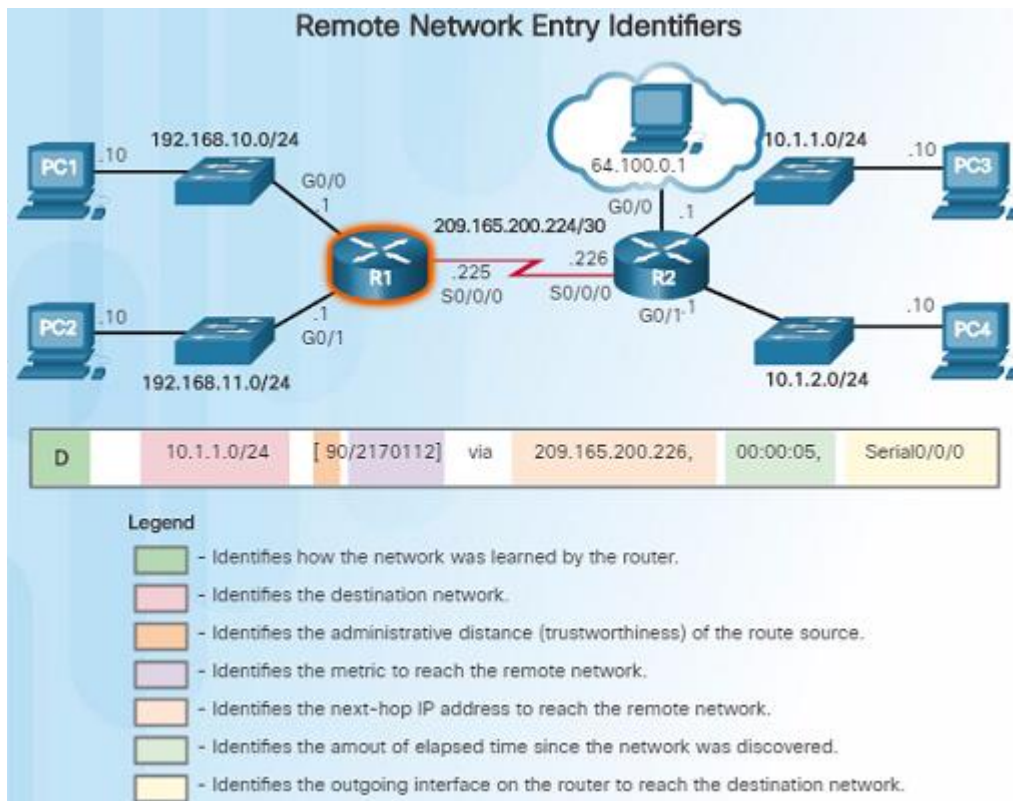


- You must know how to interpret the content of IPv4 and IPv6 routing tables. The figure to the left highlights the details for the route to the remote network 10.1.1.0:

- Route source – how the route was learned
- Destination network – address of the remote network
- Administrative distance – trustworthiness of the route
- Metric – value assigned to reach the remote network; lower the better
- Next-hop – the IPv4 address of the next router to forward the packet to
- Route timestamp – how much time has passed since the route was learned
- Outgoing interface – exit interface to forward packet out of



## Directly Connected Routes

# Directly Connected Interfaces

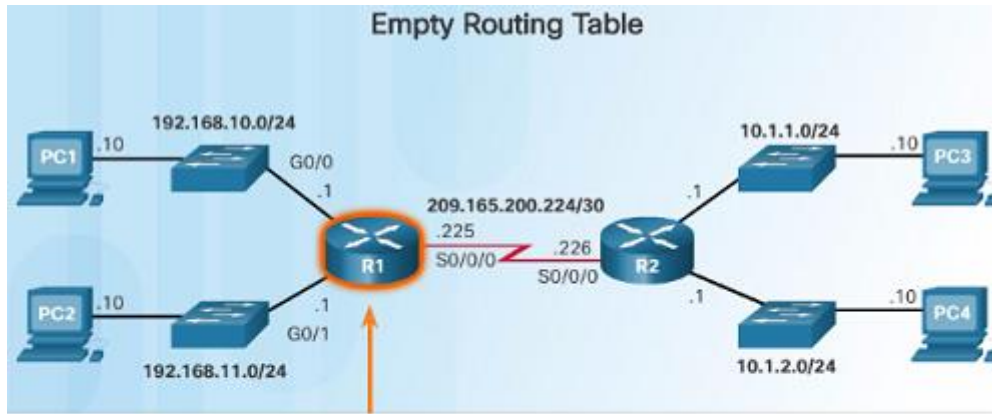

```
R1# show ip route
Codes: L - local, C - connected, S - static, R - RIP, M - mobile, B - BGP
       D - EIGRP, EX - EIGRP external, O - OSPF, IA - OSPF inter area
       N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
       E1 - OSPF external type 1, E2 - OSPF external type 2
       i - IS-IS, su - IS-IS summary, L1 - IS-IS level-1, L2 - IS-IS level-2
       ia - IS-IS inter area, * - candidate default, U - per-user static route
       o - ODR, P - periodic downloaded static route, H - NHRP, l - LISP
       + - replicated route, % - next hop override
```


```
Gateway of last resort is not set
R1#
```

- A new router without any configured interfaces will have an empty routing table – as shown in the figure.
- Before the interface state is considered up/up and added to the IPv4 routing table, the interface must:
  - Be assigned a valid IPv4 or IPv6 address
  - Be activated with the no shutdown command
  - Receive a carrier signal from another device such as a router, switch, or host.
- When the interface is up, the network of that interface is added to the routing table as a directly connected route.




## Directly Connected Routes

# Directly Connected Routing Table Entries

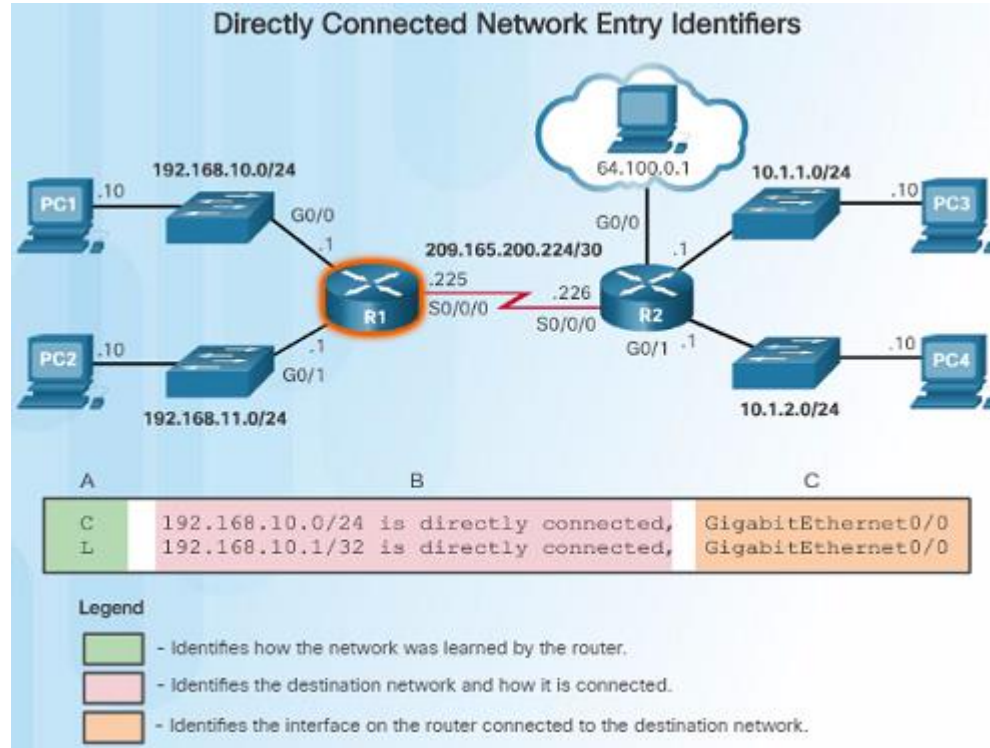

- With IOS version 15 and later, an active directly connected interface creates two routing table entries as shown in the figure:
  - The route source “C” identifies the route as a directly connected network.
  - The route source “L” identifies the IPv4 address assigned to the router’s interface.
- The routing table entry shows the destination network as well as the outgoing interface to use when forwarding packets to the destination network.


# Directly Connected Examples

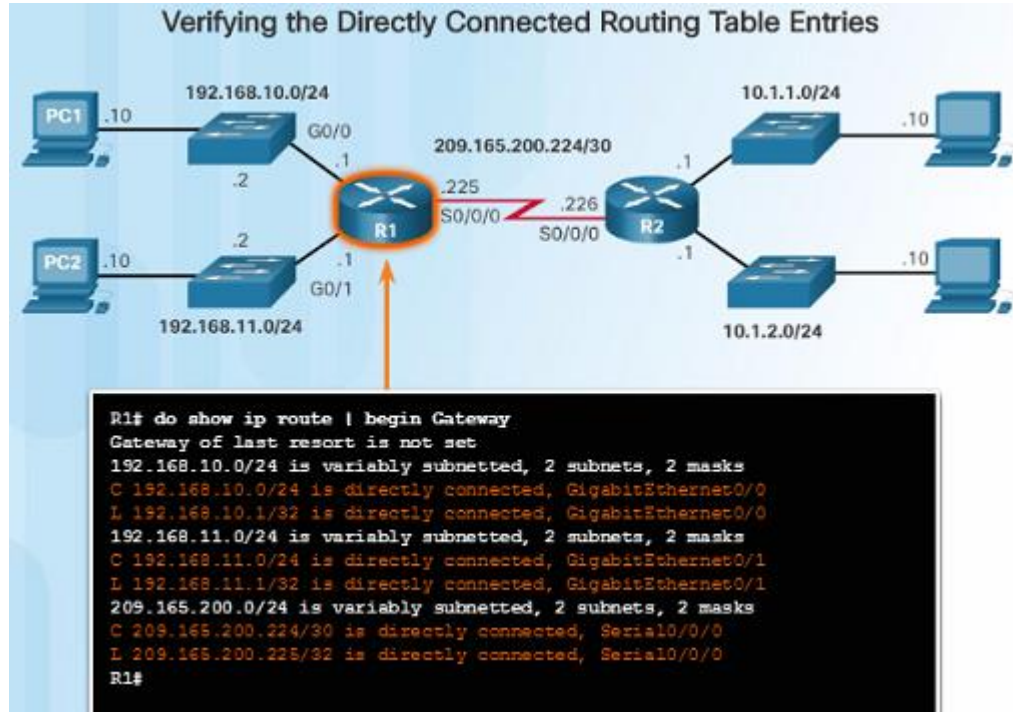

- When the interfaces are configured with an appropriate IP address, subnetmask, and activated with the **no shutdown** command, they will be automatically added to the routing table as shown in the figure to the left.
- As each interface is added, the routing table automatically adds the connected ('C') and local ('L') entries.

## Directly Connected Routes

# Directly Connected IPv6 Example

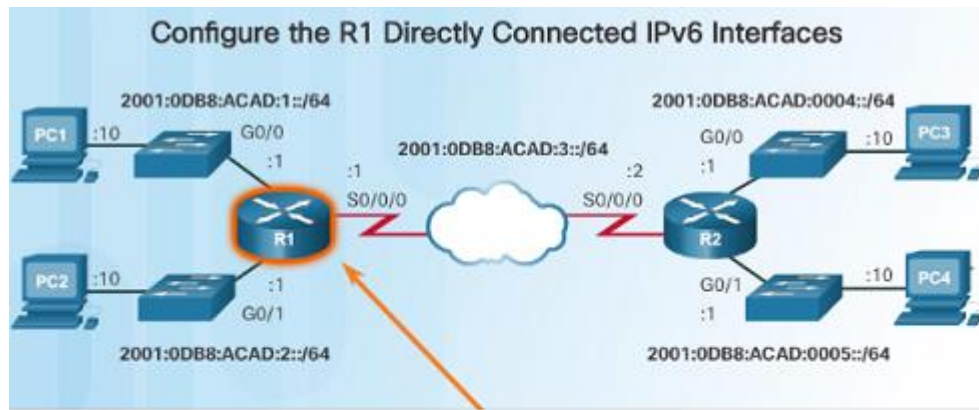


```
R1(config)# interface gigabitethernet 0/0
R1(config-if)# description Link to LAN 1
R1(config-if)# ipv6 address 2001:db8:acad:1::1/64
R1(config-if)# no shutdown
R1(config-if)# exit
*Feb 3 21:38:37.279: %LINK-3-UPDOWN: Interface
GigabitEthernet0/0, changed state to down
*Feb 3 21:38:40.967: %LINK-3-UPDOWN: Interface
GigabitEthernet0/0, changed state to up
*Feb 3 21:38:41.967: %LINEPROTO-5-UPDOWN: Line protocol on
Interface GigabitEthernet0/0, changed state to up
R1(config)#
R1(config)# interface gigabitethernet 0/1
R1(config-if)# description Link to LAN 2
R1(config-if)# ipv6 address 2001:db8:acad:2::1/64
```

- The figure to the left shows the configuration steps for the directly connected interfaces of R1 with the indicated IPv6 addresses.
- The **show ipv6 route** command is used to verify that the IPv6 networks and specific IPv6 interface addresses have been installed in the IPv6 routing table.
  - A 'C' indicates that it is a directly connected route.
  - An 'L' indicates it is a local route, but with IPv6, it has a /128 prefix.
- The ping command can be used to verify connectivity. For example:
  - ping 2001:db8:acad:3::2

# Statically Learned Routes


## Static Routes

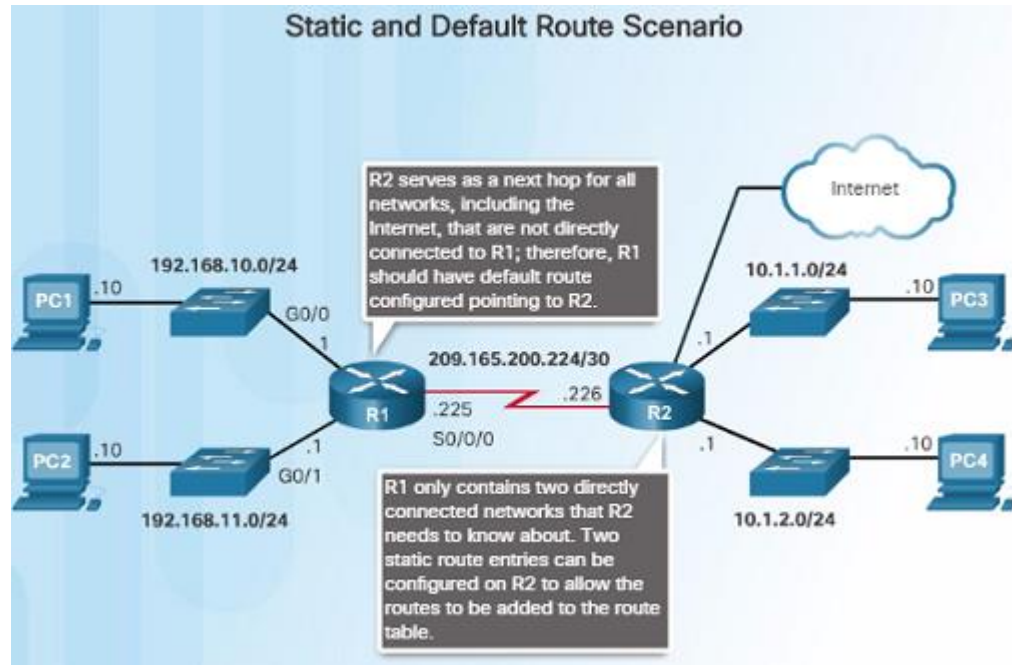

- After directly connected interfaces are configured and added to the routing table, then static or dynamic routing can be configured.
- Static routes are manually configured and define an explicit path between two networking devices.
- If the network topology changes, static routes must manually be reconfigured.
- Benefits of static routes include:
  - Improved security
  - Resource efficiency – less bandwidth usage and no CPU cycles are used to calculate and communicate route

# Statically Learned Routes

## Static Routes (Cont.)

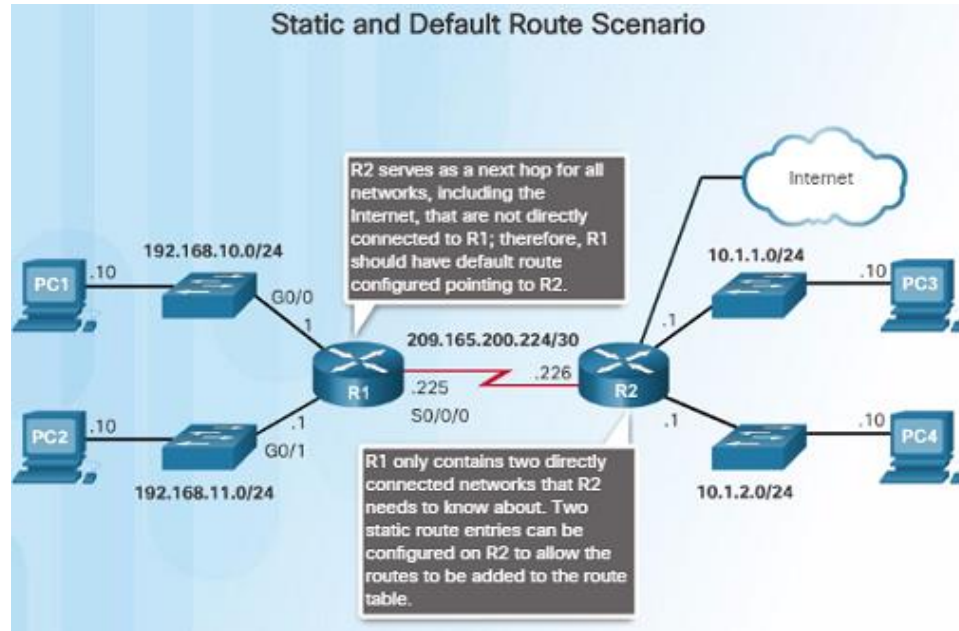


- There are two main types of static routes in the routing table:
  - Static route to a specific network
  - Default static route
- IPv4 static routes are configured using the following command:
  - **ip route** network mask { *next-hop-ip* | *exit-intf* }
- A static route appears in the routing table with the code 'S'.
- A default static route is similar to a default gateway on a PC or host. The default static route specifies the exit point to use when the routing table does not have a path for the destination network. Use the command:
  - **ip route** 0.0.0.0 0.0.0.0 { *exit-intf* | *next-hop-ip* }



# Statically Learned Routes

## Static Route Examples

Entering and Verifying a Static Default Route

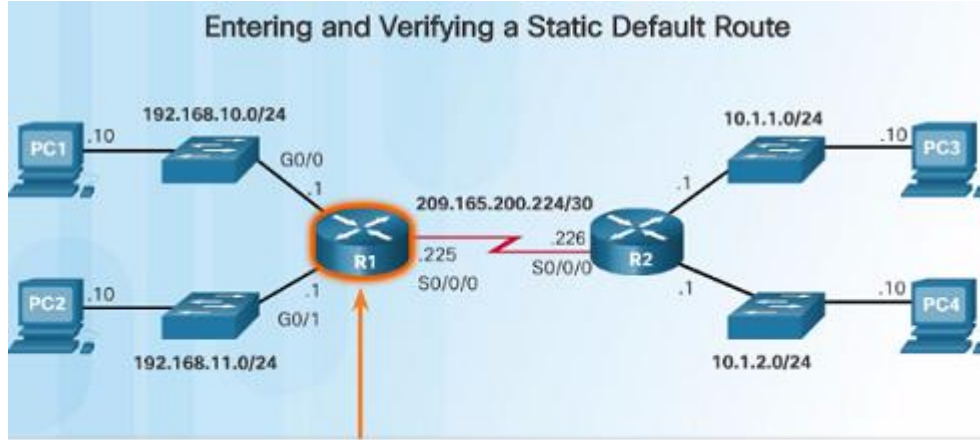

```
R1(config)# ip route 0.0.0.0 0.0.0.0 Serial0/0/0
R1(config)# exit
R1#
*Feb 1 10:19:34.483: %SYS-5-CONFIG_I: Configured from console
by console


R1# show ip route | begin Gateway
Gateway of last resort is 0.0.0.0 to network 0.0.0.0

S* 0.0.0.0/0 is directly connected, Serial0/0/0
  192.168.10.0/24 is variably subnetted, 2 subnets, 2 masks
C    192.168.10.0/24 is directly connected, GigabitEthernet0/0
L    192.168.10.1/32 is directly connected, GigabitEthernet0/0
  192.168.11.0/24 is variably subnetted, 2 subnets, 2 masks
C    192.168.11.0/24 is directly connected, GigabitEthernet0/1
```

- The figure to the left shows the configuration of an IPv4 default static route on R1 to the Serial 0/0/0 interface.
  - The 'S' indicates that it is a static route
  - The asterisk (\*) identifies this as a possible candidate to be the default route.
  - Notice that this route was chosen to be the Gateway of last resort (default route).
- Here are two static route configurations from R2 to reach the two LANs on R1:
  - **ip route** 192.168.10.0 255.255.255.0 s0/0/0
  - **ip route** 192.168.11.0 255.255.255.0 209.165.200.225
- Which route was configured to use the exit interface?
- Will they send packets for these networks to the same router?

# Static IPv6 Route Examples

Entering and Verifying IPv6 Static Routes

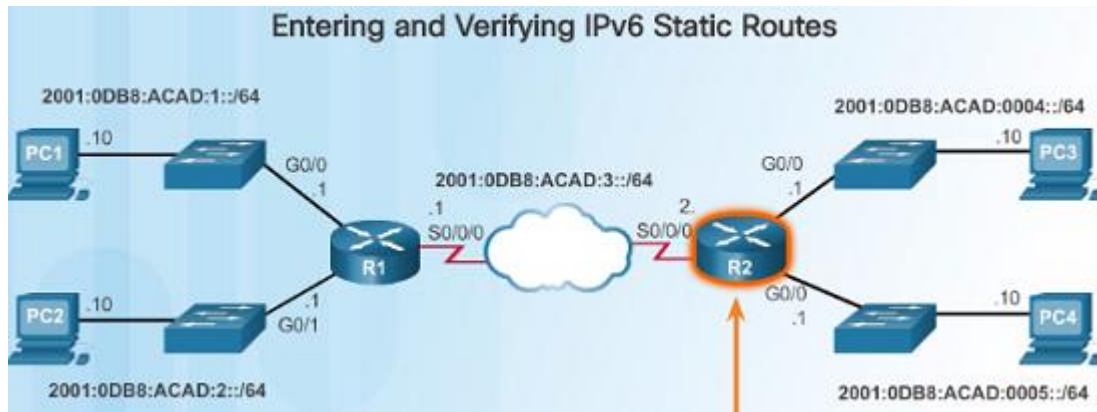

- Like IPv4, static routes are explicitly configured to reach a specific remote network. For example:
  - ipv6 route** 2001:0DB8:ACAD:1::/64 2001:0DB8:ACAD:3::1
  - ipv6 route** 2001:0DB8:ACAD:2::/64 s0/0/0
- Notice that one of these routes uses an exit interface while the other uses a next hop address.


- To configure a default IPv6 static route, use the **ipv6 route ::/0 [ipv6-address | interface-type interface-number] global configuration** command:

- ipv6 route ::/0 s0/0/0**
- Unlike the IPv4 static route, there is no asterisk (\*) or Gateway of Last Resort explicitly identified in the routing table.

- Use the **show ipv6 route** command to verify the static routes were installed.
- Use ping to verify remote network connectivity from R1:
  - ping** 2001:0DB8:ACAD:4::1

# Dynamic Routing Protocols

## Dynamic Routing

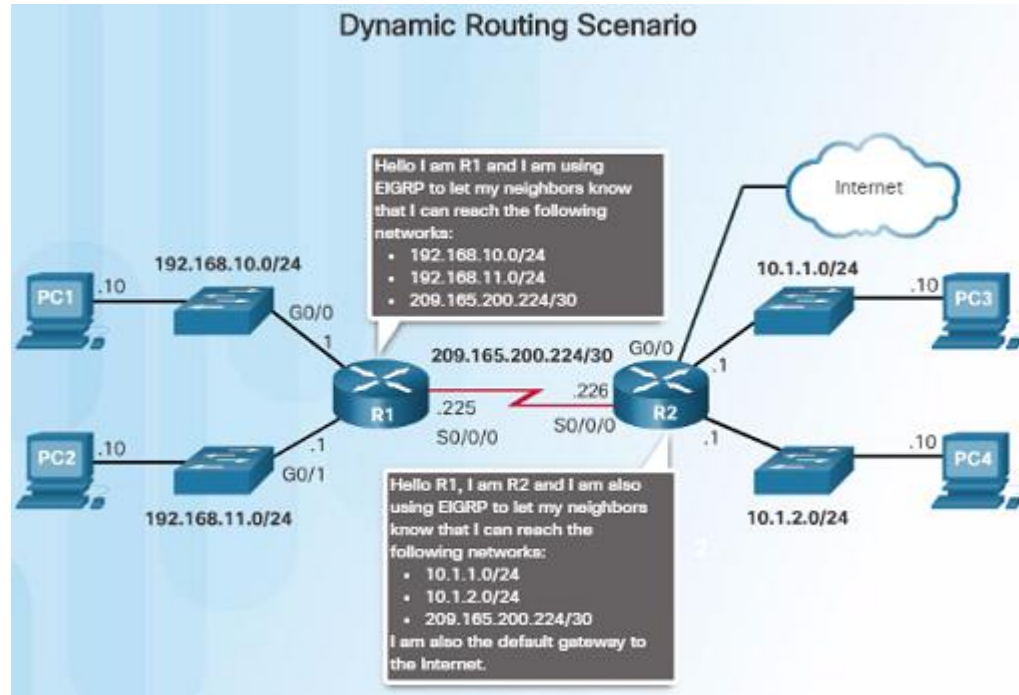


- Dynamic routing protocols are used by routers to share information about the reachability and status of remote networks.
- Rather than manually configuring static routes, dynamic routing protocols use network discovery to share information about the networks that it knows about with other routers that are using the same routing protocol.
  - Routers automatically learn about remote networks from other routers
  - These networks and the best path to each are added to the routing table of the router.
- Routers have converged after they have finished exchanging and updating their routing tables. Routers then maintain the networks in their routing tables.



# Dynamic Routing Protocols

## IPv4 Routing Protocols

Supported IPv4 Routing Protocols

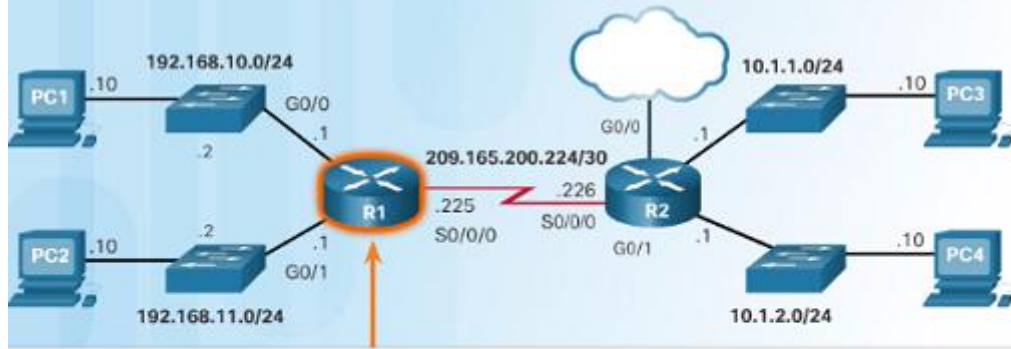

```
R1(config)# router ?
  bgp      Border Gateway Protocol (BGP)
  eigrp     Enhanced Interior Gateway Routing Protocol (EIGRP)
  isis      ISO IS-IS
  iso-igrp  IGRP for OSI networks
  mobile    Mobile routes
  odr       On Demand stub Routes
  ospf      Open Shortest Path First (OSPF)
  ospfv3    OSPFv3
  rip       Routing Information Protocol (RIP)

R1(config)# router
```

- One of the major advantages of dynamic routing protocols over static routes - determine a new best path if the initial path becomes unusable.
- Dynamic routing protocols can adjust to topology changes without involving the network administrator.
- Cisco routers support a variety of IPv4 routing protocols including:
  - EIGRP
  - OSPF
  - IS-IS
  - RIP
  - Use **router ?** in global config mode to see the complete list.

