



# **Network management**

## **ONTAP 9**

NetApp  
July 15, 2021

This PDF was generated from [https://docs.netapp.com/us-en/ontap/concept\\_admin\\_viewing\\_managing\\_network.html](https://docs.netapp.com/us-en/ontap/concept_admin_viewing_managing_network.html) on July 15, 2021. Always check docs.netapp.com for the latest.

# Table of Contents

- ONTAP 9 Network Management Documentation . . . . . 1
  - Viewing and managing your network . . . . . 1
  - Downloading network data for reporting . . . . . 3
  - Set up NAS path failover (ONTAP 9.8 and later CLI) . . . . . 3
  - Set up NAS path failover (ONTAP 9.0 - 9.7 CLI) . . . . . 25
- ONTAP 9 Networking Reference . . . . . 48

# ONTAP 9 Network Management Documentation

ONTAP System Manager enables rich networking visualization and the ability to download consolidated data about your network. You can learn more in the following topics:

- [View and manage your network](#)
- [Download network data for reporting](#)

You can also set up and manage your network with the ONTAP CLI. The ONTAP 9 CLI network management documentation consists of three main areas:

## [Set up NAS path failover for ONTAP 9.8 and later](#)

Learn how to set up NAS path failover using established best practices in ONTAP 9.8 and later

## [Set up NAS path failover for ONTAP 9.7 and earlier](#)

Learn how to set up NAS path failover using established best practices in ONTAP 9.7 and earlier.

## [Networking reference](#)

The networking reference documentation describes how to configure and manage physical and virtual network ports (VLANs and interface groups), LIFs using IPv4 and IPv6, routing, and host-resolution services in clusters; optimize network traffic by load balancing; and monitor the cluster by using SNMP. Unless otherwise stated, this content applies to all versions of ONTAP 9.

## Viewing and managing your network

Starting with System Manager 9.8, you can display a graphic that shows the components and configuration of your network.

The new network visualization feature enables users to see the network connections path across hosts, ports, SVMs, volumes, etc. in a graphical interface.


# ONTAP System Manager 9.8

Network Visualization



## Tech Clip



The graphic displays when you select **Network > Overview** or when you select  from the **Network** section of the Dashboard.


The following categories of components are shown in the graphic:

- Hosts
- Storage ports
- Network interfaces
- Storage VMs
- Data access components

Each section shows additional details that you can hover your mouse over or select to perform network management and configuration tasks.

## Examples

The following are some examples of the many ways you can interact with the graphic to view details about each component or initiate actions to manage your network:

- Click on a host to see its configuration: the ports, network interfaces, storage VMs, and data access components associated with it.
- Hover the mouse over the number of volumes in a storage VM to select a volume to view its details.
- Select an iSCSI interface to view its performance over the last week.
- Click on  next to a component to initiate actions to modify that component.
- Quickly determine where problems might occur in your network, indicated by an "X" next to unhealthy components.

# Downloading network data for reporting

Starting with System Manager 9.8, you can download the data that is displayed in System Manager about your network.

When you display information in a *List View*, you can click **Download**, and the list of objects displayed is downloaded.

- The list is downloaded in comma-separated values (CSV) format.
- Only the data in the visible columns is downloaded.
- The CSV filename is formatted with the object name and a time stamp.

## Set up NAS path failover (ONTAP 9.8 and later CLI)

This workflow guides you through the networking configuration steps to set up NAS path failover for ONTAP 9.8 and later. This workflow assumes the following:

- You want to use NAS path failover best practices in a workflow that simplifies network configuration.
- You want to use the CLI, not ONTAP System Manager.
- You are configuring networking on a new system running ONTAP 9.8 or later.

If you are running an ONTAP release earlier than 9.8, you should use the following NAS path failover procedure for ONTAP 9.0 to 9.7:

- [ONTAP 9.0 - 9.7 NAS Path Failover Workflow](#)

If you want network management details, you should use the following ONTAP 9 Network Management Reference:

- [ONTAP 9 Network Management Reference](#)

If you want to use ONTAP System Manager to configure the network for ONTAP 9.7 and later, you should choose the following documentation:

- [ONTAP System Manager docs](#)

If you want to use OnCommand System Manager to configure the network for ONTAP 9.7 and earlier, you should choose the following documentation:

- [Cluster management using System Manager](#)

If you require additional configuration or conceptual information, you should choose among the following documentation:

- Conceptual background for network configuration
  - [ONTAP concepts](#)
- NAS file access
  - [NFS management](#)
  - [SMB/CIFS management](#)


- SAN host provisioning
  - [SAN administration](#)
- Command reference
  - [ONTAP 9 commands](#)
- Technical Reports (TRs), which include additional information about ONTAP technology and interaction with external services
  - [NetApp Technical Report 4182: Ethernet Storage Design Considerations and Best Practices for Clustered Data ONTAP Configurations](#)

## Workflow NAS path failover

### Overview

If you are already familiar with basic networking concepts, you might be able to save time setting up your network by reviewing this "hands on" workflow for NAS path failover configuration.

A NAS LIF automatically migrates to a surviving network port after a link failure on its current port. You can rely on the ONTAP defaults to manage path failover.

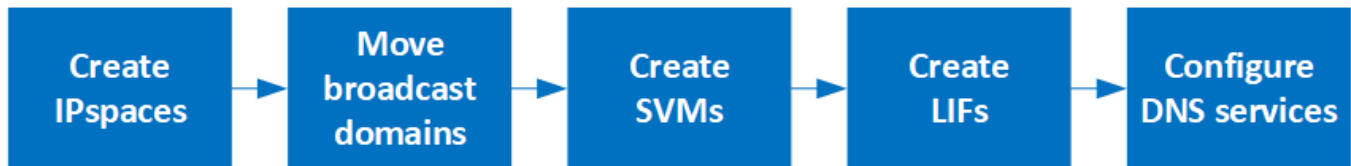

A SAN LIF does not migrate (unless you move it manually after the link failure). Instead, multipathing technology on the host diverts traffic to a different LIF. For more information, see [SAN administration](#).

### Worksheet for NAS path failover configuration for ONTAP 9.8 and later

You should complete all sections of the worksheet before configuring NAS path failover.

#### IPspace configuration

You can use an IPspace to create a distinct IP address space for each SVM in a cluster. Doing so enables clients in administratively separate network domains to access cluster data while using overlapping IP addresses from the same IP address subnet range.

Information	Required?	Your values
IPspace name The unique identifier of the IPspace.	Yes	

#### Broadcast domain configuration

A broadcast domain groups ports that belong in the same Layer 2 network and sets the MTU for the broadcast domain ports.

Broadcast domains are assigned to an IPspace. An IPspace can contain one or more broadcast domains.



The port to which a LIF fails over must be a member of the failover group for the LIF. For each broadcast domain created by ONTAP, a failover group with the same name is also created that contains all the ports in the broadcast domain.

Information	Required?	Your values
<b>IPspace name</b> The IPspace to which the broadcast domain is assigned.  This IPspace must exist.	Yes	
<b>Broadcast domain name</b> The name of the broadcast domain.  This name must be unique in the IPspace.	Yes	
<b>MTU</b> The maximum transmission unit value for the broadcast domain, either <b>1500</b> or <b>9000</b> .  The MTU value is applied to all ports in the broadcast domain and to any ports that are later added to the broadcast domain.  The MTU value must match all the devices connected to that network except for e0M port handling management traffic.	Yes	
<b>Ports</b> Ports are assigned to broadcast domains based on reachability. After port assignment is complete, check reachability by running the <code>network port reachability show</code> command.  These ports can be physical ports, VLANs, or interface groups.	Yes	

### Subnet configuration

A subnet contains pools of IP addresses and a default gateway that can be assigned to LIFs used by SVMs residing in the IPspace.

- When creating a LIF on an SVM, you can specify the name of the subnet instead of supplying an IP address and a subnet.
- Since a subnet can be configured with a default gateway, you do not have to create the default gateway in a separate step when creating an SVM.
- A broadcast domain can contain one or more subnets.
- You can configure SVM LIFs that are on different subnets by associating more than one subnet with the IPspace's broadcast domain.
- Each subnet must contain IP addresses that do not overlap with IP addresses assigned to other subnets in the same IPspace.
- You can assign specific IP addresses to SVM data LIFs and create a default gateway for the SVM instead of using a subnet.

Information	Required?	Your values
<p>IPspace name The IPspace to which the subnet will be assigned.</p> <p>This IPspace must exist.</p>	Yes	
<p>Subnet name The name of the subnet.</p> <p>This name must be unique in the IPspace.</p>	Yes	
<p>Broadcast domain name The broadcast domain to which the subnet will be assigned.</p> <p>This broadcast domain must reside in the specified IPspace.</p>	Yes	
<p>Subnet name and mask The subnet and mask in which the IP addresses reside.</p>	Yes	
<p>Gateway You can specify a default gateway for the subnet.</p> <p>If you do not assign a gateway when you create the subnet, you can assign one later.</p>	No	



Information	Required?	Your values
<p>IP address ranges</p> <p>You can specify a range of IP addresses or specific IP addresses.</p> <p>For example, you can specify a range such as:</p> <p>192.168.1.1-192.168.1.100, 192.168.1.112, 192.168.1.145</p> <p>If you do not specify an IP address range, the entire range of IP addresses in the specified subnet are available to assign to LIFs.</p>	No	
<p>Force update of LIF associations</p> <p>Specifies whether to force the update of existing LIF associations.</p> <p>By default, subnet creation fails if any service processor interfaces or network interfaces are using the IP addresses in the ranges provided.</p> <p>Using this parameter associates any manually addressed interfaces with the subnet and allows the command to succeed.</p>	No	

### SVM configuration

You use SVMs to serve data to clients and hosts.

The values you record are for creating a default data SVM. If you are creating a MetroCluster source SVM, see the [Fabric-attached MetroCluster Installation and Configuration Guide](#) or the [Stretch MetroCluster Installation and Configuration Guide](#).

Information	Required?	Your values
<p>SVM name</p> <p>The fully qualified domain name (FQDN) of the SVM.</p> <p>This name must be unique across cluster leagues.</p>	Yes	
<p>Root volume name</p> <p>The name of the SVM root volume.</p>	Yes	

Information	Required?	Your values
<p>Aggregate name The name of the aggregate that holds the SVM root volume.</p> <p>This aggregate must exist.</p>	Yes	
<p>Security style The security style for the SVM root volume.</p> <p>Possible values are <b>ntfs</b>, <b>unix</b>, and <b>mixed</b>.</p>	Yes	
<p>IPspace name The IPspace to which the SVM is assigned.</p> <p>This IPspace must exist.</p>	No	
<p>SVM language setting The default language to use for the SVM and its volumes.</p> <p>If you do not specify a default language, the default SVM language is set to <b>C.UTF-8</b>.</p> <p>The SVM language setting determines the character set used to display file names and data for all NAS volumes in the SVM.</p> <p>You can modify The language after the SVM is created.</p>	No	

#### LIF configuration

An SVM serves data to clients and hosts through one or more network logical interfaces (LIFs).

Information	Required?	Your values
<p>SVM name The name of the SVM for the LIF.</p>	Yes	

Information	Required?	Your values
<p>LIF name The name of the LIF.</p> <p>You can assign multiple data LIFs per node, and you can assign LIFs to any node in the cluster, provided that the node has available data ports.</p> <p>To provide redundancy, you should create at least two data LIFs for each data subnet, and the LIFs assigned to a particular subnet should be assigned home ports on different nodes.</p> <p><b>Important:</b> If you are configuring a SMB server to host Hyper-V or SQL Server over SMB for nondisruptive operation solutions, the SVM must have at least one data LIF on every node in the cluster.</p>	Yes	
<p>Service policy Service policy for the LIF.</p> <p>The service policy defines which network services can use the LIF. Built-in services and service policies are available for managing data and management traffic on both data and system SVMs.</p>	Yes	
<p>Allowed protocols IP-based LIFs do not require allowed protocols, use the service policy row instead.</p> <p>Specify allowed protocols for SAN LIFs on FibreChannel ports. These are the protocols that can use that LIF. The protocols that use the LIF cannot be modified after the LIF is created. You should specify all protocols when you configure the LIF.</p>	No	

Information	Required?	Your values
<p>Home node The node to which the LIF returns when the LIF is reverted to its home port.</p> <p>You should record a home node for each data LIF.</p>	Yes	
<p>Home port or broadcast domain Chose one of the following:</p> <p><b>Port:</b> Specify the port to which the logical interface returns when the LIF is reverted to its home port. This is only done for the first LIF in the subnet of an IPspace, otherwise it is not required.</p> <p><b>Broadcast Domain:</b> Specify the broadcast domain, and the system will select the appropriate port to which the logical interface returns when the LIF is reverted to its home port.</p>	Yes	
<p>Subnet name The subnet to assign to the SVM.</p> <p>All data LIFs used to create continuously available SMB connections to application servers must be on the same subnet.</p>	Yes (if using a subnet)	

### DNS configuration

You must configure DNS on the SVM before creating an NFS or SMB server.

Information	Required?	Your values
<p>SVM name The name of the SVM on which you want to create an NFS or SMB server.</p>	Yes	
<p>DNS domain name A list of domain names to append to a host name when performing host- to-IP name resolution.</p> <p>List the local domain first, followed by the domain names for which DNS queries are most often made.</p>	Yes	

Information	Required?	Your values
<p>IP addresses of the DNS servers List of IP addresses for the DNS servers that will provide name resolution for the NFS or SMB server.</p> <p>The listed DNS servers must contain the service location records (SRV) needed to locate the Active Directory LDAP servers and domain controllers for the domain that the SMB server will join.</p> <p>The SRV record is used to map the name of a service to the DNS computer name of a server that offers that service. SMB server creation fails if ONTAP cannot obtain the service location records through local DNS queries.</p> <p>The simplest way to ensure that ONTAP can locate the Active Directory SRV records is to configure Active Directory-integrated DNS servers as the SVM DNS servers.</p> <p>You can use non-Active Directory-integrated DNS servers provided that the DNS administrator has manually added the SRV records to the DNS zone that contains information about the Active Directory domain controllers.</p> <p>For information about the Active Directory-integrated SRV records, see the topic <a href="#">How DNS Support for Active Directory Works on Microsoft TechNet</a>.</p>	Yes	

### Dynamic DNS configuration

Before you can use dynamic DNS to automatically add DNS entries to your Active Directory- integrated DNS servers, you must configure dynamic DNS (DDNS) on the SVM.

DNS records are created for every data LIF on the SVM. By creating multiple data LIFS on the SVM, you can load-balance client connections to the assigned data IP addresses. DNS load balances connections that are made using the host name to the assigned IP addresses in a round- robin fashion.

Information	Required?	Your values
SVM name The SVM on which you want to create an NFS or SMB server.	Yes	
Whether to use DDNS Specifies whether to use DDNS.  The DNS servers configured on the SVM must support DDNS. By default, DDNS is disabled.	Yes	
Whether to use secure DDNS Secure DDNS is supported only with Active Directory-integrated DNS.  If your Active Directory-integrated DNS allows only secure DDNS updates, the value for this parameter must be true.  By default, secure DDNS is disabled.  Secure DDNS can be enabled only after a SMB server or an Active Directory account has been created for the SVM.	No	
FQDN of the DNS domain The FQDN of the DNS domain.  You must use the same domain name configured for DNS name services on the SVM.	No	

## Create IPspaces

You can use an IPspace to create a distinct IP address space for each SVM in a cluster. Doing so enables clients in administratively separate network domains to access cluster data while using overlapping IP addresses from the same IP address subnet range.

### Before you begin

You must be a cluster administrator to perform this task.

### Step

Create an IPspace.

```
network ipspace create -ipspace ipspace1
```

```
network ipspace show
```

IPspace	Vserver List	Broadcast Domains
Cluster	Cluster	Cluster
Default	Cluster1	Default
ipspace1	ipspace1	-

The IPspace is created, along with the system SVM for the IPspace. The system SVM carries management traffic.

### Move broadcast domains into IPspaces

Move the broadcast domains that the system created based on layer 2 reachability into the IPspaces you created.

Before you move the broadcast domain, you must verify the reachability of the ports in your broadcast domains.

The automatic scanning of ports can determine which ports can reach each other and place them in the same broadcast domain, but this scanning is unable to determine the appropriate IPspace. If the broadcast domain belongs in a non-default IPspace, then you must move it manually using the steps in this section.

### Before you begin

Broadcast domains are automatically configured as part of cluster create and join operations. ONTAP defines the "Default" broadcast domain to be the set of ports that have layer 2 connectivity to the home port of the management interface on the first node created in the cluster. Other broadcast domains are created, if necessary, and are named **Default-1**, **Default-2**, and so forth.

When a node joins an existing cluster, their network ports automatically join existing broadcast domains based on their layer 2 reachability. If they do not have reachability to an existing broadcast domain, the ports are placed into one or more new broadcast domains.

### About this task

- Ports with cluster LIFs are automatically placed into the "Cluster" IPspace.
- Ports with reachability to the home port of the node-management LIF are placed into the "Default" broadcast domain.
- Other broadcast domains are created by ONTAP automatically as part of the cluster create or join operation.
- As you add VLANs and interface groups, they are automatically placed into the appropriate broadcast domain about a minute after they are created.

### Steps

1. Verify the reachability of the ports in your broadcast domains. ONTAP automatically monitors layer 2 reachability. Use the following command to verify each port has been added to a broadcast domain and has "ok" reachability.

```
network port reachability show -detail
```

2. If necessary, move broadcast domains into other IPspaces:

```
network port broadcast-domain move
```

For example, if you want to move a broadcast domain from "Default" to "ips1":

```
network port broadcast-domain move -ipspace Default -broadcast-domain Default  
-to-ipspace ips1
```

## Repair port reachability

Broadcast domains are automatically created. However, if a port is recabled, or the switch configuration changes, a port might need to be repaired into a different broadcast domain (new or existing).

### Before you begin

You must be a cluster administrator to perform this task.

### About this task

A command is available to automatically repair the broadcast domain configuration for a port based on the layer 2 reachability detected by ONTAP.

### Steps


1. Check your switch configuration and cabling.
2. Check the reachability of the port:

```
network port reachability show -detail -node -port
```

The command output contains reachability results.

3. Use the following decision tree and table to understand the reachability results and determine what, if anything, to do next.



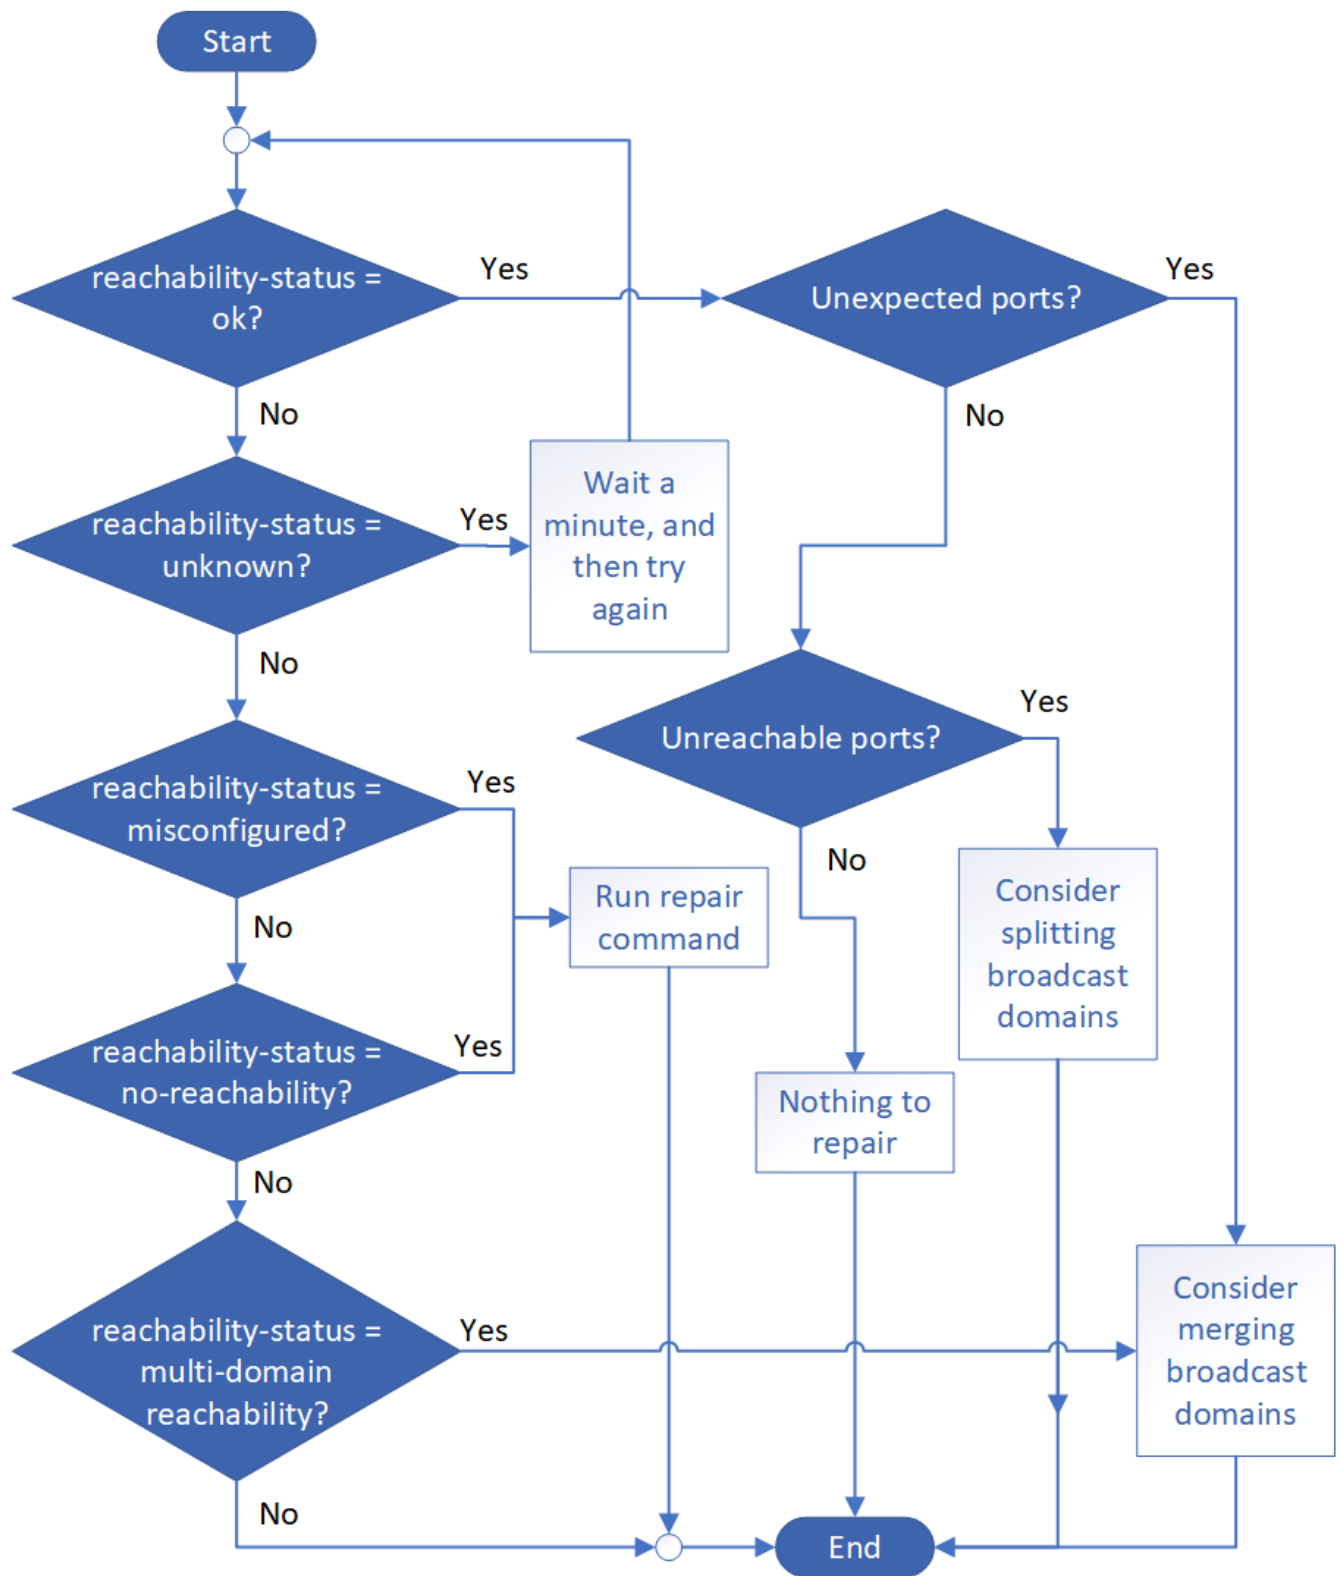

Reachability-status	Description
ok	<p>The port has layer 2 reachability to its assigned broadcast domain.</p> <p>If the reachability-status is "ok", but there are "unexpected ports", consider merging one or more broadcast domains. For more information, see the following <i>Unexpected ports</i> row.</p> <p>If the reachability-status is "ok", but there are "unreachable ports", consider splitting one or more broadcast domains. For more information, see the following <i>Unreachable ports</i> row.</p> <p>If the reachability-status is "ok", and there are no unexpected or unreachable ports, your configuration is correct.</p>
Unexpected ports	<p>The port has layer 2 reachability to its assigned broadcast domain; however, it also has layer 2 reachability to at least one other broadcast domain.</p> <p>Examine the physical connectivity and switch configuration to determine if it is incorrect or if the port's assigned broadcast domain needs to be merged with one or more broadcast domains.</p> <p>For more information, see <a href="#">Merge broadcast domains</a>.</p>
Unreachable ports	<p>If a single broadcast domain has become partitioned into two different reachability sets, you can split a broadcast domain to synchronize the ONTAP configuration with the physical network topology.</p> <p>Typically, the list of unreachable ports defines the set of ports that should be split into another broadcast domain after you have verified that the physical and switch configuration is accurate.</p> <p>For more information, see <a href="#">Split broadcast domains</a>.</p>
misconfigured-reachability	<p>The port does not have layer 2 reachability to its assigned broadcast domain; however, the port does have layer 2 reachability to a different broadcast domain.</p> <p>You can repair the port reachability. When you run the following command, the system will assign the port to the broadcast domain to which it has reachability:</p> <pre>network port reachability repair -node -port</pre>

Reachability-status	Description
no-reachability	<p>The port does not have layer 2 reachability to any existing broadcast domain.</p> <p>You can repair the port reachability. When you run the following command, the system will assign the port to a new automatically created broadcast domain in the Default IPspace:</p> <pre>network port reachability repair -node -port</pre>
multi-domain-reachability	<p>The port has layer 2 reachability to its assigned broadcast domain; however, it also has layer 2 reachability to at least one other broadcast domain.</p> <p>Examine the physical connectivity and switch configuration to determine if it is incorrect or if the port's assigned broadcast domain needs to be merged with one or more broadcast domains.</p> <p>For more information, see <a href="#">Merge broadcast domains</a>.</p>
unknown	<p>If the reachability-status is "unknown", then wait a few minutes and try the command again.</p>

After you repair a port, check for displaced LIFs and VLANs. If the port was part of an interface group, you also need to understand what happened to that interface group.

## LIFs

When a port is repaired and moved into a different broadcast domain, any LIFs that were configured on the repaired port will be automatically assigned a new home port. That home port is selected from the same broadcast domain on the same node, if possible. Alternatively, a home port from another node is selected, or, if no suitable home ports exist, the home port will be cleared.

If a LIF's home port is moved to another node, or is cleared, then the LIF is considered to have been "displaced". You can view these displaced LIFs with the following command:

```
displaced-interface show
```

If there are any displaced LIFs, you must either:

- Restore the home of the displaced LIF:

```
displaced-interface restore
```

- Set the home of the LIF manually:

```
network interface modify -home-port -home-node
```

- Remove the entry from the "displaced-interface" table if you are satisfied with the LIF's currently configured

home:

```
displaced-interface delete
```

## VLANs

If the repaired port had VLANs, those VLANs are automatically deleted but are also recorded as having been "displaced". You can view these displaced VLANs:

```
displaced-vlans show
```

If there are any displaced VLANs, you must either:

- Restore the VLANs to another port:

```
displaced-vlans restore
```

- Remove the entry from the "displaced-vlans" table:

```
displaced-vlans delete
```

## Interface groups

If the repaired port was part of an interface group, it is removed from that interface group. If it was the only member port assigned to the interface group, the interface group itself is removed.

## Related topics

[Verify your network configuration after upgrading](#)

[Monitor the reachability of network ports](#)

## Create SVMs

You must create an SVM to serve data to clients.

### Before you begin

- You must be a cluster administrator to perform this task.
- You must know which security style the SVM root volume will have.

If you plan to implement a Hyper-V or SQL Server over SMB solution on this SVM, you should use NTFS security style for the root volume. Volumes that contain Hyper-V files or SQL database files must be set to NTFS security at the time they are created. By setting the root volume security style to NTFS, you ensure that you do not inadvertently create UNIX or mixed security-style data volumes.

### Steps

1. Determine which aggregates are candidates for containing the SVM root volume.

```
storage aggregate show -has-mroot false
```

You must choose an aggregate that has at least 1 GB of free space to contain the root volume. If you intend to configure NAS auditing on the SVM, you must have a minimum of 3 GB of extra free space on the root aggregate, with the extra space being used to create the auditing staging volume when auditing is

enabled.



If NAS auditing is already enabled on an existing SVM, the aggregate's staging volume is created immediately after aggregate creation is successfully completed.

2. Record the name of the aggregate on which you want to create the SVM root volume.
3. If you plan on specifying a language when you create the SVM and do not know the value to use, identify and record the value of the language you want to specify:

```
vserver create -language ?
```

4. If you plan on specifying a Snapshot policy when you create the SVM and do not know the name of the policy, list the available policies and identify and record the name of the Snapshot policy you want to use:

```
volume snapshot policy show -vserver <vserver_name>
```

5. If you plan on specifying a quota policy when you create the SVM and do not know the name of the policy, list the available policies and identify and record the name of the quota policy you want to use:

```
volume quota policy show -vserver <vserver_name>
```

6. Create an SVM:

```
vserver create -vserver <vserver_name> -aggregate <aggregate_name> -rootvolume  
<root_volume_name> -rootvolume-security-style {unix|ntfs|mixed} [-ipspace  
<IPspace_name>] [-language <language>] [-snapshot-policy  
<snapshot_policy_name>] [-quota-policy <quota_policy_name>] [-comment  
<comment>]
```

```
vserver create -vserver vs1 -aggregate aggr3 -rootvolume vs1_root -rootvolume-  
security-style ntfs -ipspace ipspace1 -language en_US.UTF-8
```

```
[Job 72] Job succeeded: Vserver creation completed
```

7. Verify that the SVM configuration is correct.

```
vserver show -vserver vs1
```

```
Vserver: vs1
Vserver Type: data
Vserver Subtype: default
Vserver UUID: 11111111-1111-1111-1111-111111111111
Root Volume: vs1_root
Aggregate: aggr3
NIS Domain: -
Root Volume Security Style: ntfs
LDAP Client: -
Default Volume Language Code: en_US.UTF-8
Snapshot Policy: default
Comment:
Quota Policy: default
List of Aggregates Assigned: -
Limit on Maximum Number of Volumes allowed: unlimited
Vserver Admin State: running
Vserver Operational State: running
Vserver Operational State Stopped Reason: -
Allowed Protocols: nfs, cifs, ndmp
Disallowed Protocols: fcp, iscsi
QoS Policy Group: -
Config Lock: false
IPspace Name: ipspace1
Is Vserver Protected: false
```

In this example, the command creates the SVM named "vs1" in IPspace "ipspace1". The root volume is named "vs1\_root" and is created on aggr3 with NTFS security style.

## Create LIFs

An SVM serves data to clients through one or more network logical interfaces (LIFs). You must create LIFs on the ports you want to use to access data.

### Before you begin

You must be a cluster administrator to perform this task.

### About this task

Starting with ONTAP 9.7, ONTAP automatically chooses the home port of a LIF, as long as at least one LIF already exists in the same subnet in that IPspace. ONTAP chooses a home-port in the same broadcast domain as other LIFs in that subnet. You can still specify a home port, but it is no longer required (unless no LIFs yet exist in that subnet in the specified IPspace).

You should not configure LIFs that carry CIFS traffic to automatically revert to their home nodes. This recommendation is mandatory if the CIFS server is to host a solution for nondisruptive operations with Hyper-V or SQL Server over SMB.

## Steps

1. Determine which broadcast domain ports you want to use for the LIF.

```
network port broadcast-domain show -ipspace ipspace1
```

IPspace Name	Broadcast Domain name	MTU	Port List	Update Status	Details
ipspace1	default	1500	node1:e0d node1:e0e node2:e0d node2:e0e	complete complete complete complete	

2. Verify that the subnet you want to use for the LIFs contains sufficient unused IP addresses.

```
network subnet show -ipspace ipspace1
```

3. Create one or more LIFs on the ports you want to use to access data.

```
network interface create -vserver vs1 -lif lif1 -home-node node1 -home-port e0d -service-policy default-data-files -subnet-name ipspace1
```

4. Verify that the LIF interface configuration is correct.

```
network interface show -vserver vs1
```

Vserver	Logical Interface	Status Admin/Oper	Network Address/Mask	Current Node	Current Port	Is Home
vs1	lif1	up/up	10.0.0.128/24	node1	e0d	true

5. Verify that the failover group configuration is as desired.

```
network interface show -failover -vserver vs1
```

Vserver	Logical interface	Home Node:Port	Failover Policy	Failover Group
vs1	lif1	node1:e0d	system-defined	ipspace1
Failover Targets: node1:e0d, node1:e0e, node2:e0d, node2:e0e				

## Configure DNS services

You must configure DNS services for the SVM before creating an NFS or SMB server. Generally, the DNS name servers are the Active Directory-integrated DNS servers for the domain that the NFS or SMB server will join.

### About this task

Active Directory-integrated DNS servers contain the service location records (SRV) for the domain LDAP and domain controller servers. If the SVM cannot find the Active Directory LDAP servers and domain controllers, NFS or SMB server setup fails.

SVMs use the hosts name services ns-switch database to determine which name services to use and in which order when looking up information about hosts. The two supported name services for the hosts database are files and dns.

You must ensure that dns is one of the sources before you create the SMB server.



To view the statistics for DNS name services for the mgwd process and SecD process, use the Statistics UI.

### Steps

1. Determine what the current configuration is for the hosts name services database. In this example, the hosts name service database uses the default settings.

```
vserver services name-service ns-switch show -vserver vs1 -database hosts
```

```
Vserver: vs1
Name Service Switch Database: hosts
Vserver: vs1 Name Service Switch Database: hosts
Name Service Source Order: files, dns
```

2. Perform the following actions, if required.
  - a. Add the DNS name service to the hosts name service database in the desired order, or reorder the sources.

In this example, the hosts database is configured to use DNS and local files in that order.

```
vserver services name-service ns-switch modify -vserver vs1 -database hosts
-sources dns,files
```

- b. Verify that the name services configuration is correct.

```
vserver services name-service ns-switch show -vserver vs1 -database hosts
```

```
Vserver: vs1
Name Service Switch Database: hosts
Name Service Source Order: dns, files
```



### 3. Configure DNS services.

```
vserver services name-service dns create -vserver vs1 -domains  
example.com,example2.com -name-servers 10.0.0.50,10.0.0.51
```



The `vserver services name-service dns create` command performs an automatic configuration validation and reports an error message if ONTAP is unable to contact the name server.

### 4. Verify that the DNS configuration is correct and that the service is enabled.

```
Vserver: vs1  
Domains: example.com, example2.com Name Servers: 10.0.0.50, 10.0.0.51  
Enable/Disable DNS: enabled Timeout (secs): 2  
Maximum Attempts: 1
```

### 5. Validate the status of the name servers.

```
vserver services name-service dns check -vserver vs1
```

Vserver	Name Server	Status	Status Details
vs1	10.0.0.50	up	Response time (msec): 2
vs1	10.0.0.51	up	Response time (msec): 2

## Configure dynamic DNS on the SVM

If you want the Active Directory-integrated DNS server to dynamically register the DNS records of an NFS or SMB server in DNS, you must configure dynamic DNS (DDNS) on the SVM.

### Before you begin

DNS name services must be configured on the SVM. If you are using secure DDNS, you must use Active Directory-integrated DNS name servers and you must have created either an NFS or SMB server or an Active Directory account for the SVM.

### About this task

The specified fully qualified domain name (FQDN) must be unique:

The specified fully qualified domain name (FQDN) must be unique:

- For NFS, the value specified in `-vserver-fqdn` as part of the `vserver services name-service dns dynamic-update` command becomes the registered FQDN for the LIFs.
- For SMB/CIFS, the values specified as the CIFS server NetBIOS name and the CIFS server fully qualified domain name become the registered FQDN for the LIFs. This is not configurable in ONTAP. In the following scenario, the LIF FQDN is "CIFS\_VS1.EXAMPLE.COM":

```
cluster1::> cifs server show -vserver vs1
```

```

Vserver: vs1
CIFS Server NetBIOS Name: CIFS_VS1
NetBIOS Domain/Workgroup Name: EXAMPLE
Fully Qualified Domain Name: EXAMPLE.COM
Organizational Unit: CN=Computers
Default Site Used by LIFs Without Site Membership:
Workgroup Name: -
Kerberos Realm: -
Authentication Style: domain
CIFS Server Administrative Status: up
CIFS Server Description:
List of NetBIOS Aliases: -
```



To avoid a configuration failure of an SVM FQDN that is not compliant to RFC rules for DDNS updates, use an FQDN name that is RFC compliant. For more information, see [RFC 1123](#).

## Steps

1. Configure DDNS on the SVM:

```
vserver services name-service dns dynamic-update modify -vserver vserver_name
-is-enabled true [-use-secure {true|false} -vserver-fqdn
FQDN_used_for_DNS_updates
```

```
vserver services name-service dns dynamic-update modify -vserver vs1 -is
-enabled true - use-secure true -vserver-fqdn vs1.example.com
```

Asterisks cannot be used as part of the customized FQDN. For example, `*.netapp.com` is not valid.

2. Verify that the DDNS configuration is correct:

```
vserver services name-service dns dynamic-update show
```

Vserver	Is-Enabled	Use-Secure	Vserver FQDN	TTL
vs1	true	true	vs1.example.com	24h

## Get more information

You can get help and find more information through various resources, documentation, and forums.

- [Documentation](#) – Release Notes and Guides for this release and previous releases.

- [NetApp TechCommTV](#) – NetApp videos.
- [NetApp resources](#) – Technical Reports and Knowledgebase Articles.
- [NetApp Community](#) – NetApp product and solutions forums.

## Set up NAS path failover (ONTAP 9.0 - 9.7 CLI)

This workflow guides you through the networking configuration steps to set up NAS path failover for ONTAP 9.0 - 9.7. This workflow assumes the following:

- You want to use NAS path failover best practices that simplify network configuration.
- You want to use the CLI, not ONTAP System Manager.
- You are configuring networking on a new system running ONTAP 9.0 to 9.7.

If you are running an ONTAP release later than 9.7, you should use the NAS path failover procedure for ONTAP 9.8 or later:

- [ONTAP 9.8 and later NAS Path Failover Workflow](#)

If you want network management details, you should use the following ONTAP 9 Network Management Reference:

- [ONTAP 9 Network Management Reference](#)

If you want to use ONTAP System Manager to configure the network for ONTAP 9.7 and later, you should choose the following documentation:

- [ONTAP System Manager docs](#)

If you want to use OnCommand System Manager to configure the network for ONTAP 9.7 and earlier, you should choose the following documentation:

- [Cluster management using System Manager](#)

If you require additional configuration or conceptual information, you should choose among the following documentation:

- Conceptual background for network configuration
  - [ONTAP concepts](#)
- NAS file access
  - [NFS management](#)
  - [SMB/CIFS management](#)
- SAN host provisioning
  - [SAN administration](#)
- Command reference
  - [ONTAP 9 commands](#)
- Technical Reports (TRs), which include additional information about ONTAP technology and interaction with external services


- [NetApp Technical Report 4182: Ethernet Storage Design Considerations and Best Practices for Clustered Data ONTAP Configurations](#)

## **Workflow NAS path failover**

### **Overview**

If you are already familiar with basic networking concepts, you might be able to save time setting up your network by reviewing this "hands on" workflow for NAS path failover configuration.

A NAS LIF automatically migrates to a surviving network port after a link failure on its current port. If your network is flat, you can rely on the ONTAP defaults to manage path failover. Otherwise, you should configure path failover following the steps in this workflow.

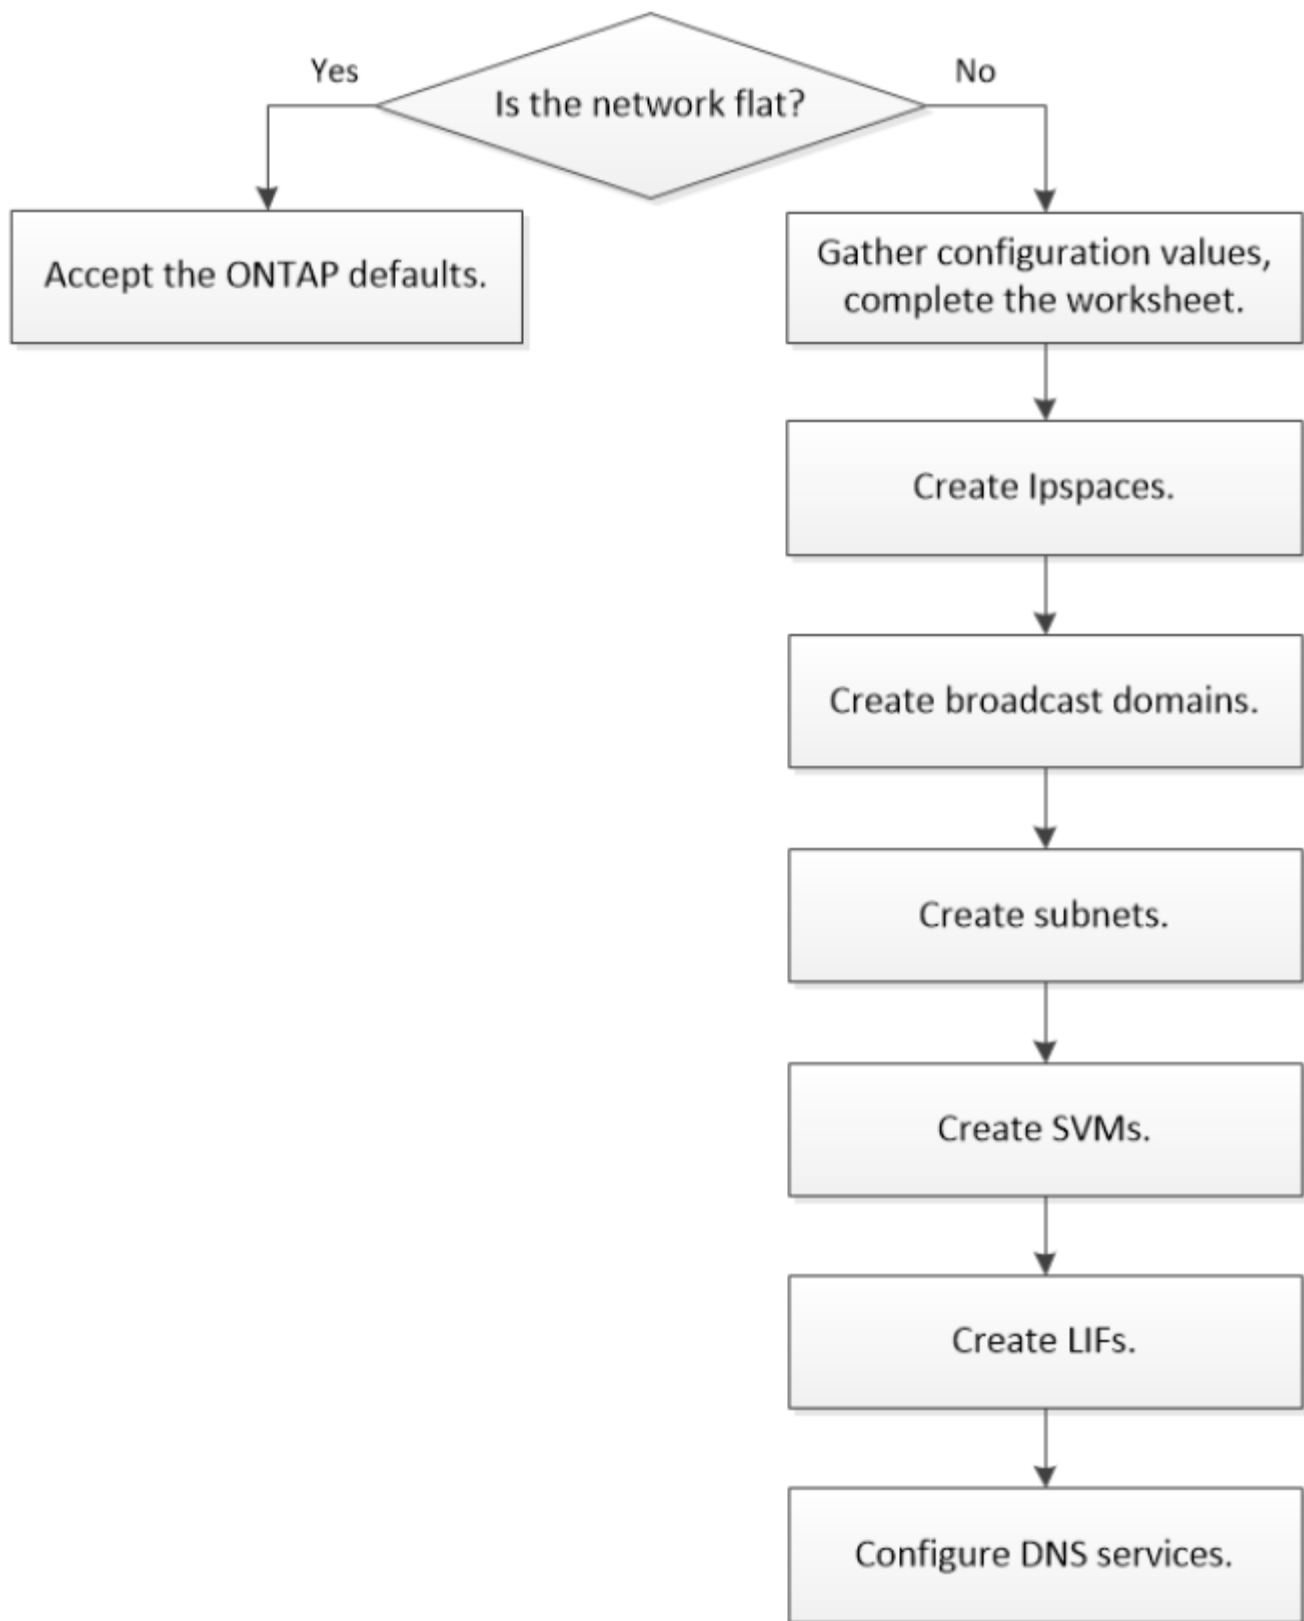

A SAN LIF does not migrate (unless you move it manually after the link failure). Instead, multipathing technology on the host diverts traffic to a different LIF. For more information, see [SAN administration](#).

## Worksheet for NAS path failover configuration for ONTAP 9.0 - 9.7

You should complete all sections of the worksheet before configuring NAS path failover.

### IPspace configuration

You can use an IPspace to create a distinct IP address space for each SVM in a cluster. Doing so enables clients in administratively separate network domains to access cluster data while using overlapping IP addresses from the same IP address subnet range.

Information	Required?	Your values
IPspace name <ul style="list-style-type: none"><li>• The name of the IPspace.</li><li>• The name must be unique in the cluster.</li></ul>	Yes	

### Broadcast domain configuration


A broadcast domain groups ports that belong in the same Layer 2 network and sets the MTU for the broadcast domain ports.

Broadcast domains are assigned to an IPspace. An IPspace can contain one or more broadcast domains.



The port to which a LIF fails over must be a member of the failover group for the LIF. When you create a broadcast domain, ONTAP automatically creates a failover group with the same name. The failover group contains all the ports assigned to the broadcast domain.

Information	Required?	Your values
IPspace name <ul style="list-style-type: none"><li>• The IPspace to which the broadcast domain is assigned.</li><li>• The IPspace must exist.</li></ul>	Yes	
Broadcast domain name <ul style="list-style-type: none"><li>• The name of the broadcast domain.</li><li>• This name must be unique in the IPspace.</li></ul>	Yes	

Information	Required?	Your values
<p>MTU</p> <ul style="list-style-type: none"> <li>The MTU of the broadcast domain.</li> <li>You can specify either <b>1500</b> or <b>9000</b>.</li> <li>The MTU value is applied to all ports in the broadcast domain and to any ports that are later added to the broadcast domain.</li> </ul> <div>  <p>The MTU value must match all the devices connected to that network except for e0M port handling management traffic.</p> </div>	Yes	
<p>Ports</p> <ul style="list-style-type: none"> <li>The network ports to add to the broadcast domain.</li> <li>The ports assigned to the broadcast domain can be physical ports, VLANs, or interface groups (ifgroups).</li> <li>If a port is in another broadcast domain, it must be removed before it can be added to the broadcast domain.</li> <li>Ports are assigned by specifying both the node name and port: for example, node1:e0d.</li> </ul>	Yes	

### Subnet configuration

A subnet contains pools of IP addresses and a default gateway that can be assigned to LIFs used by SVMs residing in the IPspace.

- When creating a LIF on an SVM, you can specify the name of the subnet instead of supplying an IP address and a subnet.
- Since a subnet can be configured with a default gateway, you do not have to create the default gateway in a separate step when creating an SVM.

- A broadcast domain can contain one or more subnets.  
You can configure SVM LIFs that are on different subnets by associating more than one subnet with the IPspace's broadcast domain.
- Each subnet must contain IP addresses that do not overlap with IP addresses assigned to other subnets in the same IPspace.
- You can assign specific IP addresses to SVM data LIFs and create a default gateway for the SVM instead of using a subnet.

Information	Required?	Your values
<b>IPspace name</b> <ul style="list-style-type: none"> <li>• The IPspace to which the subnet will be assigned.</li> <li>• The IPspace must exist.</li> </ul>	Yes	
<b>Subnet name</b> <ul style="list-style-type: none"> <li>• The name of the subnet.</li> <li>• The name must be unique in the IPspace.</li> </ul>	Yes	
<b>Broadcast domain name</b> <ul style="list-style-type: none"> <li>• The broadcast domain to which the subnet will be assigned.</li> <li>• The broadcast domain must reside in the specified IPspace.</li> </ul>	Yes	
<b>Subnet name and mask</b> <ul style="list-style-type: none"> <li>• The subnet and mask in which the IP addresses reside.</li> </ul>	Yes	
<b>Gateway</b> <ul style="list-style-type: none"> <li>• You can specify a default gateway for the subnet.</li> <li>• If you do not assign a gateway when you create the subnet, you can assign one to the subnet at any time.</li> </ul>	No	



Information	Required?	Your values
<p>IP address ranges</p> <ul style="list-style-type: none"> <li>You can specify a range of IP addresses or specific IP addresses. For example, you can specify a range such as: 192.168.1.1–192.168.1.100, 192.168.1.112, 192.168.1.145</li> <li>If you do not specify an IP address range, the entire range of IP addresses in the specified subnet are available to assign to LIFs.</li> </ul>	No	
<p>Force update of LIF associations</p> <ul style="list-style-type: none"> <li>Specifies whether to force the update of existing LIF associations.</li> <li>By default, subnet creation fails if any service processor interfaces or network interfaces are using the IP addresses in the ranges provided.</li> <li>Using this parameter associates any manually addressed interfaces with the subnet and allows the command to succeed.</li> </ul>	No	

### SVM configuration

You use SVMs to serve data to clients and hosts.


The values you record are for creating a default data SVM. If you are creating a MetroCluster source SVM, see the [Fabric-attached MetroCluster Installation and Configuration Guide](#) or the [Stretch MetroCluster Installation and Configuration Guide](#).

Information	Required?	Your values
<p>SVM name</p> <ul style="list-style-type: none"> <li>• The name of the SVM.</li> <li>• You should use a fully qualified domain name (FQDN) to ensure unique SVM names across cluster leagues.</li> </ul>	Yes	
<p>Root volume name</p> <ul style="list-style-type: none"> <li>• The name of the SVM root volume.</li> </ul>	Yes	
<p>Aggregate name</p> <ul style="list-style-type: none"> <li>• The name of the aggregate that holds the SVM root volume.</li> <li>• This aggregate must exist.</li> </ul>	Yes	
<p>Security style</p> <ul style="list-style-type: none"> <li>• The security style for the SVM root volume.</li> <li>• Possible values are <b>ntfs</b>, <b>unix</b>, and <b>mixed</b>.</li> </ul>	Yes	
<p>IPspace name</p> <ul style="list-style-type: none"> <li>• The IPspace to which the SVM is assigned.</li> <li>• This IPspace must exist.</li> </ul>	No	
<p>SVM language setting</p> <ul style="list-style-type: none"> <li>• The default language to use for the SVM and its volumes.</li> <li>• If you do not specify a default language, the default SVM language is set to <b>C.UTF-8</b>.</li> <li>• The SVM language setting determines the character set used to display file names and data for all NAS volumes in the SVM.</li> </ul> <p>You can modify The language after the SVM is created.</p>	No	

## LIF configuration

An SVM serves data to clients and hosts through one or more network logical interfaces (LIFs).

Information	Required?	Your values
<p>SVM name</p> <ul style="list-style-type: none"><li>• The name of the SVM for the LIF.</li></ul>	Yes	
<p>LIF name</p> <ul style="list-style-type: none"><li>• The name of the LIF.</li><li>• You can assign multiple data LIFs per node, and you can assign LIFs to any node in the cluster, provided that the node has available data ports.</li><li>• To provide redundancy, you should create at least two data LIFs for each data subnet, and the LIFs assigned to a particular subnet should be assigned home ports on different nodes.</li></ul> <p><b>Important:</b> If you are configuring a SMB server to host Hyper-V or SQL Server over SMB for nondisruptive operation solutions, the SVM must have at least one data LIF on every node in the cluster.</p>	Yes	
<p>LIF role</p> <ul style="list-style-type: none"><li>• The role of the LIF.</li><li>• Data LIFs are assigned the data role.</li></ul>	Yes Deprecated from ONTAP 9.6	data
<p>Service policy Service policy for the LIF.</p> <p>The service policy defines which network services can use the LIF. Built-in services and service policies are available for managing data and management traffic on both data and system SVMs.</p>	Yes Starting from ONTAP 9.6	

Information	Required?	Your values
<p>Allowed protocols</p> <ul style="list-style-type: none"> <li>• The protocols that can use the LIF.</li> <li>• By default, CIFS, NFS, and FlexCache are allowed. The FlexCache protocol enables a volume to be used as an origin volume for a FlexCache volume on a system running Data ONTAP operating in 7-Mode.</li> </ul> <div>  <p>The protocols that use the LIF cannot be modified after the LIF is created. You should specify all protocols when you configure the LIF.</p> </div>	No	
<p>Home node</p> <ul style="list-style-type: none"> <li>• The node to which the LIF returns when the LIF is reverted to its home port.</li> <li>• You should record a home node for each data LIF.</li> </ul>	Yes	
<p>Home port or broadcast domain</p> <ul style="list-style-type: none"> <li>• The port to which the logical interface returns when the LIF is reverted to its home port.</li> <li>• You should record a home port for each data LIF.</li> </ul>	Yes	

Information	Required?	Your values
Subnet name <ul style="list-style-type: none"> <li>• The subnet to assign to the SVM.</li> <li>• All data LIFs used to create continuously available SMB connections to application servers must be on the same subnet.</li> </ul>	Yes (if using a subnet)	

### DNS configuration

You must configure DNS on the SVM before creating an NFS or SMB server.

Information	Required?	Your values
SVM name <ul style="list-style-type: none"> <li>• The name of the SVM on which you want to create an NFS or SMB server.</li> </ul>	Yes	
DNS domain name <ul style="list-style-type: none"> <li>• A list of domain names to append to a host name when performing host- to-IP name resolution.</li> <li>• List the local domain first, followed by the domain names for which DNS queries are most often made.</li> </ul>	Yes	

Information	Required?	Your values
<p>IP addresses of the DNS servers</p> <p>* List of IP addresses for the DNS servers that will provide name resolution for the NFS or SMB server.</p> <p>* The listed DNS servers must contain the service location records (SRV) needed to locate the Active Directory LDAP servers and domain controllers for the domain that the SMB server will join. The SRV record is used to map the name of a service to the DNS computer name of a server that offers that service. SMB server creation fails if ONTAP cannot obtain the service location records through local DNS queries. The simplest way to ensure that ONTAP can locate the Active Directory SRV records is to configure Active Directory-integrated DNS servers as the SVM DNS servers. You can use non-Active Directory-integrated DNS servers provided that the DNS administrator has manually added the SRV records to the DNS zone that contains information about the Active Directory domain controllers.</p> <p>* For information about the Active Directory-integrated SRV records, see the topic <a href="#">How DNS Support for Active Directory Works on Microsoft TechNet</a>.</p>	Yes	

### Dynamic DNS configuration

Before you can use dynamic DNS to automatically add DNS entries to your Active Directory- integrated DNS servers, you must configure dynamic DNS (DDNS) on the SVM.

DNS records are created for every data LIF on the SVM. By creating multiple data LIFS on the SVM, you can load-balance client connections to the assigned data IP addresses. DNS load balances connections that are made using the host name to the assigned IP addresses in a round- robin fashion.

Information	Required?	Your values
SVM name <ul style="list-style-type: none"> <li>The SVM on which you want to create an NFS or SMB server.</li> </ul>	Yes	
Whether to use DDNS <ul style="list-style-type: none"> <li>Specifies whether to use DDNS.</li> <li>The DNS servers configured on the SVM must support DDNS. By default, DDNS is disabled.</li> </ul>	Yes	
Whether to use secure DDNS <ul style="list-style-type: none"> <li>Secure DDNS is supported only with Active Directory-integrated DNS.</li> <li>If your Active Directory-integrated DNS allows only secure DDNS updates, the value for this parameter must be true.</li> <li>By default, secure DDNS is disabled.</li> <li>Secure DDNS can be enabled only after a SMB server or an Active Directory account has been created for the SVM.</li> </ul>	No	
FQDN of the DNS domain <ul style="list-style-type: none"> <li>The FQDN of the DNS domain.</li> <li>You must use the same domain name configured for DNS name services on the SVM.</li> </ul>	No	

## Create IPspaces

You can use an IPspace to create a distinct IP address space for each SVM in a cluster. Doing so enables clients in administratively separate network domains to access cluster data while using overlapping IP addresses from the same IP address subnet range.

### Before you begin

You must be a cluster administrator to perform this task.

### Step

Create an IPspace.

```
network ipspace create -ipspace ipspace1

network ipspace show
```

IPspace	Vserver List	Broadcast Domains
-----	-----	-----
Cluster	Cluster	Cluster
Default	Cluster1	Default
ipspace1	ipspace1	-

The IPspace is created, along with the system SVM for the IPspace. The system SVM carries management traffic.

Determining which ports can be used for a broadcast domain

Before you can configure a broadcast domain to add to the new IPspace, you must determine what ports are available for the broadcast domain.



This task is relevant for ONTAP 9.0 - 9.7, not ONTAP 9.8.

Before you begin

You must be a cluster administrator to perform this task.

About this task

- Ports can be physical ports, VLANs, or interface groups (ifgroups).
- The ports that you want to add to the new broadcast domain cannot be assigned to an existing broadcast domain.
- If the ports that you want to add to the broadcast domain are already in another broadcast domain (for example, the Default broadcast domain in the Default IPspace), you must remove the ports from that broadcast domain before assigning them to the new broadcast domain.
- Ports that have LIFs assigned to them cannot be removed from a broadcast domain.
- Because the cluster management and node management LIFs are assigned to the Default broadcast domain in the Default IPspace, the ports assigned to these LIFs cannot be removed from the Default broadcast domain.

Steps

1. Determine the current port assignments.

```
network port show
```



Node	Port	IPspace	Broadcast	Domain	Link	MTU	Admin/Oper
-----	----	-----	-----	-----	-----	----	-----
node1							
	e0a	Cluster	Cluster		up	9000	auto/1000
	e0b	Cluster	Cluster		up	9000	auto/1000
	e0c	Default	Default		up	1500	auto/1000
	e0d	Default	Default		up	1500	auto/1000
	e0e	Default	Default		up	1500	auto/1000
	e0f	Default	Default		up	1500	auto/1000
	e0g	Default	Default		up	1500	auto/1000
node2							
	e0a	Cluster	Cluster		up	9000	auto/1000
	e0b	Cluster	Cluster		up	9000	auto/1000
	e0c	Default	Default		up	1500	auto/1000
	e0d	Default	Default		up	1500	auto/1000
	e0e	Default	Default		up	1500	auto/1000
	e0f	Default	Default		up	1500	auto/1000
	e0g	Default	Default		up	1500	auto/1000

In this example, the output from the command provides the following information:

- Ports **e0c**, **e0d**, **e0e**, **e0f**, and **e0g** on each node are assigned to the Default broadcast domain.
- These ports are potentially available to use in the broadcast domain of the IPspace that you want to create.

- Determine which ports in the Default broadcast domain are assigned to LIF interfaces, and therefore cannot be moved to a new broadcast domain.

**network interface show**

Vserver	Logical Interface	Status Admin/Oper	Network Address/Mask	Current Node	Current Port	Is Home
-----	-----	-----	-----	-----	-----	-----
Cluster						
	node1_clus1	up/up	10.0.2.40/24	node1	e0a	true
	node1_clus2	up/up	10.0.2.41/24	node1	e0b	true
	node2_clus1	up/up	10.0.2.42/24	node2	e0a	true
	node2_clus2	up/up	10.0.2.43/24	node2	e0b	true
cluster1						
	cluster_mgmt	up/up	10.0.1.41/24	node1	e0c	true
	node1_mgmt	up/up	10.0.1.42/24	node1	e0c	true
	node2_mgmt	up/up	10.0.1.43/24	node2	e0c	true

In the following example, the output from the command provides the following information:

- The node ports are assigned to port `e0c` on each node and the cluster administrative LIF's home node is on `e0c` on `node1`.
- Ports `e0d`, `e0e`, `e0f`, and `e0g` on each node are not hosting LIFs and can be removed from the Default broadcast domain and then added to a new broadcast domain for the new IPspace.

## Remove ports from a broadcast domain

If the ports that you want to add to the new broadcast domain are already in another broadcast domain, you must remove the ports from that broadcast domain before assigning them to the new broadcast domain.



This task is relevant for ONTAP 9.0 - 9.7, not ONTAP 9.8.

### Before you begin

You must be a cluster administrator to perform this task.

### Steps

1. Remove ports from the broadcast domain specifying the following:
  - IPspace, `Default` in the following sample.
  - Broadcast domain, `Default` in the following sample.
  - Ports, using the node and port syntax, `node1:e0d,node1:e0e,node2:e0d,node2:e0e` in the following sample.

```
network port broadcast-domain remove-ports -ipspace Default
-broadcast-domain Default -ports
node1:e0d,node1:e0e,node2:e0d,node2:e0e
```

2. Verify that the ports were removed from the broadcast domain:

```
network port show
```

## Create a broadcast domain

You must create a broadcast domain for a custom IPspace. The SVMs created in the IPspace use the ports in the broadcast domain.



This task is relevant for ONTAP 9.0 - 9.7, not ONTAP 9.8.

### Before you begin

You must be a cluster administrator to perform this task.

### About this task

The port to which a LIF fails over must be a member of the failover group for the LIF. When you create a broadcast domain, ONTAP automatically creates a failover group with the same name. The failover group contains all the ports assigned to the broadcast domain.

## Steps

1. Create a broadcast domain.

```
network port broadcast-domain create -ipspace ipspace1 -broadcast-domain  
-ipspacel -mtu 1500 -ports node1:e0d,node1:e0e,node2:e0d,node2:e0e
```

2. Verify that the broadcast domain configuration is correct.

- a. Verify the broadcast domain is correct:

```
network port broadcast-domain show
```

- b. Verify the network port is correct:

```
network port show
```

- c. Verify the failover group names and failover targets are correct:

```
network interface failover-groups show
```

## Create a subnet

After you create the broadcast domain, you can create a subnet to allocate specific blocks of IPv4 or IPv6 addresses to be used later when you create LIFs for the SVM.

This enables you to create LIFs more easily by specifying a subnet name instead of having to specify IP address and network mask values for each LIF.

## Before you begin

You must be a cluster administrator to perform this task.

## Steps

1. Create a subnet.

```
network subnet create -broadcast-domain ipspace1 -ipspace ipspace1  
-subnet-name ipspacel -subnet 10.0.0.0/24 -gateway 10.0.0.1 -ip-ranges  
"10.0.0.128-10.0.0.130,10.0.0.132"
```

The subnet name can be either a subnet IP value such as `192.0.2.0/24` or a string such as `ipspacel` like the one used in this example.

2. Verify that the subnet configuration is correct.

The output from this example shows information about the subnet named `ipspace1` in the `ipspace1` IPspace. The subnet belongs to the broadcast domain name `ipspace1`. You can assign the IP addresses in this subnet to data LIFs for SVMs created in the `ipspace1` IPspace.

```
network subnet show -ipspace ipspace1
```

## Create SVMs

You must create an SVM to serve data to clients.

### Before you begin

- You must be a cluster administrator to perform this task.
- You must know which security style the SVM root volume will have.

If you plan to implement a Hyper-V or SQL Server over SMB solution on this SVM, you should use NTFS security style for the root volume. Volumes that contain Hyper-V files or SQL database files must be set to NTFS security at the time they are created. By setting the root volume security style to NTFS, you ensure that you do not inadvertently create UNIX or mixed security-style data volumes.

### Steps

1. Determine which aggregates are candidates for containing the SVM root volume.

```
storage aggregate show -has-mroot false
```

You must choose an aggregate that has at least 1 GB of free space to contain the root volume. If you intend to configure NAS auditing on the SVM, you must have a minimum of 3 GB of extra free space on the root aggregate, with the extra space being used to create the auditing staging volume when auditing is enabled.



If NAS auditing is already enabled on an existing SVM, the aggregate's staging volume is created immediately after aggregate creation is successfully completed.

2. Record the name of the aggregate on which you want to create the SVM root volume.
3. If you plan on specifying a language when you create the SVM and do not know the value to use, identify and record the value of the language you want to specify:

```
vserver create -language ?
```

4. If you plan on specifying a Snapshot policy when you create the SVM and do not know the name of the policy, list the available policies and identify and record the name of the Snapshot policy you want to use:

```
volume snapshot policy show -vserver <vserver_name>
```

5. If you plan on specifying a quota policy when you create the SVM and do not know the name of the policy, list the available policies and identify and record the name of the quota policy you want to use:

```
volume quota policy show -vserver <vserver_name>
```

6. Create an SVM:

```
vserver create -vserver <vserver_name> -aggregate <aggregate_name> -rootvolume  
<root_volume_name> -rootvolume-security-style {unix|ntfs|mixed} [-ipspace  
<IPspace_name>] [-language <language>] [-snapshot-policy  
<snapshot_policy_name>] [-quota-policy <quota_policy_name>] [-comment  
<comment>]
```

```
vserver create -vserver vs1 -aggregate aggr3 -rootvolume vs1_root -rootvolume-  
security-style ntfs -ipspace ipspacel -language en_US.UTF-8
```

[Job 72] Job succeeded: Vserver creation completed

## 7. Verify that the SVM configuration is correct.

```
vserver show -vserver vs1
```

```
Vserver: vs1
Vserver Type: data
Vserver Subtype: default
Vserver UUID: 11111111-1111-1111-1111-111111111111
Root Volume: vs1_root
Aggregate: aggr3
NIS Domain: -
Root Volume Security Style: ntfs
LDAP Client: -
Default Volume Language Code: en_US.UTF-8
Snapshot Policy: default
Comment:
Quota Policy: default
List of Aggregates Assigned: -
Limit on Maximum Number of Volumes allowed: unlimited
Vserver Admin State: running
Vserver Operational State: running
Vserver Operational State Stopped Reason: -
Allowed Protocols: nfs, cifs, ndmp
Disallowed Protocols: fcp, iscsi
QoS Policy Group: -
Config Lock: false
IPspace Name: ipspace1
Is Vserver Protected: false
```

In this example, the command creates the SVM named "vs1" in IPspace "ipspace1". The root volume is named "vs1\_root" and is created on aggr3 with NTFS security style.

## Create LIFs

An SVM serves data to clients through one or more network logical interfaces (LIFs). You must create LIFs on the ports you want to use to access data.

### Before you begin

You must be a cluster administrator to perform this task.

### About this task

Starting with ONTAP 9.7, ONTAP automatically chooses the home port of a LIF, as long as at least one LIF already exists in the same subnet in that IPspace. ONTAP chooses a home-port in the same broadcast domain as other LIFs in that subnet. You can still specify a home port, but it is no longer required (unless no LIFs yet exist in that subnet in the specified IPspace).

You should not configure LIFs that carry CIFS traffic to automatically revert to their home nodes. This recommendation is mandatory if the CIFS server is to host a solution for nondisruptive operations with Hyper-V or SQL Server over SMB.

**Steps**

- 1. Determine which broadcast domain ports you want to use for the LIF.

```
network port broadcast-domain show -ipspace ipspace1
```

IPspace Name	Broadcast Domain name	MTU	Port List	Update Status	Details
ipspace1	default	1500			
			node1:e0d	complete	
			node1:e0e	complete	
			node2:e0d	complete	
			node2:e0e	complete	

- 2. Verify that the subnet you want to use for the LIFs contains sufficient unused IP addresses.

```
network subnet show -ipspace ipspace1
```

- 3. Create one or more LIFs on the ports you want to use to access data.

```
network interface create -vserver vs1 -lif lif1 -home-node node1 -home-port e0d -service-policy default-data-files -subnet-name ipspace1
```

- 4. Verify that the LIF interface configuration is correct.

```
network interface show -vserver vs1
```

Vserver	Logical Interface	Status Admin/Oper	Network Address/Mask	Current Node	Current Port	Is Home
vs1	lif1	up/up	10.0.0.128/24	node1	e0d	true

- 5. Verify that the failover group configuration is as desired.

```
network interface show -failover -vserver vs1
```

Vserver	Logical interface	Home Node:Port	Failover Policy	Failover Group
vs1	lif1	node1:e0d	system-defined	ipspace1

Failover Targets: node1:e0d, node1:e0e, node2:e0d, node2:e0e

## Configure DNS services

You must configure DNS services for the SVM before creating an NFS or CIFS server. Generally, the DNS name servers are the Active Directory-integrated DNS servers for the domain that the NFS or CIFS server will join.

### About this task

Active Directory-integrated DNS servers contain the service location records (SRV) for the domain LDAP and domain controller servers. If the SVM cannot find the Active Directory LDAP servers and domain controllers, NFS or CIFS server setup fails.

SVMs use the hosts name services ns-switch database to determine which name services to use and in which order when looking up information about hosts. The two supported name services for the hosts database are `files` and `dns`.

You must ensure that `dns` is one of the sources before you create the CIFS server.



To view the statistics for DNS name services for the mgwd process and SecD process, use the Statistics UI.

### Steps

1. Determine what the current configuration is for the `hosts` name services database.

In this example, the hosts name service database uses the default settings.

```
vserver services name-service ns-switch show -vserver vs1 -database hosts
```

```
Vserver: vs1
Name Service Switch Database: hosts
Name Service Source Order: files, dns
```

2. Perform the following actions, if required.

- a. Add the DNS name service to the hosts name service database in the desired order, or reorder the sources.

In this example, the hosts database is configured to use DNS and local files in that order.

```
vserver services name-service ns-switch modify -vserver vs1 -database hosts
-sources dns,files
```

b. Verify that the name services configuration is correct.

```
vserver services name-service ns-switch show -vserver vs1 -database hosts
```

3. Configure DNS services.

```
vserver services name-service dns create -vserver vs1 -domains  
example.com,example2.com -name-servers 10.0.0.50,10.0.0.51
```



The `vserver services name-service dns create` command performs an automatic configuration validation and reports an error message if ONTAP is unable to contact the name server.

4. Verify that the DNS configuration is correct and that the service is enabled.

```
Vserver: vs1  
Domains: example.com, example2.com Name  
Servers: 10.0.0.50, 10.0.0.51  
Enable/Disable DNS: enabled Timeout (secs): 2  
Maximum Attempts: 1
```

5. Validate the status of the name servers.

```
vserver services name-service dns check -vserver vs1
```

Vserver	Name Server	Status	Status Details
vs1	10.0.0.50	up	Response time (msec): 2
vs1	10.0.0.51	up	Response time (msec): 2

### Configure dynamic DNS on the SVM

If you want the Active Directory-integrated DNS server to dynamically register the DNS records of an NFS or SMB server in DNS, you must configure dynamic DNS (DDNS) on the SVM.

#### Before you begin

DNS name services must be configured on the SVM. If you are using secure DDNS, you must use Active Directory-integrated DNS name servers and you must have created either an NFS or SMB server or an Active Directory account for the SVM.

#### About this task

The specified fully qualified domain name (FQDN) must be unique:

- For NFS, the value specified in `-vserver-fqdn` as part of the `vserver services name-service dns dynamic-update` command becomes the registered FQDN for the LIFs.
- For SMB/CIFS, the values specified as the CIFS server NetBIOS name and the CIFS server fully qualified domain name become the registered FQDN for the LIFs. This is not configurable in ONTAP. In the following



scenario, the LIF FQDN is "CIFS\_VS1.EXAMPLE.COM":

```
cluster1::> cifs server show -vserver vs1

Vserver: vs1
CIFS Server NetBIOS Name: CIFS_VS1
NetBIOS Domain/Workgroup Name: EXAMPLE
Fully Qualified Domain Name: EXAMPLE.COM
Organizational Unit: CN=Computers
Default Site Used by LIFs Without Site Membership:
Workgroup Name: -
Kerberos Realm: -
Authentication Style: domain
CIFS Server Administrative Status: up
CIFS Server Description:
List of NetBIOS Aliases: -
```



To avoid a configuration failure of an SVM FQDN that is not compliant to RFC rules for DDNS updates, use an FQDN name that is RFC compliant. For more information, see [RFC 1123](#).

## Steps

1. Configure DDNS on the SVM:

```
vserver services name-service dns dynamic-update modify -vserver vserver_name
-is-enabled true [-use-secure {true|false} -vserver-fqdn
FQDN_used_for_DNS_updates
```

```
vserver services name-service dns dynamic-update modify -vserver vs1 -is
-enabled true - use-secure true -vserver-fqdn vs1.example.com
```

Asterisks cannot be used as part of the customized FQDN. For example, \*.netapp.com is not valid.

2. Verify that the DDNS configuration is correct:

```
vserver services name-service dns dynamic-update show
```

Vserver	Is-Enabled	Use-Secure	Vserver FQDN	TTL
vs1	true	true	vs1.example.com	24h

## Configure dynamic DNS services

If you want the Active Directory-integrated DNS server to dynamically register the DNS records of an NFS or SMB server in DNS, you must configure dynamic DNS (DDNS) on

the SVM.

**Before you begin**

DNS name services must be configured on the SVM. If you are using secure DDNS, you must use Active Directory-integrated DNS name servers and you must have created either an NFS or SMB server or an Active Directory account for the SVM.

**About this task**

The specified FQDN must be unique.



To avoid a configuration failure of an SVM FQDN that is not compliant to RFC rules for DDNS updates, use an FQDN name that is RFC compliant.

**Steps**

- 1. Configure DDNS on the SVM:

```
vserver services name-service dns dynamic-update modify -vserver vserver_name
-is-enabled true [-use-secure {true|false} -vserver-fqdn
FQDN_used_for_DNS_updates

vserver services name-service dns dynamic-update modify -vserver vs1 -is
-enabled true - use-secure true -vserver-fqdn vs1.example.com
```

Asterisks cannot be used as part of the customized FQDN. For example, \*.netapp.com is not valid.

- 2. Verify that the DDNS configuration is correct:

```
vserver services name-service dns dynamic-update show
```

Vserver	Is-Enabled	Use-Secure	Vserver FQDN	TTL
vs1	true	true	vs1.example.com	24h

**Get more information**

You can get help and find more information through various resources, documentation, and forums.

- [Documentation](#) – Release Notes and Guides for this release and previous releases.
- [NetApp TechCommTV](#) – NetApp videos.
- [NetApp resources](#) – Technical Reports and Knowledgebase Articles.
- [NetApp Community](#) – NetApp product and solutions forums.

**ONTAP 9 Networking Reference**

This content describes basic storage network administration. It shows you how to configure physical and virtual network ports (VLANs and interface groups), how to create

LIFs using IPv4 and IPv6, how to manage routing and host-resolution services in clusters, how to use load balancing to optimize network traffic, and how to monitor a cluster using SNMP.

Unless otherwise stated, this content applies to all versions of ONTAP 9.

You should use this content under the following circumstances:

- You want to understand the range of ONTAP network management capabilities.
- You want to use the CLI, not ONTAP System Manager.

If you require additional configuration or conceptual information, you should choose among the following documentation:

- Conceptual background for network configuration
  - [ONTAP concepts](#)
- NAS file access
  - [NFS management](#)
  - [SMB/CIFS management](#)
- SAN host provisioning
  - [SAN administration](#)
- Command reference
  - [ONTAP 9 commands](#)
- Technical Reports (TRs), which include additional information about ONTAP technology and interaction with external services
  - [NetApp Technical Report 4182: Ethernet Storage Design Considerations and Best Practices for Clustered Data ONTAP Configurations](#)

## Upgrade considerations

### Network features by release

Analyze the impact of network features available with each ONTAP 9 release.

Available beginning	Feature	Description
ONTAP 9.9.1	Cluster resiliency	<p>The following cluster resiliency and diagnostic improvements improve the customer experience:</p> <ul style="list-style-type: none"> <li>• Port monitoring and avoidance: <ul style="list-style-type: none"> <li>◦ In two-node switchless cluster configurations, the system avoids ports that experience total packet loss (connectivity loss). Previously this functionality was only available in switched configurations.</li> </ul> </li> <li>• Automatic node failover: <ul style="list-style-type: none"> <li>◦ If a node cannot serve data across its cluster network, that node should not own any disks. Instead its HA partner should take over, if the partner is healthy.</li> </ul> </li> <li>• Commands to analyze connectivity issues: <ul style="list-style-type: none"> <li>◦ Use the following command to display which cluster paths are experiencing packet loss:</li> </ul> <pre>network interface check cluster-connectivity show</pre> </li> </ul>

Available beginning	Feature	Description
ONTAP 9.9.1	VIP LIF enhancements	<p>The following fields have been added to extend virtual IP (VIP) border gateway protocol (BGP) functionality:</p> <ul style="list-style-type: none"> <li>• <code>-asn</code> or <code>-peer-asn</code> (4-byte value) The attribute itself is not new, but it now uses a 4-byte integer.</li> <li>• <code>-med</code></li> <li>• <code>-use-peer-as-next-hop</code></li> </ul> <p>The <code>asn_integer</code> parameter specifies the autonomous system number (ASN) or peer ASN.</p> <ul style="list-style-type: none"> <li>• Starting in ONTAP 9.8, ASN for BGP supports a 2-byte non-negative integer. This is a 16-bit number (0 - 64511 available values).</li> <li>• Starting in ONTAP 9.9.1, ASN for BGP supports a 4-byte non-negative integer (65536 - 4294967295). The default ASN is 65501. ASN 23456 is reserved for ONTAP session establishment with peers that do not announce 4-byte ASN capability.</li> </ul> <p>You can make advanced route selections with Multi-Exit Discriminator (MED) support for path prioritization. MED is an optional attribute in the BGP update message that tells routers to select the best route for the traffic. The MED is an unsigned 32-bit integer (0 - 4294967295); lower values are preferred.</p> <p>VIP BGP provides default route automation using BGP peer grouping to simplify configuration. ONTAP has a simple way to learn default routes using the BGP peers as next-hop routers when the BGP peer is on the same subnet. To use the feature, set the <code>-use-peer-as-next-hop</code> attribute to <code>true</code>. By default, this attribute is <code>false</code>.</p> <p><a href="#">Configure virtual IP (VIP) LIFs</a></p>

Available beginning	Feature	Description
ONTAP 9.8	Auto port placement	<p>ONTAP can automatically configure broadcast domains, select ports, and help configure network interfaces (LIFs), virtual LANs (VLANs), and link aggregation groups (LAGs) based on reachability and network topology detection.</p> <p>When you first create a cluster, ONTAP automatically discovers the networks connected to ports and configures the needed broadcast domains based on layer 2 reachability. You no longer have to configure broadcast domains manually.</p> <p>A new cluster will continue to be created with two IPspaces:</p> <p><b>Cluster IPspace:</b> Containing one broadcast domain for the cluster interconnect. You should never touch this configuration.</p> <p><b>Default IPspace:</b> Containing one or more broadcast domains for the remaining ports. Depending on your network topology, ONTAP configures additional broadcast domains as needed: Default-1, Default-2, and so on. You can rename these broadcast domains if desired, but do not modify which ports are configured in these broadcast domains.</p> <p>When you configure network interfaces, the home port selection is optional. If you do not manually select a home port, ONTAP will attempt to assign an appropriate home port in the same broadcast domain as other network interfaces in the same subnet.</p> <p>When creating a VLAN or adding the first port to a newly created LAG, ONTAP will attempt to automatically assign the VLAN or LAG to the appropriate broadcast domain based on its layer 2 reachability.</p> <p>By automatically configuring broadcast domains and ports, ONTAP helps to ensure that clients maintain access to their data during failover to another port or node in the cluster.</p> <p>Finally, ONTAP sends EMS messages when it detects that the port reachability is incorrect and provides the "network port reachability repair" command to automatically repair common misconfigurations.</p>

Available beginning	Feature	Description
ONTAP 9.8	Internet Protocol security (IPsec) over wire encryption	<p>To ensure data is continuously secure and encrypted, even while in transit, ONTAP uses the IPsec protocol in transport mode. IPsec offers data encryption for all IP traffic including the NFS, iSCSI, and SMB/CIFS protocols. IPsec provides the only encryption in flight option for iSCSI traffic.</p> <p>Once IPsec is configured, network traffic between the client and ONTAP is protected with preventive measures to combat replay and man-in-the-middle (MITM) attacks.</p> <p><a href="#">Configure IP security (IPsec) over wire encryption</a></p>
ONTAP 9.8	Virtual IP (VIP) expansion	<p>New fields have been added to the <code>network bgp peer-group</code> command. This expansion allows you to configure two additional Border Gateway Protocol (BGP) attributes for Virtual IP (VIP).</p> <p><b>AS path prepend:</b> Other factors being equal, BGP prefers to select the route with shortest AS (autonomous system) Path. You can use the optional AS path prepend attribute to repeat an autonomous system number (ASN), which increases the length of the AS path attribute. The route update with the shortest AS path will be selected by the receiver.</p> <p><b>BGP community:</b> The BGP community attribute is a 32-bit tag that can be assigned to the route updates. Each route update can have one or more BGP community tags. The neighbors receiving the prefix can examine the community value and take actions like filtering or applying specific routing policies for redistribution.</p>
ONTAP 9.8	Switch CLI simplification	<p>To simplify switch commands, the cluster and storage switch CLIs are consolidated. The consolidated switch CLIs include Ethernet switches, FC switches, and ATTO protocol bridges.</p> <p>Instead of using separate "system cluster-switch" and "system storage-switch" commands, you now use "system switch". For the ATTO protocol bridge, instead of using "storage bridge", use "system bridge".</p> <p>Switch health monitoring has similarly expanded to monitor the storage switches as well as the cluster interconnect switch. You can view health information for the cluster interconnect under "cluster_network" in the "client_device" table. You can view health information for a storage switch under "storage_network" in the "client_device" table.</p>

Available beginning	Feature	Description
ONTAP 9.8	IPv6 variable length	<p>The supported IPv6 variable prefix length range has increased from 64 to 1 through 127 bits. A value of bit 128 remains reserved for virtual IP (VIP).</p> <p>When upgrading, non-VIP LIF lengths other than 64 bits are blocked until the last node is updated.</p> <p>When reverting an upgrade, the revert checks any non-VIP LIFs for any prefix other than 64 bits. If found, the check blocks the revert until you delete or modify the offending LIF. VIP LIFs are not checked.</p>
ONTAP 9.7	Automatic service portmap	<p>The portmap service maps RPC services to the ports on which they listen.</p> <p>The portmap service is always accessible in ONTAP 9.3 and earlier, is configurable in ONTAP 9.4 through ONTAP 9.6, and is managed automatically starting in ONTAP 9.7.</p> <p><b>In ONTAP 9.3 and earlier:</b> The portmap service (rpcbind) is always accessible on port 111 in network configurations that rely on the built-in ONTAP firewall rather than a third-party firewall.</p> <p><b>From ONTAP 9.4 through ONTAP 9.6:</b> You can modify firewall policies to control whether the portmap service is accessible on particular LIFs.</p> <p><b>Starting in ONTAP 9.7:</b> The portmap firewall service is eliminated. Instead, the portmap port is opened automatically for all LIFs that support the NFS service.</p> <p><a href="#">Portmap service configuration</a></p>
ONTAP 9.7	Cache search	<p>You can cache NIS <code>netgroup.byhost</code> entries using the <code>vserver services name-service nis-domain netgroup-database</code> commands.</p>
ONTAP 9.6	CUBIC	<p>CUBIC is the default TCP congestion control algorithm for ONTAP hardware. CUBIC replaced the ONTAP 9.5 and earlier default TCP congestion control algorithm, NewReno.</p> <p>CUBIC addresses the problems of long, fat networks (LFNs), including high round trip times (RTTs). CUBIC detects and avoids congestion. CUBIC improves performance for most environments.</p>



Available beginning	Feature	Description
ONTAP 9.6	LIF service policies replace LIF roles	<p>You can assign service policies (instead of LIF roles) to LIFs that determine the kind of traffic that is supported for the LIFs. Service policies define a collection of network services supported by a LIF. ONTAP provides a set of built-in service policies that can be associated with a LIF.</p> <p>ONTAP supports service policies starting with ONTAP 9.5; however, service policies can only be used to configure a limited number of services. Starting with ONTAP 9.6, LIF roles are deprecated and service policies are supported for all types of services.</p> <p><a href="#">LIFs and service policies</a></p>
ONTAP 9.5	NTPv3 support	Network Time Protocol (NTP) version 3 includes symmetric authentication using SHA-1 keys, which increases network security.
ONTAP 9.5	SSH login security alerts	When you log in as a Secure Shell (SSH) admin user, you can view information about previous logins, unsuccessful attempts to log in, and changes to your role and privileges since your last successful login.
ONTAP 9.5	LIF service policies	<p>You can create new service policies or use a built-in policy. You can assign a service policy to one or more LIFs; thereby allowing the LIF to carry traffic for a single service or a list of services.</p> <p><a href="#">LIFs and service policies</a></p>
ONTAP 9.5	VIP LIFs and BGP support	<p>A VIP data LIF is a LIF that is not part of any subnet and is reachable from all ports that host a border gateway protocol (BGP) LIF in the same IPspace. A VIP data LIF eliminates the dependency of a host on individual network interfaces.</p> <p><a href="#">Create a virtual IP (VIP) data LIF</a></p>
ONTAP 9.5	Multipath routing	<p>Multipath routing provides load balancing by utilizing all the available routes to a destination.</p> <p><a href="#">Enable multipath routing</a></p>

Available beginning	Feature	Description
ONTAP 9.4	Portmap service	<p>The portmap service maps remote procedure call (RPC) services to the ports on which they listen.</p> <p>The portmap service is always accessible in ONTAP 9.3 and earlier. Starting in ONTAP 9.4, the portmap service is configurable.</p> <p>You can modify firewall policies to control whether the portmap service is accessible on particular LIFs.</p> <p><a href="#">Portmap service configuration</a></p>
ONTAP 9.4	SSH MFA for LDAP or NIS	SSH multi-factor authentication (MFA) for LDAP or NIS uses a public key and nsswitch to authenticate remote users.
ONTAP 9.3	SSH MFA	SSH MFA for local administrator accounts use a public key and a password to authenticate local users.
ONTAP 9.3	SAML authentication	You can use Security Assertion Markup Language (SAML) authentication to configure MFA for web services such as Service Processor Infrastructure (spi), ONTAP APIs, and OnCommand System Manager.
ONTAP 9.2	SSH login attempts	You can configure the maximum number of unsuccessful SSH login attempts to protect against brute force attacks.
ONTAP 9.2	Digital security certificates	ONTAP provides enhanced support for digital certificate security with Online Certificate Status Protocol (OCSP) and pre-installed default security certificates.
ONTAP 9.2	Fastpath	<p>As part of a networking stack update for improved performance and resiliency, fast path routing support was removed in ONTAP 9.2 and later releases because it made it difficult to identify problems with improper routing tables. Therefore, it is no longer possible to set the following option in the nodeshell, and existing fast path configurations are disabled when upgrading to ONTAP 9.2 and later:</p> <p><code>ip.fastpath.enable</code></p> <p><a href="#">Network traffic not sent or sent out of an unexpected interface after upgrade to 9.2 due to elimination of IP Fastpath</a></p>

Available beginning	Feature	Description
ONTAP 9.1	Security with SNMPv3 traphosts	<p>You can configure SNMPv3 traphosts with the User-based Security Model (USM) security. With this enhancement, SNMPv3 traps can be generated by using a predefined USM user's authentication and privacy credentials.</p> <p><a href="#">Configure traphosts to receive SNMP notifications</a></p>
ONTAP 9.0	IPv6	<p>Dynamic DNS (DDNS) name service is available on IPv6 LIFs.</p> <p><a href="#">Create a LIF</a></p>
ONTAP 9.0	LIFs per node	<p>The supported number of LIFs per node has increased for some systems. See the Hardware Universe for the number of LIFs supported on each platform for a specified ONTAP release.</p> <p><a href="#">Create a LIF</a></p> <p><a href="#">NetApp hardware universe</a></p>
ONTAP 9.0	LIF management	<p>ONTAP and System Manager automatically detect and isolate network port failures. LIFs are automatically migrated from degraded ports to healthy ports.</p> <p><a href="#">Monitor the health of network ports</a></p>
ONTAP 9.0	LLDP	<p>Link Layer Discovery Protocol (LLDP) provides a vendor-neutral interface for verifying and troubleshooting cabling between an ONTAP system and a switch or router. It is an alternative to Cisco Discovery Protocol (CDP), a proprietary link layer protocol developed by Cisco Systems.</p> <p><a href="#">Enable or Disable LLDP</a></p>

Available beginning	Feature	Description
ONTAP 9.0	UC compliance with DSCP marking	<p>Unified Capability (UC) compliance with Differentiated Services Code Point (DSCP) marking.</p> <p>Differentiated Services Code Point (DSCP) marking is a mechanism for classifying and managing network traffic and is a component of Unified Capability (UC) compliance. You can enable DSCP marking on outgoing (egress) IP packet traffic for a given protocol with a default or user-provided DSCP code.</p> <p>If you do not provide a DSCP value when enabling DSCP marking for a given protocol, a default is used:</p> <p><b>0x0A (10):</b> The default value for data protocols/traffic.</p> <p><b>0x30 (48):</b> The default value for control protocols/traffic.</p> <p><a href="#">DSCP marking for US compliance</a></p>
ONTAP 9.0	SHA-2 password hash function	<p>To enhance password security, ONTAP 9 supports the SHA-2 password hash function and uses SHA-512 by default for hashing newly created or changed passwords.</p> <p>Existing user accounts with unchanged passwords continue to use the MD5 hash function after the upgrade to ONTAP 9 or later, and users can continue to access their accounts. However, it is strongly recommended that you migrate MD5 accounts to SHA-512 by having users change their passwords.</p>
ONTAP 9.0	FIPS 140-2 support	<p>You can enable the Federal Information Processing Standard (FIPS) 140-2 compliance mode for cluster-wide control plane web service interfaces.</p> <p>By default, the FIPS 140-2 only mode is disabled.</p> <p><a href="#">Configure network security using Federal Information Processing Standards (FIPS)</a></p>


### Verify your networking configuration after upgrading to ONTAP 9.8 or later

After an upgrade to ONTAP 9.8, you should verify your network configuration. After the upgrade, ONTAP automatically monitors layer 2 reachability.

Use the following command to verify each port has reachability to its expected broadcast domain:

```
network port reachability show -detail
```

The command output contains reachability results. Use the following decision tree and table to understand the reachability results (reachability-status) and determine what, if anything, to do next.

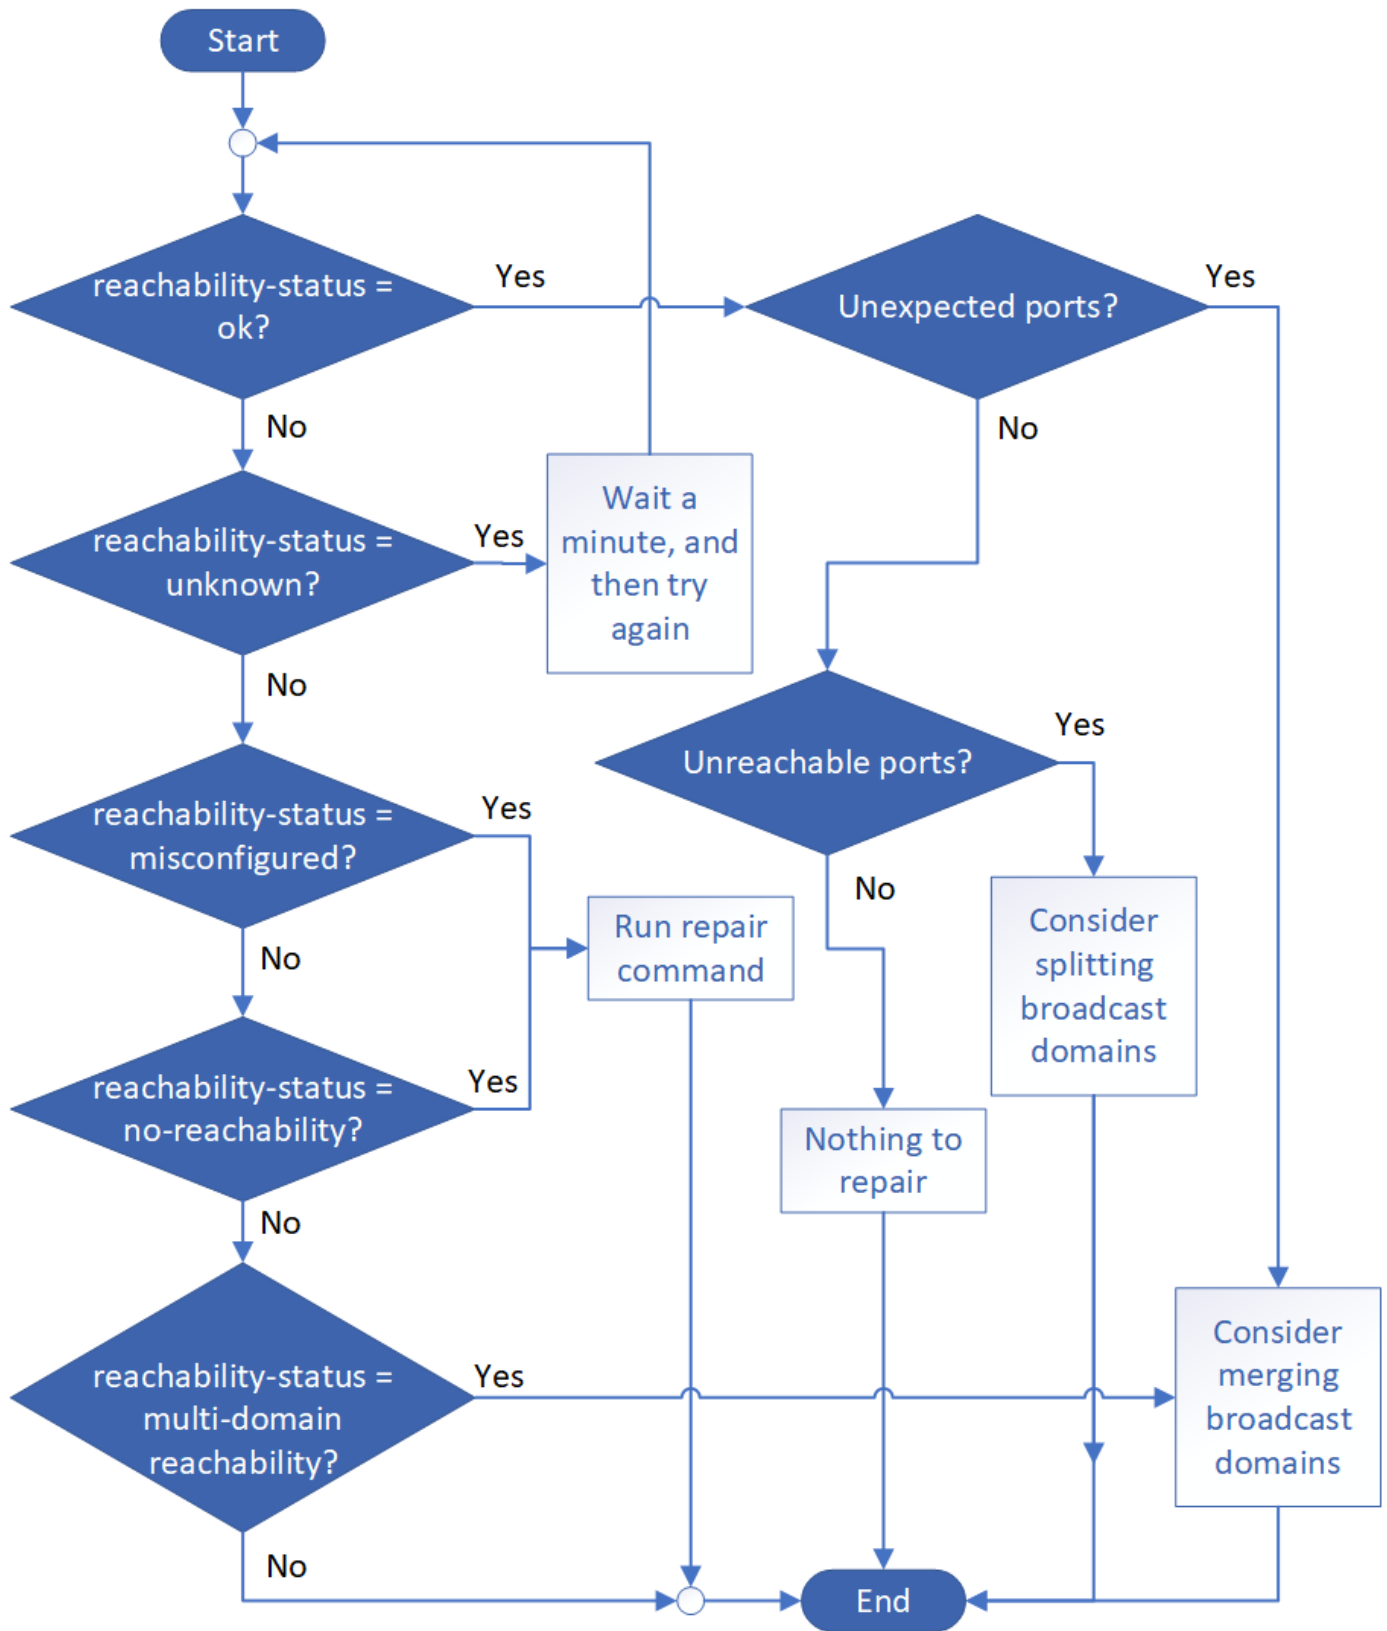

reachability-status	Description
ok	<p>The port has layer 2 reachability to its assigned broadcast domain.</p> <p>If the reachability-status is "ok", but there are "unexpected ports", consider merging one or more broadcast domains. For more information, see <a href="#">Merge broadcast domains</a>.</p> <p>If the reachability-status is "ok", but there are "unreachable ports", consider splitting one or more broadcast domains. For more information, see <a href="#">Split broadcast domains</a>.</p> <p>If the reachability-status is "ok", and there are no unexpected or unreachable ports, your configuration is correct.</p>
misconfigured-reachability	<p>The port does not have layer 2 reachability to its assigned broadcast domain; however, the port does have layer 2 reachability to a different broadcast domain.</p> <p>You can repair the port reachability. When you run the following command, the system will assign the port to the broadcast domain to which it has reachability:</p> <pre>network port reachability repair -node -port</pre> <p>For more information, see <a href="#">Repair port reachability</a>.</p>
no-reachability	<p>The port does not have layer 2 reachability to any existing broadcast domain.</p> <p>You can repair the port reachability. When you run the following command, the system will assign the port to a new automatically created broadcast domain in the Default IPspace:</p> <pre>network port reachability repair -node -port</pre> <p>For more information, see <a href="#">Repair port reachability</a>.</p>

reachability-status	Description
multi-domain-reachability	<p>The port has layer 2 reachability to its assigned broadcast domain; however, it also has layer 2 reachability to at least one other broadcast domain.</p> <p>Examine the physical connectivity and switch configuration to determine if it is incorrect or if the port's assigned broadcast domain needs to be merged with one or more broadcast domains.</p> <p>For more information, see <a href="#">Merge broadcast domains</a> or <a href="#">Repair port reachability</a>.</p>
unknown	<p>If the reachability-status is "unknown", then wait a few minutes and try the command again.</p>

After you repair a port, you need to check for and resolve displaced LIFs and VLANs. If the port was part of an interface group, you also need to understand what happened to that interface group. For more information, see [Repair port reachability](#).

## Networking components of a cluster

### Overview

You should familiarize yourself with the networking components of a cluster before setting up the cluster. Configuring the physical networking components of a cluster into logical components provides the flexibility and multi-tenancy functionality in ONTAP.

The various networking components in a cluster are as follows:

- Physical ports

Network interface cards (NICs) and host bus adapters (HBAs) provide physical (Ethernet and Fibre Channel) connections from each node to the physical networks (management and data networks).

For site requirements, switch information, port cabling information, and controller onboard port cabling, see the Hardware Universe at [hwu.netapp.com](http://hwu.netapp.com).

- Logical ports

Virtual local area networks (VLANs) and interface groups constitute the logical ports. Interface groups treat several physical ports as a single port, while VLANs subdivide a physical port into multiple separate ports.

- IPspaces

You can use an IPspace to create a distinct IP address space for each SVM in a cluster. Doing so enables clients in administratively separate network domains to access cluster data while using overlapping IP addresses from the same IP address subnet range.

- Broadcast domains

A broadcast domain resides in an IPspace and contains a group of network ports, potentially from many

nodes in the cluster, that belong to the same layer 2 network. The ports in the group are used in an SVM for data traffic.

- Subnets

A subnet is created within a broadcast domain and contains a pool of IP addresses that belong to the same layer 3 subnet. This pool of IP addresses simplifies IP address allocation during LIF creation.

- Logical interfaces

A logical interface (LIF) is an IP address or a worldwide port name (WWPN) that is associated with a port. It is associated with attributes such as failover groups, failover rules, and firewall rules. A LIF communicates over the network through the port (physical or logical) to which it is currently bound.

The different types of LIFs in a cluster are data LIFs, cluster-scoped management LIFs, node-scoped management LIFs, intercluster LIFs, and cluster LIFs. The ownership of the LIFs depends on the SVM where the LIF resides. Data LIFs are owned by data SVMs, node-scoped management LIFs, cluster-scoped management, and intercluster LIFs are owned by the admin SVMs, and cluster LIFs are owned by the cluster SVM.

- DNS zones

DNS zone can be specified during the LIF creation, providing a name for the LIF to be exported through the cluster's DNS server. Multiple LIFs can share the same name, allowing the DNS load balancing feature to distribute IP addresses for the name according to load.


SVMs can have multiple DNS zones.

- Routing

Each SVM is self-sufficient with respect to networking. An SVM owns LIFs and routes that can reach each of the configured external servers.

The following figure illustrates how the different networking components are associated in a four-node cluster:



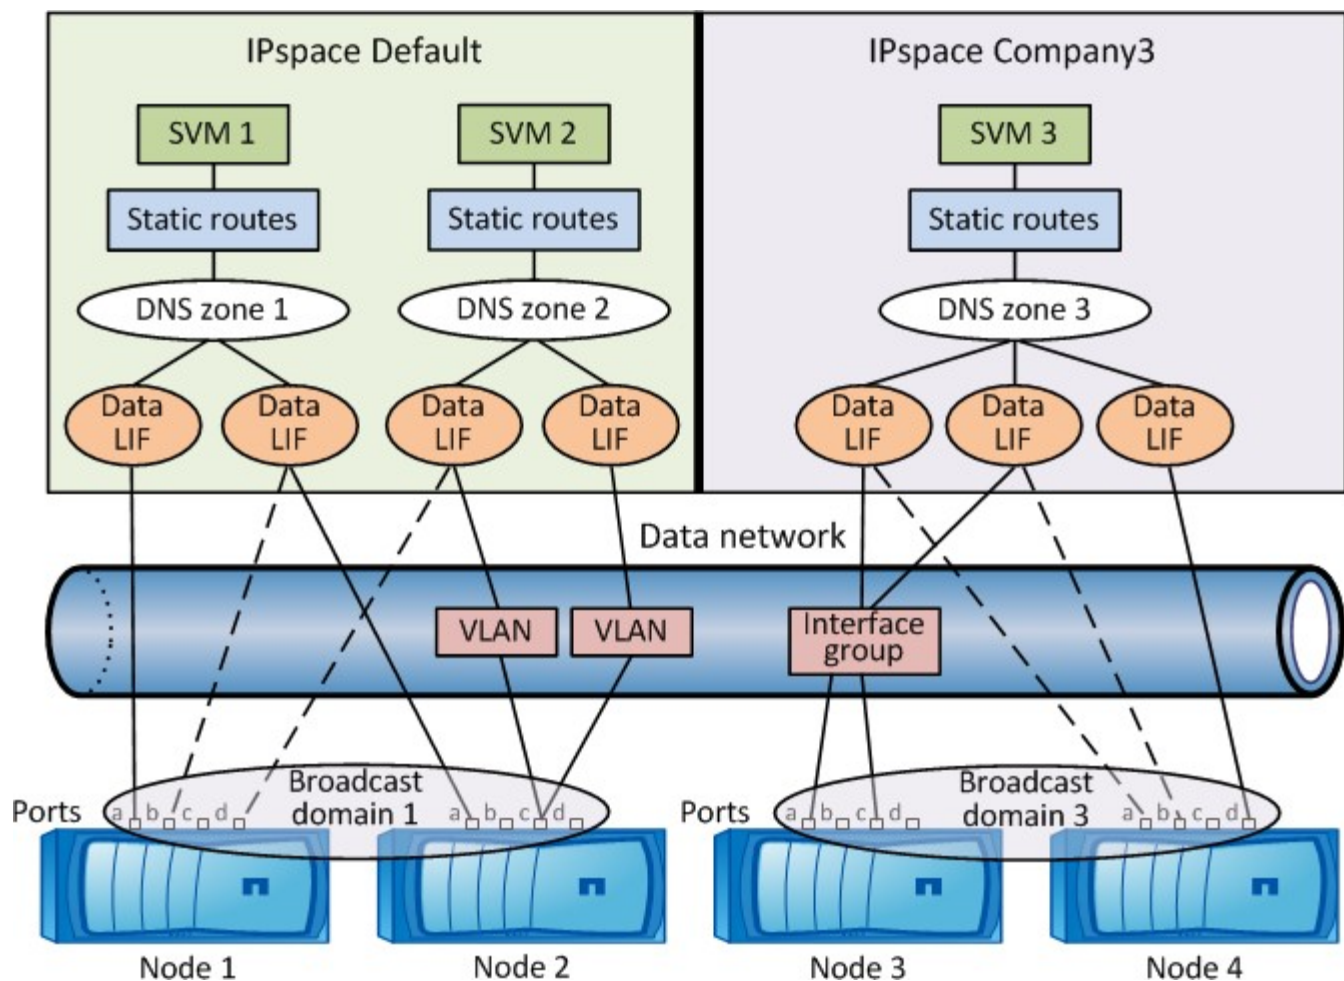


### Network cabling guidelines

Network cabling best practices separate traffic into the following networks: cluster, management, and data.

You should cable a cluster so that the cluster traffic is on a separate network from all other traffic. It is an optional, but recommended practice to have network management traffic separated from data and intracluster traffic. By maintaining separate networks, you can achieve better performance, ease of administration, and improved security and management access to the nodes.

The following diagram illustrates the network cabling of a four-node HA cluster that includes three separate networks:

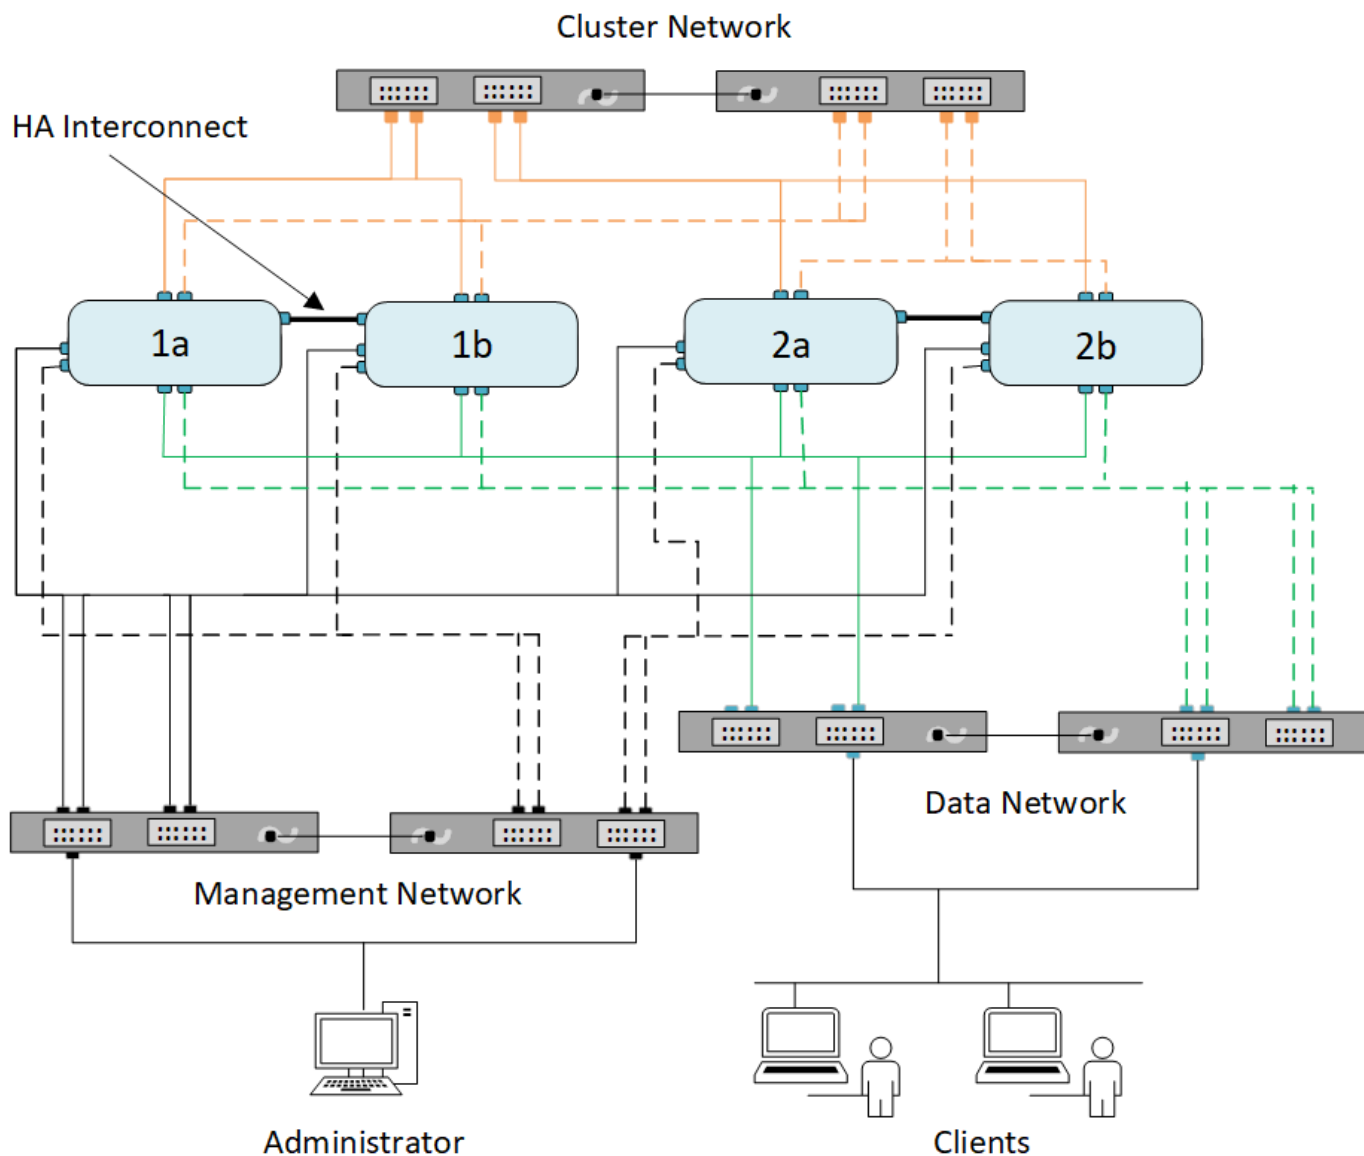

You should follow certain guidelines when cabling network connections:

- Each node should be connected to three distinct networks.

One network is for management, one is for data access, and one is for intracluster communication. The management and data networks can be logically separated.

- You can have more than one data network connection to each node for improving the client (data) traffic flow.
- A cluster can be created without data network connections, but it must include a cluster interconnect connection.
- There should always be two or more cluster connections to each node, but nodes on FAS22xx systems can be configured with a single 10-GbE cluster port.

For more information on network cabling, see the [AFF and FAS System Documentation Center](#) and the [Hardware Universe](#).

## Relationship between broadcast domains, failover groups, and failover policies

Broadcast domains, failover groups, and failover policies work together to determine which port will take over when the node or port on which a LIF is configured fails.

A broadcast domain lists all the ports reachable in the same layer 2 Ethernet network. An Ethernet broadcast packet sent from one of the ports is seen by all other ports in the broadcast domain. This common-reachability characteristic of a broadcast domain is important to LIFs because if a LIF were to fail over to any other port in the broadcast domain, it could still reach every local and remote host that was reachable from the original port.

Failover groups define the ports within a broadcast domain that provide LIF failover coverage for each other. Each broadcast domain has one failover group that includes all its ports. This failover group containing all ports in the broadcast domain is the default and recommended failover group for the LIF. You can create failover groups with smaller subsets that you define, such as a failover group of ports that have the same link speed within a broadcast domain.

A failover policy dictates how a LIF uses the ports of a failover group when a node or port goes down. Consider the failover policy as a type of filter that is applied to a failover group. The failover targets for a LIF (the set of ports to which a LIF can failover) is determined by applying the LIF's failover policy to the LIF's failover group in the broadcast domain.

You can view the failover targets for a LIF using the following CLI command:


```
network interface show -failover
```

NetApp strongly recommends using the default failover policy for your LIF type.

### Decide which LIF failover policy to use

Decide whether to use the recommended, default failover policy or whether to change it based on your LIF type and environment.

### Failover policy decision tree

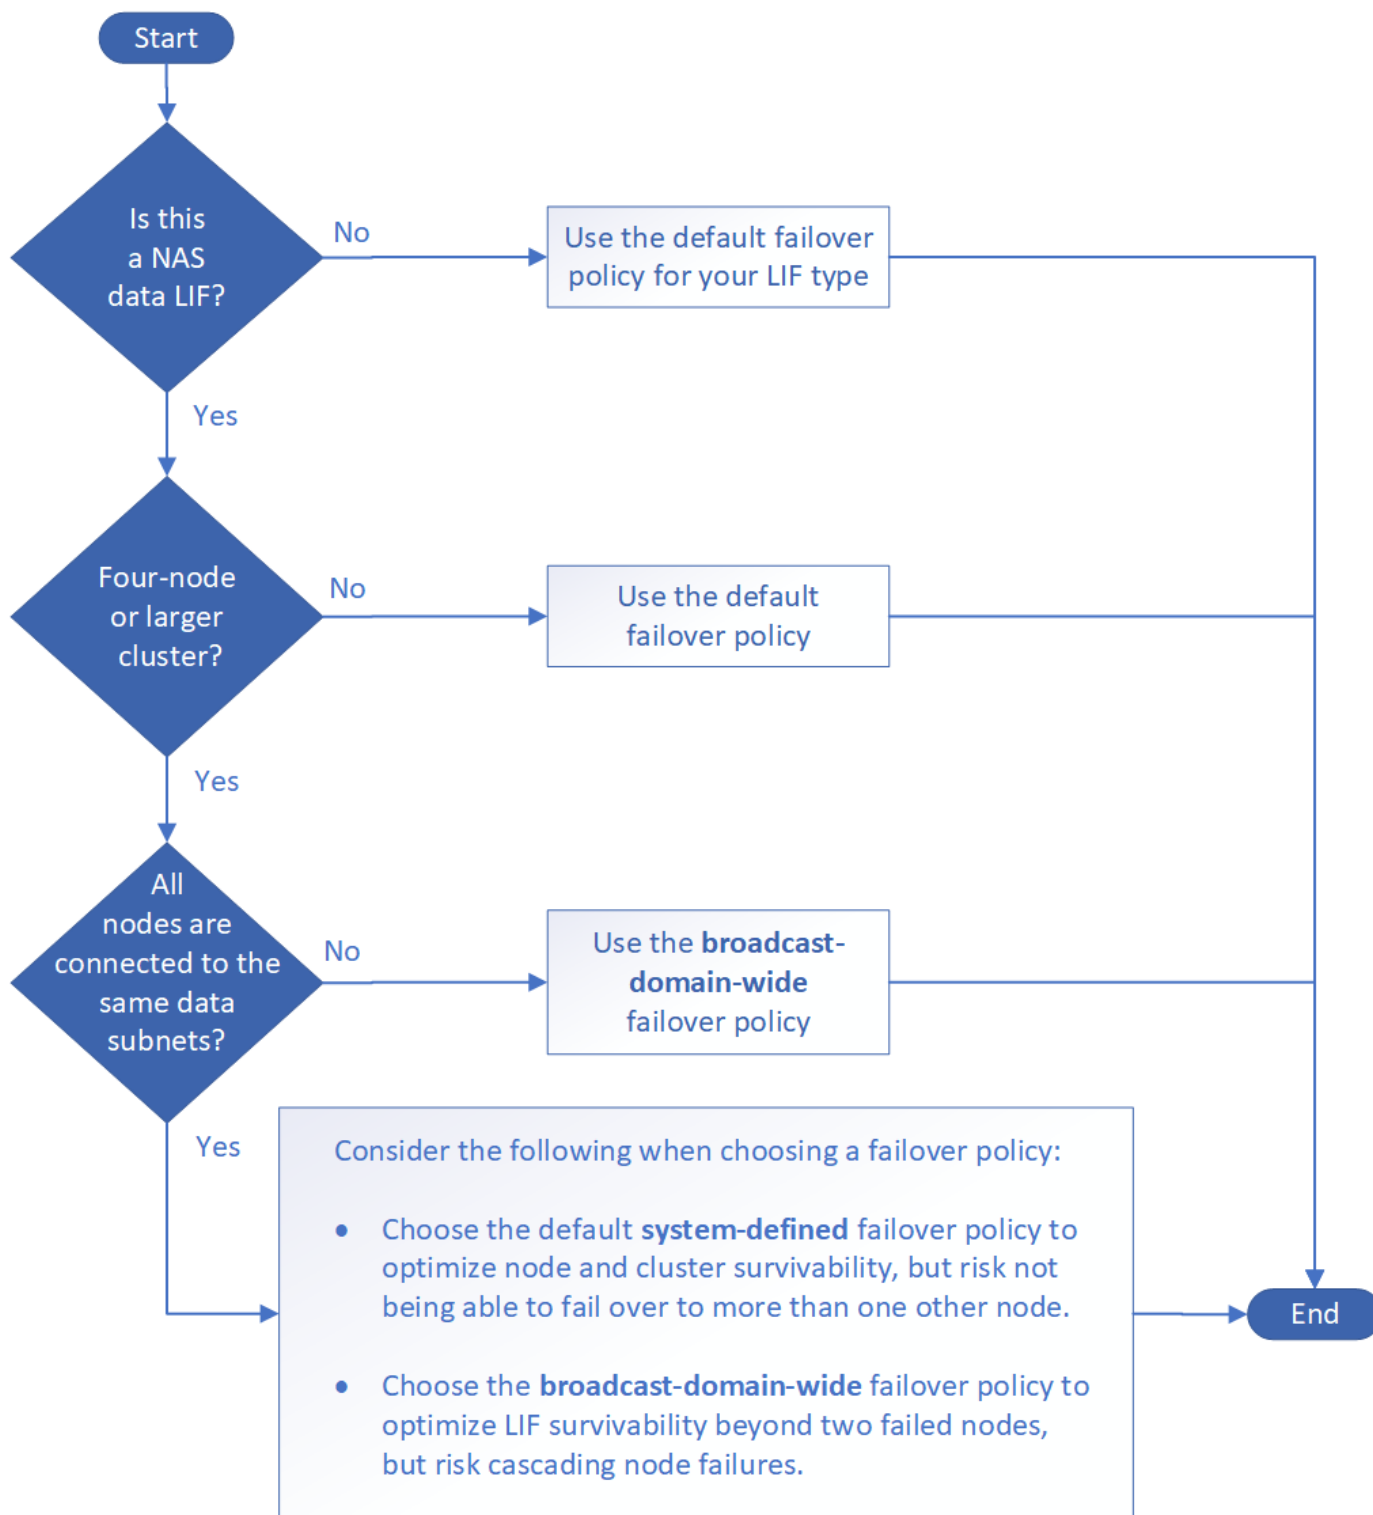

#### Default failover policies by LIF type

LIF type	Default failover policy	Description
BGP LIFs	disabled	LIF does not fail over to another port.
Cluster LIFs	local-only	LIF fails over to ports on the same node only.

LIF type	Default failover policy	Description
Cluster-mgmt LIF	broadcast-domain-wide	LIF fails over to ports in the same broadcast domain, on any and every node in the cluster.
Intercluster LIFs	local-only	LIF fails over to ports on the same node only.
NAS data LIFs	system-defined	LIF fails over to one other node that is not the HA partner.
Node management LIFs	local-only	LIF fails over to ports on the same node only.
SAN data LIFs	disabled	LIF does not fail over to another port.



The `sfo-partner-only` failover policy is deprecated. Do not use the `sfo-partner-only` failover policy.

## Configure network ports (cluster administrators only)

### Overview

Ports are either physical ports (NICs) or virtualized ports, such as interface groups or VLANs.

### Types of network ports

The network ports are either physical ports or virtualized ports.

Virtual local area networks (VLANs) and interface groups constitute the virtual ports. Interface groups treat several physical ports as a single port, while VLANs subdivide a physical port into multiple separate logical ports.

- Physical ports: LIFs can be configured directly on physical ports.
- Interface group: A port aggregate containing two or more physical ports that act as a single trunk port. An interface group can be single-mode, multimode, or dynamic multimode.
- VLAN: A logical port that receives and sends VLAN-tagged (IEEE 802.1Q standard) traffic. VLAN port characteristics include the VLAN ID for the port. The underlying physical port or interface group ports are considered VLAN trunk ports, and the connected switch ports must be configured to trunk the VLAN IDs.

The underlying physical port or interface group ports for a VLAN port can continue to host LIFs, which transmit and receive untagged traffic.

- Virtual IP (VIP) port: A logical port that is used as the home port for a VIP LIF. VIP ports are created automatically by the system and support only a limited number of operations. VIP ports are supported starting with ONTAP 9.5.

The port naming convention is *enumberletter*:

- The first character describes the port type.

"e" represents Ethernet.

- The second character indicates the numbered slot in which the port adapter is located.
- The third character indicates the port's position on a multiport adapter.  
"a" indicates the first port, "b" indicates the second port, and so on.

For example, `e0b` indicates that an Ethernet port is the second port on the node's motherboard.

VLANs must be named by using the syntax `port_name-vlan-id`.

`port_name` specifies the physical port or interface group.

`vlan-id` specifies the VLAN identification on the network. For example, `e1c-80` is a valid VLAN name.

## Combine physical ports to create interface groups

An interface group is created by combining two or more physical ports into a single logical port. The logical port provides increased resiliency, increased availability, and load sharing.

### Interface group types

Three types of interface groups are supported on the storage system: single-mode, static multimode, and dynamic multimode. Each interface group provides different levels of fault tolerance. Multimode interface groups provide methods for load balancing network traffic.


### Characteristics of single-mode interface groups

In a single-mode interface group, only one of the interfaces in the interface group is active. The other interfaces are on standby, ready to take over if the active interface fails.

Characteristics of a single-mode interface groups:

- For failover, the cluster monitors the active link and controls failover.  
Because the cluster monitors the active link, there is no switch configuration required.
- There can be more than one interface on standby in a single-mode interface group.
- If a single-mode interface group spans multiple switches, you must connect the switches with an Inter-Switch link (ISL).
- For a single-mode interface group, the switch ports must be in the same broadcast domain.
- Link-monitoring ARP packets, which have a source address of 0.0.0.0, are sent over the ports to verify that the ports are in the same broadcast domain.

The following figure is an example of a single-mode interface group. In the figure, `e0a` and `e1a` are part of the `a0a` single-mode interface group. If the active interface, `e0a`, fails, the standby `e1a` interface takes over and maintains the connection to the switch.

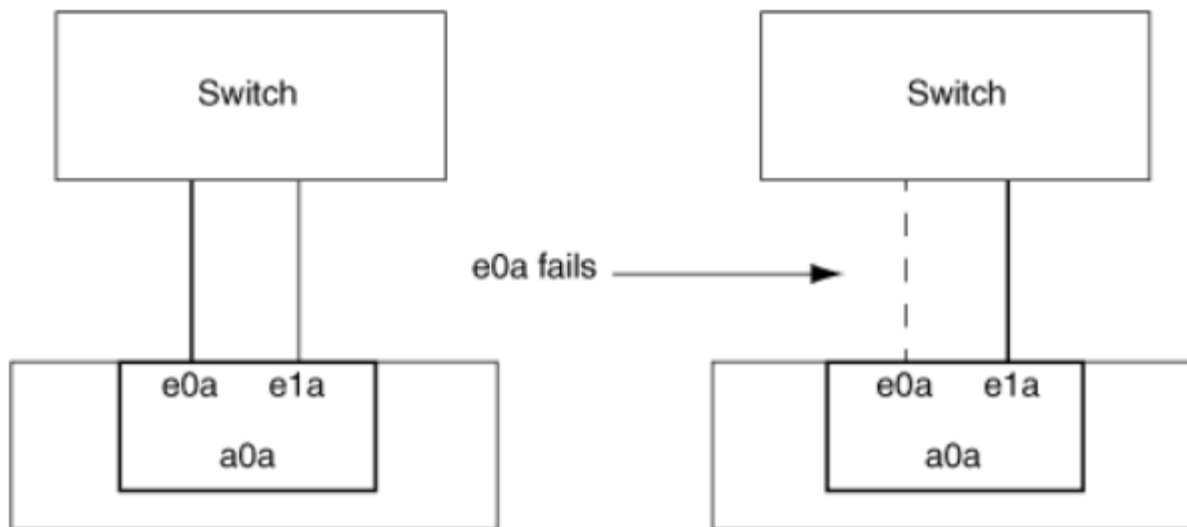

To accomplish single-mode functionality, the recommended approach is to instead use failover groups. By using a failover group, the second port can still be used for other LIFs and need not remain unused. Additionally, failover groups can span more than two ports and can span ports on multiple nodes.

### Characteristics of static multimode interface groups

The static multimode interface group implementation in ONTAP complies with IEEE 802.3ad (static). Any switch that supports aggregates, but does not have control packet exchange for configuring an aggregate, can be used with static multimode interface groups.

Static multimode interface groups do not comply with IEEE 802.3ad (dynamic), also known as Link Aggregation Control Protocol (LACP). LACP is equivalent to Port Aggregation Protocol (PAgP), the proprietary link aggregation protocol from Cisco.

The following are characteristics of a static multimode interface group:


- All interfaces in the interface group are active and share a single MAC address.
  - Multiple individual connections are distributed among the interfaces in the interface group.
  - Each connection or session uses one interface within the interface group.
 

When you use the sequential load balancing scheme, all sessions are distributed across available links on a packet-by-packet basis, and are not bound to a particular interface from the interface group.
- Static multimode interface groups can recover from a failure of up to "n-1" interfaces, where n is the total number of interfaces that form the interface group.
- If a port fails or is unplugged, the traffic that was traversing the failed link is automatically redistributed to one of the remaining interfaces.
- Static multimode interface groups can detect a loss of link, but they cannot detect a loss of connectivity to the client or switch misconfigurations that might impact connectivity and performance.
- A static multimode interface group requires a switch that supports link aggregation over multiple switch ports.
 

The switch is configured so that all ports to which links of an interface group are connected are part of a single logical port. Some switches might not support link aggregation of ports configured for jumbo frames. For more information, see your switch vendor's documentation.
- Several load balancing options are available to distribute traffic among the interfaces of a static multimode

interface group.

The following figure is an example of a static multimode interface group. Interfaces e0a, e1a, e2a, and e3a are part of the a1a multimode interface group. All four interfaces in the a1a multimode interface group are active.

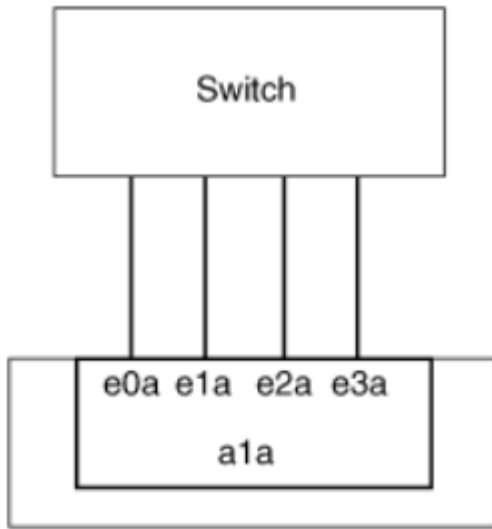

Several technologies exist that enable traffic in a single aggregated link to be distributed across multiple physical switches. The technologies used to enable this capability vary among networking products. Static multimode interface groups in ONTAP conform to the IEEE 802.3 standards. If a particular multiple switch link aggregation technology is said to interoperate with or conform to the IEEE 802.3 standards, it should operate with ONTAP.

The IEEE 802.3 standard states that the transmitting device in an aggregated link determines the physical interface for transmission. Therefore, ONTAP is only responsible for distributing outbound traffic, and cannot control how inbound frames arrive. If you want to manage or control the transmission of inbound traffic on an aggregated link, that transmission must be modified on the directly connected network device.

### Dynamic multimode interface group

Dynamic multimode interface groups implement Link Aggregation Control Protocol (LACP) to communicate group membership to the directly attached switch. LACP enables you to detect the loss of link status and the inability of the node to communicate with the direct-attached switch port.

Dynamic multimode interface group implementation in ONTAP complies with IEEE 802.3 AD (802.1 AX). ONTAP does not support Port Aggregation Protocol (PAgP), which is a proprietary link aggregation protocol from Cisco.

A dynamic multimode interface group requires a switch that supports LACP.

ONTAP implements LACP in nonconfigurable active mode that works well with switches that are configured in either active or passive mode. ONTAP implements the long and short LACP timers (for use with nonconfigurable values 3 seconds and 90 seconds), as specified in IEEE 802.3 AD (802.1AX).

The ONTAP load balancing algorithm determines the member port to be used to transmit outbound traffic, and does not control how inbound frames are received. The switch determines the member (individual physical port) of its port channel group to be used for transmission, based on the load balancing algorithm configured in the switch's port channel group. Therefore, the switch configuration determines the member port (individual physical port) of the storage system to receive traffic. For more information about configuring the switch, see the documentation from your switch vendor.




If an individual interface fails to receive successive LACP protocol packets, then that individual interface is marked as "lag\_inactive" in the output of "ifgrp status" command. Existing traffic is automatically rerouted to any remaining active interfaces.

The following rules apply when using dynamic multimode interface groups:

- Dynamic multimode interface groups should be configured to use the port-based, IP-based, MAC-based, or round robin load balancing methods.
- In a dynamic multimode interface group, all interfaces must be active and share a single MAC address.

The following figure is an example of a dynamic multimode interface group. Interfaces e0a, e1a, e2a, and e3a are part of the a1a multimode interface group. All four interfaces in the a1a dynamic multimode interface group are active.

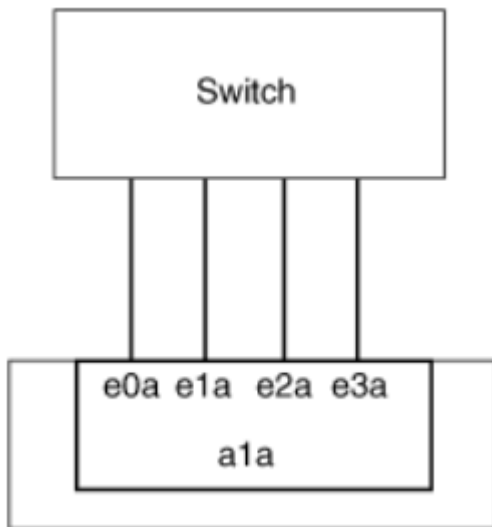

### Load balancing in multimode interface groups

You can ensure that all interfaces of a multimode interface group are equally utilized for outgoing traffic by using the IP address, MAC address, sequential, or port-based load balancing methods to distribute network traffic equally over the network ports of a multimode interface group.

The load balancing method for a multimode interface group can be specified only when the interface group is created.

**Best Practice:** Port-based load balancing is recommended whenever possible. Use port-based load balancing unless there is a specific reason or limitation in the network that prevents it.

### Port-based load balancing

Port-based load balancing is the recommended method.

You can equalize traffic on a multimode interface group based on the transport layer (TCP/UDP) ports by using the port-based load balancing method.

The port-based load balancing method uses a fast hashing algorithm on the source and destination IP addresses along with the transport layer port number.

## IP address and MAC address load balancing

IP address and MAC address load balancing are the methods for equalizing traffic on multimode interface groups.

These load balancing methods use a fast hashing algorithm on the source and destination addresses (IP address and MAC address). If the result of the hashing algorithm maps to an interface that is not in the UP link-state, the next active interface is used.



Do not select the MAC address load balancing method when creating interface groups on a system that connects directly to a router. In such a setup, for every outgoing IP frame, the destination MAC address is the MAC address of the router. As a result, only one interface of the interface group is used.

IP address load balancing works in the same way for both IPv4 and IPv6 addresses.

## Sequential load balancing

You can use sequential load balancing to equally distribute packets among multiple links using a round robin algorithm. You can use the sequential option for load balancing a single connection's traffic across multiple links to increase single connection throughput.

However, because sequential load balancing may cause out-of-order packet delivery, extremely poor performance can result. Therefore, sequential load balancing is generally not recommended.

### Create an interface group

You can create an interface group—single-mode, static multimode, or dynamic multimode (LACP)—to present a single interface to clients by combining the capabilities of the aggregated network ports.

### About this task

- For a complete list of configuration restrictions that apply to port interface groups, see the `network port ifgrp add-port` man page.
- When creating a multimode interface group, you can specify any of the following load-balancing methods:
  - port: Network traffic is distributed on the basis of the transport layer (TCP/UDP) ports. This is the recommended load-balancing method.
  - mac: Network traffic is distributed on the basis of MAC addresses.
  - ip: Network traffic is distributed on the basis of IP addresses.
  - sequential: Network traffic is distributed as it is received.



The MAC address of an interface group is determined by the order of the underlying ports and how these ports initialize during bootup. You should therefore not assume that the ifgrp MAC address is persistent across reboots or ONTAP upgrades.

## Step

Use the `network port ifgrp create` command to create an interface group.

Interface groups must be named using the syntax `a<number><letter>`. For example, a0a, a0b, a1c, and a2a are valid interface group names.

For more information about this command, see [ONTAP 9 commands](#).

The following example shows how to create an interface group named a0a with a distribution function of port and a mode of multimode:

```
network port ifgrp create -node cluster-1-01 -ifgrp a0a -distr-func port -mode multimode
```

### Add a port to an interface group

You can add up to 16 physical ports to an interface group for all port speeds.

#### Step

Add network ports to the interface group:

```
network port ifgrp add-port
```

For more information about this command, see [ONTAP 9 commands](#).

The following example shows how to add port e0c to an interface group named a0a:

```
network port ifgrp add-port -node cluster-1-01 -ifgrp a0a -port e0c
```

Starting in ONTAP 9.8, interface groups are automatically placed into an appropriate broadcast domain about one minute after the first physical port is added to the interface group. If you do not want ONTAP to do this, and prefer to manually place the ifgrp into a broadcast domain, then specify the `-skip-broadcast-domain-placement` parameter as part of the `ifgrp add-port` command.

### Remove a port from an interface group

You can remove a port from an interface group that hosts LIFs, as long as it is not the last port in the interface group. There is no requirement that the interface group must not host LIFs or that the interface group must not be the home port of a LIF considering that you are not removing the last port from the interface group. However, if you are removing the last port, then you must migrate or move the LIFs from the interface group first.

#### About this task

You can remove up to 16 ports (physical interfaces) from an interface group.

#### Step

Remove network ports from an interface group:

```
network port ifgrp remove-port
```

The following example shows how to remove port e0c from an interface group named a0a:

```
network port ifgrp remove-port -node cluster-1-01 -ifgrp a0a -port e0c
```

### Delete an interface group

You can delete interface groups if you want to configure LIFs directly on the underlying physical ports or decide to change the interface group mode or distribution function.

#### Before you begin

- The interface group must not be hosting a LIF.

- The interface group must be neither the home port nor the failover target of a LIF.

### Step

Use the `network port ifgrp delete` command to delete an interface group.

For more information about this command, see [ONTAP 9 commands](#).

The following example shows how to delete an interface group named a0b:

```
network port ifgrp delete -node cluster-1-01 -ifgrp a0b
```

## Configure VLANs over physical ports

VLANs provide logical segmentation of networks by creating separate broadcast domains that are defined on a switch port basis as opposed to the traditional broadcast domains, defined on physical boundaries.

A VLAN can span multiple physical network segments. The end-stations belonging to a VLAN are related by function or application.

For example, end-stations in a VLAN might be grouped by departments, such as engineering and accounting, or by projects, such as release1 and release2. Because physical proximity of the end-stations is not essential in a VLAN, you can disperse the end-stations geographically and still contain the broadcast domain in a switched network.

You can manage VLANs by creating, deleting, or displaying information about them.



You should not create a VLAN on a network interface with the same identifier as the native VLAN of the switch. For example, if the network interface e0b is on native VLAN 10, you should not create a VLAN e0b-10 on that interface.

### Create a VLAN

You can create a VLAN for maintaining separate broadcast domains within the same network domain by using the `network port vlan create` command.

### Before you begin

Your network administrator must have confirmed that the following requirements have been met:

- The switches deployed in the network must either comply with IEEE 802.1Q standards or have a vendor-specific implementation of VLANs.
- For supporting multiple VLANs, an end-station must be statically configured to belong to one or more VLANs.
- The VLAN is not attached to a port hosting a cluster LIF.
- The VLAN is not attached to ports assigned to the Cluster IPspace.
- The VLAN is not created on an interface group port that contains no member ports.

### About this task

In certain circumstances, if you want to create the VLAN port on a degraded port without correcting the hardware issue or any software misconfiguration, then you can set the `-ignore- health-status` parameter of the `network port modify` command as true.

Creating a VLAN attaches the VLAN to the network port on a specified node in a cluster.

When you configure a VLAN over a port for the first time, the port might go down, resulting in a temporary disconnection of the network. Subsequent VLAN additions to the same port do not affect the port state.



You should not create a VLAN on a network interface with the same identifier as the native VLAN of the switch. For example, if the network interface e0b is on native VLAN 10, you should not create a VLAN e0b-10 on that interface.

### Step

1. Use the `network port vlan create` command to create a VLAN.
2. You must specify either the `vlan-name` or the `port` and `vlan-id` options when creating a VLAN.  
The VLAN name is a combination of the name of the port (or interface group) and the network switch VLAN identifier, with a hyphen in between. For example, `e0c-24` and `e1c-80` are valid VLAN names.

The following example shows how to create a VLAN `e1c-80` attached to network port `e1c` on the node `cluster-1-01`:

```
network port vlan create -node cluster-1-01 -vlan-name e1c-80
```

Starting with ONTAP 9.8, VLANs are automatically placed into appropriate broadcast domains about one minute after their creation. If you do not want ONTAP to do this, and prefer to manually place the VLAN into a broadcast domain, then specify the `-skip-broadcast-domain-placement` parameter as part of the `vlan create` command.

For more information about this command, see [ONTAP 9 commands](#).

### Delete a VLAN

You might have to delete a VLAN before removing a NIC from its slot. When you delete a VLAN, it is automatically removed from all of the failover rules and groups that use it.

### Before you begin

Make sure there are no LIFs associated with the VLAN.

### About this task

Deletion of the last VLAN from a port might cause a temporary disconnection of the network from the port.

### Step

Use the `network port vlan delete` command to delete a VLAN.

The following example shows how to delete VLAN `e1c-80` from network port `e1c` on the node `cluster-1-01`:

```
network port vlan delete -node cluster-1-01 -vlan-name e1c-80
```

## Modify network port attributes

You can modify the autonegotiation, duplex, flow control, speed, and health settings of a physical network port.

### Before you begin

The port that you want to modify must not be hosting any LIFs.

### About this task

- You should not modify the administrative settings of the 100 GbE, 40 GbE, 10 GbE or 1 GbE network interfaces.

The values that you can set for duplex mode and port speed are referred to as administrative settings. Depending on network limitations, the administrative settings can differ from the operational settings (that is, the duplex mode and speed that the port actually uses).

- You should not modify the administrative settings of the underlying physical ports in an interface group.

The `-up-admin` parameter (available at the advanced privilege level) modifies the administrative settings of the port.

- The `-up-admin` administrative setting should not be set to false for all ports on a node, or for the port that hosts the last operational cluster LIF on a node.
- You should not modify the MTU size of the management port, `e0M`.
- The MTU size of a port in a broadcast domain cannot be changed from the MTU value that is set for the broadcast domain.
- The MTU size of a VLAN cannot exceed the value of the MTU size of its base port.

### Steps

1. Modify the attributes of a network port:

```
network port modify
```

2. You can set the `-ignore-health-status` field to true for specifying that the system can ignore the network port health status of a specified port.

The network port health status is automatically changed from degraded to healthy, and this port can now be used for hosting LIFs. You should set the flow control of cluster ports to `none`. By default, the flow control is set to `full`.

The following command disables the flow control on port `e0b` by setting the flow control to `none`:

```
network port modify -node cluster-1-01 -port e0b -flowcontrol-admin none
```

## Modify MTU setting for interface group ports

To modify the MTU setting for interface groups, you must modify the MTU of the broadcast domain.

## Steps

1. Modify the broadcast domain settings:

```
broadcast-domain    modify    -broadcast-domain    broadcast_domain_name    -mtu
mtu_setting
```

The following warning message is displayed:

```
Warning: Changing broadcast domain settings will cause a momentary data-
serving interruption.
Do you want to continue? {y|n}: y
```

2. Enter y to continue.
3. Verify that the MTU setting were modified correctly:

```
net port show
```

```
net port show
(network port show)
Node: vsim-01
```

Port	IPspace	Broadcast Domain	Link	MTU	Speed(Mbps)	Health	Ignore Health
----	-----	-----	----	----	-----	-----	-----
a0a	Default	Default-1	up	1300	auto/1000	healthy	false
e0a	Default	Default-1	up	1300	auto/1000	healthy	false
e0b	Default	Default	up	1500	auto/1000	healthy	false
e0c	Default	Default	up	1500	auto/1000	healthy	false
e0d	Default	Default	up	1500	auto/1000	healthy	false

5 entries were displayed.

## Monitor the health of network ports

ONTAP management of network ports includes automatic health monitoring and a set of health monitors to help you identify network ports that might not be suitable for hosting LIFs.

### About this task

If a health monitor determines that a network port is unhealthy, it warns administrators through an EMS message or marks the port as degraded. ONTAP avoids hosting LIFs on degraded network ports if there are healthy alternative failover targets for that LIF. A port can become degraded because of a soft failure event, such as link flapping (links bouncing quickly between up and down) or network partitioning:

- Network ports in the cluster IPspace are marked as degraded when they experience link flapping or loss of layer 2 (L2) reachability to other network ports in the broadcast domain.
- Network ports in non-cluster IPspaces are marked as degraded when they experience link flapping.

You must be aware of the following behaviors of a degraded port:

- A degraded port cannot be included in a VLAN or an interface group.

If a member port of an interface group is marked as degraded, but the interface group is still marked as healthy, LIFs can be hosted on that interface group.

- LIFs are automatically migrated from degraded ports to healthy ports.
- During a failover event, a degraded port is not considered as the failover target. If no healthy ports are available, degraded ports host LIFs according to the normal failover policy.
- You cannot create, migrate, or revert a LIF to a degraded port.

You can modify the `ignore-health-status` setting of the network port to `true`. You can then host a LIF on the healthy ports.

## Steps

1. Log in to the advanced privilege mode:

```
set -privilege advanced
```

2. Check which health monitors are enabled for monitoring network port health:

```
network options port-health-monitor show
```

The health status of a port is determined by the value of health monitors.

The following health monitors are available and enabled by default in ONTAP:

- Link-flapping health monitor: Monitors link flapping

If a port has link flapping more than once in five minutes, this port is marked as degraded.

- L2 reachability health monitor: Monitors whether all ports configured in the same broadcast domain have L2 reachability to each other

This health monitor reports L2 reachability issues in all IPspaces; however, it marks only the ports in the cluster IPspace as degraded.

- CRC monitor: Monitors the CRC statistics on the ports

This health monitor does not mark a port as degraded but generates an EMS message when a very high CRC failure rate is observed.

3. Enable or disable any of the health monitors for an IPspace as desired by using the `network options port-health-monitor modify` command.
4. View the detailed health of a port:

```
network port show -health
```



The command output displays the health status of the port, `ignore health status` setting, and list of reasons the port is marked as degraded.

A port health status can be `healthy` or `degraded`.

If the `ignore health status` setting is `true`, it indicates that the port health status has been modified from `degraded` to `healthy` by the administrator.

If the `ignore health status` setting is `false`, the port health status is determined automatically by the system.

## Monitor the reachability of network ports in ONTAP 9.8 and later

Reachability monitoring is built into ONTAP 9.8 and later. Use this monitoring to identify when the physical network topology does not match the ONTAP configuration. In some cases, ONTAP can repair port reachability. In other cases, additional steps are required.

### About this task


Use these commands to verify, diagnose, and repair network misconfigurations that stem from the ONTAP configuration not matching either the physical cabling or the network switch configuration.

### Step

1. View port reachability:

```
network port reachability show
```

2. Use the following decision tree and table to determine the next step, if any.

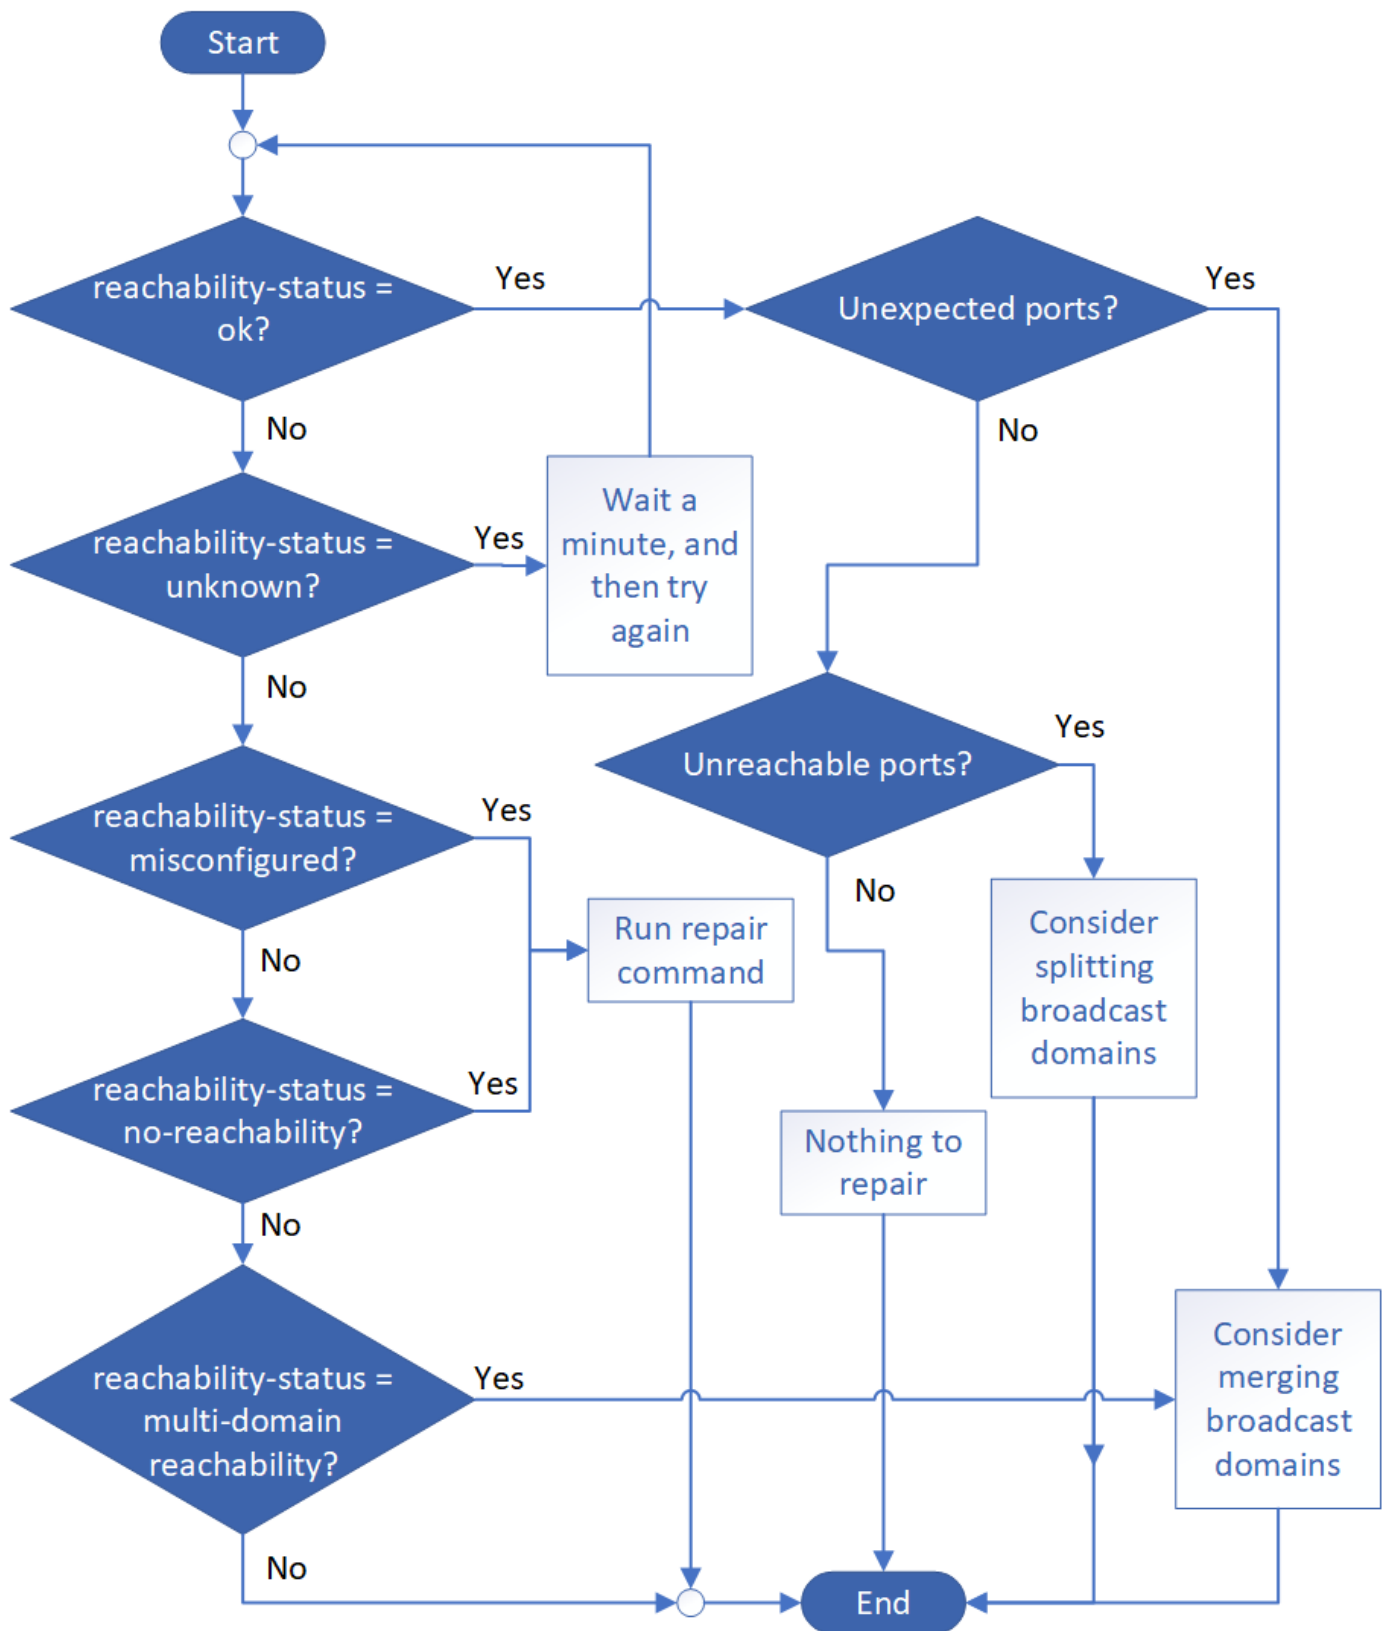

Reachability-status	Description
ok	<p>The port has layer 2 reachability to its assigned broadcast domain.</p> <p>If the reachability-status is "ok", but there are "unexpected ports", consider merging one or more broadcast domains. For more information, see the following <i>Unexpected ports</i> row.</p> <p>If the reachability-status is "ok", but there are "unreachable ports", consider splitting one or more broadcast domains. For more information, see the following <i>Unreachable ports</i> row.</p> <p>If the reachability-status is "ok", and there are no unexpected or unreachable ports, your configuration is correct.</p>
Unexpected ports	<p>The port has layer 2 reachability to its assigned broadcast domain; however, it also has layer 2 reachability to at least one other broadcast domain.</p> <p>Examine the physical connectivity and switch configuration to determine if it is incorrect or if the port's assigned broadcast domain needs to be merged with one or more broadcast domains.</p> <p>For more information, see <a href="#">Merge broadcast domains</a>.</p>
Unreachable ports	<p>If a single broadcast domain has become partitioned into two different reachability sets, you can split a broadcast domain to synchronize the ONTAP configuration with the physical network topology.</p> <p>Typically, the list of unreachable ports defines the set of ports that should be split into another broadcast domain after you have verified that the physical and switch configuration is accurate.</p> <p>For more information, see <a href="#">Split broadcast domains</a>.</p>
misconfigured-reachability	<p>The port does not have layer 2 reachability to its assigned broadcast domain; however, the port does have layer 2 reachability to a different broadcast domain.</p> <p>You can repair the port reachability. When you run the following command, the system will assign the port to the broadcast domain to which it has reachability:</p> <pre>network port reachability repair -node -port</pre> <p>For more information, see <a href="#">Repair port reachability</a>.</p>

Reachability-status	Description
no-reachability	<p>The port does not have layer 2 reachability to any existing broadcast domain.</p> <p>You can repair the port reachability. When you run the following command, the system will assign the port to a new automatically created broadcast domain in the Default IPspace:</p> <pre>network port reachability repair -node -port</pre> <p>For more information, see <a href="#">Repair port reachability</a>.</p>
multi-domain-reachability	<p>The port has layer 2 reachability to its assigned broadcast domain; however, it also has layer 2 reachability to at least one other broadcast domain.</p> <p>Examine the physical connectivity and switch configuration to determine if it is incorrect or if the port's assigned broadcast domain needs to be merged with one or more broadcast domains.</p> <p>For more information, see <a href="#">Merge broadcast domains</a> or <a href="#">Repair port reachability</a>.</p>
unknown	<p>If the reachability-status is "unknown", then wait a few minutes and try the command again.</p>

After you repair a port, you need to check for and resolve displaced LIFs and VLANs. If the port was part of an interface group, you also need to understand what happened to that interface group. For more information, see [Repair port reachability](#).

## Convert 40GbE NIC ports into multiple 10GbE ports for 10GbE connectivity

You can convert the X1144A-R6 and the X91440A-R6 40GbE Network Interface Cards (NICs) to support four 10GbE ports.

If you are connecting a hardware platform that supports one of these NICs to a cluster that supports 10GbE cluster interconnect and customer data connections, the NIC must be converted to provide the necessary 10GbE connections.

### Before you begin

You must be using a supported breakout cable.

### About this task

For a complete list of platforms that support NICs, see the [Hardware Universe](#).



On the X1144A-R6 NIC, only port A can be converted to support the four 10GbE connections. Once port A is converted, port e is not available for use.

## Steps

1. Enter maintenance mode.
2. Convert the NIC from 40GbE support to 10GbE support.

```
nicadmin convert -m [40G | 10G] [port-name]
```

3. After using the convert command, halt the node.
4. Install or change the cable.
5. Depending on the hardware model, use the SP (Service Processor) or BMC (Baseboard Management Controller) to power-cycle the node for the conversion to take effect.

### Removing a NIC from the node on ONTAP 9.7 or earlier

This topic applies to ONTAP 9.7 or earlier. You might have to remove a faulty NIC from its slot or move the NIC to another slot for maintenance purposes.

#### Before you begin

- All LIFs hosted on the NIC ports must have been migrated or deleted.
- None of the NIC ports can be the home ports of any LIFs.
- You must have advanced privileges to delete the ports from a NIC.

#### Steps

1. Delete the ports from the NIC:

```
network port delete
```

2. Verify that the ports have been deleted:

```
network port show
```

3. Repeat step 1, if the output of the network port show command still shows the deleted port.

### Removing a NIC from the node on ONTAP 9.8 or later

This topic applies to ONTAP 9.8 or later. You might have to remove a faulty NIC from its slot or move the NIC to another slot for maintenance purposes.

#### Steps

1. Power down the node.
2. Physically remove the NIC from its slot.
3. Power on the node.
4. Verify that the port has been deleted:

```
network port show
```



ONTAP automatically removes the port from any interface groups. If the port was the only member of an interface group, the interface group is deleted.

5. If the port had any VLANs configured on it, they are displaced. You can view displaced VLANs using the following command:

```
cluster controller-replacement network displaced-vlans show
```



The `displaced-interface show`, `displaced-vlans show`, and `displaced-vlans restore` commands are unique and do not require the fully qualified command name, which starts with `cluster controller-replacement network`.

6. These VLANs are deleted, but can be restored using the following command:

```
displaced-vlans restore
```

7. If the port had any LIFs configured on it, ONTAP automatically chooses new home ports for those LIFs on another port in the same broadcast domain. If no suitable home port is found on the same filer, those LIFs are considered displaced. You can view displaced LIFs using the following command:

```
displaced-interface show
```

8. When a new port is added to the broadcast domain on the same node, the home ports for the LIFs are automatically restored. Alternatively, you can either set the home port using `network interface modify -home-port -home-node` or use the `displaced-interface restore` command.

## Configure IPspaces (cluster administrators only)

### Overview

IPspaces enable you to configure a single ONTAP cluster so that it can be accessed by clients from more than one administratively separate network domain, even if those clients are using the same IP address subnet range. This allows for separation of client traffic for privacy and security.

An IPspace defines a distinct IP address space in which storage virtual machines (SVMs) reside. Ports and IP addresses defined for an IPspace are applicable only within that IPspace. A distinct routing table is maintained for each SVM within an IPspace; therefore, no cross-SVM or cross-IPspace traffic routing occurs.



IPspaces support both IPv4 and IPv6 addresses on their routing domains.


If you are managing storage for a single organization, then you do not need to configure IPspaces. If you are managing storage for multiple companies on a single ONTAP cluster, and you are certain that none of your customers have conflicting networking configurations, then you also do not need to use IPspaces. In many cases, the use of storage virtual machines (SVMs), with their own distinct IP routing tables, can be used to segregate unique networking configurations instead of using IPspaces.

## Example of using IPspaces

A common application for using IPspaces is when a Storage Service Provider (SSP) needs to connect customers of companies A and B to an ONTAP cluster on the SSP's premises and both companies are using the same private IP address ranges.


The SSP creates SVMs on the cluster for each customer and provides a dedicated network path from two SVMs to company A's network and from the other two SVMs to company B's network.

This type of deployment is shown in the following illustration, and it works if both companies use non-private IP address ranges. However, the illustration shows both companies using the same private IP address ranges, which causes problems.

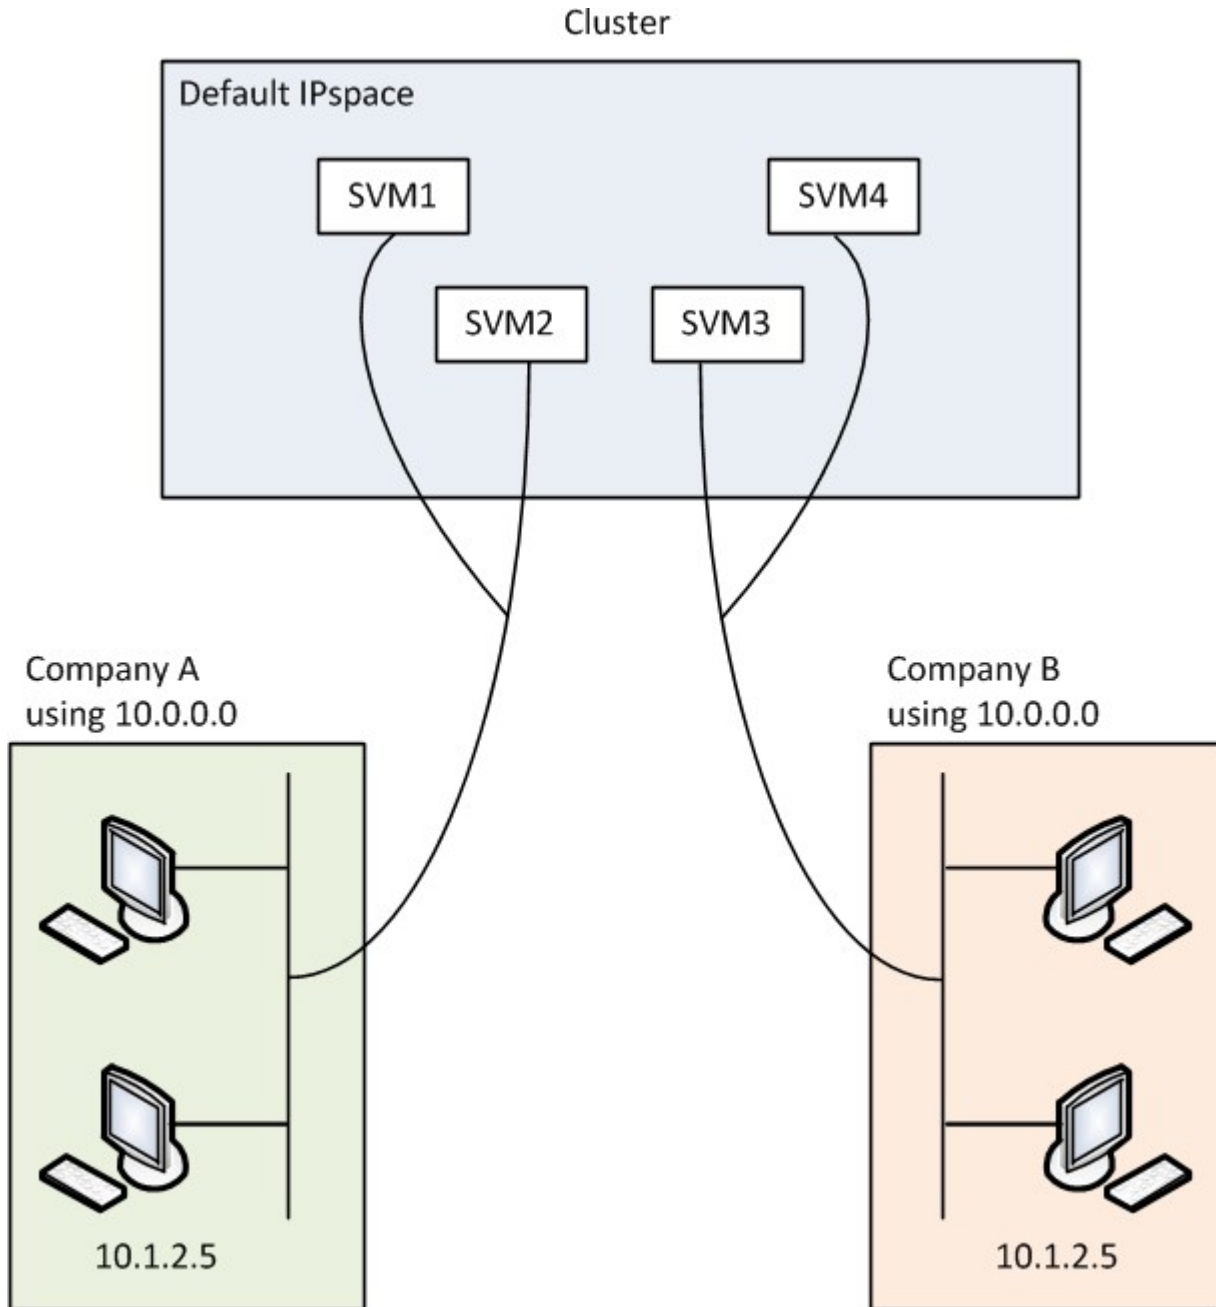

Both companies use the private IP address subnet 10.0.0.0, causing the following problems:

- The SVMs in the cluster at the SSP location have conflicting IP addresses if both companies decide to use the same IP address for their respective SVMs.
- Even if the two companies agree on using different IP addresses for their SVMs, problems can arise.
- For example, if any client in A's network has the same IP address as a client in B's network, packets destined for a client in A's address space might get routed to a client in B's address space, and vice versa.
- If the two companies decide to use mutually exclusive address spaces (for example, A uses 10.0.0.0 with a network mask of 255.128.0.0 and B uses 10.128.0.0 with a network mask of 255.128.0.0), the SSP needs to configure static routes on the cluster to route traffic appropriately to A's and B's networks.
- This solution is neither scalable (because of static routes) nor secure (broadcast traffic is sent to all interfaces of the cluster). To overcome these problems, the SSP defines two IPspaces on the cluster—one for each company. Because no cross-IPspace traffic is routed, the data for each company is securely routed to its respective network even if all of the SVMs are configured in the 10.0.0.0 address space, as shown in the following illustration:

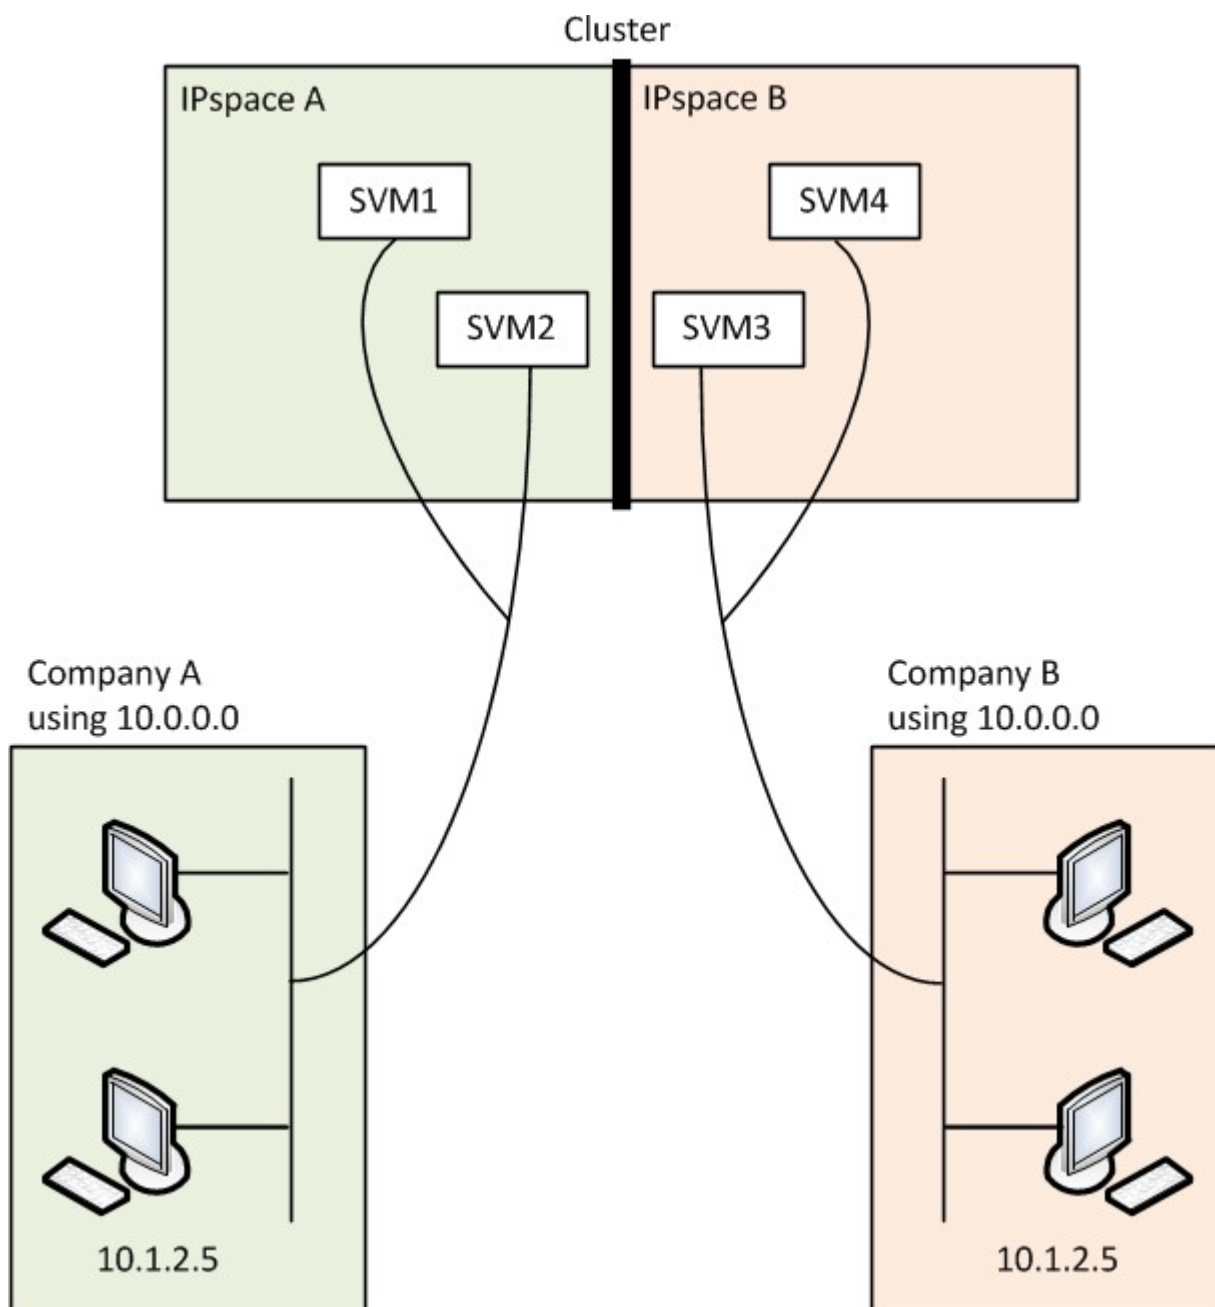



Additionally, the IP addresses referred to by the various configuration files, such as the `/etc/hosts` file, the `/etc/hosts.equiv` file, and the `/etc/rc` file, are relative to that IPspace. Therefore, the IPspaces enable the SSP to configure the same IP address for the configuration and authentication data for multiple SVMs, without conflict.

## Standard properties of IPspaces

Special IPspaces are created by default when the cluster is first created. Additionally, special storage virtual machines (SVMs) are created for each IPspace.

Two IPspaces are created automatically when the cluster is initialized:

- "Default" IPspace

This IPspace is a container for ports, subnets, and SVMs that serve data. If your configuration does not need separate IPspaces for clients, all SVMs can be created in this IPspace. This IPspace also contains the cluster management and node management ports.

- "Cluster" IPspace

This IPspace contains all cluster ports from all nodes in the cluster. It is created automatically when the cluster is created. It provides connectivity to the internal private cluster network. As additional nodes join the cluster, cluster ports from those nodes are added to the "Cluster" IPspace.

A "system" SVM exists for each IPspace. When you create an IPspace, a default system SVM of the same name is created:

- The system SVM for the "Cluster" IPspace carries cluster traffic between nodes of a cluster on the internal private cluster network.

It is managed by the cluster administrator, and it has the name "Cluster".

- The system SVM for the "Default" IPspace carries management traffic for the cluster and nodes, including the intercluster traffic between clusters.

It is managed by the cluster administrator, and it uses the same name as the cluster.

- The system SVM for a custom IPspace that you create carries management traffic for that SVM.

It is managed by the cluster administrator, and it uses the same name as the IPspace.

One or more SVMs for clients can exist in an IPspace. Each client SVM has its own data volumes and configurations, and it is administered independently of other SVMs.

## Create IPspaces

IPspaces are distinct IP address spaces in which storage virtual machines (SVMs) reside. You can create IPspaces when you need your SVMs to have their own secure storage, administration, and routing.

### About this task

There is a cluster-wide limit of 512 IPspaces. The cluster-wide limit is reduced to 256 IPspaces for clusters that contain nodes with 6 GB of RAM or less for platforms such as FAS2220 or FAS2240. See the Hardware

Universe to determine whether additional limits apply to your platform.

## NetApp Hardware Universe



An IPspace name cannot be "all" because "all" is a system-reserved name.

### Step

Create an IPspace:

```
network ipspace create -ipspace ipspace_name
```

`ipspace_name` is the name of the IPspace that you want to create. The following command creates the IPspace `ipspace1` on a cluster:

```
network ipspace create -ipspace ipspace1
```

### After you finish

If you create an IPspace in a cluster with a MetroCluster configuration, IPspace objects must be manually replicated to the partner clusters. Any SVMs that are created and assigned to an IPspace before the IPspace is replicated will not be replicated to the partner clusters.

Broadcast domains are created automatically in the "Default" IPspace and can be moved between IPspaces using the following command:

```
network port broadcast-domain move
```

For example, if you want to move a broadcast domain from "Default" to "ips1", using the following command:

```
network port broadcast-domain move -ipspace Default -broadcast-domain  
Default -to-ipspace ips1
```

### Display IPspaces

You can display the list of IPspaces that exist in a cluster, and you can view the storage virtual machines (SVMs), broadcast domains, and ports that are assigned to each IPspace.

### Step

Display the IPspaces and SVMs in a cluster:

```
network ipspace show [-ipspace ipspace_name]
```

The following command displays all of the IPspaces, SVMs, and broadcast domains in the cluster:

```

network ipspace show
IPspace          Vserver List          Broadcast Domains
-----
Cluster
Default          Cluster          Cluster
                  vs1, cluster-1          Default
ipspacel         vs3, vs4, ipspacel      bcast1

```

The following command displays the nodes and ports that are part of IPspace ipspacel:

```

network ipspace show -ipspacel ipspacel
IPspace name: ipspacel
Ports: cluster-1-01:e0c, cluster-1-01:e0d, cluster-1-01:e0e, cluster-1-
02:e0c, cluster-1-02:e0d, cluster-1-02:e0e
Broadcast Domains: Default-1
Vservers: vs3, vs4, ipspacel

```

## Delete an IPspace

If you no longer need an IPspace, you can delete it.

### Before you begin

There must be no broadcast domains, network interfaces, or SVMs associated with the IPspace you want to delete.

The system-defined "Default" and "Cluster" IPspaces cannot be deleted.

### Step

Delete an IPspace:

```
network ipspace delete -ipspacel ipspacel_name
```

The following command deletes IPspace ipspacel from the cluster:

```
network ipspace delete -ipspacel ipspacel
```

## ONTAP 9.8 and later-Configure broadcast domains (cluster administrators only)

### Overview for ONTAP 9.8 and later

Broadcast domains are intended to group network ports that belong to the same layer 2

network. The ports in the group can then be used by a storage virtual machine (SVM) for data or management traffic.

A broadcast domain resides in an IPspace. During cluster initialization, the system creates two default broadcast domains:

- The "Default" broadcast domain contains ports that are in the "Default" IPspace.

These ports are used primarily to serve data. Cluster management and node management ports are also in this broadcast domain.

- The "Cluster" broadcast domain contains ports that are in the "Cluster" IPspace.

These ports are used for cluster communication and include all cluster ports from all nodes in the cluster.


The system creates additional broadcast domains in the Default IPspace when necessary. The "Default" broadcast domain contains the home-port of the management LIF, plus any other ports that have layer 2 reachability to that port. Additional broadcast domains are named "Default-1", "Default-2", and so forth.

### **Example of using broadcast domains**

A broadcast domain is a set of network ports in the same IPspace that also has layer 2 reachability to one another, typically including ports from many nodes in the cluster.

The illustration shows the ports assigned to three broadcast domains in a four-node cluster:

- The "Cluster" broadcast domain is created automatically during cluster initialization, and it contains ports a and b from each node in the cluster.
- The "Default" broadcast domain is also created automatically during cluster initialization, and it contains ports c and d from each node in the cluster.
- The system automatically creates any additional broadcast domains during cluster initialization based on layer 2 network reachability. These additional broadcast domains are named Default-1, Default-2, and so forth.

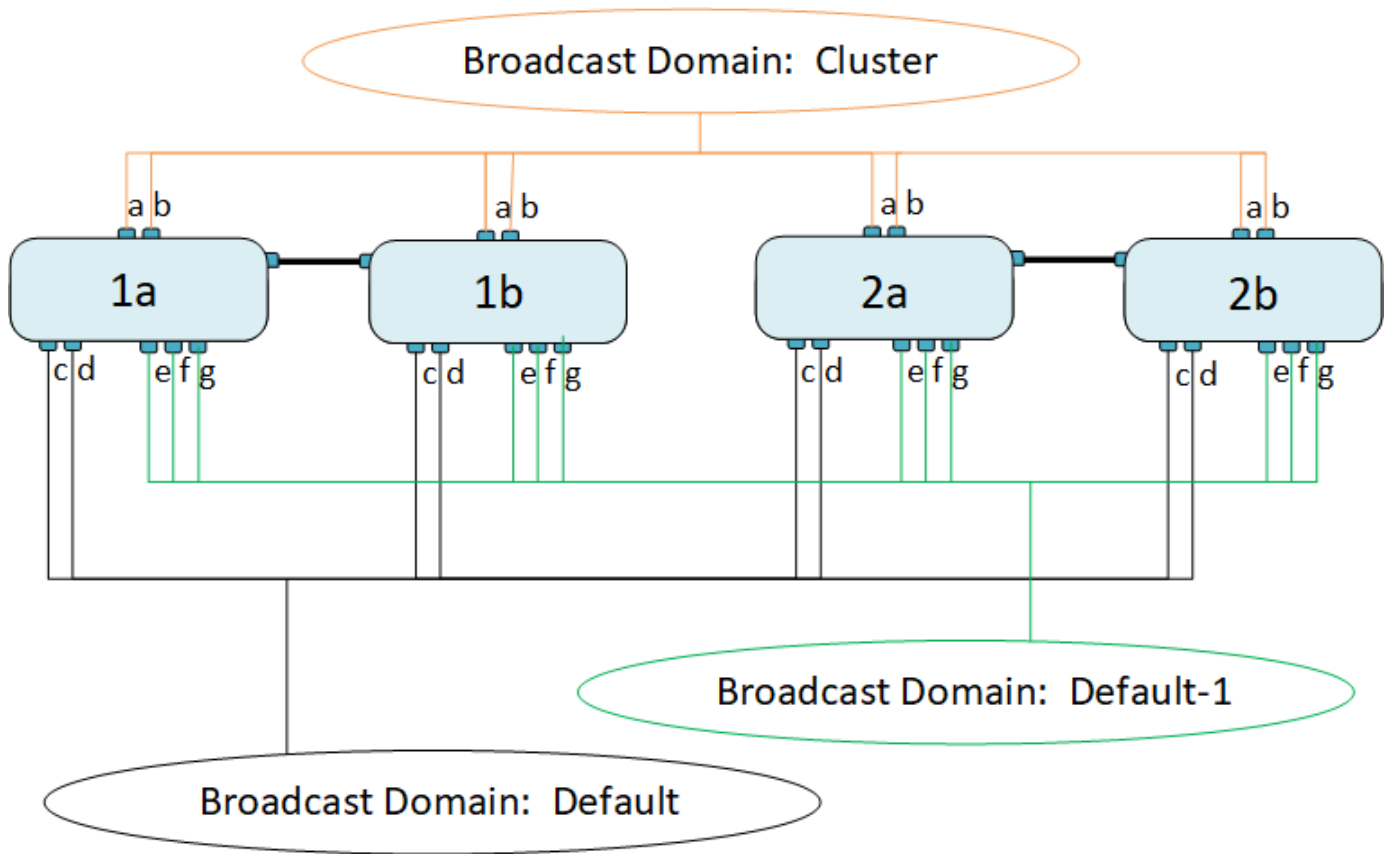

A failover group of the same name and with the same network ports as each of the broadcast domains is created automatically. This failover group is automatically managed by the system, meaning that as ports are added or removed from the broadcast domain, they are automatically added or removed from this failover group.

#### Add or remove ports from a broadcast domain

Broadcast domains are automatically created during the cluster create or join operation. You do not need to manually remove ports from broadcast domains.

If network port reachability has changed, either through physical network connectivity or switch configuration, and a network port belongs in a different broadcast domain, see the following topic:

[Repair port reachability](#)

#### Split broadcast domains

If network port reachability has changed, either through physical network connectivity or switch configuration, and a group of network ports previously configured in a single broadcast domain has become partitioned into two different reachability sets, you can split a broadcast domain to synchronize the ONTAP configuration with the physical network topology.

To determine if a network port broadcast domain is partitioned into more than one reachability set, use the `network port reachability show -details` command and pay attention to which ports do not have connectivity to one another ("Unreachable ports"). Typically, the list of unreachable ports defines the set of ports that should be split into another broadcast domain, after you have verified that the physical and switch

configuration is accurate.

### Step

Split a broadcast domain into two broadcast domains:

```
network port broadcast-domain split -ipspace <ipspace_name> -broadcast
-domain <broadcast_domain_name> -new-broadcast-domain
<broadcast_domain_name> -ports <node:port,node:port>
```

- `ipspace_name` is the name of the ipspace where the broadcast domain resides.
- `-broadcast-domain` is the name of the broadcast domain that will be split.
- `-new-broadcast-domain` is the name of the new broadcast domain that will be created.
- `-ports` is the node name and port to be added to the new broadcast domain.

### Merge broadcast domains

If network port reachability has changed, either through physical network connectivity or switch configuration, and two group of network ports previously configured in multiple broadcast domains now all share reachability, then merging two broadcast domains can be used to synchronize the ONTAP configuration with the physical network topology.

To determine if multiple broadcast domains belong to one reachability set, use the "network port reachability show -details" command and pay attention to which ports that are configured in another broadcast domain actually have connectivity to one another ("Unexpected ports"). Typically, the list of unexpected ports defines the set of ports that should be merged into the broadcast domain after you have verified that the physical and switch configuration is accurate.

### Step

Merge the ports from one broadcast domain into an existing broadcast domain:

```
network port broadcast-domain merge -ipspace <ipspace_name> -broadcast
-domain <broadcast_domain_name> -into-broadcast-domain
<broadcast_domain_name>
```

- `ipspace_name` is the name of the ipspace where the broadcast domains reside.
- `-broadcast-domain` is the name of the broadcast domain that will be merged.
- `-into-broadcast-domain` is the name of the broadcast domain that will receive additional ports.

### Change the MTU value for ports in a broadcast domain

You can modify the MTU value for a broadcast domain to change the MTU value for all ports in that broadcast domain. This can be done to support topology changes that have been made in the network.

### Before you begin

The MTU value must match all the devices connected to that layer 2 network except for the e0M port handling management traffic.

### About this task

Changing the MTU value causes a brief interruption in traffic over the affected ports. The system displays a prompt that you must answer with y to make the MTU change.

### Step

Change the MTU value for all ports in a broadcast domain:

```
network port broadcast-domain modify -broadcast-domain  
<broadcast_domain_name> -mtu <mtu_valu> [-ipSPACE <ipSPACE_name>]
```

- `broadcast_domain` is the name of the broadcast domain.
- `mtu` is the MTU size for IP packets; 1500 and 9000 are typical values.
- `ipSPACE` is the name of the IPspace in which this broadcast domain resides. The "Default" IPspace is used unless you specify a value for this option. The following command changes the MTU to 9000 for all ports in the broadcast domain bcast1:

```
network port broadcast-domain modify -broadcast-domain <Default-1> -mtu <  
9000 >  
Warning: Changing broadcast domain settings will cause a momentary data-  
serving interruption.  
Do you want to continue? {y|n}: <y>
```

### Display broadcast domains

You can display the list of broadcast domains within each IPspace in a cluster. The output also shows the list of ports and the MTU value for each broadcast domain.

### Step

Display the broadcast domains and associated ports in the cluster:

```
network port broadcast-domain show
```

The following command displays all the broadcast domains and associated ports in the cluster:

```

network port broadcast-domain show
IPspace Broadcast
Name      Domain Name  MTU   Port List
-----
Cluster Cluster      9000
          cluster-1-01:e0a    complete
          cluster-1-01:e0b    complete
          cluster-1-02:e0a    complete
          cluster-1-02:e0b    complete
Default Default      1500
          cluster-1-01:e0c    complete
          cluster-1-01:e0d    complete
          cluster-1-02:e0c    complete
          cluster-1-02:e0d    complete
          Default-1      1500
          cluster-1-01:e0e    complete
          cluster-1-01:e0f    complete
          cluster-1-01:e0g    complete
          cluster-1-02:e0e    complete
          cluster-1-02:e0f    complete
          cluster-1-02:e0g    complete

```

The following command displays the ports in the Default-1 broadcast domain that have an update status of error, which indicate that the port could not be updated properly:

```

network port broadcast-domain show -broadcast-domain Default-1 -port
-update-status error

IPspace Broadcast
Name      Domain Name  MTU   Port List
-----
Default Default-1      1500
          cluster-1-02:e0g    error

```

For more information, see [ONTAP 9 commands](#).

## Delete a broadcast domain

If you no longer need a broadcast domain, you can delete it. This moves the ports associated with that broadcast domain to the "Default" IPspace.

### Before you begin

There must be no subnets, network interfaces, or SVMs associated with the broadcast domain you want to delete.



### About this task

- The system-created "Cluster" broadcast domain cannot be deleted.
- All failover groups related to the broadcast domain are removed when you delete the broadcast domain.

### Step

Delete a broadcast domain:

```
network port broadcast-domain delete -broadcast-domain  
<broadcast_domain_name> [-ipspace <ipspace_name>]
```

The following command deletes broadcast domain Default-1 in IPspace ipspace1:

```
network port broadcast-domain delete -broadcast-domain <Default-1>  
-ipspace <ipspace1>
```

## ONTAP 9.7 and earlier-Configure broadcast domains (cluster administrators only)

### Overview for ONTAP 9.7 and earlier

Broadcast domains are intended to group network ports that belong to the same layer 2 network. The ports in the group can then be used by a storage virtual machine (SVM) for data or management traffic.

A broadcast domain resides in an IPspace. During cluster initialization, the system creates two default broadcast domains:

- The Default broadcast domain contains ports that are in the Default IPspace. These ports are used primarily to serve data. Cluster management and node management ports are also in this broadcast domain.
- The Cluster broadcast domain contains ports that are in the Cluster IPspace. These ports are used for cluster communication and include all cluster ports from all nodes in the cluster.

If you have created unique IPspaces to separate client traffic, then you need to create a broadcast domain in each of those IPspaces.



Create a broadcast domain to group network ports in the cluster that belong to the same layer 2 network. The ports can then be used by SVMs.


### Example of using broadcast domains

A broadcast domain is a set of network ports in the same IPspace that also has layer 2 reachability to one another, typically including ports from many nodes in the cluster.

The illustration shows the ports assigned to three broadcast domains in a four-node cluster:

- The Cluster broadcast domain is created automatically during cluster initialization, and it contains ports a and b from each node in the cluster.

- The Default broadcast domain is also created automatically during cluster initialization, and it contains ports c and d from each node in the cluster.
  - The bcast1 broadcast domain has been created manually, and it contains ports e, f, and g from each node in the cluster.
- This broadcast domain was created by the system administrator specifically for a new client to access data through a new SVM.

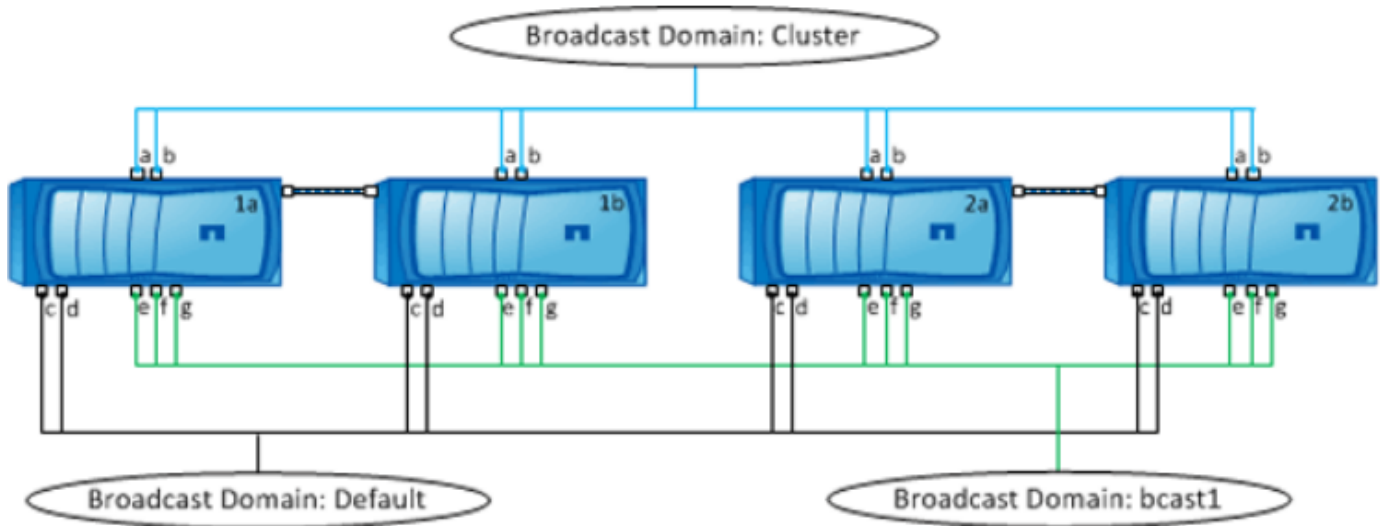

A failover group of the same name and with the same network ports as each of the broadcast domains is created automatically. This failover group is automatically managed by the system, meaning that as ports are added or removed from the broadcast domain, they are automatically added or removed from this failover group.

### Create a broadcast domain

In ONTAP 9.7 and earlier, you create a broadcast domain to group network ports in the cluster that belong to the same layer 2 network. The ports can then be used by SVMs.

#### Before you begin

Starting with ONTAP 9.8, broadcast domains are automatically created during the cluster create or join operation. If you are running ONTAP 9.8 or later, these steps are not needed.

In ONTAP 9.7 and earlier, the ports you plan to add to the broadcast domain must not belong to another broadcast domain.

#### About this task

- All broadcast domain names must be unique within an IPspace.
- The ports added to a broadcast domain can be physical network ports, VLANs, or interface groups (ifgrps).
- If the ports you want to use belong to another broadcast domain, but are unused, you use the `network port broadcast-domain remove-ports` command to remove the ports from the existing broadcast domain.
- The MTU of the ports added to a broadcast domain are updated to the MTU value set in the broadcast domain.
- The MTU value must match all of the devices connected to that layer 2 network except for the e0M port handling management traffic.

- If you do not specify an IPspace name, the broadcast domain is created in the "Default" IPspace.

To make system configuration easier, a failover group of the same name is created automatically that contains the same ports.

## Steps

1. View the ports that are not currently assigned to a broadcast domain:

```
network port show
```

If the display is large, use the `network port show -broadcast-domain` command to view only unassigned ports.

2. Create a broadcast domain:

```
network port broadcast-domain create -broadcast-domain broadcast_domain_name  
-mtu mtu_value [-ipspace ipspace_name] [-ports ports_list]
```

- `broadcast_domain_name` is the name of the broadcast domain you want to create.
- `mtu_value` is the MTU size for IP packets; 1500 and 9000 are typical values.

This value is applied to all ports that are added to this broadcast domain.

- `ipspace_name` is the name of the IPspace to which this broadcast domain will be added.

The "Default" IPspace is used unless you specify a value for this parameter.

- `ports_list` is the list of ports that will be added to the broadcast domain.

The ports are added in the format `node_name:port_number`, for example, `node1:e0c`.

3. Verify that the broadcast domain was created as desired:

```
network port show -instance -broadcast-domain new_domain
```

## Example

The following command creates broadcast domain `bcast1` in the Default IPspace, sets the MTU to 1500, and adds four ports:

```
network port broadcast-domain create -broadcast-domain bcast1 -mtu 1500 -ports  
cluster1-01:e0e,cluster1-01:e0f,cluster1-02:e0e,cluster1-02:e0f
```

## After you finish

You can define the pool of IP addresses that will be available in the broadcast domain by creating a subnet, or you can assign SVMs and interfaces to the IPspace at this time. For more information, see the [Cluster and SVM Peering Express Guide](#).

If you need to change the name of an existing broadcast domain, you use the `network port broadcast-domain rename` command.

## Add or remove ports from a broadcast domain

You can add network ports when initially creating a broadcast domain, or you can add

ports to, or remove ports from, a broadcast domain that already exists. This allows you to efficiently use all the ports in the cluster.

**Before you begin**

- Ports you plan to add to a broadcast domain must not belong to another broadcast domain.
- Ports that already belong to an interface group cannot be added individually to a broadcast domain.

**About this task**

The following rules apply when adding and removing network ports:

When adding ports...	When removing ports...
The ports can be network ports, VLANs, or interface groups (ifgrps).	N/A
The ports are added to the system-defined failover group of the broadcast domain.	The ports are removed from all failover groups in the broadcast domain.
The MTU of the ports is updated to the MTU value set in the broadcast domain.	The MTU of the ports is unchanged.
The IPspace of the ports is updated to the IPspace value of the broadcast domain.	The ports are moved to the 'Default' IPspace with no broadcast domain attribute.



If you remove the last member port of an interface group using the `network port ifgrp remove-port` command, it causes the interface group port to be removed from the broadcast domain because an empty interface group port is not allowed in a broadcast domain.

**Steps**

1. Display the ports that are currently assigned or unassigned to a broadcast domain by using the `network port show` command.
2. Add or remove network ports from the broadcast domain:

If you want to...	Use...
Add ports to a broadcast domain	<code>network port broadcast-domain add-ports</code>
Remove ports from a broadcast domain	<code>network port broadcast-domain remove-ports</code>

For more information about these commands, see [ONTAP 9 commands](#).

**Examples of adding and removing ports**

The following command adds port e0g on node cluster-1-01 and port e0g on node cluster-1-02 to broadcast domain bcast1 in the Default IPspace:

```
cluster-1::> network port broadcast-domain add-ports -broadcast-domain bcast1 -ports cluster-1-01:e0g,cluster1-02:e0g
```

The following command adds two cluster ports to broadcast domain Cluster in the Cluster IPspace:

```
cluster-1::> network port broadcast-domain add-ports -broadcast-domain Cluster  
-ports cluster-2-03:e0f,cluster2-04:e0f -ipSpace Cluster
```

The following command removes port e0e on node cluster1-01 from broadcast domain bcast1 in the Default IPspace:

```
cluster-1::> network port broadcast-domain remove-ports -broadcast-domain bcast1  
-ports cluster-1-01:e0e
```

## Split broadcast domains

You can modify an existing broadcast domain by splitting it into two different broadcast domains, with each broadcast domain containing some of the original ports assigned to the original broadcast domain.

### About this task

- If the ports are in a failover group, all of the ports in a failover group must be split.
- If the ports have LIFs associated with them, the LIFs cannot be part of a subnet's ranges.

### Step

Split a broadcast domain into two broadcast domains:

```
network port broadcast-domain split -ipSpace <ipSpace_name> -broadcast  
-domain <broadcast_domain_name> -new-broadcast-domain  
<broadcast_domain_name> -ports <node:port,node:port>
```

- `ipSpace_name` is the name of the IPspace where the broadcast domain resides.
- `-broadcast-domain` is the name of the broadcast domain that will be split.
- `-new-broadcast-domain` is the name of the new broadcast domain that will be created.
- `-ports` is the node name and port to be added to the new broadcast domain.

## Merge broadcast domains

You can move all of the ports from one broadcast domain into an existing broadcast domain using the merge command.

This operation reduces the steps required if you were to remove all ports from a broadcast domain and then add the ports to an existing broadcast domain.

### Step

Merge the ports from one broadcast domain into an existing broadcast domain:

```
network port broadcast-domain merge -ipspace <ipspace_name> -broadcast
-domain <broadcast_domain_name> -into-broadcast-domain
<broadcast_domain_name>
```

- `ipspace_name` is the name of the IPspace where the broadcast domains reside.
- `-broadcast-domain` is the name of the broadcast domain that will be merged.
- `-into-broadcast-domain` is the name of the broadcast domain that will receive additional ports.

### Example

The following example merges broadcast domain bd-data1 into broadcast domain bd-data2:

```
network port -ipspace Default broadcast-domain bd-data1 into-broadcast-domain bd-
data2
```

### Change the MTU value for ports in a broadcast domain

You can modify the MTU value for a broadcast domain to change the MTU value for all ports in that broadcast domain. This can be done to support topology changes that have been made in the network.

#### Before you begin

The MTU value must match all the devices connected to that layer 2 network except for the e0M port handling management traffic.

#### About this task

Changing the MTU value causes a brief interruption in traffic over the affected ports. The system displays a prompt that you must answer with y to make the MTU change.

#### Step

Change the MTU value for all ports in a broadcast domain:

```
network port broadcast-domain modify -broadcast-domain
<broadcast_domain_name> -mtu <mtu_valu> [-ipspace <ipspace_name>]
```

- `broadcast_domain` is the name of the broadcast domain.
- `mtu` is the MTU size for IP packets; 1500 and 9000 are typical values.
- `ipspace` is the name of the IPspace in which this broadcast domain resides. The "Default" IPspace is used unless you specify a value for this option. The following command changes the MTU to 9000 for all ports in the broadcast domain bcast1:

```
network port broadcast-domain modify -broadcast-domain <Default-1> -mtu <
9000 >
Warning: Changing broadcast domain settings will cause a momentary data-
serving interruption.
Do you want to continue? {y|n}: <y>
```

## Display broadcast domains

You can display the list of broadcast domains within each IPspace in a cluster. The output also shows the list of ports and the MTU value for each broadcast domain.

### Step

Display the broadcast domains and associated ports in the cluster:

```
network port broadcast-domain show
```

The following command displays all the broadcast domains and associated ports in the cluster:

```
network port broadcast-domain show
```

IPspace	Broadcast		Update
Name	Domain Name	MTU	Port List
			Status Details
Cluster	Cluster	9000	
			cluster-1-01:e0a complete
			cluster-1-01:e0b complete
			cluster-1-02:e0a complete
			cluster-1-02:e0b complete
Default	Default	1500	
			cluster-1-01:e0c complete
			cluster-1-01:e0d complete
			cluster-1-02:e0c complete
			cluster-1-02:e0d complete
	bcast1	1500	
			cluster-1-01:e0e complete
			cluster-1-01:e0f complete
			cluster-1-01:e0g complete
			cluster-1-02:e0e complete
			cluster-1-02:e0f complete
			cluster-1-02:e0g complete

The following command displays the ports in the bcast1 broadcast domain that have an update status of error, which indicate that the port could not be updated properly:

```
network port broadcast-domain show -broadcast-domain bcast1 -port-update
-status error
```

IPspace	Broadcast			Update
Name	Domain Name	MTU	Port List	Status Details
-----	-----	-----	-----	-----
Default	bcast1	1500	cluster-1-02:e0g	error

For more information, see [ONTAP 9 commands](#).

## Delete a broadcast domain

If you no longer need a broadcast domain, you can delete it. This moves the ports associated with that broadcast domain to the "Default" IPspace.

### Before you begin

There must be no subnets, network interfaces, or SVMs associated with the broadcast domain you want to delete.

### About this task

- The system-created "Cluster" broadcast domain cannot be deleted.
- All failover groups related to the broadcast domain are removed when you delete the broadcast domain.

### Step

Delete a broadcast domain:

```
network port broadcast-domain delete -broadcast-domain
<broadcast_domain_name> [-ipspace <ipspace_name>]
```

The following command deletes broadcast domain bcast1 in IPspace ipspace1:

```
network port broadcast-domain delete -broadcast-domain <bcast1> -ipspace
<ipspace1>
```

## Configure failover groups and policies for LIFs

### Overview

LIF failover refers to the automatic migration of a LIF to a different network port in response to a link failure on the LIF's current port. This is a key component to providing high availability for the connections to SVMs. Configuring LIF failover involves creating a failover group, modifying the LIF to use the failover group, and specifying a failover policy.

A failover group contains a set of network ports (physical ports, VLANs, and interface groups) from one or



more nodes in a cluster. The network ports that are present in the failover group define the failover targets available for the LIF. A failover group can have cluster management, node management, intercluster, and NAS data LIFs assigned to it.



When a LIF is configured without a valid failover target, an outage occurs when the LIF attempts to fail over. You can use the "network interface show -failover" command to verify the failover configuration.

When you create a broadcast domain, a failover group of the same name is created automatically that contains the same network ports. This failover group is automatically managed by the system, meaning that as ports are added or removed from the broadcast domain, they are automatically added or removed from this failover group. This is provided as an efficiency for administrators who do not want to manage their own failover groups.

## Create a failover group

You create a failover group of network ports so that a LIF can automatically migrate to a different port if a link failure occurs on the LIF's current port. This enables the system to reroute network traffic to other available ports in the cluster.

### About this task

You use the `network interface failover-groups create` command to create the group and to add ports to the group.

- The ports added to a failover group can be network ports, VLANs, or interface groups (ifgrps).
- All the ports added to the failover group must belong to the same broadcast domain.
- A single port can reside in multiple failover groups.
- If you have LIFs in different VLANs or broadcast domains, you must configure failover groups for each VLAN or broadcast domain.
- Failover groups do not apply in SAN iSCSI or FC environments.

### Step

Create a failover group:

```
network interface failover-groups create -vserver vs3 -failover-group failover_group_name -targets ports_list
```

- `vs3` is the name of the SVM that can use the failover group.
- `failover_group_name` is the name of the failover group you want to create.
- `ports_list` is the list of ports that will be added to the failover group. Ports are added in the format `node_name>:port_number`, for example, `node1:e0c`.

The following command creates failover group fg3 for SVM vs3 and adds two ports:

```
network interface failover-groups create -vserver vs3 -failover-group fg3 -targets cluster1-01:e0e,cluster1-02:e0e
```

### After you finish

- You should apply the failover group to a LIF now that the failover group has been created.
- Applying a failover group that does not provide a valid failover target for a LIF results in a warning message.

If a LIF that does not have a valid failover target attempts to fail over, an outage might occur.

## Configure failover settings on a LIF

You can configure a LIF to fail over to a specific group of network ports by applying a failover policy and a failover group to the LIF. You can also disable a LIF from failing over to another port.

### About this task

- When a LIF is created, LIF failover is enabled by default, and the list of available target ports is determined by the default failover group and failover policy based on the LIF type and service policy.

Starting with 9.5, you can specify a service policy for the LIF that defines which network services can use the LIF. Some network services impose failover restrictions on a LIF.



If a LIF's service policy is changed in a way that further restricts failover, the LIF's failover policy is automatically updated by the system.

- You can modify the failover behavior of LIFs by specifying values for the `-failover-group` and `-failover-policy` parameters in the network interface modify command.
- Modification of a LIF that results in the LIF having no valid failover target results in a warning message.

If a LIF that does not have a valid failover target attempts to fail over, an outage might occur.

- The following list describes how the `-failover-policy` setting affects the target ports that are selected from the failover group:
  - `broadcast-domain-wide` applies to all ports on all nodes in the failover group.
  - `system-defined` applies to only those ports on the LIF's home node and one other node in the cluster, typically a non- SFO partner, if it exists.
  - `local-only` applies to only those ports on the LIF's home node.
  - `sfo-partner-only` applies to only those ports on the LIF's home node and its SFO partner.
  - `disabled` indicates the LIF is not configured for failover.



Logical interfaces for SAN protocols do not support failover, therefore, these LIFs are always set to disabled.

### Step

Configure failover settings for an existing interface:

```
network interface modify -vserver <vserver_name> -lif <lif_name> -failover
-policy <failover_policy> -failover-group <failover_group>
```

Examples of configuring failover settings and disabling failover

The following command sets the failover policy to broadcast-domain-wide and uses the ports in failover group fg3 as failover targets for LIF data1 on SVM vs3:

```
network interface modify -vserver vs3 -lif data1 failover-policy
broadcast-domain-wide - failover-group fg3

network interface show -vserver vs3 -lif * -fields failover-
group,failover-policy

vserver lif                failover-policy                failover-group
-----
vs3      data1              broadcast-domain-wide    fg3
```

The following command disables failover for LIF data1 on SVM vs3:

```
network interface modify -vserver vs3 -lif data1 failover-policy disabled
```

Commands for managing failover groups and policies

You can use the `network interface failover-groups` commands to manage failover groups. You use the `network interface modify` command to manage the failover groups and failover policies that are applied to a LIF.

If you want to...	Use this command...
Add network ports to a failover group	<code>network interface failover-groups add-targets</code>
Remove network ports from a failover group	<code>network interface failover-groups remove-targets</code>
Modify network ports in a failover group	<code>network interface failover-groups modify</code>
Display the current failover groups	<code>network interface failover-groups show</code>
Configure failover on a LIF	<code>network interface modify -failover-group -failover-policy</code>
Display the failover group and failover policy that is being used by each LIF	<code>network interface show -fields failover-group, failover-policy</code>
Rename a failover group	<code>network interface failover-groups rename</code>
Delete a failover group	<code>network interface failover-groups delete</code>



Modifying a failover group such that it does not provide a valid failover target for any LIF in the cluster can result in an outage when a LIF attempts to fail over.

For more information, see the man pages for the `network interface failover-groups` and `network interface modify` commands.

## Configure subnets (cluster administrators only)

### Overview

Subnets enable you to allocate specific blocks, or pools, of IP addresses for your ONTAP network configuration. This enables you to create LIFs more easily when using the `network interface create` command, by specifying a subnet name instead of having to specify IP address and network mask values.

A subnet is created within a broadcast domain, and it contains a pool of IP addresses that belong to the same layer 3 subnet. IP addresses in a subnet are allocated to ports in the broadcast domain when LIFs are created. When LIFs are removed, the IP addresses are returned to the subnet pool and are available for future LIFs.

It is recommended that you use subnets because they make the management of IP addresses much easier, and they make the creation of LIFs a simpler process. Additionally, if you specify a gateway when defining a subnet, a default route to that gateway is added automatically to the SVM when a LIF is created using that subnet.

### Create a subnet

After you create the broadcast domain, you can create a subnet to allocate specific blocks of IPv4 or IPv6 addresses to be used later when you create LIFs for the SVM.

This enables you to create LIFs more easily by specifying a subnet name instead of having to specify IP address and network mask values for each LIF.

### Before you begin

You must be a cluster administrator to perform this task.

### Steps

1. Create a subnet.

```
network subnet create -broadcast-domain ipspace1 -ip-space ipspace1
-subnet-name ipspace1 -subnet 10.0.0.0/24 -gateway 10.0.0.1 -ip-ranges
"10.0.0.128-10.0.0.130,10.0.0.132"
```

The subnet name can be either a subnet IP value such as `192.0.2.0/24` or a string such as `ipspace1` like the one used in this example.

2. Verify that the subnet configuration is correct.

The output from this example shows information about the subnet named `ipspace1` in the `ipspace1` IPspace. The subnet belongs to the broadcast domain name `ipspace1`. You can assign the IP addresses in this subnet to data LIFs for SVMs created in the `ipspace1` IPspace.

```
network subnet show -ip-space ipspace1
```

### Add or remove IP addresses from a subnet

You can add IP addresses when initially creating a subnet, or you can add IP addresses

to a subnet that already exists. You can also remove IP addresses from an existing subnet. This enables you to allocate only the required IP addresses for SVMs.

**About this task**

When adding IP addresses, you will receive an error if any service processor or network interfaces are using the IP addresses in the range being added. If you want to associate any manually addressed interfaces with the current subnet, you can set the "-force-update-lif-associations" option to true.

When removing IP addresses, you will receive an error if any service processor or network interfaces are using the IP addresses being removed. If you want the interfaces to continue to use the IP addresses after they are removed from the subnet, you can set the "-force-update-lif-associations" option to true.

**Step**

Add or remove IP addresses from a subnet:

If you want to...	Use this command...
Add IP addresses to a subnet	network subnet add-ranges
Remove IP addresses from a subnet	network subnet remove-ranges

For more information about these commands, see the man pages.

The following command adds IP addresses 192.0.2.82 through 192.0.2.85 to subnet sub1:

```
network subnet add-ranges -subnet-name <sub1> -ip-ranges <192.0.2.82-192.0.2.85>
```

The following command removes IP address 198.51.100.9 from subnet sub3:

```
network subnet remove-ranges -subnet-name <sub3> -ip-ranges <198.51.100.9>
```

If the current range includes 1 through 10 and 20 through 40, and you want to add 11 through 19 and 41 through 50 (basically allowing 1 through 50), you can overlap the existing range of addresses by using the following command. This command adds only the new addresses and does not affect the existing addresses:

```
network subnet add-ranges -subnet-name <sub3> -ip-ranges <198.51.10.1-198.51.10.50>
```

**Change subnet properties**

You can change the subnet address and mask value, gateway address, or range of IP addresses in an existing subnet.

**About this task**

- When modifying IP addresses, you must ensure there are no overlapping IP addresses in the network so

that different subnets, or hosts, do not attempt to use the same IP address.

- If you add or change the gateway IP address, the modified gateway is applied to new SVMs when a LIF is created in them using the subnet. A default route to the gateway is created for the SVM if the route does not already exist. You may need to manually add a new route to the SVM when you change the gateway IP address.

## Step

Modify subnet properties:

```
network subnet modify -subnet-name <subnet_name> [-ipspace <ipspace_name>]  
[-subnet <subnet_address>] [-gateway <gateway_address>] [-ip-ranges  
<ip_address_list>] [-force-update-lif-associations <true>]
```

- `subnet_name` is the name of the subnet you want to modify.
- `ipspace` is the name of the IPspace where the subnet resides.
- `subnet` is the new address and mask of the subnet, if applicable; for example, 192.0.2.0/24.
- `gateway` is the new gateway of the subnet, if applicable; for example, 192.0.2.1. Entering "" removes the gateway entry.
- `ip_ranges` is the new list, or range, of IP addresses that will be allocated to the subnet, if applicable. The IP addresses can be individual addresses, a range or IP addresses, or a combination in a comma-separated list. The range specified here replaces the existing IP addresses.
- `force-update-lif-associations` is required when you change the IP address range. You can set the value to **true** for this option when modifying the range of IP addresses. This command fails if any service processor or network interfaces are using the IP addresses in the specified range. Setting this value to **true** associates any manually addressed interfaces with the current subnet and allows the command to succeed.

The following command modifies the gateway IP address of subnet sub3:

```
network subnet modify -subnet-name <sub3> -gateway <192.0.3.1>
```

## Display subnets

You can display the list of IP addresses that are allocated to each subnet within an IPspace. The output also shows the total number of IP addresses that are available in each subnet, and the number of addresses that are currently being used.

## Step

Display the list of subnets and the associated IP address ranges that are used in those subnets:

```
network subnet show
```

The following command displays the subnets and the subnet properties:

```
network subnet show
```

IPspace: Default

Subnet		Broadcast		Avail/	
Name	Subnet	Domain	Gateway	Total	Ranges
sub1	192.0.2.0/24	bcast1	192.0.2.1	5/9	192.0.2.92-192.0.2.100
sub3	198.51.100.0/24	bcast3	198.51.100.1	3/3	198.51.100.7,198.51.100.9

## Delete a subnet

If you no longer need a subnet and want to deallocate the IP addresses that were assigned to the subnet, you can delete it.

### About this task

You will receive an error if any service processor or network interfaces are currently using IP addresses in the specified ranges. If you want the interfaces to continue to use the IP addresses even after the subnet is deleted, you can set the `-force-update-lif-associations` option to true to remove the subnet's association with the LIFs.

### Step

Delete a subnet:

```
network subnet delete -subnet-name subnet_name [-ipspace ipspace_name] [-force-update-lif-associations true]
```

The following command deletes subnet sub1 in IPspace ipspace1:

```
network subnet delete -subnet-name sub1 -ipspace ipspace1
```

## Configure LIFs (cluster administrators only)

### Overview

A LIF represents a network access point to a node in the cluster. You can configure LIFs on ports over which the cluster sends and receives communications over the network.

A cluster administrator can create, view, modify, migrate, or delete LIFs. An SVM administrator can only view the LIFs associated with the SVM.

## What LIFs are

A LIF (logical interface) is an IP address or WWPN with associated characteristics, such as a service policy, a home port, a home node, a list of ports to fail over to, and a firewall policy. You can configure LIFs on ports over which the cluster sends and receives communications over the network.

LIFs can be hosted on the following ports:

- Physical ports that are not part of interface groups
- Interface groups
- VLANs
- Physical ports or interface groups that host VLANs
- Virtual IP (VIP) ports


Starting with ONTAP 9.5, VIP LIFs are supported and are hosted on VIP ports.

While configuring SAN protocols such as FC on a LIF, it will be associated with a WWPN.

## [SAN administration](#)

The following figure illustrates the port hierarchy in an ONTAP system:



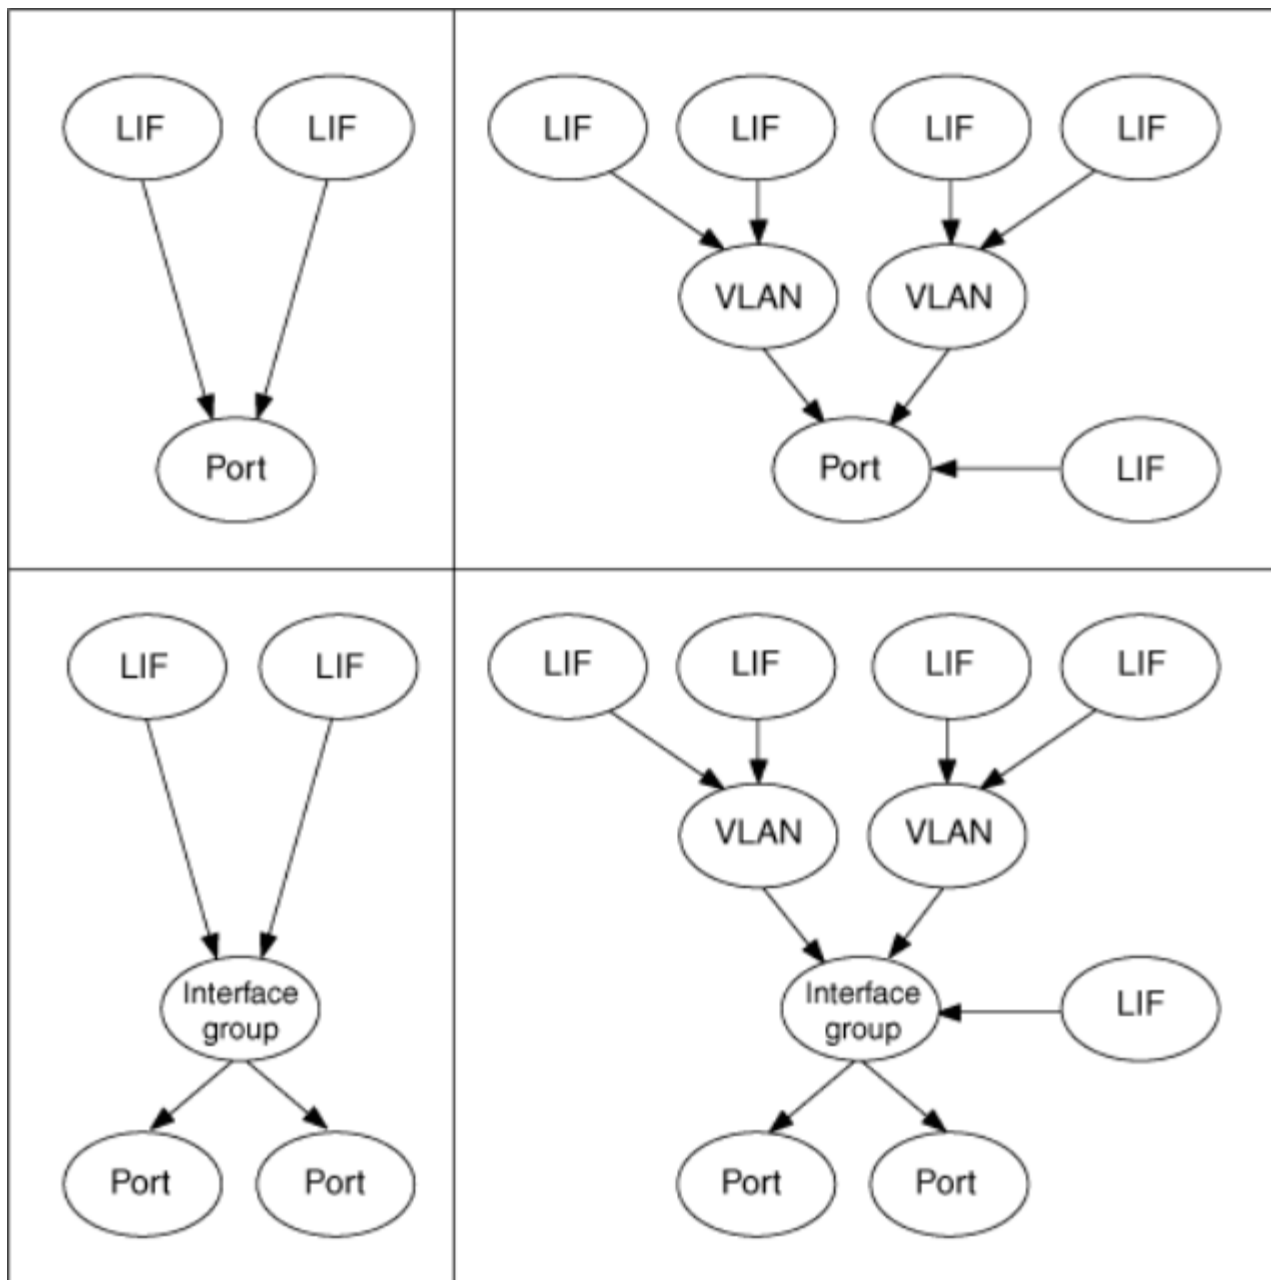

#### LIF roles in ONTAP 9.5 and earlier

LIFs with different roles have different characteristics. A LIF role determines the kind of traffic that is supported over the interface, along with the failover rules that apply, the firewall restrictions that are in place, the security, the load balancing, and the routing behavior for each LIF. A LIF can have any one of the five roles: node management, cluster management, cluster, intercluster, and data.

Starting with ONTAP 9.6, LIF roles are deprecated. You should specify service policies for LIFs instead of a role. It is not necessary to specify a LIF role when creating a LIF with a service policy.

#### LIF compatibility with port types



When intercluster and management LIFs are configured in the same subnet to associate with a static route and if the route associates with an intercluster LIF, the management traffic is blocked by an external firewall and the AutoSupport and NTP connections fail. You can recover the system by running the `network interface modify -vserver vservice name -lif intercluster LIF -status-admin up|down` command to toggle the intercluster LIF. However, you should set the intercluster LIF and management LIF in different subnets to avoid this issue.

LIF role	Description
Data LIF	<p>A LIF that is associated with a storage virtual machine (SVM) and is used for communicating with clients. You can have multiple data LIFs on a port. These interfaces can migrate or fail over throughout the cluster. You can modify a data LIF to serve as an SVM management LIF by modifying its firewall policy to mgmt.</p> <p>Sessions established to NIS, LDAP, Active Directory, WINS, and DNS servers use data LIFs.</p>
Cluster LIF	<p>A LIF that is used to carry intracluster traffic between nodes in a cluster. Cluster LIFs must always be created on 10-GbE network ports.</p> <p>Cluster LIFs can fail over between cluster ports on the same node, but they cannot be migrated or failed over to a remote node. When a new node joins a cluster, IP addresses are generated automatically. However, if you want to assign IP addresses manually to the cluster LIFs, you must ensure that the new IP addresses are in the same subnet range as the existing cluster LIFs.</p>
Node management LIF	<p>A LIF that provides a dedicated IP address for managing a particular node in a cluster. Node management LIFs are created at the time of creating or joining the cluster. These LIFs are used for system maintenance, for example, when a node becomes inaccessible from the cluster.</p>

LIF role	Description
Cluster management LIF	<p>LIF that provides a single management interface for the entire cluster.</p> <p>A cluster management LIF can fail over to any node management or data port in the cluster. It cannot fail over to cluster or intercluster ports</p> <p>Intercluster LIF A LIF that is used for cross-cluster communication, backup, and replication. You must create an intercluster LIF on each node in the cluster before a cluster peering relationship can be established.</p> <p>These LIFs can only fail over to ports in the same node. They cannot be migrated or failed over to another node in the cluster.</p>

	Data LIF	Cluster LIF	Node management LIF	Cluster management LIF	Intercluster LIF
Primary traffic types	NFS server, CIFS server, NIS client, Active Directory, LDAP, WINS, DNS client and server, iSCSI and FC server	Intracuster	SSH server, HTTPS server, NTP client, SNMP, AutoSupport client, DNS client, loading software updates	SSH server, HTTPS server	Cross-cluster replication

#### LIF security

	Data LIF	Cluster LIF	Node management LIF	Cluster management LIF	Intercluster LIF
Require private IP subnet?	No	Yes	No	No	No
Require secure network?	No	Yes	No	No	Yes
Default firewall policy	Very restrictive	Completely open	Medium	Medium	Very restrictive
Is firewall customizable?	Yes	No	Yes	Yes	Yes

#### LIF failover

	<b>Data LIF</b>	<b>Cluster LIF</b>	<b>Node management LIF</b>	<b>Cluster management LIF</b>	<b>Intercluster LIF</b>
Default behavior	Only those ports in the same failover group that are on the LIF's home node and on a non-SFO partner node	Only those ports in the same failover group that are on the LIF's home node	Only those ports in the same failover group that are on the LIF's home node	Any port in the same failover group	Only those ports in the same failover group that are on the LIF's home node
Is customizable?	Yes	No	Yes	Yes	Yes

#### LIF routing

	<b>Data LIF</b>	<b>Cluster LIF</b>	<b>Node management LIF</b>	<b>Cluster management LIF</b>	<b>Intercluster LIF</b>
When is a default route needed?	When clients or domain controller are on different IP subnet	Never	When any of the primary traffic types require access to a different IP subnet	When administrator is connecting from another IP subnet	When other intercluster LIFs are on a different IP subnet
When is a static route to a specific IP subnet needed?	Rare	Never	Rare	Rare	When nodes of another cluster have their intercluster LIFs in different IP subnets
When is a static host route to a specific server needed?	To have one of the traffic types listed under node management LIF, go through a data LIF rather than a node management LIF. This requires a corresponding firewall change.	Never	Rare	Rare	Rare

#### LIF rebalancing

	<b>Data LIF</b>	<b>Cluster LIF</b>	<b>Node management LIF</b>	<b>Cluster management LIF</b>	<b>Intercluster LIF</b>
DNS: use as DNS server?	Yes	No	No	No	No

	Data LIF	Cluster LIF	Node management LIF	Cluster management LIF	Intercluster LIF
DNS: export as zone?	Yes	No	No	No	No

### LIFs and service policies in ONTAP 9.6 and later

You can assign service policies (instead of LIF roles) to LIFs that determine the kind of traffic that is supported for the LIFs. Service policies define a collection of network services supported by a LIF. ONTAP provides a set of built-in service policies that can be associated with a LIF.

#### Service policies for system SVMs

The admin SVM and any system SVM contain service policies that can be used for LIFs in that SVM, including management and intercluster LIFs. These policies are automatically created by the system when an IPspace is created. The following table lists the built-in policies for LIFs in system SVMs:

Policy	Included services	Equivalent role	Description
default-intercluster	intercluster-core	intercluster	Used by LIFs carrying intercluster traffic. Note: Available from ONTAP 9.5 with the name net-intercluster service policy.
default-route-announce	management-bgp	-	Used by LIFs carrying BGP peer connections Note: Available from ONTAP 9.5 with the name net-route-announce service policy.
default-management	management-core, management-ems, management-ssh, management-https, management-autosupport	node-mgmt, or cluster-mgmt	Used by LIFs handling management requests. Management-ems controls which LIFs can publish EMS content.

The following table lists the services that can be used on a system SVM along with any restrictions each service imposes on a LIF's failover policy:

Service	Failover limitations	Description
intercluster-core	home-node-only	Core intercluster services
management-core	-	Core management services

Service	Failover limitations	Description
management-ssh	-	Services for SSH management access
management-https	-	Services for HTTPS management access
management-autosupport	-	Services related to posting AutoSupport payloads
management-bgp	home-port-only	Services related to BGP peer interactions

### Service policies for data SVMs

All data SVMs contain service policies that can be used by LIFs in that SVM. The following table lists the built-in policies for LIFs in data SVMs:

Policy	Included services	Equivalent data protocol	Description
default-management	management-ssh, management-https	none	Used by LIFs handling management requests
default-data-blocks	data-iscsi	iscsi	Used by LIFs carrying block-oriented SAN data traffic
default-data-files	data-nfs, data-cifs, data-flexcache, data-fpolicy-client	nfs, cifs, fcache	Used by LIFs carrying file-oriented NAS data traffic.

The following table lists the services that can be used on a data SVM along with any restrictions each service imposes on a LIF's failover policy:

Policy	Included services	Equivalent data protocol	Description
management-ssh	-	-	Services for SSH management access
management-https	-	-	Services for HTTPS management access
data-core	-	data-only	Core data services (see for more details.
data-nfs	-	data-only	Protocols related to NFS data service

Policy	Included services	Equivalent data protocol	Description
data-cifs	-	data-only	Protocols related to CIFS data service
data-flexcache	-	data-only	Protocols related to FlexCache data service
data-iscsi	home-port-only	data-only	Protocols related to iSCSI data service

You should be aware of how the service policies are assigned to the LIFs in data SVMs:

- If a data SVM is created with a list of data services, the built-in "default-data-files" and "default-data-blocks" service policies in that SVM are created using the specified services.
- If a data SVM is created without specifying a list of data services, the built-in "default-data-files" and "default-data-blocks" service policies in that SVM are created using a default list of data services.

The default data services list includes the iSCSI, NFS, SMB, and FlexCache services.

- When a LIF is created with a list of data protocols, a service policy equivalent to the specified data protocols is assigned to the LIF.

If an equivalent service policy does not exist, a custom service policy is created.

- When a LIF is created without a service policy or list of data protocols, the default-data-files service policy is assigned to the LIF by default.

#### Data-core service

The data-core service allows components that previously used LIFs with the data role to work as expected on clusters that have been upgraded to manage LIFs using service policies instead of LIF roles (which are deprecated in ONTAP 9.6).

Specifying data-core as a service does not open any ports in the firewall, but the service should be included in any service policy in a data SVM. For example, the default-data-files service policy contains the following services by default:

- data-core
- data-nfs
- data-cifs
- data-flexcache

The data-core service should be included in the policy to ensure all applications using the LIF work as expected, but the other three services can be removed, if desired.

#### Configure LIF service policies

You can configure LIF service policies to identify a single service or a list of services that will use a LIF.

## Create a service policy for LIFs

You can create a service policy for LIFs. You can assign a service policy to one or more LIFs; thereby allowing the LIF to carry traffic for a single service or a list of services.

### About this task

Built-in services and service policies are available for managing data and management traffic on both data and system SVMs. Most use cases are satisfied using a built-in service policy rather than creating a custom service policy.

You can modify these built-in service policies, if required.

### Steps

1. View the services that are available in the cluster:

```
network interface service show
```

Services represent the applications accessed by a LIF as well as the applications served by the cluster. Each service includes zero or more TCP and UDP ports on which the application is listening.

The following additional data and management services are available:

```
network interface service show
Service                               Protocol:Ports
-----
cluster-core                         -
data-cifs                            -
data-core                            -
data-flexcache                       -
data-iscsi                           -
data-nfs                             -
intercluster-core                    tcp:11104-11105
management-autosupport               -
management-bgp                       tcp:179
management-core                      -
management-https                     tcp:443
management-ssh                       tcp:22
12 entries were displayed.
```

2. Create a service policy:

```
network interface service-policy create -vserver <svm_name> -policy
<service_policy_name> -services <service_name> -allowed-addresses
<IP_address/mask,...>
```

- "service\_name" specifies a list of services that should be included in the policy.



- "IP\_address/mask" specifies the list of subnet masks for addresses that are allowed to access the services in the service policy. By default, all specified services are added with a default allowed address list of 0.0.0.0/0, which allows traffic from all subnets. When a non-default allowed address list is provided, LIFs using the policy are configured to block all requests with a source address that does not match any of the specified masks.

The following example shows how to create a data service policy, svm1\_data\_policy, for an SVM that includes NFS and SMB services:

```
network interface service-policy create -vserver svm1 -policy  
svm1_data_policy - services data-nfs,data-cifs,data-core -allowed  
-addresses 10.1.0.0/16
```

The following example shows how to create an intercluster service policy:

```
network interface service-policy create -vserver cluster1 -policy  
intercluster1 - services intercluster-core -allowed-addresses  
10.1.0.0/16
```

### 3. Verify that the service policy is created.

```
network interface service-policy show
```

The following output shows the service policies that are available:

```

network interface service-policy show
Vserver    Policy                               Service: Allowed Addresses
-----
cluster1
    default-intercluster                intercluster-core: 0.0.0.0/0
                                         management-https: 0.0.0.0/0

    default-management                  management-core: 0.0.0.0/0
                                         management-autosupport: 0.0.0.0/0
                                         management-ssh: 0.0.0.0/0
                                         management-https: 0.0.0.0/0

    default-route-announce              management-bgp: 0.0.0.0/0

Cluster
    default-cluster                    cluster-core: 0.0.0.0/0

vs0
    default-data-blocks                 data-core: 0.0.0.0/0
                                         data-iscsi: 0.0.0.0/0

    default-data-files                  data-core: 0.0.0.0/0
                                         data-nfs: 0.0.0.0/0
                                         data-cifs: 0.0.0.0/0
                                         data-flexcache: 0.0.0.0/0

    default-management                 data-core: 0.0.0.0/0
                                         management-ssh: 0.0.0.0/0
                                         management-https: 0.0.0.0/0

7 entries were displayed.

```

### After you finish

Assign the service policy to a LIF either at the time of creation or by modifying an existing LIF.

### Assign a service policy to a LIF

You can assign a service policy to a LIF either at the time of creating the LIF or by modifying the LIF. A service policy defines the list of services that can be used with the LIF.

### About this task

You can assign service policies for LIFs in the admin and data SVMs.

### Step

Depending on when you want to assign the service policy to a LIF, perform one of the following actions:

If you are...	Assign the service policy by entering the following command...
Creating a LIF	<code>network interface create -vserver svm_name -lif &lt;lif_name&gt; -home-node &lt;node_name&gt; -home-port &lt;port_name&gt; {(-address &lt;IP_address&gt; -netmask &lt;IP_address&gt;) -subnet-name &lt;subnet_name&gt;} -service-policy &lt;service_policy_name&gt;</code>
Modifying a LIF	<code>network interface modify -vserver &lt;svm_name&gt; -lif &lt;lif_name&gt; -service-policy &lt;service_policy_name&gt;</code>

When you specify a service policy for a LIF, you need not specify the data protocol and role for the LIF. Creating LIFs by specifying the role and data protocols is also supported.



A service policy can only be used by LIFs in the same SVM that you specified when creating the service policy.

## Examples

The following example shows how to modify the service policy of a LIF to use the default- management service policy:

```
network interface modify -vserver cluster1 -lif lif1 -service-policy
default-management
```

## Commands for managing LIF service policies

Use the `network interface service-policy` commands to manage LIF service policies.

If you want to...	Use this command...
Create a service policy	<code>network interface service-policy create</code>
Add an additional service entry to an existing service policy	<code>network interface service-policy add-service</code>
Clone an existing service policy	<code>network interface service-policy clone</code>
Modify a service entry in an existing service policy	<code>network interface service-policy modify- service</code>
Remove a service entry from an existing service policy	<code>network interface service-policy remove- service</code>
Rename an existing service policy	<code>network interface service-policy rename</code>
Delete an existing service policy	<code>network interface service-policy delete</code>

If you want to...	Use this command...
Restore a built-in service-policy to its original state	<code>network interface service-policy restore- defaults</code>
Display existing service policies	<code>network interface service-policy show</code>

## Create a LIF

A LIF is an IP address associated with a physical or logical port. If there is a component failure, a LIF can fail over to or be migrated to a different physical port, thereby continuing to communicate with the network.

### Before you begin

- The underlying physical or logical network port must have been configured to the administrative up status.
- If you are planning to use a subnet name to allocate the IP address and network mask value for a LIF, the subnet must already exist.

Subnets contain a pool of IP addresses that belong to the same layer 3 subnet. They are created using the `network subnet create` command.

- The mechanism for specifying the type of traffic handled by a LIF has changed. For ONTAP 9.5 and earlier, LIFs used roles to specify the type of traffic it would handle. Starting in ONTAP 9.6, LIFs use service policies to specify the type of traffic it would handle.

### About this task

- You cannot assign NAS and SAN protocols to the same LIF.

The supported protocols are SMB, NFS, FlexCache, iSCSI, and FC; iSCSI and FC cannot be combined with other protocols. However, NAS and Ethernet-based SAN protocols can be present on the same physical port.

- You can create both IPv4 and IPv6 LIFs on the same network port.
- All the name mapping and host-name resolution services used by an SVM, such as DNS, NIS, LDAP, and Active Directory, must be reachable from at least one LIF handling data traffic of the SVM.
- A LIF handling intracluster traffic between nodes should not be on the same subnet as a LIF handling management traffic or a LIF handling data traffic.
- Creating a LIF that does not have a valid failover target results in a warning message.
- If you have a large number of LIFs in your cluster, you can verify the LIF capacity supported on the cluster by using the `network interface capacity show` command and the LIF capacity supported on each node by using the `network interface capacity details show` command (at the advanced privilege level).
- Starting with ONTAP 9.7, if other LIFs already exist for the SVM in the same subnet, you do not need to specify the home port of the LIF. ONTAP automatically chooses a random port on the specified home node in the same broadcast domain as the other LIFs already configured in the same subnet.

Beginning in ONTAP 9.4, FC-NVMe is supported. If you are creating an FC-NVMe LIF you should be aware of the following:

- The NVMe protocol must be supported by the FC adapter on which the LIF is created.
- FC-NVMe can be the only data protocol on data LIFs.
- One LIF handling management traffic must be configured for every storage virtual machine (SVM) supporting SAN.
- NVMe LIFs and namespaces must be hosted on the same node.
- Only one NVMe LIF handling data traffic can be configured per SVM.

## Steps

### 1. Create a LIF:

```
network interface create -vserver vservice_name -lif lif_name -service
-policy service_policy_name -home-node node_name -home-port port_name {-
address IP_address - netmask IP_address | -subnet-name subnet_name}
-firewall- policy policy -auto-revert {true|false}
```

- `-home-node` is the node to which the LIF returns when the `network interface revert` command is run on the LIF.

You can also specify whether the LIF should automatically revert to the home-node and home-port with the `-auto-revert` option.

- `-home-port` is the physical or logical port to which the LIF returns when the `network interface revert` command is run on the LIF.
- You can specify an IP address with the `-address` and `-netmask` options, or you enable allocation from a subnet with the `-subnet_name` option.
- When using a subnet to supply the IP address and network mask, if the subnet was defined with a gateway, a default route to that gateway is added automatically to the SVM when a LIF is created using that subnet.
- If you assign IP addresses manually (without using a subnet), you might need to configure a default route to a gateway if there are clients or domain controllers on a different IP subnet. The `network route create` man page contains information about creating a static route within an SVM.
- `-auto-revert` allows you to specify whether a data LIF is automatically reverted to its home node under circumstances such as startup, changes to the status of the management database, or when the network connection is made. The default setting is `false`, but you can set it to `true` depending on network management policies in your environment.
- `-service-policy` Starting with ONTAP 9.5, you can assign a service policy for the LIF with the `-service-policy` option.  
When a service policy is specified for a LIF, the policy is used to construct a default role, failover policy, and data protocol list for the LIF. In ONTAP 9.5, service policies are supported only for intercluster and BGP peer services. In ONTAP 9.6, you can create service policies for several data and management services.
- `-data-protocol` allows you to create a LIF that supports the Fibre Channel Protocol (FCP) or NVMe/FC protocols. This option is not required when creating an IP LIF.

### 2. **Optional:** If you want to assign an IPv6 address in the `-address` option:

- a. Use the `network ndp prefix show` command to view the list of RA prefixes learned on various interfaces.

The `network ndp prefix show` command is available at the advanced privilege level.

- b. Use the format `prefix::id` to construct the IPv6 address manually.

`prefix` is the prefix learned on various interfaces.

For deriving the `id`, choose a random 64-bit hexadecimal number.

3. Verify that the LIF was created successfully by using the `network interface show` command.
4. Verify that the configured IP address is reachable:

To verify an...	Use...
IPv4 address	<code>network ping</code>
IPv6 address	<code>network ping6</code>

### Examples

The following command creates a LIF and specifies the IP address and network mask values using the `-address` and `-netmask` parameters:

```
network interface create -vserver vs1.example.com -lif datalif1 -service
-policy default-data-files -home-node node-4 -home-port elc -address
192.0.2.145 -netmask 255.255.255.0 -auto-revert true
```

The following command creates a LIF and assigns IP address and network mask values from the specified subnet (named `client1_sub`):

```
network interface create -vserver vs3.example.com -lif datalif3 -service
-policy default-data-files -home-node node-3 -home-port elc -subnet-name
client1_sub - auto-revert true
```

The following command creates an NVMe/FC LIF and specifies the `nvme-fc` data protocol:

```
network interface create -vserver vs1.example.com -lif datalif1 -data
-protocol nvme-fc -home-node node-4 -home-port lc -address 192.0.2.145
-netmask 255.255.255.0 -auto-revert true
```

### Modify a LIF

You can modify a LIF by changing the attributes, such as home node or current node, administrative status, IP address, netmask, failover policy, firewall policy, and service policy. You can also change the address family of a LIF from IPv4 to IPv6.

### About this task

- When modifying a LIF's administrative status to down, any outstanding NFSv4 locks are held until the LIF's administrative status is returned to up.

To avoid lock conflicts that can occur when other LIFs attempt to access the locked files, you must move the NFSv4 clients to a different LIF before setting the administrative status to down.

- You cannot modify the data protocols used by an FC LIF. However, you can modify the services assigned to a service policy or change the service policy assigned to an IP LIF.

To modify the data protocols used by a FC LIF, you must delete and re-create the LIF. To make service policy changes to an IP LIF, there is a brief outage while the updates occur.

- You cannot modify either the home node or the current node of a node-scoped management LIF.
- When using a subnet to change the IP address and network mask value for a LIF, an IP address is allocated from the specified subnet; if the LIF's previous IP address is from a different subnet, the IP address is returned to that subnet.
- To modify the address family of a LIF from IPv4 to IPv6, you must use the colon notation for the IPv6 address and add a new value for the `-netmask-length` parameter.
- You cannot modify the auto-configured link-local IPv6 addresses.
- Modification of a LIF that results in the LIF having no valid failover target results in a warning message.

If a LIF that does not have a valid failover target attempts to fail over, an outage might occur.

- Starting with ONTAP 9.5, you can modify the service policy associated with a LIF.

In ONTAP 9.5, service policies are supported only for intercluster and BGP peer services. In ONTAP 9.6, you can create service policies for several data and management services.

## Steps

1. Modify a LIF's attributes by using the "network interface modify" command.

The following example shows how to modify the IP address and network mask of LIF datalif2 using an IP address and the network mask value from subnet client1\_sub:

```
network interface modify -vserver vs1 -lif datalif2 -subnet-name
client1_sub
```

The following example shows how to modify the service policy of a LIF.

```
network interface modify -vserver siteA -lif node1_inter1 -service
-policy example
```

2. Verify that the IP addresses are reachable.

If you are using...	Then use...
IPv4 addresses	<code>network ping</code>

If you are using...	Then use...
IPv6 addresses	<code>network ping6</code>

## Migrate a LIF

You might have to migrate a LIF to a different port on the same node or a different node within the cluster, if the port is either faulty or requires maintenance. Migrating a LIF is similar to LIF failover, but LIF migration is a manual operation, while LIF failover is the automatic migration of a LIF in response to a link failure on the LIF's current network port.

### Before you begin

- A failover group must have been configured for the LIFs.
- The destination node and ports must be operational and must be able to access the same network as the source port.

### About this task

- You must migrate LIFs hosted on the ports belonging to a NIC to other ports in the cluster, before removing the NIC from the node.
- You must execute the command for migrating a cluster LIF from the node where the cluster LIF is hosted.
- A node-scoped LIF, such as a node-scoped management LIF, cluster LIF, intercluster LIF, cannot be migrated to a remote node.
- When an NFSv4 LIF is migrated between nodes, a delay of up to 45 seconds results before the LIF is available on a new port.

To work around this problem, use NFSv4.1 where no delay is encountered.

- You cannot migrate iSCSI LIFs from one node to another node.

To work around this restriction, you must create an iSCSI LIF on the destination node. For information about guidelines for creating an iSCSI LIF, see [SAN administration](#).

- VMware VAAI copy offload operations fail when you migrate the source or the destination LIF. For more information about VMware VAAI, see [NFS reference](#) or [SAN administration](#).

### Step

Depending on whether you want to migrate a specific LIF or all the LIFs, perform the appropriate action:

If you want to migrate...	Enter the following command...
A specific LIF	<code>network interface migrate</code>
All the data and cluster- management LIFs on a node	<code>network interface migrate-all</code>
All of the LIFs off of a port	<code>network interface migrate-all -node &lt;node&gt; -port &lt;port&gt;</code>

The following example shows how to migrate a LIF named datalif1 on the SVM vs0 to the port e0d on node0b:



```
network interface migrate -vserver vs0 -lif datalif1 -dest-node node0b
-dest-port e0d
```

The following example shows how to migrate all the data and cluster-management LIFs from the current (local) node:

```
network interface migrate-all -node local
```

### Revert a LIF to its home port

You can revert a LIF to its home port after it fails over or is migrated to a different port either manually or automatically. If the home port of a particular LIF is unavailable, the LIF remains at its current port and is not reverted.

#### About this task

- If you administratively bring the home port of a LIF to the up state before setting the automatic revert option, the LIF is not returned to the home port.
- The node management LIF does not automatically revert unless the value of the "auto-revert" option is set to true.
- You must ensure that the "auto-revert" option is enabled for the cluster LIFs to revert to their home ports.

#### Step

Revert a LIF to its home port manually or automatically:

If you want to revert a LIF to its home port...	Then enter the following command...
Manually	<code>network interface revert -vserver vs0 -lif lif_name</code>
Automatically	<code>network interface modify -vserver vs0 -lif lif_name -auto-revert true</code>

### ONTAP 9.8 and later: Recover from an incorrectly configured cluster LIF

A cluster cannot be created when the cluster network is cabled to a switch but not all of the ports configured in the Cluster IPspace can reach the other ports configured in the Cluster IPspace.

#### About this task

In a switched cluster, if a cluster network interface (LIF) is configured on the wrong port, or if a cluster port is wired into the wrong network, the `cluster create` command can fail with the following error:

```
Not all local cluster ports have reachability to one another.
Use the "network port reachability show -detail" command for more details.
```

The results of the `network port show` command might show that several ports are added to the Cluster

IPspace because they are connected to a port that is configured with a cluster LIF. However, the results of the `network port reachability show -detail` command reveal which ports do not have connectivity to one another.

To recover from a cluster LIF configured on a port that is not reachable to the other ports configured with cluster LIFs, perform the following steps:

**Steps**

- 1. Reset the home port of the cluster LIF to the correct port:

```
net port modify -home-port
```

- 2. Remove the ports that do not have cluster LIFs configured on them from the cluster broadcast domain:

```
net port broadcast-domain remove-ports
```

- 3. Create the cluster:

```
cluster create
```

**Result**

When you complete the cluster creation, the system detects the correct configuration and places the ports into the correct broadcast domains.

**Delete a LIF**

You can delete a network interface (LIF) that is no longer required.

**Before you begin**

LIFs to be deleted must not be in use.

**Steps**

- 1. Mark the LIFs you want to delete as administratively down using the following command:

```
-status-admin down
```

- 2. Use the `network interface delete` command to delete one or all LIFs:

If you want to delete...	Enter the command ...
A specific LIF	<code>network interface delete -lif lif_name</code>
All LIFs	<code>network interface delete -lif</code>

The following command deletes the LIF mgmtlif2:

```
network interface delete -vserver vs1 -lif mgmtlif2
```

3. Use the `network interface show` command to confirm that the LIF is deleted.

## Configure virtual IP (VIP) LIFs

Some next-generation data centers use Network-Layer-3 mechanisms that require LIFs to be failed over across subnets. Starting with ONTAP 9.5, VIP data LIFs and the associated routing protocol, border gateway protocol (BGP), are supported, which enable ONTAP to participate in these next-generation networks.

### About this task

A VIP data LIF is a LIF that is not part of any subnet and is reachable from all ports that host a BGP LIF in the same IPspace. A VIP data LIF eliminates the dependency of a host on individual network interfaces. Because multiple physical adapters carry the data traffic, the entire load is not concentrated on a single adapter and the associated subnet. The existence of a VIP data LIF is advertised to peer routers through the routing protocol, Border Gateway Protocol (BGP).

VIP data LIFs provide the following advantages:

- LIF portability beyond a broadcast domain or subnet: VIP data LIFs can fail over to any subnet in the network by announcing the current location of each VIP data LIF to routers through BGP.
- Aggregate throughput: VIP data LIFs can support aggregate throughput that exceeds the bandwidth of any individual port because the VIP LIFs can send or receive data from multiple subnets or ports simultaneously.

### Set up border gateway protocol (BGP)

Before creating VIP LIFs, you must set up BGP, which is the routing protocol used for announcing the existence of a VIP LIF to peer routers.

Starting with ONTAP 9.9.1, VIP BGP provides default route automation using BGP peer grouping to simplify configuration.

ONTAP has a simple way to learn default routes using the BGP peers as next-hop routers when the BGP peer is on the same subnet. To use the feature, set the `-use-peer-as-next-hop` attribute to `true`. By default, this attribute is `false`.

If you have static routes configured, those are still preferred over these automated default routes.

### Before you begin

The peer router must be configured to accept a BGP connection from the BGP LIF for the configured autonomous system number (ASN).



ONTAP does not process any incoming route announcements from the router; therefore, you should configure the peer router to not send any route updates to the cluster.

### About this task

Setting up BGP involves optionally creating a BGP configuration, creating a BGP LIF, and creating a BGP peer group. ONTAP automatically creates a default BGP configuration with default values when the first BGP peer

group is created on a given node. A BGP LIF is used to establish BGP TCP sessions with peer routers. For a peer router, a BGP LIF is the next hop to reach a VIP LIF. Failover is disabled for the BGP LIF. A BGP peer group advertises the VIP routes for all the SVMs in the peer group's IPspace.

Starting with ONTAP 9.8, these fields have been added to the `network bgp peer-group` command:

- `-asn-prepend-type`
- `-asn-prepend-count`
- `-community`

These BGP attributes allows you to configure the AS Path and community attributes for the BGP peer group.

Starting with ONTAP 9.9.1, these fields have been added:

- `-asn` or `-peer-asn` (4-byte value)  
The attribute itself is not new, but it now uses a 4-byte integer.
- `-med`
- `-use-peer-as-next-hop`

You can make advanced route selections with Multi-Exit Discriminator (MED) support for path prioritization. MED is an optional attribute in the BGP update message that tells routers to select the best route for the traffic. The MED is an unsigned 32-bit integer (0 - 4294967295); lower values are preferred.



While ONTAP supports the above BGP attributes, routers need not honor them. NetApp highly recommends you confirm which attributes are supported by your router and configure BGP peer-groups accordingly. For details, refer to the BGP documentation provided by your router.

## Steps

1. Log in to the advanced privilege level:

```
set -privilege advanced
```

2. Optional: Create a BGP configuration or modify the default BGP configuration of the cluster by performing one of the following actions:

- a. Create a BGP configuration:

```
network bgp config create -node {node_name | local} -asn asn_integer  
-holdtime  
hold_time -routerid local_router_IP_address
```

Sample with a 2-byte ASN:

```
network bgp config create -node node1 -asn 65502 -holdtime 180  
-routerid 1.1.1.1
```

Sample with a 4-byte ASN:

```
network bgp config create -node node1 -asn 85502 -holdtime 180
-routerid 1.1.1.1
```

b. Modify the default BGP configuration:

```
network bgp defaults modify -asn asn_integer -holdtime hold_time
network bgp defaults modify -asn 65502
```

- `asn_integer` specifies the ASN. Starting in ONTAP 9.8, ASN for BGP supports a 2-byte non-negative integer. This is a 16-bit number (0 - 64511 available values). Starting in ONTAP 9.9.1, ASN for BGP supports a 4-byte non-negative integer (65536 - 4294967295). The default ASN is 65501. ASN 23456 is reserved for ONTAP session establishment with peers that do not announce 4-byte ASN capability.
- `hold_time` specifies the hold time in seconds. The default value is 180s.

3. Create a BGP LIF for the system SVM:

```
network interface create -vserver system_svm -lif lif_name -service
-policy default-route-announce -home-node home_node -home-port home_port
-address ip_address -netmask netmask
```

You can use the `default-route-announce` service policy for the BGP LIF.

```
network interface create -vserver cluster1 -lif bgp1 -service-policy
default-route-announce -home-node cluster1-01 -home-port e0c -address
10.10.10.100 -netmask 255.255.255.0
```

4. Create a BGP peer group that is used to establish BGP sessions with the remote peer routers and configure the VIP route information that is advertised to the peer routers:

Sample 1: Create a peer group without an auto default route

In this case, the admin has to create a static route to the BGP peer.

```
network bgp peer-group create -peer-group group_name -ipspace
ipspace_name -bgp-lif bgp_lif -peer-address peer-router_ip_address -peer
-asn 65502 -route-preference integer
-asn-prepend-type <ASN_prepend_type> -asn-prepend-count integer -med
integer -community BGP community list <0-65535>:<0-65535>
```

```
network bgp peer-group create -peer-group group1 -ipspace Default -bgp
-lif bgp1 -peer-address 10.10.10.1 -peer-asn 65502 -route-preference 100
-asn-prepend-type local-asn -asn-prepend-count 2 -med 100 -community
9000:900,8000:800
```

### Sample 2: Create a peer group with an auto default route

```
network bgp peer-group create -peer-group group_name -ipspace
ipspace_name -bgp-lif bgp_lif -peer-address peer-router_ip_address -peer
-asn 65502 -use-peer-as-next-hop true -route-preference integer -asn
-prepend-type <ASN_prepend_type> -asn-prepend-count integer -med integer
-community BGP community list <0-65535>:<0-65535>
```

```
network bgp peer-group create -peer-group group1 -ipspace Default -bgp
-lif bgp1 -peer-address 10.10.10.1 -peer-asn 65502 -use-peer-as-next-hop
true -route-preference 100 -asn-prepend-type local-asn -asn-prepend
-count 2 -med 100 -community 9000:900,8000:800
```

### Create a virtual IP (VIP) data LIF

The existence of a VIP data LIF is advertised to peer routers through the routing protocol, Border Gateway Protocol (BGP).

#### Before you begin

- The BGP peer group must be set up and the BGP session for the SVM on which the LIF is to be created must be active.
- A static route to the BGP router or any other router in the BGP LIF's subnet must be created for any outgoing VIP traffic for the SVM.
- You should turn on multipath routing so that the outgoing VIP traffic can utilize all the available routes.

If multipath routing is not enabled, all the outgoing VIP traffic goes from a single interface.

#### Steps

1. Create a VIP data LIF:

```
network interface create -vserver svm_name -lif lif_name -role data
-data-protocol
{nfs|cifs|iscsi|fcache|none|fc-nvme} -home-node home_node -address
ip_address -is-vip true
```

A VIP port is automatically selected if you do not specify the home port with the `network interface create` command.

By default, the VIP data LIF belongs to the system-created broadcast domain named 'Vip', for each IPspace. You cannot modify the VIP broadcast domain.

A VIP data LIF is reachable simultaneously on all ports hosting a BGP LIF of an IPspace. If there is no active BGP session for the VIP's SVM on the local node, the VIP data LIF fails over to the next VIP port on the node that has a BGP session established for that SVM.

2. Verify that the BGP session is in the up status for the SVM of the VIP data LIF:

```
network bgp vserver-status show
```

Node	Vserver	bgp status
node1	vs1	up

If the BGP status is **down** for the SVM on a node, the VIP data LIF fails over to a different node where the BGP status is up for the SVM. If BGP status is **down** on all the nodes, the VIP data LIF cannot be hosted anywhere, and has LIF status as down.

### Commands for managing the BGP

Starting with ONTAP 9.5, you use the **network bgp** commands to manage the BGP sessions in ONTAP.

### Manage BGP configuration

If you want to...	Use this command...
Create a BGP configuration	network bgp config create
Modify BGP configuration	network bgp config modify
Delete BGP configuration	network bgp config delete
Display BGP configuration	network bgp config show
Displays the BGP status for the SVM of the VIP LIF	network bgp vserver-status show

### Manage BGP default values

If you want to...	Use this command...
Modify BGP default values	network bgp defaults modify
Display BGP default values	network bgp defaults show

### Manage BGP peer groups

If you want to...	Use this command...
Create a BGP peer group	network bgp peer-group create
Modify a BGP peer group	network bgp peer-group modify
Delete a BGP peer group	network bgp peer-group delete

If you want to...	Use this command...
Display BGP peer groups information	<code>network bgp peer-group show</code>
Rename a BGP peer group	<code>network bgp peer-group rename</code>

Related information: [ONTAP 9 commands](#)

## Configure host-name resolution

### Overview

ONTAP must be able to translate host names to numerical IP addresses in order to provide access to clients and to access services. You must configure storage virtual machines (SVMs) to use local or external name services to resolve host information. ONTAP supports configuring an external DNS server or configuring the local hosts file for host name resolution.

When using an external DNS server, you can configure Dynamic DNS (DDNS), which automatically sends new or changed DNS information from your storage system to the DNS server. Without dynamic DNS updates, you must manually add DNS information (DNS name and IP address) to the identified DNS servers when a new system is brought online or when existing DNS information changes. This process is slow and error-prone. During disaster recovery, manual configuration can result in a long downtime.

### Configure DNS for host-name resolution

You use DNS to access either local or remote sources for host information. You must configure DNS to access one or both of these sources.

ONTAP must be able to look up host information to provide proper access to clients. You must configure name services to enable ONTAP to access local or external DNS services to obtain the host information.

ONTAP stores name service configuration information in a table that is the equivalent of the `/etc/nsswitch.conf` file on UNIX systems.

### Configure an SVM and data LIFs for host-name resolution using an external DNS server

You can use the `vserver services name-service dns` command to enable DNS on an SVM, and configure it to use DNS for host-name resolution. Host names are resolved using external DNS servers.

### Before you begin

A site-wide DNS server must be available for host name lookups.

You should configure more than one DNS server to avoid a single-point-of-failure. The `vserver services name-service dns create` command issues a warning if you enter only one DNS server name.

### About this task

The Network Management Guide contains information about configuring dynamic DNS on the SVM.

### Steps

1. Enable DNS on the SVM:



```
vserver services name-service dns create -vserver vserver_name -domains domain_name - name-servers ip_addresses -state enabled
```

The following command enables external DNS server servers on the SVM vs1:

```
vserver services name-service dns create -vserver <vs1.example.com> -domains <example.com> -name-servers <192.0.2.201,192.0.2.202> -state <enabled>
```



The `vserver services name-service dns create` command performs an automatic configuration validation and reports an error message if ONTAP cannot contact the name server.

## 2. Enable DNS on LIFs owned by the SVM:

If you are	Use this command:
Modifying an existing LIF zone-name	<code>network interface modify -lif lifname -dns-zone</code>
Creating a new LIF zone-name	<code>network interface create -lif lifname -dns-zone</code>

```
vserver services name-service dns create -vserver <vs1> -domains <example.com> -name-servers <192.0.2.201, 192.0.2.202> -state <enabled>
network interface modify -lif <datalif1> -dns-zone <zonename.whatever.com>
```

## 3. Validate the status of the name servers by using the `vserver services name-service dns check` command.

```
vserver services name-service dns check -vserver vs1.example.com
VserverName      Server      Status      Status Details
-----
vs1.example.com  10.0.0.50   up          Response time (msec): 2
vs1.example.com  10.0.0.51   up          Response time (msec): 2
```

## Configure the Name Service Switch Table for Host-Name Resolution

You must configure the name service switch table correctly to enable ONTAP to consult local or external name service to retrieve host information.

### Before you begin

You must have decided which name service to use for host mapping in your environment.

### Steps

1. Add the necessary entries to the name service switch table:

```
vserver services name-service <ns-switch> create -vserver <vserver_name>
-database <database_name> -source <source_names>
```

2. Verify that the name service switch table contains the expected entries in the desired order:

```
vserver services name-service <ns-switch> show -vserver <vserver_name>
```

### Example

The following example creates an entry in the name service switch table for SVM vs1 to first use the local hosts file and then an external DNS server to resolve host names:

```
vserver services name-service ns-switch create -vserver vs1 -database
hosts -sources files dns
```

### Manage the hosts table (cluster administrators only)

A cluster administrator can add, modify, delete, and view the host name entries in the hosts table of the admin storage virtual machine (SVM). An SVM administrator can configure the host name entries only for the assigned SVM.

#### Commands for managing local host-name entries

You can use the `vserver services name-service dns hosts` command to create, modify, or delete DNS host table entries.

When you are creating or modifying the DNS host-name entries, you can specify multiple alias addresses separated by commas.

If you want to...	Use this command...
Create a DNS host-name entry	<code>vserver services name-service dns hosts create</code>
Modify a DNS host-name entry	<code>vserver services name-service dns hosts modify</code>
Delete a DNS host-name entry	<code>vserver services name-service dns hosts delete</code>

For more information, see the [ONTAP 9 commands](#) for the `vserver services name-service dns hosts` commands.

### Balance network loads to optimize user traffic (cluster administrators only)

## Overview

You can configure your cluster to serve client requests from appropriately loaded LIFs. This results in a more balanced utilization of LIFs and ports, which in turn allows for better performance of the cluster.

### What DNS load balancing is

DNS load balancing helps in selecting an appropriately loaded data LIF and balancing user network traffic across all available ports (physical, interface groups, and VLANs).

With DNS load balancing, LIFs are associated with the load balancing zone of an SVM. A site-wide DNS server is configured to forward all DNS requests and return the least-loaded LIF based on the network traffic and the availability of the port resources (CPU usage, throughput, open connections, and so on). DNS load balancing provides the following benefits:

- New client connections balanced across available resources.
- No manual intervention required for deciding which LIFs to use when mounting a particular SVM.
- DNS load balancing supports NFSv3, NFSv4, NFSv4.1, CIFS, SMB 2.0, SMB 2.1, and SMB 3.0.

### How DNS load balancing works

Clients mount an SVM by specifying an IP address (associated with a LIF) or a host name (associated with multiple IP addresses). By default, LIFs are selected by the site-wide DNS server in a round-robin manner, which balances the workload across all LIFs.

Round-robin load balancing can result in overloading some LIFs, so you have the option of using a DNS load balancing zone that handles the host-name resolution in an SVM. Using a DNS load balancing zone, ensures better balance of the new client connections across available resources, leading to improved performance of the cluster.

A DNS load balancing zone is a DNS server inside the cluster that dynamically evaluates the load on all LIFs and returns an appropriately loaded LIF. In a load balancing zone, DNS assigns a weight (metric), based on the load, to each LIF.

Every LIF is assigned a weight based on its port load and CPU utilization of its home node. LIFs that are on less-loaded ports have a higher probability of being returned in a DNS query. Weights can also be manually assigned.

### Create a DNS load balancing zone

You can create a DNS load balancing zone to facilitate the dynamic selection of a LIF based on the load, that is, the number of clients mounted on a LIF. You can create a load balancing zone while creating a data LIF.

### Before you begin

The DNS forwarder on the site-wide DNS server must be configured to forward all requests for the load balancing zone to the configured LIFs.

The Knowledgebase article [How to set up DNS load balancing in Cluster-Mode](#) on the NetApp Support Site contains more information about configuring DNS load balancing using conditional forwarding.

### About this task

- Any data LIF can respond to DNS queries for a DNS load balancing zone name.
- A DNS load balancing zone must have a unique name in the cluster, and the zone name must meet the following requirements:
  - It should not exceed 256 characters.
  - It should include at least one period.
  - The first and the last character should not be a period or any other special character.
  - It cannot include any spaces between characters.
  - Each label in the DNS name should not exceed 63 characters.

A label is the text appearing before or after the period. For example, the DNS zone named storage.company.com has three labels.

### Step

Use the `network interface create` command with the `dns-zone` option to create a DNS load balancing zone.

If the load balancing zone already exists, the LIF is added to it. For more information about the command, see [ONTAP 9 commands](#).

The following example demonstrates how to create a DNS load balancing zone named storage.company.com while creating the LIF `lif1`:

```
network interface create -vserver vs0 -lif lif1 -home-node node1  
-home-port e0c -address 192.0.2.129 -netmask 255.255.255.128 -dns-zone
```

### Add or remove a LIF from a load balancing zone

You can add or remove a LIF from the DNS load balancing zone of a virtual machine (SVM). You can also remove all the LIFs simultaneously from a load balancing zone.

### Before you begin

- All the LIFs in a load balancing zone should belong to the same SVM.
- A LIF can be a part of only one DNS load balancing zone.
- Failover groups for each subnet must have been set up, if the LIFs belong to different subnets.

### About this task

A LIF that is in the administrative down status is temporarily removed from the DNS load balancing zone. When the LIF returns to the administrative up status, the LIF is automatically added to the DNS load balancing zone.

### Step

Add a LIF to or remove a LIF from a load balancing zone:

If you want to...	Enter...
Add a LIF	<pre>network interface modify -vserver vs1 -lif lif_name -dns-zone zone_name</pre> <p>Example:</p> <pre>network interface modify -vserver vs1 -lif data1 -dns-zone cifs.company.com</pre>
Remove a single LIF	<pre>network interface modify -vserver vs1 -lif lif_name -dns-zone none</pre> <p>Example:</p> <pre>network interface modify -vserver vs1 -lif data1 -dns-zone none</pre>
Remove all LIFs	<pre>network interface modify -vserver vs0 -lif * -dns-zone none</pre> <p>Example:</p> <pre>network interface modify -vserver vs0 -lif * -dns-zone none</pre> <p>You can remove an SVM from a load balancing zone by removing all the LIFs in the SVM from that zone.</p>

## Secure your network

### Configure network security using federal information processing standards (FIPS)

ONTAP is compliant in the Federal Information Processing Standards (FIPS) 140-2 for all SSL connections. You can turn on and off SSL FIPS mode, set SSL protocols globally, and turn off any weak ciphers such as RC4 within ONTAP.

By default, SSL on ONTAP is set with FIPS compliance disabled and SSL protocol enabled with the following:

- TLSv1.2
- TLSv1.1
- TLSv1

When SSL FIPS mode is enabled, SSL communication from ONTAP to external client or server components outside of ONTAP will use FIPS compliant crypto for SSL.

#### Enable FIPS

It is recommended that all secure users adjust their security configuration immediately after system installation or upgrade. When SSL FIPS mode is enabled, SSL communication from ONTAP to external client or server components outside of ONTAP will use FIPS compliant crypto for SSL.

#### About this task

The following settings are recommended to enable FIPS:

- `FIPS: on`
- `SSL protocol = {TLSv1.2}`

- `SSL ciphers = {ALL:!LOW:!aNULL:!EXP:!eNULL:!RC4}`

## Steps

1. Change to advanced privilege level:

```
set -privilege advanced
```

2. Enable FIPS:

```
security config modify -interface SSL -is-fips-enabled true
```

3. When prompted to continue, enter `y`
4. One by one, manually reboot each node in the cluster.

## Example

```
security config modify -interface SSL -is-fips-enabled true
```

Warning: This command will enable FIPS compliance and can potentially cause some non-compliant components to fail. MetroCluster and Vserver DR require FIPS to be enabled on both sites in order to be compatible.  
Do you want to continue? {y|n}: y

Warning: When this command completes, reboot all nodes in the cluster. This is necessary to prevent components from failing due to an inconsistent security configuration state in the cluster. To avoid a service outage, reboot one node at a time and wait for it to completely initialize before rebooting the next node. Run "security config status show" command to monitor the reboot status.  
Do you want to continue? {y|n}: y

## Disable FIPS

If you are still running an older system configuration and want to configure ONTAP with backward compatibility, you can turn on SSLv3 only when FIPS is disabled.

## About this task

The following settings are recommended to disable FIPS:

- `FIPS = false`
- `SSL protocol = {SSLv3}`
- `SSL ciphers = {ALL:!LOW:!aNULL:!EXP:!eNULL}`

## Steps

1. Change to advanced privilege level:

```
set -privilege advanced
```

2. Disable FIPS by typing:

```
security config modify -interface SSL -supported-protocols SSLv3
```

3. When prompted to continue, enter `y`.

4. Manually reboot each node in the cluster.

### Example

```
security config modify -interface SSL -supported-protocols SSLv3
```

```
Warning: Enabling the SSLv3 protocol may reduce the security of the  
interface, and is not recommended.
```

```
Do you want to continue? {y|n}: y
```

```
Warning: When this command completes, reboot all nodes in the cluster.  
This is necessary to prevent components from failing due to an  
inconsistent security configuration state in the cluster. To avoid a  
service outage, reboot one node at a time and wait for it to completely  
initialize before rebooting the next node. Run "security config status  
show" command to monitor the reboot status.
```

```
Do you want to continue? {y|n}: y
```

### View FIPS compliance status

You can see whether the entire cluster is running the current security configuration settings.

### Steps

1. One by one, reboot each node in the cluster.

Do not reboot all cluster nodes simultaneously. A reboot is required to make sure that all applications in the cluster are running the new security configuration, and for all changes to FIPS on/off mode, Protocols, and Ciphers.

2. View the current compliance status:

```
security config show
```

## Example

```
security config show
```

	Cluster		Cluster
Security			
Interface	FIPS Mode	Supported Protocols	Supported Ciphers Config
Ready			
-----	-----	-----	-----
-----			
SSL	false	TLSv1_2, TLSv1_1, TLSv1	ALL:!LOW:!aNULL: yes
			!EXP:!eNULL

## Configure IP security (IPsec) over wire encryption

Starting with ONTAP 9.8, ONTAP uses the IPsec protocol in transport mode to ensure data is continuously secure and encrypted, even while in transit. IPsec offers data encryption for all IP traffic including the NFS, iSCSI, and SMB/CIFS protocols. IPsec provides the only encryption in flight option for iSCSI traffic.

While IPsec capability is enabled on the cluster, the network requires a Security Policy Database (SPD) entry and a preshared secret key on the client before traffic can flow.

After IPsec is configured, network traffic between the client and ONTAP is protected with preventive measures to combat replay and man-in-the-middle (MITM) attacks.

For NetApp SnapMirror and cluster peering traffic encryption, cluster peering encryption (CPE) is still recommended over IPsec for secure in-transit over the wire. This is because CPE has better performance than IPsec. You do not require a license for IPsec and there are no import or export restrictions.

### Enable IPsec on the cluster

You can enable Internet Protocol security (IPsec) on the cluster to ensure data is continuously secure and encrypted, even while in transit.

### Steps

1. Discover if IPsec is enabled already:

```
security ipsec config show
```

If the result includes `IPsec Enabled: false`, proceed to the next step.

2. Enable IPsec:

```
security ipsec config modify -is-enabled true
```

3. Run the discovery command again:

```
security ipsec config show
```

The result now includes `IPsec Enabled: true`.



## Define the security policy database (SPD)

IPsec requires an SPD entry before allowing traffic to flow on the network.

### Step

1. Use the `security ipsec policy create` command to:
  - a. Select the ONTAP IP address or subnet of IP addresses to participate in the IPsec transport.
  - b. Select the client IP addresses that will connect to the ONTAP IP addresses.



The client must support Internet Key Exchange version 2 (IKEv2) with a pre-shared key (PSK).

- c. Optional. Select the upper layer protocols (UDP, TCP, ICMP, etc. ), the local port numbers, and the remote port numbers to protect. The corresponding parameters are `protocols`, `local-ports` and `remote-ports` respectively.

Skip this step to protect all traffic between the ONTAP IP address and client IP address. Protecting all traffic is the default.

- d. Enter the pre-shared key to use between the client and ONTAP.

### Sample command

```
security ipsec policy create -vserver <vs1> -name <test34> -local-ip  
-subnets <192.168.134.34/32> -remote-ip-subnets <192.168.134.44/32>  
Enter the preshared key for IPsec Policy _test34_ on Vserver _vs1_:
```



IP traffic cannot flow between the client and server until the client pre-shared key is set on the IPsec client.

### Use IPsec identities

Some IPsec clients, such as Libreswan, require the use of identities in addition to pre-shared keys to authenticate the IPsec connection.

### About this task

Within ONTAP, identities are specified by modifying the SPD entry or during SPD policy creation. The SPD can be an IP address or string format identity name.

### Step

To add an identity to an existing SPD, use the following command:

```
security ipsec policy modify
```

### Sample command

```
security ipsec policy modify -vserver vs1 -name test34 -local-identity  
192.168.134.34 -remote-identity client.foofoo.com
```

## IPsec multiple client configuration

When a small number of clients need to leverage IPsec, using a single SPD entry for each client is sufficient. However, when hundreds or even thousands of clients need to leverage IPsec, NetApp recommends using an IPsec multiple client configuration.

### About this task

ONTAP supports connecting multiple clients across many networks to a single SVM IP address with IPsec enabled. You can accomplish this using one of the following methods:

- **Subnet configuration**

To allow all clients on a particular subnet (192.168.134.0/24 for example) to connect to a single SVM IP address using a single SPD policy entry, you must specify the `remote-ip-subnets` in subnet form. Additionally, you must specify the `remote-identity` field with the correct client side identity.



When using a single policy entry in a subnet configuration, IPsec clients in that subnet share the IPsec identity and pre-shared key (PSK).

- **Allow all clients configuration**

To allow any client, regardless of their source IP address, to connect to the SVM IPsec-enabled IP address, use the `0.0.0.0/0` wild card when specifying the `remote-ip-subnets` field.

Additionally, you must specify the `remote-identity` field with the correct client side identity.

Also, when the `0.0.0.0/0` wild card is used, you must configure a specific local or remote port number to use. For example, `NFS port 2049`.

### Step

1. Use one of the following commands to configure IPsec for multiple clients:
  - a. If you are using a **subnet configuration** to support multiple IPsec clients:

```
security ipsec policy create -vserver vs1 -name policy_name  
-local-ip-subnets IPsec_IP_address/32 -remote-ip-subnets  
IP_address/subnet -local-identity local_id -remote-identity remote_id
```

#### Sample command

```
security ipsec policy create -vserver vs1 -name subnet134 -local-ip  
-subnets 192.168.134.34/32 -remote-ip-subnets 192.168.134.0/24 -local  
-identity ontap_side_identity -remote-identity client_side_identity
```

- b. If you are using an **allow all clients configuration** to support multiple IPsec clients:

```
security ipsec policy create -vserver vs1 -name policy_name  
-local-ip-subnets IPsec_IP_address/32 -remote-ip-subnets 0.0.0.0/0 -local  
-ports port_number -local-identity local_id -remote-identity remote_id
```

#### Sample command

```
security ipsec policy create -vserver vs1 -name test35 -local-ip-subnets  
IPsec_IP_address/32 -remote-ip-subnets 0.0.0.0/0 -local-ports 2049 -local  
-identity ontap_side_identity -remote-identity client_side_identity
```

## IPsec statistics

Through negotiation, a security channel called an IKE Security Association (SA) can be established between the ONTAP SVM IP address and the client IP address. IPsec SAs are installed on both endpoints to do the actual data encryption and decryption work.

You can use statistics commands to check the status of both IPsec SAs and IKE SAs.

## Sample commands

IKE SA sample command:

```
security ipsec show-ikesasa -node hosting_node_name_for_svm_ip
```

IPsec SA sample command:

```
security ipsec show-ipsecsa -node hosting_node_name_for_svm_ip
```

## Configure firewall policies for LIFs

Setting up a firewall enhances the security of the cluster and helps prevent unauthorized access to the storage system. By default, the firewall service allows remote systems access to a specific set of default services for data, management, and intercluster LIFs.

Firewall policies can be used to control access to management service protocols such as SSH, HTTP, HTTPS, Telnet, NTP, NDMP, NDMPs, RSH, DNS, or SNMP. Firewall policies cannot be set for data protocols such as NFS or SMB/CIFS.

You can manage firewall service and policies in the following ways:

- Enabling or disabling firewall service
- Displaying the current firewall service configuration
- Creating a new firewall policy with the specified policy name and network services
- Applying a firewall policy to a logical interface
- Creating a new firewall policy that is an exact copy of an existing policy

You can use this to make a policy with similar characteristics within the same SVM, or to copy the policy to a different SVM.

- Displaying information about firewall policies
- Modifying the IP addresses and netmasks that are used by a firewall policy
- Deleting a firewall policy that is not being used by a LIF

## Firewall policies and LIFs

LIF firewall policies are used to restrict access to the cluster over each LIF. You need to understand how the default firewall policy affects system access over each type of LIF, and how you can customize a firewall policy to increase or decrease security over a LIF.

When configuring a LIF using the `network interface create` or `network interface modify` command, the value specified for the `-firewall-policy` parameter determines the service protocols and IP addresses that are allowed access to the LIF.

In many cases you can accept the default firewall policy value. In other cases, you might need to restrict access to certain IP addresses and certain management service protocols. The available management service protocols include SSH, HTTP, HTTPS, Telnet, NTP, NDMP, NDMPs, RSH, DNS, and SNMP.

The firewall policy for all cluster LIFs defaults to "" and cannot be modified.

The following table describes the default firewall policies that are assigned to each LIF, depending on their role (ONTAP 9.5 and earlier) or service policy (ONTAP 9.6 and later), when you create the LIF:

Firewall policy	Default service protocols	Default access	LIFs applied to
mgmt	dns, http, https, ndmp, ndmps, ntp, snmp, ssh	Any address (0.0.0.0/0)	Cluster management, SVM management, and node management LIFs
mgmt-nfs	dns, http, https, ndmp, ndmps, ntp, portmap, snmp, ssh	Any address (0.0.0.0/0)	Data LIFs that also support SVM management access
intercluster	https, ndmp, ndmps	Any address (0.0.0.0/0)	All intercluster LIFs
data	dns, ndmp, ndmps, portmap	Any address (0.0.0.0/0)	All data LIFs

### Portmap service configuration

The portmap service maps RPC services to the ports on which they listen.

The portmap service was always accessible in ONTAP 9.3 and earlier, became configurable in ONTAP 9.4 through ONTAP 9.6, and is managed automatically starting in ONTAP 9.7.

- In ONTAP 9.3 and earlier, the portmap service (rpcbind) was always accessible on port 111 in network configurations that relied on the built-in ONTAP firewall rather than a third-party firewall.
- From ONTAP 9.4 through ONTAP 9.6, you can modify firewall policies to control whether the portmap service is accessible on particular LIFs.
- Starting in ONTAP 9.7, the portmap firewall service is eliminated. Instead, the portmap port is opened automatically for all LIFs that support the NFS service.

### Portmap service is configurable in the firewall in ONTAP 9.4 through ONTAP 9.6.

The remainder of this topic discusses how to configure the portmap firewall service for ONTAP 9.4 through ONTAP 9.6 releases.

Depending on your configuration, you may be able to disallow access to the service on specific types of LIFs, typically management and intercluster LIFs. In some circumstances, you might even be able to disallow access on data LIFs.

### What behavior you can expect

The ONTAP 9.4 through ONTAP 9.6 behavior is designed to provide a seamless transition on upgrade. If the portmap service is already being accessed over specific types of LIFs, it will continue to be accessible over those types of LIFs. As in previous ONTAP versions, you can specify the services accessible within the firewall

in the firewall policy for the LIF type.

All nodes in the cluster must be running ONTAP 9.4 through ONTAP 9.6 for the behavior to take effect. Only inbound traffic is affected.

The new rules are as follows:

- \* On upgrade to release 9.4 through 9.6, ONTAP adds the portmap service to all existing firewall policies, default or custom.
- \* When you create a new cluster or new IPspace, ONTAP adds the portmap service only to the default data policy, not to the default management or intercluster policies.
- \* You can add the portmap service to default or custom policies as needed, and remove the service as needed.

### How to add or remove the portmap service

To add the portmap service to an SVM or cluster firewall policy (make it accessible within the firewall), enter:

```
system      services      firewall      policy      create      -vserver      SVM      -policy
mgmt|intercluster|data|custom -service portmap
```

To remove the portmap service from an SVM or cluster firewall policy (make it inaccessible within the firewall), enter:

```
system      services      firewall      policy      delete      -vserver      SVM      -policy
mgmt|intercluster|data|custom -service portmap
```

You can use the network interface modify command to apply the firewall policy to an existing LIF. For complete command syntax, see [ONTAP 9 commands](#).

### Create a firewall policy and assigning it to a LIF

Default firewall policies are assigned to each LIF when you create the LIF. In many cases, the default firewall settings work well and you do not need to change them. If you want to change the network services or IP addresses that can access a LIF, you can create a custom firewall policy and assign it to the LIF.

#### About this task

- You cannot create a firewall policy with the `policy` name `data`, `intercluster`, `cluster`, or `mgmt`.

These values are reserved for the system-defined firewall policies.

- You cannot set or modify a firewall policy for cluster LIFs.

The firewall policy for cluster LIFs is set to 0.0.0.0/0 for all services types.

- If you need to modify or remove services, you must delete the existing firewall policy and create a new policy.
- If IPv6 is enabled on the cluster, you can create firewall policies with IPv6 addresses.

After IPv6 is enabled, `data` and `mgmt` firewall policies include `::/0`, the IPv6 wildcard, in their list of accepted addresses.

- When using ONTAP System Manager to configure data protection functionality across clusters, you must ensure that the intercluster LIF IP addresses are included in the allowed list, and that HTTPS service is allowed on both the intercluster LIFs and on your company-owned firewalls.

By default, the `intercluster` firewall policy allows access from all IP addresses (0.0.0.0/0) and enables

HTTPS, NDMP, and NDMPs services. If you modify this default policy, or if you create your own firewall policy for intercluster LIFs, you must add each intercluster LIF IP address to the allowed list and enable HTTPS service.

- Starting with ONTAP 9.6, the HTTPS and SSH firewall services are not supported.

In ONTAP 9.6, the `management-https` and `management-ssh` LIF services are available for HTTPS and SSH management access.

## Steps

1. Create a firewall policy that will be available to the LIFs on a specific SVM:

```
system services firewall policy create -vserver vs1 -policy policy_name -service network_service -allow-list ip_address/mask
```

You can use this command multiple times to add more than one network service and list of allowed IP addresses for each service in the firewall policy.

2. Verify that the policy was added correctly by using the `system services firewall policy show` command.
3. Apply the firewall policy to a LIF:

```
network interface modify -vserver vs1 -lif lif_name -firewall-policy policy_name
```

4. Verify that the policy was added correctly to the LIF by using the `network interface show -fields firewall-policy` command.

## Example of creating a firewall policy and applying it to a LIF

The following command creates a firewall policy named `data_http` that enables HTTP and HTTPS protocol access from IP addresses on the 10.10 subnet, applies that policy to the LIF named `data1` on SVM `vs1`, and then shows all of the firewall policies on the cluster:

```
system services firewall policy create -vserver vs1 -policy data_http -service http - allow-list 10.10.0.0/16
```

```
system services firewall policy show
```

Vserver	Policy	Service	Allowed
-----	-----	-----	-----
cluster-1			
	data		
		dns	0.0.0.0/0
		ndmp	0.0.0.0/0
		ndmps	0.0.0.0/0
cluster-1			
	intercluster		
		https	0.0.0.0/0
		ndmp	0.0.0.0/0
		ndmps	0.0.0.0/0
cluster-1			
	mgmt		
		dns	0.0.0.0/0
		http	0.0.0.0/0
		https	0.0.0.0/0
		ndmp	0.0.0.0/0
		ndmps	0.0.0.0/0
		ntp	0.0.0.0/0
		snmp	0.0.0.0/0
		ssh	0.0.0.0/0
vs1			
	data_http		
		http	10.10.0.0/16
		https	10.10.0.0/16

```
network interface modify -vserver vs1 -lif data1 -firewall-policy  
data_http
```

```
network interface show -fields firewall-policy
```

vserver	lif	firewall-policy
-----	-----	-----
Cluster	node1_clus_1	
Cluster	node1_clus_2	
Cluster	node2_clus_1	
Cluster	node2_clus_2	
cluster-1	cluster_mgmt	mgmt
cluster-1	node1_mgmt1	mgmt
cluster-1	node2_mgmt1	mgmt
vs1	data1	data_http
vs3	data2	data

## Commands for managing firewall service and policies

You can use the `system services firewall` commands to manage firewall service, the `system services firewall policy` commands to manage firewall policies, and the `network interface modify` command to manage firewall settings for LIFs.

If you want to...	Use this command...
Enable or disable firewall service	<code>system services firewall modify</code>
Display the current configuration for firewall service	<code>system services firewall show</code>
Create a firewall policy or add a service to an existing firewall policy	<code>system services firewall policy create</code>
Apply a firewall policy to a LIF	<code>network interface modify -lif lifname -firewall-policy</code>
Modify the IP addresses and netmasks associated with a firewall policy	<code>system services firewall policy modify</code>
Display information about firewall policies	<code>system services firewall policy show</code>
Create a new firewall policy that is an exact copy of an existing policy	<code>system services firewall policy clone</code>
Delete a firewall policy that is not used by a LIF	<code>system services firewall policy delete</code>

For more information, see the man pages for the `system services firewall`, `system services firewall policy`, and `network interface modify` commands in [ONTAP 9 commands](#).

## Configure QoS marking (cluster administrators only)

### Overview

Network Quality of Service (QoS) marking helps you to prioritize different traffic types based on the network conditions to effectively utilize the network resources. You can set the differentiated services code point (DSCP) value of the outgoing IP packets for the supported traffic types per IPspace.

### DSCP marking for UC compliance

You can enable differentiated services code point (DSCP) marking on outgoing (egress) IP packet traffic for a given protocol with a default or user-provided DSCP code. DSCP marking is a mechanism for classifying and managing network traffic and is a component of Unified Capability (UC) compliance.

DSCP marking (also known as *QoS marking* or *quality of service marking*) is enabled by providing an IPspace, protocol, and DSCP value. The protocols on which DSCP marking can be applied are NFS, CIFS, iSCSI, SnapMirror, NDMP, FTP, HTTP/HTTPS, SSH, Telnet, and SNMP.

If you do not provide a DSCP value when enabling DSCP marking for a given protocol, a default is used:

- The default value for data protocols/traffic is 0x0A (10).
- The default value for control protocols/traffic is 0x30 (48).



## Modify QoS marking values

You can modify the Quality of Service (QoS) marking values for different protocols, for each IPspace.

### Before you begin

All nodes in the cluster must be running the same version of ONTAP.

### Step

Modify QoS marking values by using the `network qos-marking modify` command.

- The `-ipospace` parameter specifies the IPspace for which the QoS marking entry is to be modified.
- The `-protocol` parameter specifies the protocol for which the QoS marking entry is to be modified. The `network qos-marking modify` man page describes the possible values of the protocol.
- The `-dscp` parameter specifies the Differentiated Services Code Point (DSCP) value. The possible values ranges from 0 through 63.
- The `-is-enabled` parameter is used to enable or disable the QoS marking for the specified protocol in the IPspace provided by the `-ipospace` parameter.

The following command enables the QoS marking for the NFS protocol in default IPspace:

```
network qos-marking modify -ipospace Default -protocol NFS -is-enabled true
```

The following command sets the DSCP value to 20 for the NFS protocol in the default IPspace:

```
network qos-marking modify -ipospace Default -protocol NFS -dscp 20
```

## Display QoS marking values

You can display the QoS marking values for different protocols, for each IPspace.

### Step

Display QoS marking values by using the `network qos-marking show` command.

The following command displays the QoS marking for all protocols in the default IPspace:

```

network qos-marking show -ipSPACE Default
IPspace          Protocol          DSCP    Enabled?
-----
Default
                CIFS              10      false
                FTP                48      false
                HTTP-admin         48      false
                HTTP-filesrv       10      false
                NDMP               10      false
                NFS                10      true
                SNMP              48      false
                SSH                48      false
                SnapMirror          10      false
                Telnet             48      false
                iSCSI              10      false

11 entries were displayed.

```

## Manage SNMP on the cluster (cluster administrators only)

### Overview

You can configure SNMP to monitor SVMs in your cluster to avoid issues before they occur, and to respond to issues if they do occur. Managing SNMP involves configuring SNMP users and configuring SNMP trap host destinations (management workstations) for all SNMP events. SNMP is disabled by default on data LIFs.

You can create and manage read-only SNMP users in the data SVM. Data LIFs must be configured to receive SNMP requests on the SVM.

SNMP network management workstations, or managers, can query the SVM SNMP agent for information. The SNMP agent gathers information and forwards it to the SNMP managers. The SNMP agent also generates trap notifications whenever specific events occur. The SNMP agent on the SVM has read-only privileges; it cannot be used for any set operations or for taking a corrective action in response to a trap. ONTAP provides an SNMP agent compatible with SNMP versions v1, v2c, and v3. SNMPv3 offers advanced security by using passphrases and encryption.

For more information about SNMP support in ONTAP systems, see [TR-4220: SNMP Support in Data ONTAP](#).

### What MIBs are

A MIB (Management Information Base) is a text file that describes SNMP objects and traps.

MIBs describe the structure of the management data of the storage system and they use a hierarchical namespace containing object identifiers (OIDs). Each OID identifies a variable that can be read by using SNMP.

Because MIBs are not configuration files and ONTAP does not read these files, SNMP functionality is not

affected by MIBs. ONTAP provides the following MIB file:

- A NetApp custom MIB (`netapp.mib`)

ONTAP supports IPv6 (RFC 2465), TCP (RFC 4022), UDP (RFC 4113), and ICMP (RFC 2466) MIBs, which show both IPv4 and IPv6 data, are supported.

ONTAP also provides a short cross-reference between object identifiers (OIDs) and object short names in the `traps.dat` file.



The latest versions of the ONTAP MIBs and `traps.dat` files are available on the NetApp Support Site. However, the versions of these files on the support site do not necessarily correspond to the SNMP capabilities of your ONTAP version. These files are provided to help you evaluate SNMP features in the latest ONTAP version.

## SNMP traps

SNMP traps capture system monitoring information that is sent as an asynchronous notification from the SNMP agent to the SNMP manager.

There are three types of SNMP traps: standard, built-in, and user-defined. User-defined traps are not supported in ONTAP.

A trap can be used to check periodically for operational thresholds or failures that are defined in the MIB. If a threshold is reached or a failure is detected, the SNMP agent sends a message (trap) to the traphosts alerting them of the event.



ONTAP supports SNMPv1 traps and, starting in ONTAP 9.1, SNMPv3 traps. ONTAP does not support SNMPv2c traps and INFORMs.

## Standard SNMP traps

These traps are defined in RFC 1215. There are five standard SNMP traps that are supported by ONTAP: coldStart, warmStart, linkDown, linkUp, and authenticationFailure.



The authenticationFailure trap is disabled by default. You must use the `system snmp authtrap` command to enable the trap. For more information, see the man pages: [ONTAP 9 commands](#)

## Built-in SNMP traps

Built-in traps are predefined in ONTAP and are automatically sent to the network management stations on the traphost list if an event occurs. These traps, such as diskFailedShutdown, cpuTooBusy, and volumeNearlyFull, are defined in the custom MIB.

Each built-in trap is identified by a unique trap code.

## Create an SNMP community and assigning it to a LIF

You can create an SNMP community that acts as an authentication mechanism between the management station and the storage virtual machine (SVM) when using SNMPv1 and SNMPv2c.

By creating SNMP communities in a data SVM, you can execute commands such as `snmpwalk` and `snmpget` on the data LIFs.

### About this task

- In new installations of ONTAP, SNMPv1 and SNMPv2c are disabled by default.

SNMPv1 and SNMPv2c are enabled after you create an SNMP community.

- ONTAP supports read-only communities.
- By default, the "data" firewall policy that is assigned to data LIFs has SNMP service set to `deny`.

You must create a new firewall policy with SNMP service set to `allow` when creating an SNMP user for a data SVM.

- You can create SNMP communities for SNMPv1 and SNMPv2c users for both the admin SVM and the data SVM.
- Because an SVM is not part of the SNMP standard, queries on data LIFs must include the NetApp root OID (1.3.6.1.4.1.789)—for example, `snmpwalk -v 2c -c snmpNFS 10.238.19.14 1.3.6.1.4.1.789`.

### Steps

1. Create an SNMP community by using the `system snmp community add` command. The following command shows how to create an SNMP community in the admin SVM cluster-1:

```
system snmp community add -type ro -community-name comty1 -vserver
cluster-1
```

The following command shows how to create an SNMP community in the data SVM vs1:

```
system snmp community add -type ro -community-name comty2 -vserver vs1
```

2. Verify that the communities have been created by using the `system snmp community show` command.

The following command shows the two communities created for SNMPv1 and SNMPv2c:

```
system snmp community show
cluster-1
rocomty1
vs1
rocomty2
```

3. Check whether SNMP is allowed as a service in the "data" firewall policy by using the `system services firewall policy show` command.

The following command shows that the snmp service is not allowed in the default "data" firewall policy (the snmp service is allowed in the "mgmt" firewall policy only):

```

system services firewall policy show
Vserver Policy          Service    Allowed
-----
cluster-1
  data
    dns      0.0.0.0/0
    ndmp     0.0.0.0/0
    ndmps    0.0.0.0/0
cluster-1
  intercluster
    https    0.0.0.0/0
    ndmp     0.0.0.0/0
    ndmps    0.0.0.0/0
cluster-1
  mgmt
    dns      0.0.0.0/0
    http     0.0.0.0/0
    https    0.0.0.0/0
    ndmp     0.0.0.0/0
    ndmps    0.0.0.0/0
    ntp      0.0.0.0/0
    snmp     0.0.0.0/0
    ssh      0.0.0.0/0

```

4. Create a new firewall policy that allows access using the `snmp` service by using the `system services firewall policy create` command.

The following commands create a new data firewall policy named "data1" that allows the `snmp`

```

system services firewall policy create -policy data1 -service snmp
-vserver vs1 -allow-list 0.0.0.0/0

cluster-1::> system services firewall policy show -service snmp
Vserver Policy          Service    Allowed
-----
cluster-1
  mgmt
    snmp     0.0.0.0/0
vs1
  data1
    snmp     0.0.0.0/0

```

5. Apply the firewall policy to a data LIF by using the `network interface modify` command with the `-firewall -policy` parameter.

The following command assigns the new "data1" firewall policy to LIF "datalif1":

```
network interface modify -vserver vs1 -lif datalif1 -firewall-policy data1
```

### Configure SNMPv3 users in a cluster

SNMPv3 is a secure protocol when compared to SNMPv1 and SNMPv2c. To use SNMPv3, you must configure an SNMPv3 user to run the SNMP utilities from the SNMP manager.

#### Step

Use the "security login create command" to create an SNMPv3 user.

You are prompted to provide the following information:

- Engine ID: Default and recommended value is local Engine ID
- Authentication protocol
- Authentication password
- Privacy protocol
- Privacy protocol password

#### Result

The SNMPv3 user can log in from the SNMP manager by using the user name and password and run the SNMP utility commands.

#### SNMPv3 security parameters

SNMPv3 includes an authentication feature that, when selected, requires users to enter their names, an authentication protocol, an authentication key, and their desired security level when invoking a command.

The following table lists the SNMPv3 security parameters :

Parameter	Command-line option	Description
engineID	-e EngineID	Engine ID of the SNMP agent. Default value is local EngineID (recommended).
securityName	-u Name	User name must not exceed 32 characters.
authProtocol	-a {none   MD5   SHA   SHA-256}	Authentication type can be none, MD5, SHA, or SHA-256.
authKey	-A PASSPHRASE	Passphrase with a minimum of eight characters.

Parameter	Command-line option	Description
securityLevel	-l {authNoPriv   AuthPriv   noAuthNoPriv}	Security level can be Authentication, No Privacy; Authentication, Privacy; or no Authentication, no Privacy.
privProtocol	-x { none   des   aes128}	Privacy protocol can be none, des, or aes128
privPassword	-X password	Password with a minimum of eight characters.

### Examples for different security levels

This example shows how an SNMPv3 user created with different security levels can use the SNMP client-side commands, such as `snmpwalk`, to query the cluster objects.

For better performance, you should retrieve all objects in a table rather than a single object or a few objects from the table.



You must use `snmpwalk` 5.3.1 or later when the authentication protocol is SHA.

### Security level: authPriv

The following output shows the creation of an SNMPv3 user with the authPriv security level.

```
security login create -username snmpv3user -application snmp -authmethod
usm
Enter the authoritative entity's EngineID [local EngineID]:
Which authentication protocol do you want to choose (none, md5, sha)
[none]:sha
```

### FIPS mode

```
Which authentication protocol do you want to choose (sha, sha2-256) [sha]

Enter authentication protocol password (minimum 8 characters long):
Enter authentication protocol password again:
Which privacy protocol do you want to choose (none, des) [none]: des
Enter privacy protocol password (minimum 8 characters long):
Enter privacy protocol password again:
```

### snmpwalk Test

The following output shows the SNMPv3 user running the `snmpwalk` command:

For better performance, you should retrieve all objects in a table rather than a single object or a few objects from the table.

```
$ snmpwalk -v 3 -u snmpv3user -a SHA -A password1! -x DES -X password1! -l
authPriv 192.0.2.62 .1.3.6.1.4.1.789.1.5.8.1.2
Enterprises.789.1.5.8.1.2.1028 = "vol0"
Enterprises.789.1.5.8.1.2.1032 = "vol0"
Enterprises.789.1.5.8.1.2.1038 = "root_vs0"
Enterprises.789.1.5.8.1.2.1042 = "root_vstrap"
Enterprises.789.1.5.8.1.2.1064 = "vol1"
```

### Security level: authNoPriv

The following output shows the creation of an SNMPv3 user with the authNoPriv security level.

```
security login create -username snmpv3user1 -application snmp -authmethod
usm -role admin
Enter the authoritative entity's EngineID [local EngineID]:
Which authentication protocol do you want to choose (none, md5, sha)
[none]: md5
```

### FIPS Mode

```
Which privacy protocol do you want to choose (aes128) [aes128]

Enter authentication protocol password (minimum 8 characters long):
Enter authentication protocol password again:
Which privacy protocol do you want to choose (none, des) [none]: none
```

### snmpwalk Test

The following output shows the SNMPv3 user running the snmpwalk command:

For better performance, you should retrieve all objects in a table rather than a single object or a few objects from the table.

```
$ snmpwalk -v 3 -u snmpv3user1 -a MD5 -A password1! -l authNoPriv
192.0.2.62 .1.3.6.1.4.1.789.1.5.8.1.2
Enterprises.789.1.5.8.1.2.1028 = "vol0"
Enterprises.789.1.5.8.1.2.1032 = "vol0"
Enterprises.789.1.5.8.1.2.1038 = "root_vs0"
Enterprises.789.1.5.8.1.2.1042 = "root_vstrap"
Enterprises.789.1.5.8.1.2.1064 = "vol1"
```



## Security level: noAuthNoPriv

The following output shows the creation of an SNMPv3 user with the noAuthNoPriv security level.

```
security login create -username snmpv3user2 -application snmp -authmethod  
usm -role admin  
Enter the authoritative entity's EngineID [local EngineID]:  
Which authentication protocol do you want to choose (none, md5, sha)  
[none]: none
```

## FIPS Mode

FIPS will not allow you to choose none

## snmpwalk Test

The following output shows the SNMPv3 user running the snmpwalk command:

For better performance, you should retrieve all objects in a table rather than a single object or a few objects from the table.

```
$ snmpwalk -v 3 -u snmpv3user2 -l noAuthNoPriv 192.0.2.62  
.1.3.6.1.4.1.789.1.5.8.1.2  
Enterprises.789.1.5.8.1.2.1028 = "vol0"  
Enterprises.789.1.5.8.1.2.1032 = "vol0"  
Enterprises.789.1.5.8.1.2.1038 = "root_vs0"  
Enterprises.789.1.5.8.1.2.1042 = "root_vstrap"  
Enterprises.789.1.5.8.1.2.1064 = "vol1"
```

## Configure traphosts to receive SNMP notifications

You can configure the traphost (SNMP manager) to receive notifications (SNMP trap PDUs) when SNMP traps are generated in the cluster. You can specify either the host name or the IP address (IPv4 or IPv6) of the SNMP traphost.

### Before you begin

- SNMP and SNMP traps must be enabled on the cluster.



SNMP and SNMP traps are enabled by default.

- DNS must be configured on the cluster for resolving the traphost names.
- IPv6 must be enabled on the cluster to configure SNMP traphosts by using IPv6 addresses.
- For ONTAP 9.1 and later versions, you must have specified the authentication of a predefined User-based Security Model (USM) and privacy credentials when creating traphosts.

### Step

Add an SNMP traphost:

```
system snmp traphost add
```



Traps can be sent only when at least one SNMP management station is specified as a traphost.

The following command adds a new SNMPv3 traphost named `yyy.example.com` with a known USM user:

```
system snmp traphost add -peer-address yyy.example.com -usm-username  
MyUsmUser
```

The following command adds a traphost using the IPv6 address of the host:

```
system snmp traphost add -peer-address 2001:0db8:1:1:209:6bff:feae:6d67
```

### Commands for managing SNMP

You can use the `system snmp` commands to manage SNMP, traps, and traphosts. You can use the `security` commands to manage SNMP users per SVM. You can use the `event` commands to manage events related to SNMP traps.

#### Commands for configuring SNMP

If you want to...	Use this command...
Enable SNMP on the cluster	<code>options -option-name snmp.enable -option-value on</code> The SNMP service must be allowed under the management (mgmt) firewall policy. You can verify whether SNMP is allowed by using the <code>system services firewall policy show</code> command.
Disable SNMP on the cluster	<code>options -option-name snmp.enable -option-value off</code>

#### Commands for managing SNMP v1, v2c, and v3 users

If you want to...	Use this command...
Configure SNMP users	<code>security login create</code>
Display SNMP users	<code>security snmpusers</code> and <code>security login show -application snmp</code>
Delete SNMP users	<code>security login delete</code>
Modify the access-control role name of a login method for SNMP users	<code>security login modify</code>

## Commands for providing contact and location information

If you want to...	Use this command...
Display or modify the contact details of the cluster	system snmp contact
Display or modify the location details of the cluster	system snmp location

## Commands for managing SNMP communities

If you want to...	Use this command...
Add a read-only (ro) community for an SVM or for all SVMs in the cluster	system snmp community add
Delete a community or all communities	system snmp community delete
Display the list of all communities	system snmp community show

Because SVMs are not part of the SNMP standard, queries on data LIFs must include the NetApp root OID (1.3.6.1.4.1.789), for example, `snmpwalk -v 2c -c snmpNFS 10.238.19.14 1.3.6.1.4.1.789`.

## Command for displaying SNMP option values

If you want to...	Use this command...
Display the current values of all SNMP options, including cluster contact, contact location, whether the cluster is configured to send traps, the list of traphosts, and list of communities and access control type	system snmp show

## Commands for managing SNMP traps and traphosts

If you want to...	Use this command...
Enable SNMP traps sent from the cluster	system snmp init -init 1
Disable SNMP traps sent from the cluster	system snmp init -init 0
Add a traphost that receives SNMP notifications for specific events in the cluster	system snmp traphost add
Delete a traphost	system snmp traphost delete
Display the list of traphosts	system snmp traphost show

## Commands for managing events related to SNMP traps

If you want to...	Use this command...
Display the events for which SNMP traps (built-in) are generated	<p>event route show</p> <p>Use the <code>-snmp-support true</code> parameter to view only SNMP-related events.</p> <p>Use the instance <code>-messagename &lt;message&gt;</code> parameter to view a detailed description why an event might have occurred, and any corrective action.</p> <p>Routing of individual SNMP trap events to specific traphost destinations is not supported. All SNMP trap events are sent to all traphost destinations.</p>
Display a list of SNMP trap history records, which are event notifications that have been sent to SNMP traps	event snmhistory show
Delete an SNMP trap history record	event snmhistory delete

For more information about the `system snmp`, `security`, and `event` commands, see the man pages: [ONTAP 9 commands](#)

## Manage routing in an SVM

### Overview

The routing table for an SVM determines the network path the SVM uses to communicate with a destination. It's important to understand how routing tables work so that you can prevent network problems before they occur.

Routing rules are as follows:

- ONTAP routes traffic over the most specific available route.
- ONTAP routes traffic over a default gateway route (having 0 bits of netmask) as a last resort, when more specific routes are not available.

In the case of routes with the same destination, netmask, and metric, there is no guarantee that the system will use the same route after a reboot or after an upgrade. This is especially an issue if you have configured multiple default routes.

It is a best practice to configure one default route only for an SVM. To avoid disruption, you should ensure that the default route is able to reach any network address that is not reachable by a more specific route. For more information, see the Knowledgebase article [SU134: Network access might be disrupted by incorrect routing configuration in clustered ONTAP](#)

### Create a static route

You can create static routes within a storage virtual machine (SVM) to control how LIFs use the network for outbound traffic.

When you create a route entry associated with an SVM, the route will be used by all LIFs that are owned by the specified SVM and that are on the same subnet as the gateway.

### Step

Use the `network route create` command to create a route.

```
network route create -vserver vs0 -destination 0.0.0.0/0 -gateway
10.61.208.1
```

### Enable multipath routing

If multiple routes have the same metric for a destination, only one of the routes is picked for outgoing traffic. This leads to other routes being unutilized for sending outgoing traffic. You can enable multipath routing to load balance and utilize all the available routes.

### Steps

1. Log in to the advanced privilege level:

```
set -privilege advanced
```

2. Enable multipath routing:

```
network options multipath-routing modify -is-enabled true
```

Multipath routing is enabled for all nodes in the cluster.

```
network options multipath-routing modify -is-enabled true
```

### Delete a static route

You can delete an unneeded static route from a storage virtual machine (SVM).

### Step

Use the `network route delete` command to delete a static route.

For more information about this command, see the `network route` man page: [ONTAP 9 commands](#).

The following example deletes a static route associated with SVM vs0 with a gateway of 10.63.0.1 and a destination IP address of 0.0.0.0/0:

```
network route delete -vserver vs0 -gateway 10.63.0.1 -destination
0.0.0.0/0
```

### Display routing information

You can display information about the routing configuration for each SVM on your cluster.

This can help you diagnose routing problems involving connectivity issues between client applications or services and a LIF on a node in the cluster.

Steps

- 1. Use the `network route show` command to display routes within one or more SVMs. The following example shows a route configured in the vs0 SVM:

```
network route show
(network route show)
Vserver          Destination      Gateway          Metric
-----
vs0
                0.0.0.0/0       172.17.178.1     20
```

- 2. Use the `network route show-lifs` command to display the association of routes and LIFs within one or more SVMs.

The following example shows LIFs with routes owned by the vs0 SVM:

```
network route show-lifs
(network route show-lifs)

Vserver: vs0
Destination      Gateway          Logical Interfaces
-----
0.0.0.0/0        172.17.178.1    cluster_mgmt,
                  LIF-b-01_mgmt1,
                  LIF-b-02_mgmt1
```

- 3. Use the `network route active-entry show` command to display installed routes on one or more nodes, SVMs, subnets, or routes with specified destinations.

The following example shows all installed routes on a specific SVM:

```
network route active-entry show -vserver Data0

Vserver: Data0
Node: node-1
Subnet Group: 0.0.0.0/0
Destination      Gateway          Interface      Metric  Flags
-----
127.0.0.1        127.0.0.1       lo             10     UHS
127.0.10.1       127.0.20.1      losk           10     UHS
127.0.20.1       127.0.20.1      losk           10     UHS
```

```

Vserver: Data0
Node: node-1
Subnet Group: fd20:8b1e:b255:814e::/64
Destination          Gateway              Interface    Metric    Flags
-----
default              fd20:8b1e:b255:814e::1
                                      e0d          20      UGS
fd20:8b1e:b255:814e::/64
                                      link#4       e0d          0      UC

Vserver: Data0
Node: node-2
Subnet Group: 0.0.0.0/0
Destination          Gateway              Interface    Metric    Flags
-----
127.0.0.1            127.0.0.1           lo           10      UHS

Vserver: Data0
Node: node-2
Subnet Group: 0.0.0.0/0
Destination          Gateway              Interface    Metric    Flags
-----
127.0.10.1           127.0.20.1          losk         10      UHS
127.0.20.1           127.0.20.1          losk         10      UHS

Vserver: Data0
Node: node-2
Subnet Group: fd20:8b1e:b255:814e::/64
Destination          Gateway              Interface    Metric    Flags
-----
default              fd20:8b1e:b255:814e::1
                                      e0d          20      UGS
fd20:8b1e:b255:814e::/64
                                      link#4       e0d          0      UC
fd20:8b1e:b255:814e::1 link#4              e0d          0      UHL
11 entries were displayed.

```

## Remove dynamic routes from routing tables

When ICMP redirects are received for IPv4 and IPv6, dynamic routes are added to the routing table. By default, the dynamic routes are removed after 300 seconds. If you want to maintain dynamic routes for a different amount of time, you can change the time out value.

### About this task

You can set the timeout value from 0 to 65,535 seconds. If you set the value to 0, the routes never expire.

Removing dynamic routes prevents loss of connectivity caused by the persistence of invalid routes.

### Steps

1. Display the current timeout value.

- For IPv4:

```
network tuning icmp show
```

- For IPv6:

```
network tuning icmp6 show
```

2. Modify the timeout value.

- For IPv4:

```
network tuning icmp modify -node node_name -redirect-timeout  
timeout_value
```

- For IPv6:

```
network tuning icmp6 modify -node node_name -redirect-v6-timeout  
timeout_value
```

3. Verify that the timeout value was modified correctly.

- For IPv4:

```
network tuning icmp show
```

- For IPv6:

```
network tuning icmp6 show
```

## ONTAP port usage on a storage system

### Overview

A number of well-known ports are reserved for ONTAP communications with specific services. Port conflicts will occur if a port value in your storage network environment is the same as on ONTAP port.



## Network Ports

The following table lists the TCP ports and UDP ports that are used by ONTAP.

Service	Port/Protocol	Description
ssh	22/TCP	Secure shell login
telnet	23/TCP	Remote login
DNS	53/TCP	Load Balanced DNS
http	80/TCP	Hyper Text Transfer Protocol
rpcbind	111/TCP	Remote procedure call
rpcbind	111/UDP	Remote procedure call
ntp	123/UDP	Network Time Protocol
msrpc	135/UDP	MSRPC
netbios-ssn	139/TCP	NetBIOS service session
snmp	161/UDP	Simple network management protocol
https	443/TCP	HTTP over TLS
microsoft-ds	445/TCP	Microsoft-ds
mount	635/TCP	NFS mount
mount	635/UDP	NFS Mount
named	953/UDP	Name daemon
nfs	2049/UDP	NFS Server daemon
nfs	2049/TCP	NFS Server daemon
nrv	2050/TCP	NetApp Remote Volume protocol
iscsi	3260/TCP	iSCSI target port
lockd	4045/TCP	NFS lock daemon
lockd	4045/UDP	NFS lock daemon
NFS	4046/TCP	Network Status Monitor
NSM	4046/UDP	Network Status Monitor
rquotad	4049/UDP	NFS rquotad protocol
krb524	4444/UDP	Kerberos 524
mdns	5353/UDP	Multicast DNS
HTTPS	5986/UDP	HTTPS Port - Listening binary protocol
https	8443/TCP	7MTT GUI Tool through https
ndmp	10000/TCP	Network Data Management Protocol

Service	Port/Protocol	Description
Cluster peering	11104/TCP	Cluster peering
Cluster peering	11105/TCP	Cluster peering
NDMP	18600 - 18699/TCP	NDMP
cifs witness port	40001/TCP	cifs witness port
tls	50000/TCP	Transport layer security
iscsi	65200/TCP	ISCSI port

## ONTAP internal ports

The following table lists the TCP ports and UDP ports that are used internally by ONTAP. These ports are used to establish intracluster LIF communication:

Port/Protocol	Description
514	Syslog
900	NetApp Cluster RPC
902	NetApp Cluster RPC
904	NetApp Cluster RPC
905	NetApp Cluster RPC
910	NetApp Cluster RPC
911	NetApp Cluster RPC
913	NetApp Cluster RPC
914	NetApp Cluster RPC
915	NetApp Cluster RPC
918	NetApp Cluster RPC
920	NetApp Cluster RPC
921	NetApp Cluster RPC
924	NetApp Cluster RPC
925	NetApp Cluster RPC
927	NetApp Cluster RPC
928	NetApp Cluster RPC
929	NetApp Cluster RPC
931	NetApp Cluster RPC
932	NetApp Cluster RPC
933	NetApp Cluster RPC
934	NetApp Cluster RPC

Port/Protocol	Description
935	NetApp Cluster RPC
936	NetApp Cluster RPC
937	NetApp Cluster RPC
939	NetApp Cluster RPC
940	NetApp Cluster RPC
951	NetApp Cluster RPC
954	NetApp Cluster RPC
955	NetApp Cluster RPC
956	NetApp Cluster RPC
958	NetApp Cluster RPC
961	NetApp Cluster RPC
963	NetApp Cluster RPC
964	NetApp Cluster RPC
966	NetApp Cluster RPC
967	NetApp Cluster RPC
5125	Alternate Control Port for disk
5133	Alternate Control Port for disk
5144	Alternate Control Port for disk
65502	Node scope SSH
65503	LIF Sharing
7810	NetApp Cluster RPC
7811	NetApp Cluster RPC
7812	NetApp Cluster RPC
7813	NetApp Cluster RPC
7814	NetApp Cluster RPC
7815	NetApp Cluster RPC
7816	NetApp Cluster RPC
7817	NetApp Cluster RPC
7818	NetApp Cluster RPC
7819	NetApp Cluster RPC
7820	NetApp Cluster RPC
7821	NetApp Cluster RPC
7822	NetApp Cluster RPC

Port/Protocol	Description
7823	NetApp Cluster RPC
7824	NetApp Cluster RPC
8023	Node Scope TELNET
8514	Node Scope RSH
9877	KMIP Client Port (Internal Local Host Only)

## View network information

### Overview

You can view information related to ports, LIFs, routes, failover rules, failover groups, firewall rules, DNS, NIS, and connections.

This information can be useful in situations such as reconfiguring networking settings, or when troubleshooting the cluster.

If you are a cluster administrator, you can view all the available networking information. If you are an SVM administrator, you can view only the information related to your assigned SVMs.

### Display network port information (cluster administrators only)

You can display information about a specific port, or about all ports on all nodes in the cluster.

### About this task

The following information is displayed:

- Node name
- Port name
- IPspace name
- Broadcast domain name
- Link status (up or down)
- MTU setting
- Port speed setting and operational status (1 gigabit or 10 gigabits per second)
- Auto-negotiation setting (true or false)
- Duplex mode and operational status (half or full)
- The port's interface group, if applicable
- The port's VLAN tag information, if applicable
- The port's health status (health or degraded)
- Reasons for a port being marked as degraded

If data for a field is not available (for example, the operational duplex and speed for an inactive port would not be available), the field value is listed as **-**.

Step

Display network port information by using the `network port show` command.

You can display detailed information for each port by specifying the `-instance` parameter, or get specific information by specifying field names using the `-fields` parameter.

```
network port show
Node: node1

Ignore

Speed(Mbps) Health
Health
Port      IPspace      Broadcast Domain Link MTU  Admin/Oper  Status
Status
-----
-----
e0a      Cluster      Cluster      up    9000  auto/1000  healthy
false
e0b      Cluster      Cluster      up    9000  auto/1000  healthy
false
e0c      Default      Default      up    1500  auto/1000  degraded
false
e0d      Default      Default      up    1500  auto/1000  degraded
true
Node: node2

Ignore

Speed(Mbps) Health
Health
Port      IPspace      Broadcast Domain Link MTU  Admin/Oper  Status
Status
-----
-----
e0a      Cluster      Cluster      up    9000  auto/1000  healthy
false
e0b      Cluster      Cluster      up    9000  auto/1000  healthy
false
e0c      Default      Default      up    1500  auto/1000  healthy
false
e0d      Default      Default      up    1500  auto/1000  healthy
false
8 entries were displayed.
```

## Display information about a VLAN (cluster administrators only)

You can display information about a specific VLAN or about all VLANs in the cluster.

### About this task

You can display detailed information for each VLAN by specifying the `-instance` parameter. You can display specific information by specifying field names using the `-fields` parameter.

### Step

Display information about VLANs by using the `network port vlan show` command. The following command displays information about all VLANs in the cluster:

```
network port vlan show
```

Node	VLAN Name	Port	VLAN ID	MAC Address
cluster-1-01				
	a0a-10	a0a	10	02:a0:98:06:10:b2
	a0a-20	a0a	20	02:a0:98:06:10:b2
	a0a-30	a0a	30	02:a0:98:06:10:b2
	a0a-40	a0a	40	02:a0:98:06:10:b2
	a0a-50	a0a	50	02:a0:98:06:10:b2
cluster-1-02				
	a0a-10	a0a	10	02:a0:98:06:10:ca
	a0a-20	a0a	20	02:a0:98:06:10:ca
	a0a-30	a0a	30	02:a0:98:06:10:ca
	a0a-40	a0a	40	02:a0:98:06:10:ca
	a0a-50	a0a	50	02:a0:98:06:10:ca

## Display interface group information (cluster administrators only)

You can display information about an interface group to determine its configuration.

### About this task

The following information is displayed:

- Node on which the interface group is located
- List of network ports that are included in the interface group
- Interface group's name
- Distribution function (MAC, IP, port, or sequential)
- Interface group's Media Access Control (MAC) address
- Port activity status; that is, whether all aggregated ports are active (full participation), whether some are active (partial participation), or whether none are active

### Step

Display information about interface groups by using the `network port ifgrp show` command.

You can display detailed information for each node by specifying the `-instance` parameter. You can display specific information by specifying field names using the `-fields` parameter.

The following command displays information about all interface groups in the cluster:

```
network port ifgrp show
```

Node	Port	Distribution	MAC Address	Active	
	IfGrp	Function		Ports	Ports
-----					
cluster-1-01	a0a	ip	02:a0:98:06:10:b2	full	e7a, e7b
cluster-1-02	a0a	sequential	02:a0:98:06:10:ca	full	e7a, e7b
cluster-1-03	a0a	port	02:a0:98:08:5b:66	full	e7a, e7b
cluster-1-04	a0a	mac	02:a0:98:08:61:4e	full	e7a, e7b

The following command displays detailed interface group information for a single node:

```
network port ifgrp show -instance -node cluster-1-01
```

```
Node: cluster-1-01
Interface Group Name: a0a
Distribution Function: ip
Create Policy: multimode
MAC Address: 02:a0:98:06:10:b2
Port Participation: full
Network Ports: e7a, e7b
Up Ports: e7a, e7b
Down Ports: -
```

**Display LIF information**

You can view detailed information about a LIF to determine its configuration.

You might also want to view this information to diagnose basic LIF problems, such as checking for duplicate IP addresses or verifying whether the network port belongs to the correct subnet. storage virtual machine (SVM) administrators can view only the information about the LIFs associated with the SVM.

**About this task**

The following information is displayed:

- IP address associated with the LIF
- Administrative status of the LIF

- Operational status of the LIF

The operational status of data LIFs is determined by the status of the SVM with which the data LIFs are associated. When the SVM is stopped, the operational status of the LIF changes to down. When the SVM is started again, the operational status changes to up

- Node and the port on which the LIF resides

If data for a field is not available (for example, if there is no extended status information), the field value is listed as -.

### **Step**

Display LIF information by using the network interface show command.

You can view detailed information for each LIF by specifying the -instance parameter, or get specific information by specifying field names using the -fields parameter.

The following command displays general information about all LIFs in a cluster:



# network interface show

Vserver	Logical Interface	Status Admin/Oper	Network Address/Mask	Current Node	Current Is Port
Home					
-----	-----	-----	-----	-----	-----
-----					
example	lif1	up/up	192.0.2.129/22	node-01	e0d
false					
node	cluster_mgmt	up/up	192.0.2.3/20	node-02	e0c
false					
node-01	clus1	up/up	192.0.2.65/18	node-01	e0a
true					
	clus2	up/up	192.0.2.66/18	node-01	e0b
true					
	mgmt1	up/up	192.0.2.1/20	node-01	e0c
true					
node-02	clus1	up/up	192.0.2.67/18	node-02	e0a
true					
	clus2	up/up	192.0.2.68/18	node-02	e0b
true					
	mgmt2	up/up	192.0.2.2/20	node-02	e0d
true					
vs1	d1	up/up	192.0.2.130/21	node-01	e0d
false					
	d2	up/up	192.0.2.131/21	node-01	e0d
true					
	data3	up/up	192.0.2.132/20	node-02	e0c
true					

The following command shows detailed information about a single LIF:

```
network interface show -lif data1 -instance

Vserver Name: vs1
Logical Interface Name: data1
Role: data
Data Protocol: nfs,cifs
Home Node: node-01
Home Port: e0c
Current Node: node-03
Current Port: e0c
Operational Status: up
Extended Status: -
Is Home: false
Network Address: 192.0.2.128
Netmask: 255.255.192.0
Bits in the Netmask: 18
IPv4 Link Local: -
Subnet Name: -
Administrative Status: up
Failover Policy: local-only
Firewall Policy: data
Auto Revert: false
Fully Qualified DNS Zone Name: xxx.example.com
DNS Query Listen Enable: false
Failover Group Name: Default
FCP WWPN: -
Address family: ipv4
Comment: -
IPspace of LIF: Default
```

Display routing information

You can display information about routes within an SVM.

Step

Depending on the type of routing information that you want to view, enter the applicable command:

To view information about...	Enter
Static routes, per SVM	<code>network route show</code>
LIFs on each route, per SVM	<code>network route show-lifs</code>

You can display detailed information for each route by specifying the `-instance` parameter. The following command displays the static routes within the SVMs in cluster- 1:

```

network route show
Vserver          Destination      Gateway          Metric
-----
Cluster
                  0.0.0.0/0       10.63.0.1        10
cluster-1
                  0.0.0.0/0       198.51.9.1       10
vs1
                  0.0.0.0/0       192.0.2.1        20
vs3
                  0.0.0.0/0       192.0.2.1        20

```

The following command displays the association of static routes and logical interfaces (LIFs) within all SVMs in cluster-1:

```

network route show-lifs
Vserver: Cluster
Destination      Gateway          Logical Interfaces
-----
0.0.0.0/0        10.63.0.1        -

Vserver: cluster-1
Destination      Gateway          Logical Interfaces
-----
0.0.0.0/0        198.51.9.1       cluster_mgmt,
                  cluster-1_mgmt1,

Vserver: vs1
Destination      Gateway          Logical Interfaces
-----
0.0.0.0/0        192.0.2.1        data1_1, data1_2

Vserver: vs3
Destination      Gateway          Logical Interfaces
-----
0.0.0.0/0        192.0.2.1        data2_1, data2_2

```

### Display DNS host table entries (cluster administrators only)

The DNS host table entries map host names to IP addresses. You can display the host names and alias names and the IP address that they map to for all SVMs in a cluster.

#### Step

Display the host name entries for all SVMs by using the `vserver services name-service dns hosts show` command.

The following example displays the host table entries:

```
vserver services name-service dns hosts show
```

Vserver	Address	Hostname	Aliases
cluster-1			
	10.72.219.36	lnx219-36	-
vs1			
	10.72.219.37	lnx219-37	lnx219-37.example.com

You can use the `vserver services name-service dns` command to enable DNS on an SVM, and configure it to use DNS for host-name resolution. Host names are resolved using external DNS servers.

**Display DNS domain configurations**

You can display the DNS domain configuration of one or more storage virtual machines (SVMs) in your cluster to verify that it is configured properly.

**Step**

Viewing the DNS domain configurations by using the `vserver services name-service dns show` command.

The following command displays the DNS configurations for all SVMs in the cluster:

```
vserver services name-service dns show
```

Vserver	State	Domains	Name Servers
cluster-1	enabled	xyz.company.com	192.56.0.129, 192.56.0.130
vs1	enabled	xyz.company.com	192.56.0.129, 192.56.0.130
vs2	enabled	xyz.company.com	192.56.0.129, 192.56.0.130
vs3	enabled	xyz.company.com	192.56.0.129, 192.56.0.130

The following command displays detailed DNS configuration information for SVM vs1:

```
vserver services name-service dns show -vserver vs1
      Vserver: vs1
      Domains: xyz.company.com
      Name Servers: 192.56.0.129, 192.56.0.130
      Enable/Disable DNS: enabled
      Timeout (secs): 2
      Maximum Attempts: 1
```

## Display information about failover groups

You can view information about failover groups, including the list of nodes and ports in each failover group, whether failover is enabled or disabled, and the type of failover policy that is being applied to each LIF.

### Steps

1. Display the target ports for each failover group by using the `network interface failover-groups show` command.

The following command displays information about all failover groups on a two-node cluster:

```
network interface failover-groups show
```

Vserver	Group	Failover Targets
Cluster	Cluster	cluster1-01:e0a, cluster1-01:e0b, cluster1-02:e0a, cluster1-02:e0b
vs1	Default	cluster1-01:e0c, cluster1-01:e0d, cluster1-01:e0e, cluster1-02:e0c, cluster1-02:e0d, cluster1-02:e0e

2. Display the target ports and broadcast domain for a specific failover group by using the `network interface failover-groups show` command.

The following command displays detailed information about failover group data12 for SVM vs4:

```
network interface failover-groups show -vserver vs4 -failover-group data12
```

```
Vserver Name: vs4
Failover Group Name: data12
Failover Targets: cluster1-01:e0f, cluster1-01:e0g, cluster1-02:e0f,
                  cluster1-02:e0g
Broadcast Domain: Default
```

3. Display the failover settings used by all LIFs by using the `network interface show` command.

The following command displays the failover policy and failover group that is being used by each LIF:

```
network interface show -vserver * -lif * -fields failover-
group,failover-policy
vserver    lif                failover-policy    failover-group
-----
Cluster    cluster1-01_clus_1    local-only         Cluster
Cluster    cluster1-01_clus_2    local-only         Cluster
Cluster    cluster1-02_clus_1    local-only         Cluster
Cluster    cluster1-02_clus_2    local-only         Cluster
cluster1    cluster_mgmt          broadcast-domain-wide Default
cluster1    cluster1-01_mgmt1     local-only         Default
cluster1    cluster1-02_mgmt1     local-only         Default
vs1         data1                 disabled           Default
vs3         data2                 system-defined     group2
```

## Display LIF failover targets

You might have to check whether the failover policies and the failover groups of a LIF are configured correctly. To prevent misconfiguration of the failover rules, you can display the failover targets for a single LIF or for all LIFs.

### About this task

Displaying LIF failover targets enables you to check for the following:

- Whether the LIFs are configured with the correct failover group and failover policy
- Whether the resulting list of failover target ports is appropriate for each LIF
- Whether the failover target of a data LIF is not a management port (e0M)

### Step

Display the failover targets of a LIF by using the `failover` option of the `network interface show` command.

The following command displays information about the failover targets for all LIFs in a two-node cluster. The

**Failover Targets** row shows the (prioritized) list of node-port combinations for a given LIF.

```

network interface show -failover
      Logical      Home      Failover      Failover
Vserver Interface  Node:Port      Policy      Group
-----
Cluster
      node1_clus1  node1:e0a      local-only   Cluster
                        Failover Targets: node1:e0a,
                        node1:e0b
      node1_clus2  node1:e0b      local-only   Cluster
                        Failover Targets: node1:e0b,
                        node1:e0a
      node2_clus1  node2:e0a      local-only   Cluster
                        Failover Targets: node2:e0a,
                        node2:e0b
      node2_clus2  node2:e0b      local-only   Cluster
                        Failover Targets: node2:e0b,
                        node2:e0a
cluster1
      cluster_mgmt node1:e0c      broadcast-domain-wide
                        Default
                        Failover Targets: node1:e0c,
                        node1:e0d,
                        node2:e0c,
                        node2:e0d
      node1_mgmt1  node1:e0c      local-only   Default
                        Failover Targets: node1:e0c,
                        node1:e0d
      node2_mgmt1  node2:e0c      local-only   Default
                        Failover Targets: node2:e0c,
                        node2:e0d
vs1
      data1        node1:e0e      system-defined bcast1
                        Failover Targets: node1:e0e,
                        node1:e0f,
                        node2:e0e,
                        node2:e0f

```

### Display LIFs in a load balancing zone

You can verify whether a load balancing zone is configured correctly by displaying all of the LIFs that belong to it. You can also view the load balancing zone of a particular LIF, or the load balancing zones for all LIFs.

#### Step

Display the LIFs and load balancing details that you want by using one of the following commands

To display...	Enter...
LIFs in a particular load balancing zone	network interface show -dns-zone zone_name zone_name specifies the name of the load balancing zone
The load balancing zone of a particular LIF	network interface show -lif lif_name -fields dns-zone
The load balancing zones of all LIFs	network interface show -fields dns-zone

#### Examples of displaying load balancing zones for LIFs

The following command displays the details of all LIFs in the load balancing zone storage.company.com for SVM vs0:

```
net int show -vserver vs0 -dns-zone storage.company.com
```

Vserver	Logical Interface	Status Admin/Oper	Network Address/Mask	Current Node	Current Port	Is Home
vs0	lif3	up/up	10.98.226.225/20	ndeux-11	e0c	true
	lif4	up/up	10.98.224.23/20	ndeux-21	e0c	true
	lif5	up/up	10.98.239.65/20	ndeux-11	e0c	true
	lif6	up/up	10.98.239.66/20	ndeux-11	e0c	true
	lif7	up/up	10.98.239.63/20	ndeux-21	e0c	true
	lif8	up/up	10.98.239.64/20	ndeux-21	e0c	true

The following command displays the DNS zone details of the LIF data3:

```
network interface show -lif data3 -fields dns-zone
```

Vserver	lif	dns-zone
vs0	data3	storage.company.com

The following command displays the list of all LIFs in the cluster and their corresponding DNS zones:



```
network interface show -fields dns-zone
Vserver    lif          dns-zone
-----
cluster    cluster_mgmt none
ndeux-21   clus1        none
ndeux-21   clus2        none
ndeux-21   mgmt1        none
vs0        data1        storage.company.com
vs0        data2        storage.company.com
```

## Display cluster connections

You can display all the active connections in the cluster or a count of active connections on the node by client, logical interface, protocol, or service. You can also display all the listening connections in the cluster.

### Display active connections by client (cluster administrators only)

You can view the active connections by client to verify the node that a specific client is using and to view possible imbalances between client counts per node.

### About this task

The count of active connections by client is useful in the following scenarios:

- Finding a busy or overloaded node.
- Determining why a particular client's access to a volume is slow.

You can view details about the node that the client is accessing and then compare it with the node on which the volume resides. If accessing the volume requires traversing the cluster network, clients might experience decreased performance because of the remote access to the volume on an oversubscribed remote node.

- Verifying that all nodes are being used equally for data access.
- Finding clients that have an unexpectedly high number of connections.
- Verifying whether certain clients have connections to a node.

### Step

Display a count of the active connections by client on a node by using the `network connections active show-clients` command.

For more information about this command, see the man page: [ONTAP 9 commands](#)

```

network connections active show-clients
Node      Vserver Name      Client IP Address      Count
-----
node0     vs0                192.0.2.253            1
          vs0                192.0.2.252            2
          Cluster        192.10.2.124           5
node1     vs0                192.0.2.250            1
          vs0                192.0.2.252            3
          Cluster        192.10.2.123           4
node2     vs1                customer.example.com    1
          vs1                192.0.2.245            3
          Cluster        192.10.2.122           4
node3     vs1                customer.example.org    1
          vs1                customer.example.net    3
          Cluster        192.10.2.121           4

```

### Display active connections by protocol (cluster administrators only)

You can display a count of the active connections by protocol (TCP or UDP) on a node to compare the usage of protocols within the cluster.

#### About this task

The count of active connections by protocol is useful in the following scenarios:

- Finding the UDP clients that are losing their connection.

If a node is near its connection limit, UDP clients are the first to be dropped.

- Verifying that no other protocols are being used.

#### Step

Display a count of the active connections by protocol on a node by using the `network connections active show-protocols` command.

For more information about this command, see the man page.

```

network connections active show-protocols
Node      Vserver Name  Protocol  Count
-----
node0
      vs0      UDP      19
      Cluster  TCP      11
node1
      vs0      UDP      17
      Cluster  TCP      8
node2
      vs1      UDP      14
      Cluster  TCP      10
node3
      vs1      UDP      18
      Cluster  TCP      4

```

#### Display active connections by service (cluster administrators only)

You can display a count of the active connections by service type (for example, by NFS, SMB, mount, and so on) for each node in a cluster. This is useful to compare the usage of services within the cluster, which helps to determine the primary workload of a node.

#### About this task

The count of active connections by service is useful in the following scenarios:

- Verifying that all nodes are being used for the appropriate services and that the load balancing for that service is working.
- Verifying that no other services are being used. Display a count of the active connections by service on a node by using the `network connections active show-services` command.

For more information about this command, see the man page: [ONTAP 9 commands](#)

```

network connections active show-services
Node      Vserver Name      Service      Count
-----
node0
    vs0          mount          3
    vs0          nfs            14
    vs0          nlm_v4        4
    vs0          cifs_srv      3
    vs0          port_map      18
    vs0          rclopcp       27
    Cluster      ctlopcp       60
node1
    vs0          cifs_srv      3
    vs0          rclopcp       16
    Cluster      ctlopcp       60
node2
    vs1          rclopcp       13
    Cluster      ctlopcp       60
node3
    vs1          cifs_srv      1
    vs1          rclopcp       17
    Cluster      ctlopcp       60

```

### Display active connections by LIF on a node and SVM

You can display a count of active connections for each LIF, by node and storage virtual machine (SVM), to view connection imbalances between LIFs within the cluster.

#### About this task

The count of active connections by LIF is useful in the following scenarios:

- Finding an overloaded LIF by comparing the number of connections on each LIF.
- Verifying that DNS load balancing is working for all data LIFs.
- Comparing the number of connections to the various SVMs to find the SVMs that are used the most.

#### Step

Display a count of active connections for each LIF by SVM and node by using the `network connections active show-lifs` command.

For more information about this command, see the man page: [ONTAP 9 commands](#)

```

network connections active show-lifs
Node      Vserver Name  Interface Name  Count
-----
node0
    vs0        datalif1        3
    Cluster    node0_clus_1    6
    Cluster    node0_clus_2    5
node1
    vs0        datalif2        3
    Cluster    node1_clus_1    3
    Cluster    node1_clus_2    5
node2
    vs1        datalif2        1
    Cluster    node2_clus_1    5
    Cluster    node2_clus_2    3
node3
    vs1        datalif1        1
    Cluster    node3_clus_1    2
    Cluster    node3_clus_2    2

```

### Display active connections in a cluster

You can display information about the active connections in a cluster to view the LIF, port, remote host, service, storage virtual machines (SVMs), and protocol used by individual connections.

#### About this task

Viewing the active connections in a cluster is useful in the following scenarios:

- Verifying that individual clients are using the correct protocol and service on the correct node.
- If a client is having trouble accessing data using a certain combination of node, protocol, and service, you can use this command to find a similar client for configuration or packet trace comparison.

#### Step

Display the active connections in a cluster by using the `network connections active show` command.

For more information about this command, see the man page: [ONTAP 9 commands](#)

The following command shows the active connections on the node node1:

```

network connections active show -node node1
Vserver   Interface           Remote
Name      Name:Local Port      Host:Port           Protocol/Service
-----
Node: node1
Cluster   node1_clus_1:50297  192.0.2.253:7700    TCP/ctlopcp
Cluster   node1_clus_1:13387  192.0.2.253:7700    TCP/ctlopcp
Cluster   node1_clus_1:8340   192.0.2.252:7700    TCP/ctlopcp
Cluster   node1_clus_1:42766  192.0.2.252:7700    TCP/ctlopcp
Cluster   node1_clus_1:36119  192.0.2.250:7700    TCP/ctlopcp
vs1       data1:111           host1.aa.com:10741   UDP/port-map
vs3       data2:111           host1.aa.com:10741   UDP/port-map
vs1       data1:111           host1.aa.com:12017   UDP/port-map
vs3       data2:111           host1.aa.com:12017   UDP/port-map

```

The following command shows the active connections on SVM vs1:

```

network connections active show -vserver vs1
Vserver   Interface           Remote
Name      Name:Local Port      Host:Port           Protocol/Service
-----
Node: node1
vs1       data1:111           host1.aa.com:10741   UDP/port-map
vs1       data1:111           host1.aa.com:12017   UDP/port-map

```

### Display listening connections in a cluster

You can display information about the listening connections in a cluster to view the LIFs and ports that are accepting connections for a given protocol and service.

#### About this task

Viewing the listening connections in a cluster is useful in the following scenarios:

- Verifying that the desired protocol or service is listening on a LIF if client connections to that LIF fail consistently.
- Verifying that a UDP/rclopcp listener is opened at each cluster LIF if remote data access to a volume on one node through a LIF on another node fails.
- Verifying that a UDP/rclopcp listener is opened at each cluster LIF if SnapMirror transfers between two nodes in the same cluster fail.
- Verifying that a TCP/ctlopcp listener is opened at each intercluster LIF if SnapMirror transfers between two nodes in different clusters fail.

#### Step

Display the listening connections per node by using the `network connections listening show` command.

```

network connections listening show
Vserver Name      Interface Name:Local Port      Protocol/Service
-----
Node: node0
Cluster           node0_clus_1:7700             TCP/ctlopcp
vs1               data1:4049                   UDP/unknown
vs1               data1:111                    TCP/port-map
vs1               data1:111                    UDP/port-map
vs1               data1:4046                   TCP/sm
vs1               data1:4046                   UDP/sm
vs1               data1:4045                   TCP/nlm-v4
vs1               data1:4045                   UDP/nlm-v4
vs1               data1:2049                   TCP/nfs
vs1               data1:2049                   UDP/nfs
vs1               data1:635                    TCP/mount
vs1               data1:635                    UDP/mount
Cluster           node0_clus_2:7700             TCP/ctlopcp

```

## Commands for diagnosing network problems

You can diagnose problems on your network by using commands such as `ping`, `traceroute`, `ndp`, and `tcpdump`. You can also use commands such as `ping6` and `traceroute6` to diagnose IPv6 problems.

If you want to...	Enter this command...
Test whether the node can reach other hosts on your network	<code>network ping</code>
Test whether the node can reach other hosts on your IPv6 network	<code>network ping6</code>
Trace the route that the IPv4 packets take to a network node	<code>network traceroute</code>
Trace the route that the IPv6 packets take to a network node	<code>network traceroute6</code>
Manage the Neighbor Discovery Protocol (NDP)	<code>network ndp</code>
Display statistics about packets that are received and sent on a specified network interface or on all network interfaces	<code>run -node node_name ifstat</code> <b>Note:</b> This command is available from the nodeshell.
Display information about neighboring devices that are discovered from each node and port in the cluster, including the remote device type and device platform	<code>network device-discovery show</code>
View the CDP neighbors of the node (ONTAP supports only CDPv1 advertisements)	<code>run -node node_name cdpd show-neighbors</code> <b>Note:</b> This command is available from the nodeshell.

If you want to...	Enter this command...
Trace the packets that are sent and received in the network	network tcpdump start -node node-name - port port_name <b>Note:</b> This command is available from the nodeshell.
Measure latency and throughput between intercluster or intracluster nodes	network test-path -source-node source_nodename
local -destination- cluster destination_clustername - destination-node destination_nodename - session-type Default	AsyncMirrorLocal
AsyncMirrorRemote	SyncMirrorRemote

For more information about these commands, see the appropriate man pages: [ONTAP 9 commands](#)

## Display network connectivity with neighbor discovery protocols

In a data center, you can use neighbor discovery protocols to view network connectivity between a pair of physical or virtual systems and their network interfaces. ONTAP supports two neighbor discovery protocols: Cisco Discovery Protocol (CDP) and Link Layer Discovery Protocol (LLDP).

### About this task

Neighbor discovery protocols enable you to automatically discover and view information about directly connected protocol-enabled devices in a network. Each device advertises identification, capabilities, and connectivity information. This information is transmitted in Ethernet frames to a multicast MAC address and is received by all neighboring protocol-enabled devices.

For two devices to become neighbors, each must have a protocol enabled and correctly configured. Discovery protocol functionality is limited to directly connected networks. Neighbors can include protocol-enabled devices such as switches, routers, bridges, and so on. ONTAP supports two neighbor discovery protocols, which can be used individually or together.

### Cisco Discovery Protocol (CDP)

CDP is a proprietary link layer protocol developed by Cisco Systems. It is enabled by default in ONTAP for cluster ports, but must be enabled explicitly for data ports.

### Link Layer Discovery Protocol (LLDP)

LLDP is a vendor-neutral protocol specified in the standards document IEEE 802.1AB. It must be enabled explicitly for all ports.

### Use CDP to detect network connectivity

Using CDP to detect network connectivity consists of reviewing deployment considerations, enabling it on data ports, viewing neighbor devices, and adjusting CDP configuration values as needed. CDP is enabled by default on cluster ports.

CDP must also be enabled on any switches and routers before information about neighbor devices can be displayed.

CDP is also used by the cluster switch health monitor to automatically discover your cluster and management



network switches.

## Related information

[System administration](#)

## Considerations for using CDP

By default, CDP-compliant devices send CDPv2 advertisements. CDP-compliant devices send CDPv1 advertisements only when they receive CDPv1 advertisements. ONTAP supports only CDPv1. Therefore, when an ONTAP node sends CDPv1 advertisements, CDP-compliant neighboring devices send back CDPv1 advertisements.

You should consider the following information before enabling CDP on a node:

- CDP is always enabled on cluster ports.
- CDP is disabled, by default, on all non-cluster ports.
- CDP is supported for all ports.
- CDP advertisements are sent and received by ports that are in the up state.
- CDP must be enabled on both the transmitting and receiving devices for sending and receiving CDP advertisements.
- CDP advertisements are sent at regular intervals, and you can configure the time interval.
- When IP addresses are changed for a LIF, the node sends the updated information in the next CDP advertisement.



Sometimes when LIFs are changed on the node, the CDP information is not updated at the receiving device side (for example, a switch). If you encounter such a problem, you should configure the network interface of the node to the down status and then to the up status.

- Only IPv4 addresses are advertised in CDP advertisements.
- For physical network ports with VLANs, all of the LIFs configured on the VLANs on that port are advertised.
- For physical ports that are part of an interface group, all of the IP addresses configured on that interface group are advertised on each physical port.
- For an interface group that hosts VLANs, all of the LIFs configured on the interface group and the VLANs are advertised on each of the network ports.
- For packets with MTU size equal to or greater than 1,500 bytes, only the number of LIFs that can fit into a 1500 MTU-sized packet is advertised.

## Enable or disable CDP

To discover and send advertisements to CDP-compliant neighboring devices, CDP must be enabled on each node of the cluster. By default, CDP is enabled on all cluster ports of a node and disabled on all non-cluster ports of a node.

### About this task

The `cdpd.enable` option controls whether CDP is enabled or disabled on the ports of a node:

- on enables CDP on non-cluster ports.
- off disables CDP on non-cluster ports; you cannot disable CDP on cluster ports.

When CDP is disabled on a port that is connected to a CDP-compliant device, network traffic might not be optimized.

**Steps**

- 1. Display the current CDP setting for a node, or for all nodes in a cluster:

To view the CDP setting of...	Enter
A node	run - node <node_name> options cdpd.enable
All nodes in a cluster	options cdpd.enable

- 2. Enable or disable CDP on all ports of a node, or on all ports of all nodes in a cluster:

To enable or disable CDP on...	Enter...
A node	run -node node_name options cdpd.enable {on or off}
All nodes in a cluster	options cdpd.enable {on or off}

**View CDP neighbor information**

You can view information about the neighboring devices that are connected to each port of the nodes of your cluster, provided that the port is connected to a CDP-compliant device. You can use the `network device-discovery show -protocol cdp` command to view neighbor information.

**About this task**

Because CDP is always enabled for cluster ports, CDP neighbor information is always displayed for those ports. CDP must be enabled on non-cluster ports for neighbor information to appear for those ports.

**Step**

Display information about all CDP-compliant devices that are connected to the ports on a node in the cluster:

```
network device-discovery show -node node -protocol cdp
```

The following command shows the neighbors that are connected to the ports on node cluster-1\_01:

```

network device-discovery show -node sti2650-212 -protocol cdp
Node/          Local  Discovered
Protocol      Port   Device (LLDP: ChassisID)  Interface      Platform
-----
sti2650-212/cdp
              e0M    RTP-LF810-510K37.gdl.eng.netapp.com(SAL1942R8JS)
                                Ethernet1/14    N9K-
C93120TX
              e0a    CS:RTP-CS01-510K35        0/8            CN1610
              e0b    CS:RTP-CS01-510K36        0/8            CN1610
              e0c    RTP-LF350-510K34.gdl.eng.netapp.com(FDO21521S76)
                                Ethernet1/21    N9K-
C93180YC-FX
              e0d    RTP-LF349-510K33.gdl.eng.netapp.com(FDO21521S4T)
                                Ethernet1/22    N9K-
C93180YC-FX
              e0e    RTP-LF349-510K33.gdl.eng.netapp.com(FDO21521S4T)
                                Ethernet1/23    N9K-
C93180YC-FX
              e0f    RTP-LF349-510K33.gdl.eng.netapp.com(FDO21521S4T)
                                Ethernet1/24    N9K-
C93180YC-FX

```

The output lists the Cisco devices that are connected to each port of the specified node.

### Configure the hold time for CDP messages

Hold time is the period of time for which CDP advertisements are stored in cache in neighboring CDP-compliant devices. Hold time is advertised in each CDPv1 packet and is updated whenever a CDPv1 packet is received by a node.

- The value of the `cdpd.holdtime` option should be set to the same value on both nodes of an HA pair.
- The default hold time value is 180 seconds, but you can enter values ranging from 10 seconds to 255 seconds.
- If an IP address is removed before the hold time expires, the CDP information is cached until the hold time expires.

### Steps

1. Display the current CDP hold time for a node, or for all nodes in a cluster:

To view the hold time of...	Enter...
A node	<code>run -node node_name options cdpd.holdtime</code>
All nodes in a cluster	<code>options cdpd.holdtime</code>

2. Configure the CDP hold time on all ports of a node, or on all ports of all nodes in a cluster:

To set the hold time on...	Enter...
A node	<code>run -node node_name options cdpd.holdtime holdtime</code>
All nodes in a cluster	<code>op`tions cdpd.holdtime holdtime`</code>

### Set the interval for sending CDP advertisements

CDP advertisements are sent to CDP neighbors at periodic intervals. You can increase or decrease the interval for sending CDP advertisements depending on network traffic and changes in the network topology.

- The value of the `cdpd.interval` option should be set to the same value on both nodes of an HA pair.
- The default interval is 60 seconds, but you can enter a value from 5 seconds to 900 seconds.

#### Steps

1. Display the current CDP advertisement time interval for a node, or for all nodes in a cluster:

To view the interval for...	Enter...
A node	<code>run -node node_name options cdpd.interval</code>
All nodes in a cluster	<code>options cdpd.interval</code>

2. Configure the interval for sending CDP advertisements for all ports of a node, or for all ports of all nodes in a cluster:

To set the interval for...	Enter...
A node	<code>run -node node_name options cdpd.interval interval</code>
All nodes in a cluster	<code>options cdpd.interval interval</code>

### View or clear CDP statistics

You can view the CDP statistics for the cluster and non-cluster ports on each node to detect potential network connectivity issues. CDP statistics are cumulative from the time they were last cleared.

#### About this task

Because CDP is always enabled for cluster ports, CDP statistics are always displayed for traffic on those ports. CDP must be enabled on non-cluster ports for statistics to appear for those ports.

#### Step

Display or clear the current CDP statistics for all ports on a node:

If you want to...	Enter...
View the CDP statistics	<code>run -node node_name cdpd show-stats</code>

If you want to...	Enter...
Clear the CDP statistics	<code>run -node node_name cdpd zero-stats</code>

### Example of showing and clearing statistics

The following command shows the CDP statistics before they are cleared. The output displays the total number of packets that have been sent and received since the last time the statistics were cleared.

```
run -node nodel cdpd show-stats
```

#### RECEIVE

Packets:	9116		Csum Errors:	0		Unsupported Vers:	4561
Invalid length:	0		Malformed:	0		Mem alloc fails:	0
Missing TLVs:	0		Cache overflow:	0		Other errors:	0

#### TRANSMIT

Packets:	4557		Xmit fails:	0		No hostname:	0
Packet truncated:	0		Mem alloc fails:	0		Other errors:	0

#### OTHER

Init failures:	0
----------------	---

The following command clears the CDP statistics:

```
run -node nodel cdpd zero-stats
```

```
run -node nodel cdpd show-stats
```

#### RECEIVE

Packets:	0		Csum Errors:	0		Unsupported Vers:	0
Invalid length:	0		Malformed:	0		Mem alloc fails:	0
Missing TLVs:	0		Cache overflow:	0		Other errors:	0

#### TRANSMIT

Packets:	0		Xmit fails:	0		No hostname:	0
Packet truncated:	0		Mem alloc fails:	0		Other errors:	0

#### OTHER

Init failures:	0
----------------	---

After the statistics are cleared, they begin to accumulate after the next CDP advertisement is sent or received.

## Use LLDP to detect network connectivity

Using LLDP to detect network connectivity consists of reviewing deployment considerations, enabling it on all ports, viewing neighbor devices, and adjusting LLDP configuration values as needed.

LLDP must also be enabled on any switches and routers before information about neighbor devices can be displayed.

ONTAP currently reports the following type-length-value structures (TLVs):

- Chassis ID
- Port ID
- Time-To-Live (TTL)
- System name

The system name TLV is not sent on CNA devices.

Certain converged network adapters (CNAs), such as the X1143 adapter and the UTA2 onboard ports, contain offload support for LLDP:

- LLDP offload is used for Data Center Bridging (DCB).
- Displayed information might differ between the cluster and the switch.

For example, the Chassis ID and Port ID data displayed by the switch might be different for CNA and non-CNA ports, but the data displayed by the cluster is consistent for these port types.



The LLDP specification defines access to the collected information through an SNMP MIB. However, ONTAP does not currently support the LLDP MIB.

## Enable or disable LLDP

To discover and send advertisements to LLDP-compliant neighboring devices, LLDP must be enabled on each node of the cluster. Starting with ONTAP 9.7, LLDP is enabled on all ports of a node by default.

### About this task

The `lldp.enable` option controls whether LLDP is enabled or disabled on the ports of a node:

- `on` enables LLDP on all ports.
- `off` disables LLDP on all ports.

### Steps

1. Display the current LLDP setting for a node, or for all nodes in a cluster:
  - Single node: `run -node node_name options lldp.enable`
  - All nodes: `options lldp.enable`
2. Enable or disable LLDP on all ports of a node, or on all ports of all nodes in a cluster:

To enable or disable LLDP on...	Enter...
A node	<code>run -node node_name options lldp.enable {on off}</code>
All nodes in a cluster	<code>options lldp.enable {on off}</code>

- Single node:

```
run -node node_name options lldp.enable {on|off}
```

- All nodes:

```
options lldp.enable {on|off}
```

## View LLDP neighbor information

You can view information about the neighboring devices that are connected to each port of the nodes of your cluster, provided that the port is connected to an LLDP-compliant device. You use the `network device-discovery show` command to view neighbor information.

### Step

Display information about all LLDP-compliant devices that are connected to the ports on a node in the cluster:

```
network device-discovery show -node node -protocol lldp
```

The following command shows the neighbors that are connected to the ports on node `cluster-1_01`. The output lists the LLDP-enabled devices that are connected to each port of the specified node. If the `-protocol` option is omitted, the output also lists CDP-enabled devices.

```
network device-discovery show -node cluster-1_01 -protocol lldp
Node/      Local  Discovered
Protocol   Port   Device                               Interface      Platform
-----
cluster-1_01/lldp
          e2a    0013.c31e.5c60                       GigabitEthernet1/36
          e2b    0013.c31e.5c60                       GigabitEthernet1/35
          e2c    0013.c31e.5c60                       GigabitEthernet1/34
          e2d    0013.c31e.5c60                       GigabitEthernet1/33
```

## Adjust the interval for transmitting LLDP advertisements

LLDP advertisements are sent to LLDP neighbors at periodic intervals. You can increase or decrease the interval for sending LLDP advertisements depending on network traffic and changes in the network topology.

### About this task

The default interval recommended by IEEE is 30 seconds, but you can enter a value from 5 seconds to 300 seconds.

### Steps

1. Display the current LLDP advertisement time interval for a node, or for all nodes in a cluster:

- Single node:

```
run -node <node_name> options lldp.xmit.interval
```

- All nodes:

```
options lldp.xmit.interval
```

2. Adjust the interval for sending LLDP advertisements for all ports of a node, or for all ports of all nodes in a cluster:

- Single node:

```
run -node <node_name> options lldp.xmit.interval <interval>
```

- All nodes:

```
options lldp.xmit.interval <interval>
```

## Adjust the time-to-live value for LLDP advertisements

Time-To-Live (TTL) is the period of time for which LLDP advertisements are stored in cache in neighboring LLDP-compliant devices. TTL is advertised in each LLDP packet and is updated whenever an LLDP packet is received by a node. TTL can be modified in outgoing LLDP frames.

### About this task

- TTL is a calculated value, the product of the transmit interval (`lldp.xmit.interval`) and the hold multiplier (`lldp.xmit.hold`) plus one.
- The default hold multiplier value is 4, but you can enter values ranging from 1 to 100.
- The default TTL is therefore 121 seconds, as recommended by IEEE, but by adjusting the transmit interval and hold multiplier values, you can specify a value for outgoing frames from 6 seconds to 30001 seconds.
- If an IP address is removed before the TTL expires, the LLDP information is cached until the TTL expires.

### Steps



1. Display the current hold multiplier value for a node, or for all nodes in a cluster:

- Single node:

```
run -node <node_name> options lldp.xmit.hold
```

- All nodes:

```
options lldp.xmit.hold
```

2. Adjust the hold multiplier value on all ports of a node, or on all ports of all nodes in a cluster:

- Single node:

```
run -node <node_name> options lldp.xmit.hold <hold_value>
```

- All nodes:

```
options lldp.xmit.hold <hold_value>
```

## Get more information

You can get help and find more information through various resources, documentation, and forums.

- [Documentation](#) – Release Notes and Guides for this release and previous releases.
- [NetApp TechCommTV](#) – NetApp videos.
- [NetApp resources](#) – Technical Reports and Knowledgebase Articles.
- [NetApp Community](#) – NetApp product and solutions forums.

## Copyright Information

Copyright © 2021 NetApp, Inc. All rights reserved. Printed in the U.S. No part of this document covered by copyright may be reproduced in any form or by any means-graphic, electronic, or mechanical, including photocopying, recording, taping, or storage in an electronic retrieval system-without prior written permission of the copyright owner.

Software derived from copyrighted NetApp material is subject to the following license and disclaimer:

THIS SOFTWARE IS PROVIDED BY NETAPP "AS IS" AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE HEREBY DISCLAIMED. IN NO EVENT SHALL NETAPP BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

NetApp reserves the right to change any products described herein at any time, and without notice. NetApp assumes no responsibility or liability arising from the use of products described herein, except as expressly agreed to in writing by NetApp. The use or purchase of this product does not convey a license under any patent rights, trademark rights, or any other intellectual property rights of NetApp.

The product described in this manual may be protected by one or more U.S. patents, foreign patents, or pending applications.

RESTRICTED RIGHTS LEGEND: Use, duplication, or disclosure by the government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.277-7103 (October 1988) and FAR 52-227-19 (June 1987).

## Trademark Information

NETAPP, the NETAPP logo, and the marks listed at <http://www.netapp.com/TM> are trademarks of NetApp, Inc. Other company and product names may be trademarks of their respective owners.