

## Quick Setup Guide

### How to start:

- 1) Connect scanner with your device via USB cable.
  - 2) Setup keyboard language: If you use US keyboard, it's plug and play. If you use other type of keyboard, scan command barcode of the keyboard from this manual. For more information please refer to "keyboard language".
  - 3) Locate cursor on place where you want the scanner to output the data.
- Once you finished above steps you scan start to scan.

### Programming Code

NetumScan barcode scanners are factory programmed for the most common terminal and communications settings. If you need to change these

settings, programming is accomplished by scanning the bar codes in this guide. An asterisk (\*) next to an option indicates the default setting.

### Important Notes:

This scanner has big scanning range, make sure you cover the codes closed to the one that you want to scan so they will not be scanned by accident.

- 1 -

## USB Interface (Optional)

### USB HID-KBW

By default, the scanner is in HID mode as a Keyboard device. It works on a Plug and Play basis and no driver is required.



\*USB KBW

### USB Serial

If you connect the scanner to the Host via a USB connection, the USB COM Port Emulation feature allows the host to receive data in the way as a serial port does.

If you are using a Microsoft®Windows®PC, you need to download the driver.

Driver is available for downloading from our official website: [www.netumscan.com](http://www.netumscan.com).



USB Serial

- 2 -

## Keyboard Languages

Follow below instructions to configure keyboard language before you using it. For example If you use French Keyboard, scan command barcode of "French keyboard". If you use a US keyboard you can ignore this step.



\*USA



JAPAN



FRANCE




GERMANY



ITALY

- 3 -

## 1.Product Introduction

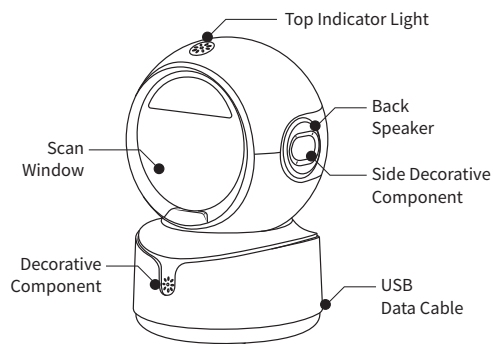

## 2.Product List

2D Scanning Platform \*1, User Manual \*1

## 3.Instructions for Use

1. Connect the scanning platform to the device's USB interface using the USB data cable; the product will produce a startup prompt sound, allowing for scanning and data transmission.
2. The product is set to default self-sensing scanning. Barcodes passing through the light scanning window can be read and data uploaded.

- 4 -

## 4.System Settings

In the event of an unknown error on the scanning platform, a factory reset can be performed to reset the scanning platform.



Factory Reset



Check Version Number

## 5.QR Code URL Settings

Block URLs starting with "http://," "https://," or "www."



Enable URL Code



Disable URL Code

- 5 -

## 6.End Character Settings

The end character is added in a specific format after decoding data: Decoded Data + End Character. (Default: Enter)



No End Character



Enter (CR)



Tab (TAB)



Enter + New Line (CRLF)

- 6 -

## 7.Case Conversion

Output results can be configured to be all uppercase, all lowercase, or inverted case.



Normal Output



All Uppercase



All Lowercase



Inverted Case

- 7 -

## 10.Chinese Settings

GBK: Supports Chinese input in Notepad and Excel.

UTF8: Supports Chinese input in Word and QQ.

Default: GBK Enabled



Original Types



GBK



UTF8

- 10 -

## 8.Volume Settings

Adjust the beeper volume based on the application environment and personal preference by reading the following setup codes. Default: High Volume



Mute



Low Volume



Medium Volume



High Volume

- 8 -

## FAQ

• Question:Is there any barcodes for apply or remove suffix ?

Yes, you may go to our official website" [netumscan.com](http://netumscan.com)" to download the complete manual and refer to the part of " prefix and suffix" or turn to customer service for help.

• Question:How to solve the messy code problem encountered while using other foreign languages?

Solution:The default keyboard language is English. If you use other types of keyboard please refer to "Keyboard language".

• Problem: Some barcodes cannot be read.

Solution:

a. Dirty or unclear barcodes might not be read.

b. The possible reason is that setting for some barcode types are not commonly used is off by default. You need to activate a specific barcode type to get it to work. Please contact us for help.

c. Clean scanner' s window

### Note:

Please do not hesitate to contact us if you need any other configurations.

- 11 -

## 9.Same Code Delay Settings

To prevent consecutive readings of the same barcode during scanning, a duration can be set before allowing the recognition of the same barcode.



0ms



500ms



3000ms



Disable Same Code Scanning

- 9 -

### Contact Information:

Cell/Whatsapp/Wechat: +86-183-1839-1742

Email: [support@netumscan.net](mailto:support@netumscan.net)

Addr: Room 301, 6th Floor and full 3rd Floor, Building 1, No.51

Xiangshan Avenue,Ningxi Street, Zengcheng District, Guangzhou City, Guangdong Province, China/511356

Name:Apex CE Specialists GmbH

Add: Habichtweg 1 41468 Neuss Germany

Name:APEX CE SPECIALISTS LIMITED

Add: 89 Princess Street,Manchester,M1 4HT,UK

- 12 -