




Wire and Wire , Ground Points in Engine Compartment <2AZ-FE

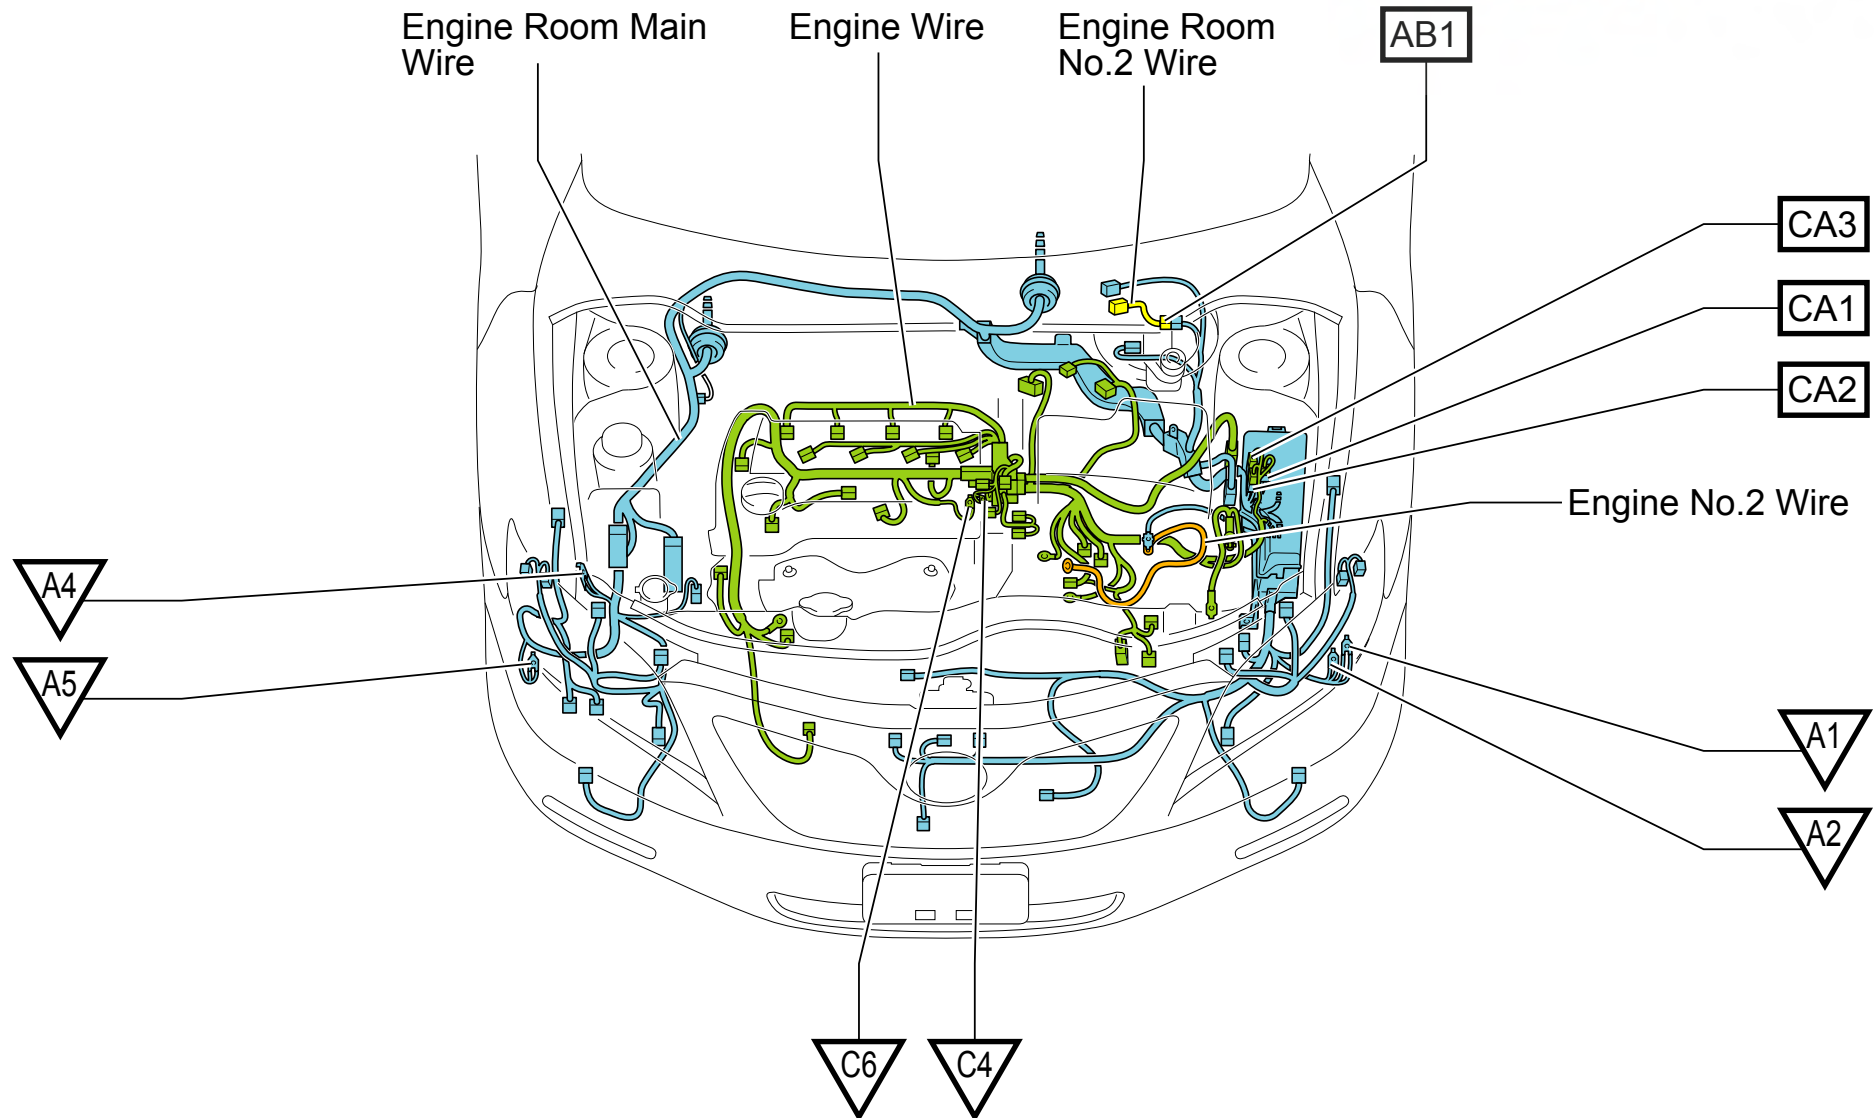

Wire and Wire , Ground Points in Engine Compartment <2AZ-FE

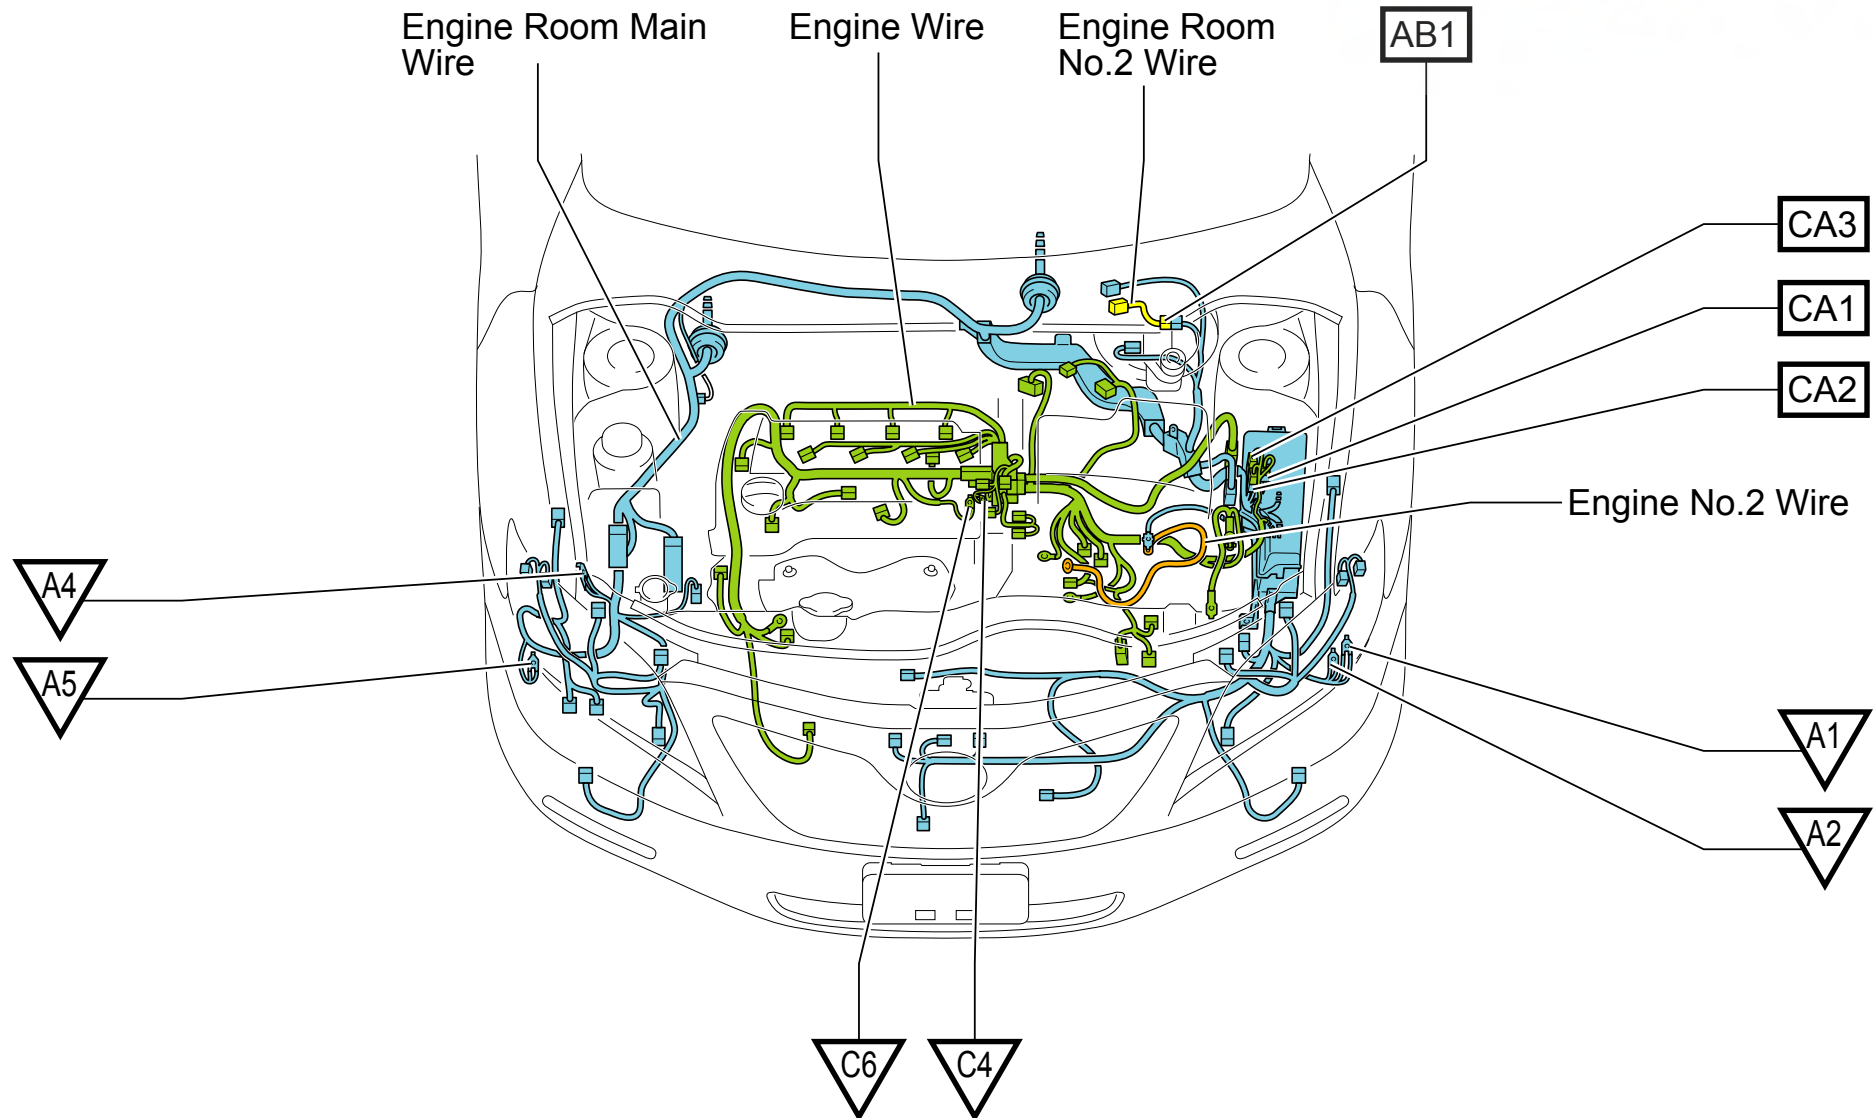

d Wire , Ground Points in Engine Compartment <2A2

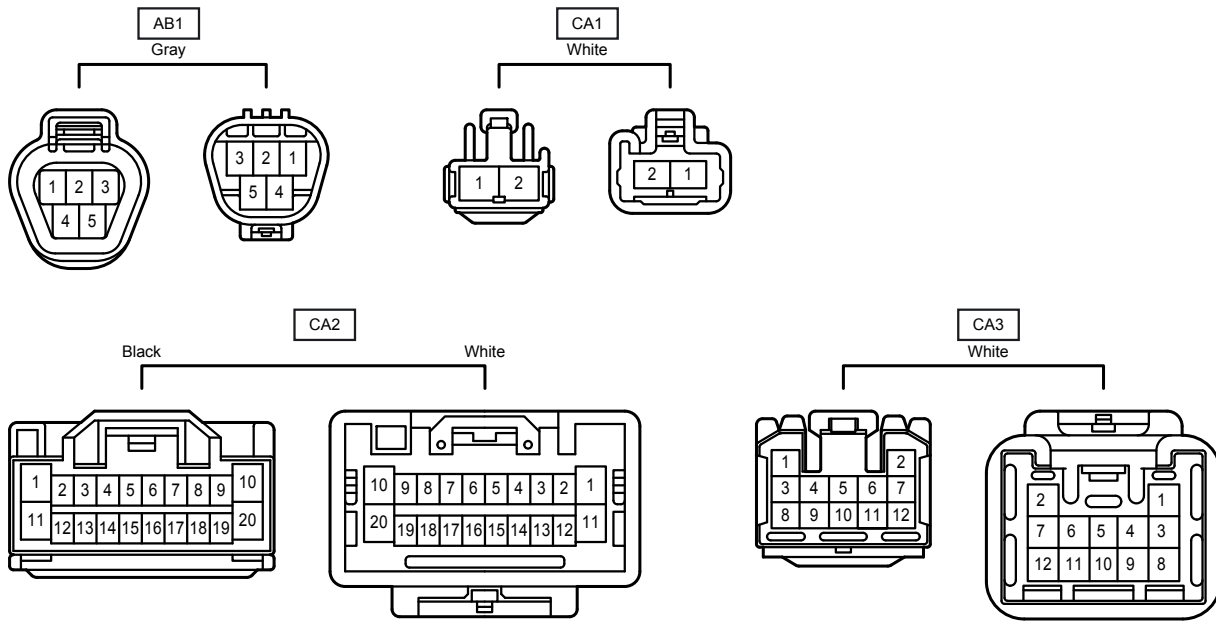

d Wire , Ground Points in Engine Compartment <2A2

