

H_BRIDGE
DRV8432
VER: 1.1

REMOVE P7 IF PVDD > 12V

D2 PVDD
D1 GVDD

GND
GND
OTW
FAULT
PWM_A
RESET_AB
PWM_B
PWM_C
RESET_CD
PWM_D

D3 FAULT
D4 OTW

FAULT = 1: OVER TEMPERATURE
OTW = 1: OVER CURRENT

PAY IT FORWARD