

Pocket Operator PO-24 Office

 
Universal functions



Toggle write mode.




Play start/stop.




Select sound.



 
Switch between standard tempos.




Adjust swing.

 

Adjust tempo.

 

Adjust master volume.

 


Select pattern to edit or play.



Clear current pattern.



 Paste current pattern to slot and switch to it.




Chain patterns (and select first).

In write mode (with or without playing)


Lights 1-16 show active steps for selected sound.



 Activate/Deactive step with selected sound.



 Change and write sound parameters for that step.




Retrigger step. Repeated presses of bmp cycle through 2, 3, 4, 6, 8, 1 times.


When playing (regardless of write mode)



 
Change and write sound parameters over time.



Toggle solo for given sound(s).

 

Punch in effects over time.

 

Clear effects over time.

When playing (in write mode)

Screen shows selected sound



Toggle step to play selected sound.


When playing (write mode off)

Lights 1-16 show notes being played, and current step.

Screen shows current pattern.




 Live play sound.



Live record given sound.

 When not playing (regardless of write mode)



Activate effect for live playing (some effects only).



Deactivate effect for live playing.