


Pocket Operator PO-24 Office

Universal functions

 Toggle write mode.

 Play start/stop.

 
 Select sound.

 Switch between standard tempos.


 Adjust swing.

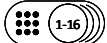
 Adjust tempo.

 Adjust master volume.

 Select pattern to edit or play.


 Clear current pattern.

 
 Paste current pattern to slot and switch to it.

 
 Chain patterns (and select first).

In write mode (playing or not)


Lights 1-16 show active steps for selected sound.

 Toggle step to play selected sound.

 Change and write sound parameters for that step.

 
 Retrigger step. Repeated presses of bmp cycle through 2, 3, 4, 6, 8, 1 times.

 
When not in write mode (playing or not)

 Change parameters of last sound played

When playing (write mode on or off)

 Change and write sound parameters over time.

 Toggle solo for given sound(s).

 Punch in effects over time.

 Clear effects over time.

When playing (in write mode)

Screen shows selected sound

 
When playing (write mode off)

*Lights 1-16 show notes being played, and current step.
Screen shows current pattern.*

 Live play sound.

 Live record given sound.

When not playing (write mode on or off)

 Activate effect for live playing (some effects only).

 Deactivate effect for live playing.

Effects

Aliasing	OD	Rep 4	Rep 2
LP filter	LP sweep	HP filter	HP sweep
Dist lo	Dist hi	Retrig	Retrig >>
Glitch	Glitch >>	Blinds	Noise

Default sound parameters (A, B)

70, 40	80, 40	90, 50	60, 10
50, 0	30, 30	60, 70	50, 70
45, 50	60, 60	70, 80	55, 80
60, 80	55, 80	65, 30	10, 30