

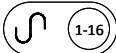

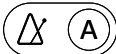
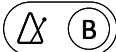
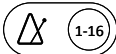
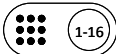
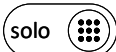
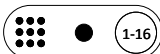
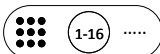



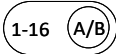
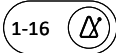
Pocket Operator PO-24 Office

Universal functions


-  Toggle write mode.
-  Play start/stop.
-  Select sound.
-  Switch between standard tempos.
-  Adjust swing.
-  Adjust tempo.
-  Adjust master volume.
-  Select pattern to edit or play.
-  Clear current pattern.
-  Paste current pattern to slot and switch to it.
-  Chain patterns (and select first).

In write mode (with or without playing)

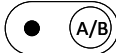
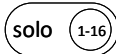
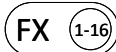
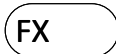
Lights 1-16 show active steps for selected sound.

-  Activate/Deactive step with selected sound.
-  Change and write sound parameters for that step.
-  Retrigger step. Repeated presses of bmp cycle through 2, 3, 4, 6, 8, 1 times.

When not in write mode (regardless of playing)

 
-  Change parameters of last sound played

When playing (regardless of write mode)

-  Change and write sound parameters over time.
-  Toggle solo for given sound(s).
-  Punch in effects over time.
-  Clear effects over time.


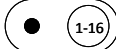
When playing (in write mode)

Screen shows selected sound

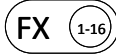

-  Toggle step to play selected sound.

When playing (write mode off)

*Lights 1-16 show notes being played, and current step.
Screen shows current pattern.*

-  Live play sound.
-  Live record given sound.

When not playing (regardless of write mode)

-  Activate effect for live playing (some effects only).
-  Deactivate effect for live playing.