

<b>Document Title</b>	Specification of CAN State Manager
<b>Document Owner</b>	AUTOSAR
<b>Document Responsibility</b>	AUTOSAR
<b>Document Identification No</b>	253
<b>Document Classification</b>	Standard

<b>Document Version</b>	2.2.0
<b>Document Status</b>	Final
<b>Part of Release</b>	4.0
<b>Revision</b>	3

Document Change History			
Date	Version	Changed by	Change Description
24.11.2011	2.2.0	AUTOSAR Administration	<ul style="list-style-type: none"> <li>Added new handling to support partial networking</li> <li>Changed handling for bus deinitialisation according to AR3.x behaviour</li> <li>New API and handling to change the baudrate of a CAN network</li> <li>Changed handling for bus-off recovery and related production error report</li> <li>Comprehensive revision of all state machine diagrams and SWS-ID-items</li> <li>Changed classification of production errors and development errors</li> <li>Solve conflicts of SWS-ID items with the conformance test specification</li> </ul>
21.10.2010	2.1.0	AUTOSAR Administration	<ul style="list-style-type: none"> <li>Configurable Bus-Off recovery with CAN TX confirmation instead of time based recovery</li> <li>Control of PDU channel modes completely shifted from CanIf to CanSM module</li> </ul>
30.11.2009	2.0.0	AUTOSAR Administration	<ul style="list-style-type: none"> <li>VMM/AMM Concept related changes (PDU group control shifted to BswM)</li> <li>Asynchronous handling of CAN network mode transitions (consideration of CAN Transceiver and CAN controller mode notifications)</li> <li>Solution of Document Improvement issues reported by TO (e. g. split up of non atomic software requirements, textual requirements instead of only a state diagram)</li> </ul>

Document Change History			
Date	Version	Changed by	Change Description
			<ul style="list-style-type: none"><li>Legal disclaimer revised</li></ul>
23.06.2008	1.0.1	AUTOSAR Administration	Legal disclaimer revised
13.11.2007	1.0.0	AUTOSAR Administration	Initial Release

## Disclaimer

This specification and the material contained in it, as released by AUTOSAR, is for the purpose of information only. AUTOSAR and the companies that have contributed to it shall not be liable for any use of the specification.

The material contained in this specification is protected by copyright and other types of Intellectual Property Rights. The commercial exploitation of the material contained in this specification requires a license to such Intellectual Property Rights.

This specification may be utilized or reproduced without any modification, in any form or by any means, for informational purposes only.

For any other purpose, no part of the specification may be utilized or reproduced, in any form or by any means, without permission in writing from the publisher.

The AUTOSAR specifications have been developed for automotive applications only. They have neither been developed, nor tested for non-automotive applications.

The word AUTOSAR and the AUTOSAR logo are registered trademarks.

## Advice for users

AUTOSAR specifications may contain exemplary items (exemplary reference models, "use cases", and/or references to exemplary technical solutions, devices, processes or software).

Any such exemplary items are contained in the specifications for illustration purposes only, and they themselves are not part of the AUTOSAR Standard. Neither their presence in such specifications, nor any later documentation of AUTOSAR conformance of products actually implementing such exemplary items, imply that intellectual property rights covering such exemplary items are licensed under the same rules as applicable to the AUTOSAR Standard.

## Table of Contents

1	Introduction and functional overview .....	7
2	Acronyms and abbreviations .....	8
3	Related documentation.....	9
3.1	Input documents.....	9
3.2	Related standards and norms .....	10
4	Constraints and assumptions .....	11
4.1	Limitations .....	11
4.2	Applicability to car domains.....	11
5	Dependencies to other modules.....	12
5.1	ECU State Manager (EcuM).....	12
5.2	BSW Scheduler (SchM) .....	12
5.3	Communication Manager (ComM) .....	13
5.4	CAN Interface (CanIf).....	13
5.5	Diagnostic Event Manager (DEM) .....	13
5.6	Basic Software Mode Manager (BswM) .....	13
5.7	CAN Network Management (CanNm) .....	13
5.8	Diagnostic Communication Manager (Dcm).....	13
5.9	Development Error Tracer (DET) .....	13
5.10	File structure .....	14
5.10.1	Code file structure.....	14
5.10.2	Header file structure.....	14
5.10.3	Version check.....	16
6	Requirements traceability .....	17
7	Functional specification .....	30
7.1	General requirements.....	30
7.2	State machine for each CAN network .....	33
7.2.1	Trigger: PowerOn.....	34
7.2.2	Trigger: CanSM_Init.....	34
7.2.3	Trigger: T_FULL_COM_MODE_REQUEST .....	34
7.2.4	Trigger: T_NO_COM_MODE_REQUEST .....	34
7.2.5	Guarding condition: G_FULL_COM_MODE_REQUESTED .....	34
7.2.6	Guarding condition: G_SILENT_COM_MODE_REQUESTED .....	34
7.2.7	Effect: E_PRE_NOCOM .....	35
7.2.8	Effect: E_NOCOM.....	35
7.2.9	Effect: E_FULL_COM .....	35
7.2.10	Effect: E_FULL_TO_SILENT_COM .....	36
7.2.11	Effect: E_BR_END_FULL_COM.....	36
7.2.12	Effect: E_BR_END_SILENT_COM .....	36
7.2.13	Effect: E_SILENT_TO_FULL_COM .....	36
7.2.14	Sub state machine: CANSMBSM_S_PRE_NOCOM .....	37
7.2.15	Sub state machine to prepare full communication.....	49

7.2.16	Sub state machine for requested full communication mode.....	52
7.2.17	Sub state machine to operate a requested baud rate change.....	57
7.3	Error classification.....	60
7.4	Error detection.....	61
7.5	Error notification.....	61
7.6	Interface for AUTOSAR debug and trace.....	62
7.7	Non-functional design rules.....	62
8	API specification.....	63
8.1	Imported types.....	63
1.1.1	[CANSM243]「.....	63
8.2	Type definitions.....	63
8.2.1	CanSM_StateType.....	63
8.2.2	CanSM_ConfigType.....	63
8.2.3	CanSM_BswMCurrentStateType.....	63
8.3	Function definitions.....	64
8.3.1	CanSM_Init.....	64
8.3.2	CanSM_GetVersionInfo.....	64
8.3.3	CanSM_RequestComMode.....	65
8.3.4	CanSM_GetCurrentComMode.....	67
8.3.5	CanSM_CheckBaudrate.....	68
8.3.6	CanSM_ChangeBaudrate.....	69
8.4	Call-back notifications.....	71
8.4.1	CanSM_ControllerBusOff.....	71
8.4.2	CanSM_ControllerModelIndication.....	72
8.4.3	CanSM_TransceiverModelIndication.....	73
8.4.4	CanSM_TxTimeoutException.....	74
8.4.5	CanSM_ClearTrcvWufFlagIndication.....	74
8.4.6	CanSM_CheckTransceiverWakeFlagIndication.....	75
8.4.7	CanSM_ConfirmPnAvailability.....	76
8.5	Scheduled functions.....	76
8.5.1	CanSM_MainFunction.....	77
8.6	Expected Interfaces.....	77
8.6.1	Mandatory Interfaces.....	77
8.6.2	Optional Interfaces.....	78
8.6.3	Configurable Interfaces.....	78
9	Sequence diagrams.....	79
9.1	Sequence for baud rate change request from the DCM module.....	80
9.2	Sequence diagram CanSm_StartCanController.....	81
9.3	Sequence diagram CanSm_StopCanController.....	82
10	Configuration specification.....	83
10.1	How to read this chapter.....	83
10.2	Containers and configuration parameters.....	83
10.2.1	Variants.....	83
10.2.2	CanSM.....	83
10.2.3	CanSMGeneral.....	84
10.2.4	CanSMConfiguration.....	85
10.2.5	CanSMManagerNetwork.....	86

10.2.6	CanSMDemEventParameterRefs .....	88
10.2.7	CanSMController.....	88
10.3	Published Information.....	89
11	Changes between AR3.0 and AR4.0 rev001 .....	90
11.1	Deleted SWS Items .....	90
11.2	Replaced SWS Items .....	91
11.3	Changed SWS Items.....	92
11.4	Added SWS Items.....	95
12	Changes between AUTOSAR R4.0 rev001 and rev002 .....	98
12.1	Deleted SWS Items .....	98
12.2	Replaced SWS Items .....	98
12.3	Changed SWS Items.....	98
12.4	Added SWS Items.....	99
13	Changes between AUTOSAR R4.0 rev002 and rev003 .....	100
13.1	Deleted SWS Items .....	100
13.2	Replaced SWS Items .....	100
13.3	Changed SWS Items.....	101
13.4	Added SWS Items.....	102
14	Not applicable requirements .....	104

## 1 Introduction and functional overview

This specification describes the functionality, API and the configuration for the AUTOSAR Basic Software module CAN State Manager.

The AUTOSAR BSW stack specifies for each communication bus a bus specific state manager. This module shall implement the control flow for the respective bus. Like shown in the figure below, the CAN State Manager (CanSM) is a member of the Communication Service Layer. It interacts with the Communication Hardware Abstraction Layer and the System Service Layer.

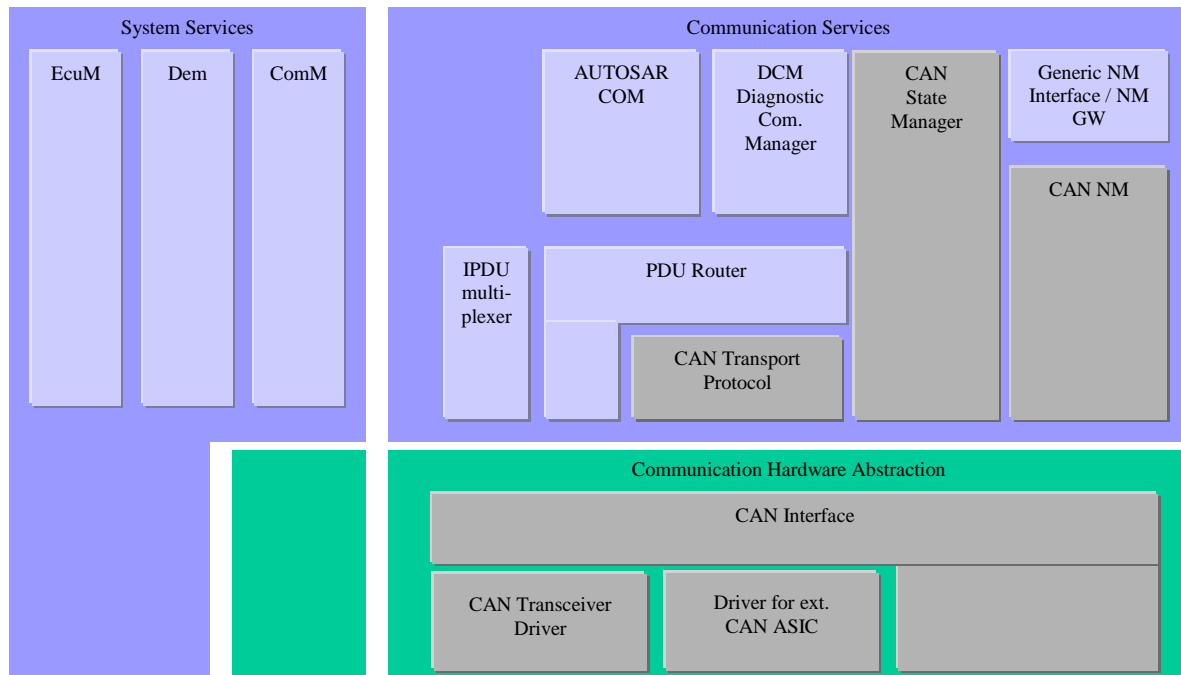


Figure 1-1: Layered Software Architecture from CanSM point of view

## 2 Acronyms and abbreviations

Abbreviation / Acronym:	Description:
API	Application Program Interface
BSW	Basic Software
CAN	Controller Area Network
CanIf	CAN Interface
CanSM	CAN State Manager
ComM	Communication Manager
DEM	Diagnostic Event Manager
DET	Development Error Tracer
EcuM	ECU State Manager
PDU	Protocol Data Unit
RX	Receive
TX	Transmit
SchM	BSW Scheduler
SWC	Software Component
BswM	Basic Software Mode Manager
Dcm	Diagnostic Communication Manager



## 3 Related documentation

### 3.1 Input documents

[1] List of Basic Software Modules

AUTOSAR\_TR\_BSWModuleList.pdf

[2] Layered Software Architecture

AUTOSAR\_EXP\_LayeredSoftwareArchitecture.pdf

[3] General Requirements on Basic Software Modules

AUTOSAR\_SRS\_BSWGeneral.pdf

[4] Specification of ECU Configuration

AUTOSAR\_TPS\_ECUConfiguration.pdf

[5] Specification of Standard Types

AUTOSAR\_SWS\_StandardTypes.pdf

[6] Specification of Communication Stack Types

AUTOSAR\_SWS\_CommunicationStackTypes.pdf

[7] Requirements on CAN

AUTOSAR\_SRS\_CAN.pdf

[8] Requirements on Mode Management

AUTOSAR\_SRS\_ModeManagement.pdf

[9] Specification of CAN Transceiver Driver

AUTOSAR\_SWS\_CANTransceiverDriver.pdf

[10] Specification of Communication Manager

AUTOSAR\_SWS\_COMManager.pdf

[11] Specification of ECU State Manager

AUTOSAR\_SWS\_ECUStateManager.pdf

[12] Specification of Diagnostics Event Manager

AUTOSAR\_SWS\_DiagnosticEventManager.pdf

[13] Specification of CAN Interface

AUTOSAR\_SWS\_CANInterface.pdf

[14] Specification of BSW Scheduler

AUTOSAR\_SWS\_BSW\_Scheduler.pdf

[15] Specification of Development Error Tracer

AUTOSAR\_SWS\_DevelopmentErrorTracer.pdf

[18] Specification of Basic Software Mode Manager

AUTOSAR\_SWS\_BSWModeManager.pdf

[19] Specification of CAN Network Management, AUTOSAR\_SWS\_CAN\_NM.pdf

[20] Specification of Diagnostic Communication Manager,

AUTOSAR\_SWS\_DiagnosticCommunicationManager.pdf

## 3.2 Related standards and norms

None

## **4 Constraints and assumptions**

### **4.1 Limitations**

The CanSM module can be used for CAN communication only. Its task is to operate with the CanIf module to control one or multiple underlying CAN Controllers and CAN Transceiver Drivers. Other protocols than CAN (i.e. LIN or FlexRay) are not supported.

### **4.2 Applicability to car domains**

The CAN State Manager module can be used for all domain applications whenever the CAN protocol is used.

## 5 Dependencies to other modules

The next sections give a brief description of configuration information and services the CanSM module requires from other modules.

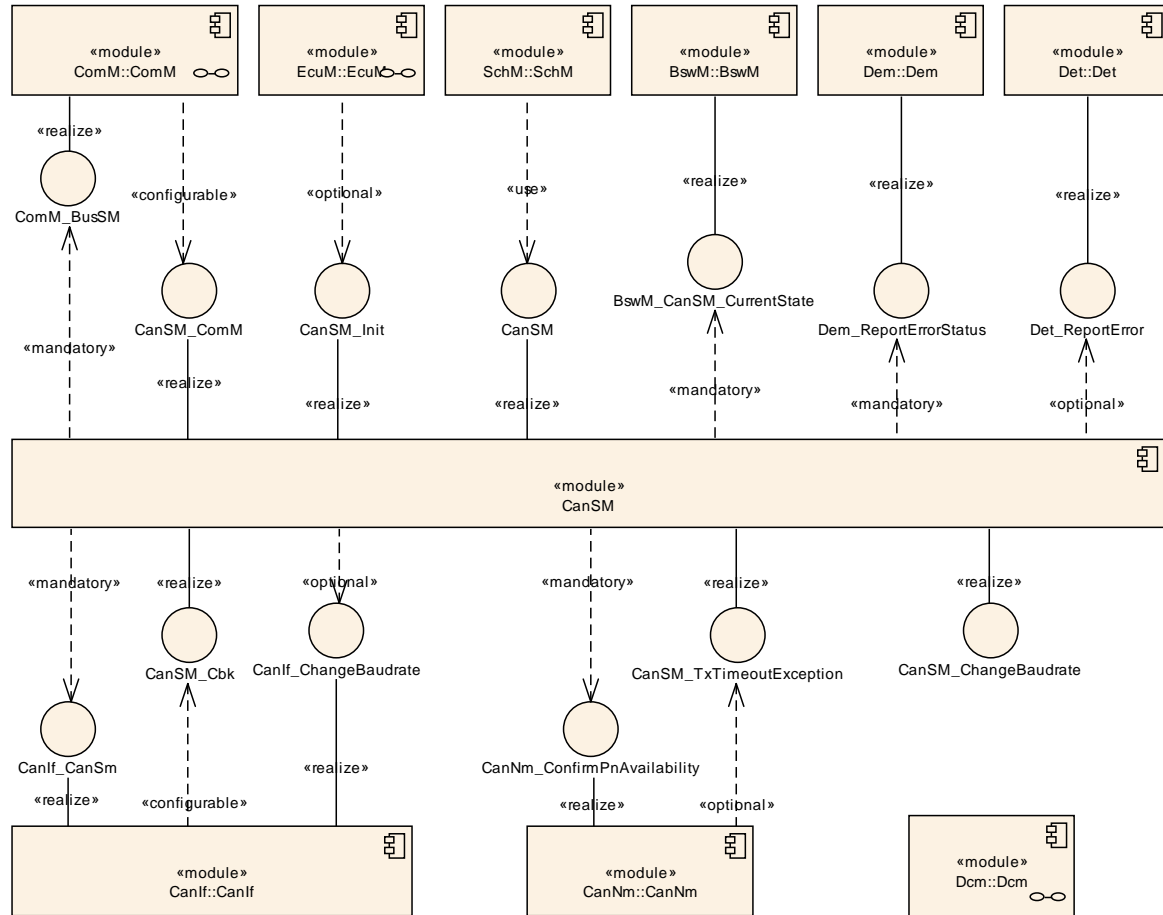


Figure 5-1: Module dependencies of the CanSM module

### 5.1 ECU State Manager (EcuM)

The EcuM module initializes the CanSM module (refer to [11] for a detailed specification of this module).

### 5.2 BSW Scheduler (SchM)

The BSW Scheduler module calls the main function of the CanSM module, which is necessary for the cyclic processes of the CanSM module (refer to [14] for a detailed specification of this module).

### **5.3 Communication Manager (ComM)**

The ComM module uses the API of the CanSM module to request communication modes of CAN networks, which are identified with unique network handles (refer to [10] for a detailed specification of this module).

The CanSM module notifies the current communication mode of its CAN networks to the ComM module.

### **5.4 CAN Interface (CanIf)**

The CanSM module uses the API of the CanIf module to control the operating modes of the CAN controllers and CAN transceivers assigned to the CAN networks (refer to [13] for a detailed specification of this module).

The CanIf module notifies the CanSM module about peripheral events.

### **5.5 Diagnostic Event Manager (DEM)**

The CanSM module reports bus specific production errors to the DEM module (refer to [12] for a detailed specification of this module).

### **5.6 Basic Software Mode Manager (BswM)**

The CanSM need to notify bus specific mode changes to the BswM module (refer to [18] for a detailed specification of this module).

### **5.7 CAN Network Management (CanNm)**

The CanSM module needs to notify the partial network availability to the CanNm module and shall handle notified CanNm timeout exceptions in case of partial networking (ref. to [19] for a detailed specification of this module).

### **5.8 Diagnostic Communication Manager (Dcm)**

The CanSM module provides an API, which can be used by the Dcm module to request a baud rate change of a CAN network (ref. to [20] for a detailed specification of this module).

### **5.9 Development Error Tracer (DET)**

The CanSM module reports development errors to the DET module, if development error handling is switched on by configuration (refer to [15] for a detailed specification of this module).

## 5.10 File structure

### 5.10.1 Code file structure

This specification does not define the code file structure completely. Nevertheless, the code-file structure shall include the following files:

**[CANSM361]** 「The CanSM module shall provide a file CanSM\_Lcfg.c that contains all link time configurable parameters of the module.」()

**[CANSM362]** 「The CanSM module shall provide a file CanSM\_PBcfg.c that contains all post build time configurable parameters of the module.」()

### 5.10.2 Header file structure

**[CANSM008]** 「The header file CanSM.h shall export CanSM module specific types and the API of the CanSM module, which is not dedicated to a certain module.」()

**[CANSM238]** 「The header file CanSM.h shall include the header file ComStack\_Types.h.」()

Remark: The header file ComStack\_Types.h includes the header file Std\_Types.h

**[CANSM174]** 「The header file CanSM.h shall include the header file ComM.h.」()

Rationale: Some APIs of the CanSM use type definitions of the ComM module.

**[CANSM253]** 「The header file CanSM\_EcuM.h shall export the init function of the CanSM.」()

Rationale: The header file CanSM\_EcuM.h is used for the integration of the CanSM module into the EcuM module.

**[CANSM009]** 「The header file CanSM\_ComM.h shall export the CanSM module's API dedicated to the ComM module.」()

**[CANSM010]** 「The header file CanSM\_Cfg.h shall contain references to the parameters of the c-source files CanSM\_Lcfg.c and CanSM\_PBcfg.c (see section 5.10.1 above) and shall contain pre-compile parameters, which are not declared as "const" parameter, but as defines.」(BSW00344, BSW0404, BSW00345, BSW00381, BSW00412)

**[CANSM011]** 「The header file CanSM\_Cbk.h shall declare the callback notification functions of the CanSM module.」()

**[CANSM013]** 「The CanSM module (CanSM.c) shall reference its header file CanSM.h.」()

Rationale: -to make its type definitions available

**[CANSM254]** 「The CanSM module (CanSM.c) shall reference its header file CanSM\_Cfg.h.」()

Rationale: -to make its configuration parameters available

**[CANSM014]**「 The CanSM module (CanSM.c) shall include the header file Dem.h.」()

Rationale: The functions declared in Dem.h are used to report production errors.

**[CANSM015]** 「The CanSM module (CanSM.c) shall include the header file Det.h.」(BSW171)

Rationale: The functions declared in Det.h are used to report development errors.

**[CANSM016]** 「The CanSM module (CanSM.c) shall include the header file MemMap.h.」(BSW00436)

Rationale: MemMap.h makes it possible to map the code and the data of the CanSM module into specific memory sections.

**[CANSM017]** 「The CanSM module (CanSM.c) shall include the header file CanIf.h.」()

Rationale: The API of the CanIf module is needed for peripheral control.

**[CANSM191]** 「The CanSM module (CanSM.c) shall include the header file ComM\_BusSM.h.」()

Rationale: The file ComM\_BusSM.h provides the API of the ComM module, which is exclusively intended for the bus state managers.

**[CANSM347]** 「The header file CanSM\_BswM.h shall export the interfaces, which are dedicated to the BswM module.」()

**[CANSM348]** 「The CanSM module (CanSM.c) shall include the header file CanSM\_BswM.h.」()

**[CANSM547]** 「The header file CanSM\_Dcm.h shall export the interfaces, which are dedicated to the Dcm module.」()

**[CANSM548]** 「The CanSM module (CanSM.c) shall include the interface CanNm\_ConfirmPnAvailability (CanNm\_ConfirmPnAvailability.h) of the CanNm module.」()

**[CANSM549]** 「The header file CanSM\_TxTimeoutException.h shall provide the callback function CanSM\_TxTimeoutException as optional interface to the CanNm module.」()

### 5.10.3 Version check

**[CANSM025]** 「The CanSM module shall perform Inter Module Checks to avoid integration of incompatible files. The imported included files shall be checked by preprocessing directives.」(BSW167, BSW004)

The following version numbers shall be verified:

- <MODULENAME>\_AR\_RELEASE\_MAJOR\_VERSION
- <MODULENAME>\_AR\_RELEASE\_MINOR\_VERSION

Where <MODULENAME> is the module short name of the other (external) modules which provide header files included by the CanSM module.

If the values are not identical to the expected values, an error shall be reported.



## 6 Requirements traceability

Requirement	Satisfied by
-	CANSM363
-	CANSM530
-	CANSM511
-	CANSM414
-	CANSM573
-	CANSM441
-	CANSM013
-	CANSM443
-	CANSM532
-	CANSM499
-	CANSM017
-	CANSM453
-	CANSM014
-	CANSM496
-	CANSM533
-	CANSM521
-	CANSM557
-	CANSM372
-	CANSM463
-	CANSM418
-	CANSM347
-	CANSM374
-	CANSM009
-	CANSM513
-	CANSM410
-	CANSM375
-	CANSM483
-	CANSM187
-	CANSM510
-	CANSM431
-	CANSM536
-	CANSM254
-	CANSM266
-	CANSM563
-	CANSM538
-	CANSM365
-	CANSM432
-	CANSM400

-	CANSM566
-	CANSM235
-	CANSM501
-	CANSM461
-	CANSM412
-	CANSM451
-	CANSM468
-	CANSM437
-	CANSM490
-	CANSM189
-	CANSM371
-	CANSM411
-	CANSM072
-	CANSM543
-	CANSM348
-	CANSM436
-	CANSM558
-	CANSM433
-	CANSM561
-	CANSM398
-	CANSM480
-	CANSM401
-	CANSM278
-	CANSM449
-	CANSM447
-	CANSM479
-	CANSM403
-	CANSM419
-	CANSM243
-	CANSM008
-	CANSM535
-	CANSM182
-	CANSM183
-	CANSM450
-	CANSM184
-	CANSM528
-	CANSM011
-	CANSM569
-	CANSM465
-	CANSM284
-	CANSM547
-	CANSM456

-	CANSM460
-	CANSM504
-	CANSM452
-	CANSM523
-	CANSM188
-	CANSM469
-	CANSM471
-	CANSM455
-	CANSM534
-	CANSM470
-	CANSM505
-	CANSM489
-	CANSM442
-	CANSM556
-	CANSM420
-	CANSM462
-	CANSM430
-	CANSM459
-	CANSM562
-	CANSM516
-	CANSM366
-	CANSM574
-	CANSM425
-	CANSM500
-	CANSM548
-	CANSM429
-	CANSM492
-	CANSM555
-	CANSM550
-	CANSM506
-	CANSM477
-	CANSM427
-	CANSM484
-	CANSM428
-	CANSM309
-	CANSM370
-	CANSM417
-	CANSM367
-	CANSM503
-	CANSM560
-	CANSM554
-	CANSM397

-	CANSM572
-	CANSM438
-	CANSM423
-	CANSM475
-	CANSM540
-	CANSM512
-	CANSM487
-	CANSM509
-	CANSM527
-	CANSM508
-	CANSM525
-	CANSM244
-	CANSM517
-	CANSM445
-	CANSM518
-	CANSM413
-	CANSM402
-	CANSM458
-	CANSM444
-	CANSM377
-	CANSM426
-	CANSM539
-	CANSM549
-	CANSM399
-	CANSM473
-	CANSM537
-	CANSM474
-	CANSM415
-	CANSM434
-	CANSM464
-	CANSM435
-	CANSM497
-	CANSM493
-	CANSM488
-	CANSM529
-	CANSM396
-	CANSM238
-	CANSM186
-	CANSM466
-	CANSM502
-	CANSM507
-	CANSM491

-	CANSM364
-	CANSM514
-	CANSM310
-	CANSM167
-	CANSM485
-	CANSM369
-	CANSM174
-	CANSM472
-	CANSM253
-	CANSM571
-	CANSM467
-	CANSM448
-	CANSM069
-	CANSM368
-	CANSM457
-	CANSM362
-	CANSM494
-	CANSM191
-	CANSM360
-	CANSM190
-	CANSM567
-	CANSM282
-	CANSM440
-	CANSM515
-	CANSM421
-	CANSM495
-	CANSM524
-	CANSM526
-	CANSM486
-	CANSM546
-	CANSM476
-	CANSM446
-	CANSM454
-	CANSM478
-	CANSM531
-	CANSM541
-	CANSM439
-	CANSM395
-	CANSM361
-	CANSM416
-	CANSM542
-	CANSM376

-	CANSM568
BSW003	CANSM024
BSW00308	CANSM999
BSW00309	CANSM999
BSW00314	CANSM999
BSW00323	CANSM071
BSW00326	CANSM999
BSW00333	CANSM064
BSW00336	CANSM999
BSW00338	CANSM028
BSW00339	CANSM074
BSW00341	CANSM999
BSW00344	CANSM010
BSW00345	CANSM010
BSW00347	CANSM999
BSW00353	CANSM999
BSW00358	CANSM023
BSW00359	CANSM064
BSW00360	CANSM999
BSW00361	CANSM999
BSW00375	CANSM999
BSW00376	CANSM065
BSW00377	CANSM999
BSW00381	CANSM010
BSW00386	CANSM071, CANSM028
BSW00395	CANSM999
BSW004	CANSM025
BSW00404	CANSM023
BSW00405	CANSM023
BSW00406	CANSM023, CANSM179
BSW00407	CANSM024
BSW00412	CANSM010
BSW00414	CANSM023
BSW00416	CANSM999
BSW00417	CANSM999
BSW00422	CANSM522, CANSM498
BSW00423	CANSM999
BSW00425	CANSM065
BSW00426	CANSM999
BSW00427	CANSM999
BSW00428	CANSM999
BSW00429	CANSM999

BSW00431	CANSM999
BSW00432	CANSM999
BSW00433	CANSM999
BSW00434	CANSM999
BSW00435	CANSM999
BSW00436	CANSM016
BSW00437	CANSM999
BSW00439	CANSM999
BSW00440	CANSM999
BSW005	CANSM999
BSW01142	CANSM062, CANSM063
BSW01144	CANSM424
BSW01146	CANSM064
BSW0404	CANSM010
BSW0405	CANSM023
BSW0424	CANSM065
BSW09080	CANSM062, CANSM063
BSW09081	CANSM062
BSW09083	CANSM062
BSW09084	CANSM063
BSW101	CANSM023
BSW161	CANSM999
BSW162	CANSM999
BSW167	CANSM025
BSW168	CANSM999
BSW170	CANSM999
BSW171	CANSM015
ref.toCANSM419	CANSM385

According to [3] (General BSW Requirements):

<b>Requirement</b>	<b>Satisfied by</b>
[BSW00344] Reference to link-time configuration	Chapter 5.10, <a href="#">CANSM010</a>
[BSW0404] Reference to post build time configuration	Chapter 5.10, <a href="#">CANSM010</a>
[BSW0405] Reference to multiple configuration sets	<a href="#">CANSM023</a> , chapter 8.2.1
[BSW00345] Pre-compile time configuration	Chapter 5.10, <a href="#">CANSM010</a> , <a href="#">CANSM123_Conf</a> , <a href="#">CANSM126_Conf</a> , <a href="#">CANSM127_Conf</a>
[BSW159] Tool based configuration	Changed to not applicable during SW improvement (CANSM155 deleted)
[BSW167] Static configuration checking	<a href="#">CANSM025</a>

[BSW171] Configurability of optional functionality	<a href="#">CANSM015</a> , <a href="#">CANSM133 Conf</a>
[BSW170] Data for reconfiguration of SW-components	Not applicable (requirement on SWC-module)
[BSW00380] Separate C-Files for configuration parameters	Chapter 5.10
[BSW00419] Separate C-Files for pre-compile time configuration parameters	Chapter 5.10
[BSW00381] Separate configuration header file for pre-compile time parameters	<a href="#">CANSM010</a>
[BSW00412] Separate configuration header file for configuration parameters	<a href="#">CANSM010</a>
[BSW00383] List dependencies of configuration files	<a href="#">CANSM161 Conf</a> , <a href="#">CANSM137 Conf</a> , <a href="#">CANSM141 Conf</a>
[BSW00384] List dependencies to other modules	Chapter 5
[BSW00387] Specify the configuration class of callback function	Chapter 8.3.6
[BSW00388] Introduce containers	<a href="#">CANSM123 Conf</a> , <a href="#">CANSM126 Conf</a> , <a href="#">CANSM127 Conf</a>
[BSW00389] Containers shall have names	Chapter 10.2
[BSW00390] Parameter content shall be unique within the module	Chapter 10.2
[BSW00391] Parameter shall have unique names	Chapter 10.2
[BSW00392] Parameters shall have a type	Chapter 10.2
[BSW00393] Parameters shall have a range	Chapter 10.2
[BSW00394] Specify the scope of the parameters	Chapter 10.2
[BSW00395] List the required parameters (per parameter)	Not applicable
[BSW00396] Configuration classes	Chapter 10.2
[BSW00397] Pre-compile-time parameters	Chapter 10.2
[BSW00398] Link-time parameters	Chapter 10.2
[BSW00399] Loadable Post-build time parameters	Chapter 10.2
[BSW00400] Selectable Post-build time parameters	Chapter 10.2.1
[BSW00438] Post Build Configuration Data Structure	chapter (TODO)
[BSW00402] Published information	Chapter 10.3
[BSW00375] Notification of wake-up reason	Not applicable (no wake up interrupt)
[BSW101] Initialization interface	<a href="#">CANSM023</a>



[BSW00416] Sequence of Initialization	Not applicable (CanSM module cannot influence the sequence for initialization)
[BSW00406] Check module initialization	<a href="#">CANSM023</a> <a href="#">CANSM179</a>
[BSW00437] NoInit–Area in RAM	Not applicable (not in scope of this spec)
[BSW168] Diagnostic interface	Not applicable (requirement on SWC-module)
[BSW00407] Function to read out published parameters	<a href="#">CANSM024</a>
[BSW00423] Usage of SW–C template to describe BSW modules with AUTOSAR Interfaces	Not applicable (not in scope of this spec)
[BSW00424] BSW main processing function task allocation	<a href="#">CANSM065</a>
[BSW00425] Trigger conditions for schedulable objects	<a href="#">CANSM065</a>
[BSW00426] Exclusive areas in BSW modules	Not applicable (not in scope of this spec)
[BSW00427] ISR description for BSW modules	Not applicable (not in scope of this spec)
[BSW00428] Execution order dependencies of main processing functions	Not applicable (not in scope of this spec)
[BSW00429] Restricted BSW OS functionality access	Not applicable (not in scope of this spec)
[BSW00431] The BSW Scheduler module implements task bodies	Not applicable (not in scope of this spec)
[BSW00432] Modules should have separate main processing functions for read/receive and write/transmit data path	Not applicable (not in scope of this spec)
[BSW00433] Calling of main processing functions	Not applicable (not in scope of this spec)
[BSW00434] The Schedule Module shall provide an API for exclusive areas	Not applicable (not in scope of this spec)
[BSW00336] Shutdown interface	Not applicable (no deinitialization function)
[BSW00337] Classification of errors	Chapter 7.3
[BSW00338] Detection and Reporting of development errors	Chapter 7.4, <a href="#">CANSM028</a>
[BSW00369] Do not return development error codes via API	Chapter 7.7
[BSW00339] Reporting of production relevant errors and exceptions	<a href="#">CANSM074</a>
[BSW00422] Pre–de–bouncing of production relevant error status	<a href="#">CANSM498</a> , <a href="#">CANSM520</a> , <a href="#">CANSM522</a>
[BSW00417] Reporting of Error Events by Non–Basic Software	Not applicable (not in scope of this spec)
[BSW00323] API parameter checking	<a href="#">CANSM071</a>

[BSW004] Version check	<a href="#">CANSM025</a>
[BSW00409] Header files for production code error IDs	Chapter 7.3
[BSW00385] List possible error notifications	chapter 7.3
[BSW00386] Configuration for detecting an error	Chapter 7.4, <a href="#">CANSM071</a> , <a href="#">CANSM028</a>
[BSW161] Microcontroller abstraction	Not applicable (not in scope of this spec)
[BSW162] ECU layout abstraction	Not applicable (not in scope of this spec)
[BSW005] No hard coded horizontal interfaces within MCAL	Not applicable (not in scope of this spec)
[BSW00415] User dependent include files	Chapter 5.10.2
[BSW164] Implementation of interrupt service routines	Chapter 7.7
[BSW00325] Runtime of interrupt service routines	Chapter 7.7
[BSW00326] Transition from ISRs to OS tasks	Not applicable (not in scope of this spec)
[BSW00342] Usage of source code and object code	Chapter 10.2
[BSW00343] Specification and configuration of time	Chapter 10.2
[BSW160] Human-readable configuration data	Changed to not applicable during SW improvement (CANSM155 deleted)
[BSW007] HIS MISRA C	Chapter 7.7
[BSW00300] Module naming convention	Chapter 7.7
[BSW00413] Accessing instances of BSW modules	Chapter 7.7
[BSW00347] Naming separation of different instances of BSW drivers	Not applicable (not in scope of this spec)
[BSW00305] Self-defined data types naming convention	Chapter 8.2
[BSW00307] Global variables naming convention	Chapter 7.7
[BSW00310] API naming convention	Chapter 8.3
[BSW00373] Main processing function naming convention	Chapter 8.5.1
[BSW00327] Error values naming convention	Chapter 7.3
[BSW00335] Status values naming convention	Chapter 8.2
[BSW00350] Development error detection keyword	Chapter 7.4
[BSW00408] Configuration parameter naming convention	Chapter 10.2
[BSW00410] Compiler switches shall have defined values	Chapter 10.2

[BSW00411] Get version info keyword	Chapter 8.3.2 Chapter 10.2
[BSW00346] Basic set of module files	Chapter 5.10
[BSW158] Separation of configuration from implementation	Chapter 5.10
[BSW00314] Separation of interrupt frames and service routines	Not applicable (not in scope of this spec)
[BSW00370] Separation of callback interface from API	Chapter 5.10
[BSW00435] Header File Structure for the Basic Software Scheduler	Not applicable (not in scope of this spec)
[BSW00436] Module Header File Structure for the Basic Software Memory Mapping	<a href="#">CANSM016</a>
[BSW00348] Standard type header	Chapter 5.10
[BSW00353] Platform specific type header	Not applicable (not in scope of this spec)
[BSW00361] Compiler specific language extension header	Not applicable (not in scope of this spec)
[BSW00301] Limit imported information	Chapter 5.10
[BSW00302] Limit exported information	Chapter 5.10
[BSW00328] Avoid duplication of code	Chapter 7.7
[BSW00312] Shared code shall be reentrant	Chapter 7.7
[BSW006] Platform independency	Chapter 7.7
[BSW00357] Standard API return type [	Chapter 8.3
[BSW00377] Module specific API return types	Not applicable (not used)
[BSW00304] AUTOSAR integer data types	Chapter 7.7
[BSW00355] Do not redefine AUTOSAR integer data types	Chapter 7.7
[BSW00378] AUTOSAR boolean type	Chapter 7.7
[BSW00306] Avoid direct use of compiler and platform specific keywords [	Chapter 7.7
[BSW00308] Definition of global data	Not applicable (not used)
[BSW00309] Global data with read-only constraint	Not applicable (not used)
[BSW00371] Do not pass function pointers via API	Chapter 8.3
[BSW00358] Return type of init() functions	<a href="#">CANSM023</a>
[BSW00414] Parameter of init function	<a href="#">CANSM023</a>
[BSW00376] Return type and parameters of main processing functions	<a href="#">CANSM065</a>
[BSW00359] Return type of callback functions	<a href="#">CANSM064</a>
[BSW00360] Parameters of callback functions	Not applicable (assignment between bus-off and impacted controller id is

	necessary, which is transferred as parameter)
[BSW00329] Avoidance of generic interfaces	Chapter 7.7
[BSW00330] Usage of macros / inline functions instead of functions	Chapter 7.7
[BSW00331] Separation of error and status values	Chapter 7.3, Chapter 8.2,
[BSW009] Module User Documentation	Chapter 7.7
[BSW00401] Documentation of multiple instances of configuration parameters	Chapter 10.2
[BSW172] Compatibility and documentation of scheduling strategy	Chapter 7.7
[BSW010] Memory resource documentation	Chapter 7.7
[BSW00333] Documentation of callback function context	<a href="#">CANSM064</a>
[BSW00374] Module vendor identification	<a href="#">CANSM125</a>
[BSW00379] Module identification	<a href="#">CANSM125</a>
[BSW003] Version identification	<a href="#">CANSM125</a> , <a href="#">CANSM024</a>
[BSW00318] Format of module version numbers	<a href="#">CANSM125</a>
[BSW00321] Enumeration of module version numbers	Chapter 7.7
[BSW00341] Microcontroller compatibility documentation	Not applicable (not in scope of this spec)
[BSW00334] Provision of XML file	Chapter 7.7
[BSW00439] Declaration of interrupt handlers and ISRs	Not applicable (CanSM not part of MCAL)
[BSW00405] Reference to multiple configuration sets	<a href="#">CANSM023</a>
[BSW00440] Function prototype for callback functions of AUTOSAR Services	Not applicable (not in scope of this spec)
[BSW00441] Enumeration literals and #define naming convention	Chapter of CanSM_StateType
[BSW00404] Reference to post build time configuration	<a href="#">CANSM023</a>

The CAN SRS ([7]) specifies the CAN specific parent requirements for the CanSM, which are listed in the following table:

<b>Requirement</b>	<b>Satisfied by</b>
[BSW01014] Network configuration abstraction	<a href="#">CANSM126_Conf</a>
[BSW01142] Control flow abstraction of CAN networks	<a href="#">CANSM062</a> , <a href="#">CANSM063</a> , chapter 7.2
[BSW01143] BusOff recovery time	<a href="#">CANSM128_Conf</a> , <a href="#">CANSM129_Conf</a>
[BSW01144] Power-On Initialization	<a href="#">CANSM424</a>

[BSW01145] Management of CAN devices	chapter 7.2
[BSW01146] Bus-off recovery and error handling	Figure 7-6 <a href="#">CANSM064</a> , <a href="#">CANSM070 Conf</a> , <a href="#">CANSM343</a>

The CanSM provides services to the ComM. Because of that, the CanSM also has to consider some requirements of the Mode Management SRS [9], which specifies the upper level requirements for the ComM. These requirements are listed in following table:

<b>Requirement</b>	<b>Satisfied by</b>
[BSW09080] Physical channel independency	<a href="#">CANSM062</a> , <a href="#">CANSM063</a> , <a href="#">CANSM126 Conf</a>
[BSW09081] API for requesting communication	<a href="#">CANSM062</a>
[BSW09083] Support of different communication modes	<a href="#">CANSM062</a>
[BSW09084] API for querying the current communication mode	<a href="#">CANSM063</a>
[BSW09085] Indication of communication mode changes	chapter 7, chapter 8.6.1

## 7 Functional specification

This chapter specifies the different functions of the CanSM module in the AUTOSAR BSW architecture.

An ECU can have different communication networks. Each network has to be identified with an unique network handle. The ComM module requests communication modes from the networks. It knows by its configuration, which handle is assigned to what kind of network. In case of CAN, it uses the CanSM module.

The CanSM module is responsible for the control flow abstraction of CAN networks:

It changes the communication modes of the configured CAN networks depending on the mode requests from the ComM module.

Therefore the CanSM module uses the API of the CanIf module. The CanIf module is responsible for the control flow abstraction of the configured CAN Controllers and CAN Transceivers (the data flow abstraction of the CanIf module is not relevant for the CanSM module). Any change of the CAN Controller modes and CAN Transceiver modes will be notified by the CanIf module to the CanSM module. Depending on this notifications and state of the CAN network state machine, which the CanSM module shall implement for each configured CAN network, the CanSM module notifies the ComM and the BswM (ref. to chapter 7.2 for details).

### 7.1 General requirements

**[CANSM266]** 「The CanSM module shall store the latest notified current network mode with `ComM_BusSM_ModeIndication` (chapter 8.6.1) for each configured CAN network internally (ref. to [CANSM126 Conf](#)).」()

**[CANSM284]** 「The internally stored network modes of the CanSM module can have the values `COMM_NO_COMMUNICATION`, `COMM_SILENT_COMMUNICATION`, `COMM_FULL_COMMUNICATION`.」()

**[CANSM428]** 「All effects of the CanSM state machine `CANSM_BSM` (ref. to Figure 7-1), shall be operated in the context of the CanSM main function (ref. to [CANSM065](#)).」()

**[CANSM278]** 「If the CanSM state machine `CANSM_BSM` (ref. to Figure 7-1) is in the state `CANSM_BSM_S_NOT_INITIALIZED`, it shall deny network mode requests from the ComM module (ref. to [CANSM062](#)).」()

**[CANSM385]** 「If the CanSM module state machine was triggered with `T_REPEAT_MAX` (ref. to [CANSM463](#), [CANSM480](#), [CANSM495](#), [CANSM523](#),



[CANSM536](#)), the CanSM module shall call the function `Det_ReportError` with the `ErrorId` parameter `CANSM_E_MODE_REQUEST_TIMEOUT` (ref. to chapter 7.3).」

**[CANSM422]** 「If the CanIf module notifies PN availability for a configured CAN Transceiver to the CanSM module with the callback function `CanSM_ConfirmPnAvailability` (ref. to [CANSM419](#)), then the CanSM module shall call the API `CanNm_ConfirmPnAvailability` (ref. to chapter 8.6.1) with the related CAN network as `channel` to confirm the PN availability to the CanNm module.」()

**[CANSM375]** 「The CanSM module shall deny any network mode request, if the time since the last detected bus-off is lower than `CanSMBorTimeL1` (ref. to [CANSM128\\_Conf](#)) and the bus-off counter is lower than `CanSMBorCounterL1ToL2` (ref. to [CANSM131\\_Conf](#)).」()

Rationale: Block communication mode requests during bus-off recovery

**[CANSM376]** 「The CanSM module shall deny any network mode request, if the time since the last detected bus-off is lower than `CanSMBorTimeL2` and the bus-off counter is greater or equal than `CanSMBorCounterL1ToL2` (ref. to [CANSM131\\_Conf](#)).」()

Rationale: Block communication mode requests during bus-off recovery

**[CANSM560]** 「If no `CanSMTransceiverId` (ref. to [CANSM137\\_Conf](#)) is configured for a CAN Network, then the CanSM module shall bypass all specified `CanIf_SetTrcvMode` (e. g. [CANSM446](#)) calls for the CAN Network and proceed in the different state transitions as if it has got the supposed `CanSM_TransceiverModeIndication` already (e. g. [CANSM448](#)).」()

**[CANSM567]** 「If the CanSM module is requested to provide the information, if a certain baudrate is supported by a configured CAN network (ref. to [CANSM126\\_Conf](#)) with `CanSM_CheckBaudrate` (ref. to [CANSM501](#)), then the CanSM module shall reference the CanIf API function `CanIf_CheckBaudrate` (ref. to chapter 8.6.2) for all configured CAN controllers of the CAN network and notify, that the baud rate is supported by the CAN network, if all `CanIf_CheckBaudrate` calls have returned `E_OK`.」()

**[CANSM568]** 「If the CanSM module is requested to provide the information, if a certain baud rate is supported by a configured CAN network (ref. to [CANSM126\\_Conf](#)) with `CanSM_CheckBaudrate` (ref. to [CANSM501](#)), then the CanSM module shall reference the CanIf API function `CanIf_CheckBaudrate` (ref. to chapter 8.6.2) for all configured CAN controllers of the CAN network and notify,

that the baud rate is not supported, if not all `CanIf_CheckBaudrate` calls have returned `E_OK`.」()

**[CANS572]** 「The CanSM module shall remember for each configured CAN network the checked baud rate and the notified result of the last `CanSM_CheckBaudrate` call (ref. to [CANS567](#) and [CANS568](#)).」()

Rationale: This is necessary to decide, if the following `CanSM_ChangeBaudrate` (ref. to [CANS561](#)) call is valid.



## 7.2 State machine for each CAN network

The following diagram specifies the behavioral state machine of the CanSM module, which shall be implemented for each configured CAN network (ref. to [CANS126 Conf](#)).

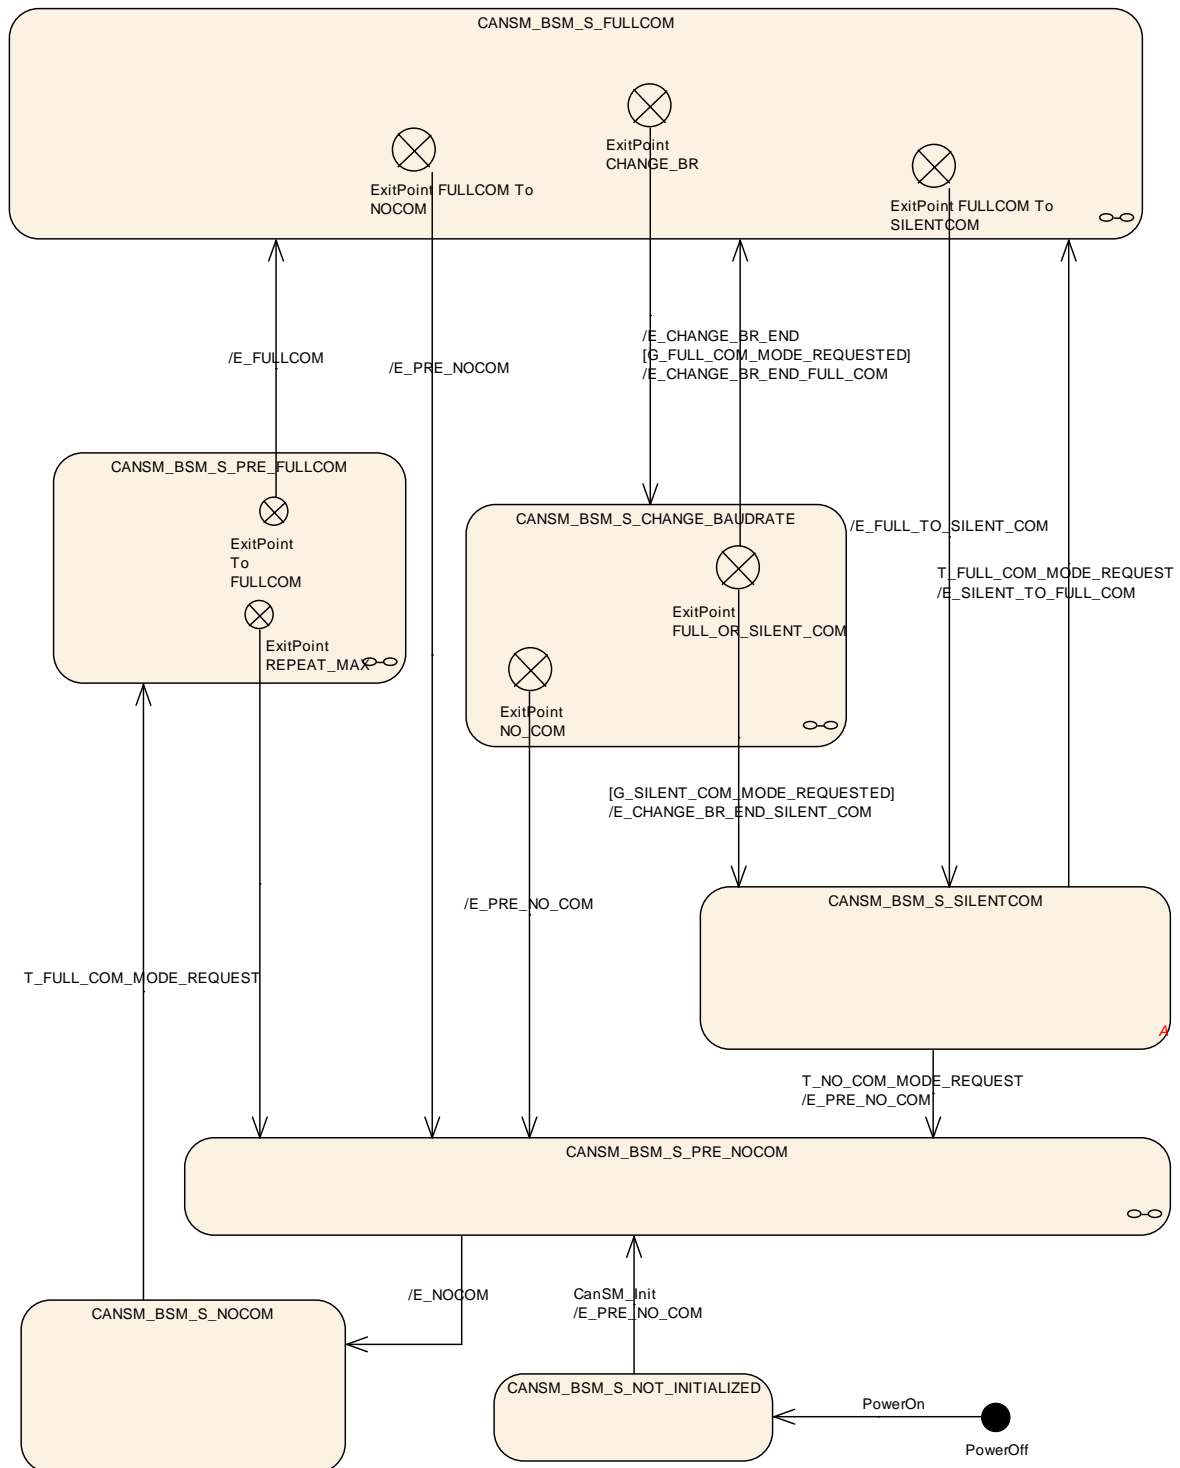


Figure 7-1: CANSM\_BSM, state machine diagram for one CAN network

### 7.2.1 Trigger: PowerOn

**[CANSM424]** 「After PowerOn the CanSM state machines (ref. to Figure 7-1) shall be in the state `CANSM_BSM_NOT_INITIALIZED`.」(BSW01144)

### 7.2.2 Trigger: CanSM\_Init

**[CANSM423]** 「If the CanSM module is requested with the function `CanSM_Init` (ref. to chapter 8.3.1), this shall trigger the CanSM state machines (ref. to Figure 7-1) for all configured CAN Networks (ref. to [CANSM126 Conf](#)) with the trigger `CanSM_Init`.」()

### 7.2.3 Trigger: T\_FULL\_COM\_MODE\_REQUEST

**[CANSM425]** 「The API request `CanSM_RequestComMode` (ref. to [CANSM062](#)) with the parameter `ComM_Mode` equal to `COMM_FULL_COMMUNICATION` shall trigger the state machine with `T_FULL_COM_MODE_REQUEST`, if the function parameter `network` matches the configuration parameter `CANSM_NETWORK_HANDLE` (ref. to [CANSM161 Conf](#)).」()

### 7.2.4 Trigger: T\_NO\_COM\_MODE\_REQUEST

**[CANSM426]** 「The API request `CanSM_RequestComMode` (ref. to [CANSM062](#)) with the parameter `ComM_Mode` equal to `COMM_NO_COMMUNICATION` shall trigger the state machine with `T_NO_COM_MODE_REQUEST`, if the function parameter `network` matches the configuration parameter `CANSM_NETWORK_HANDLE` (ref. to [CANSM161 Conf](#)).」()

### 7.2.5 Guarding condition: G\_FULL\_COM\_MODE\_REQUESTED

**[CANSM427]** 「The guarding condition `G_FULL_COM_MODE_REQUESTED` of the `CanSM_BSM` state machine (ref. to Figure 7-1) shall evaluate, if the latest accepted communication mode request with `CanSM_RequestComMode` (ref. to [CANSM062](#)) for the respective network handle of the state machine has been with the parameter `ComM_Mode` equal to `COMM_FULL_COMMUNICATION`.」()

### 7.2.6 Guarding condition: G\_SILENT\_COM\_MODE\_REQUESTED

**[CANSM429]** 「The guarding condition `G_SILENT_COM_MODE_REQUESTED` of the `CanSM_BSM` state machine (ref. to Figure 7-1) shall evaluate, if the latest accepted communication mode request with `CanSM_RequestComMode` (ref. to [CANSM062](#))

for the respective network handle of the state machine has been with the parameter ComM\_Mode equal to COMM\_SILENT\_COMMUNICATION.」()

### 7.2.7 Effect: E\_PRE\_NOCOM

**[CANSM431]** 「The effect E\_PRE\_NOCOM of the CanSM\_BSM state machine (ref. to Figure 7-1) shall call for the corresponding CAN network the API BswM\_CanSM\_CurrentState with the parameters Network := CanSMComMNetworkHandleRef and CurrentState := CANSM\_BSWM\_NO\_COMMUNICATION.」()

### 7.2.8 Effect: E\_NOCOM

**[CANSM430]** 「The effect E\_NOCOM of the CanSM\_BSM state machine (ref. to Figure 7-1) shall change the internally stored network mode (ref. to [CANSM266](#)) of the addressed CAN network to COMM\_NO\_COMMUNICATION and shall call the API ComM\_BusSM\_ModeIndication with the parameters Channel := CanSMComMNetworkHandleRef (ref. to [CANSM161\\_Conf](#)) and ComMode := COMM\_NO\_COMMUNICATION.」()

### 7.2.9 Effect: E\_FULL\_COM

**[CANSM435]** 「The effect E\_FULL\_COM of the CanSM\_BSM state machine (ref. to Figure 7-1) shall call at 1<sup>st</sup> place for the corresponding CAN network the API BswM\_CanSM\_CurrentState with the parameters Network := CanSMComMNetworkHandleRef and CurrentState := CANSM\_BSWM\_FULL\_COMMUNICATION.」()

**[CANSM539]** 「The effect E\_FULL\_COM of the CanSM\_BSM state machine (ref. to Figure 7-1) shall call at 2<sup>nd</sup> place for each configured CAN controller of the CAN network the API CanIf\_SetPduMode with the parameters ControllerId := CanSMControllerId (ref. to [CANSM141\\_Conf](#)) and PduModeRequest := CANIF\_SET\_ONLINE.」()

**[CANSM540]** 「The effect E\_FULL\_COM of the CanSM\_BSM state machine (ref. to Figure 7-1) shall call at 3<sup>rd</sup> place for the corresponding CAN network the API ComM\_BusSM\_ModeIndication with the parameters Channel := CanSMComMNetworkHandleRef (ref. to [CANSM161\\_Conf](#)) and ComMode := COMM\_FULL\_COMMUNICATION.」()

#### 7.2.10 Effect: E\_FULL\_TO\_SILENT\_COM

**[CANSM434]** 「The effect E\_FULL\_TO\_SILENT\_COM of the CanSM\_BSM state machine (ref. to Figure 7-1) shall call at 1<sup>st</sup> place for the corresponding CAN network the API BswM\_CanSM\_CurrentState with the parameters Network := CanSMComMNetworkHandleRef and CurrentState := CANSM\_BSWM\_SILENT\_COMMUNICATION.」()

**[CANSM541]** 「The effect E\_FULL\_TO\_SILENT\_COM of the CanSM\_BSM state machine (ref. to Figure 7-1) shall call at 2<sup>nd</sup> place for each configured CAN controller of the CAN network the API CanIf\_SetPduMode with the parameters ControllerId := CanSMControllerId (ref. to [CANSM141 Conf](#)) and PduModeRequest := CANIF\_SET\_ONLINE.」()

**[CANSM537]** 「The effect E\_FULL\_TO\_SILENT\_COM of the CanSM\_BSM state machine (ref. to Figure 7-1) shall call at 3<sup>rd</sup> place for each configured CAN controller of the CAN network the API CanIf\_SetPduMode with the parameters ControllerId := CanSMControllerId (ref. to [CANSM141 Conf](#)) and PduModeRequest := CANIF\_SET\_TX\_OFFLINE.」()

**[CANSM538]** 「The effect E\_FULL\_TO\_SILENT\_COM of the CanSM\_BSM state machine (ref. to Figure 7-1) shall call at 4<sup>th</sup> place for the corresponding CAN network the API ComM\_BusSM\_ModeIndication with the parameters Channel := CanSMComMNetworkHandleRef (ref. to [CANSM161 Conf](#)) and ComMode := COMM\_SILENT\_COMMUNICATION.」()

#### 7.2.11 Effect: E\_BR\_END\_FULL\_COM

**[CANSM432]** 「The effect E\_BR\_END\_FULL\_COM of the CanSM\_BSM state machine (ref. to Figure 7-1) shall be the same as E\_FULLCOM (ref. to [CANSM435](#)).」()

#### 7.2.12 Effect: E\_BR\_END\_SILENT\_COM

**[CANSM433]** 「The effect E\_BR\_END\_SILENT\_COM of the CanSM\_BSM state machine (ref. to Figure 7-1) shall be the same as E\_FULL\_TO\_SILENT\_COM (ref. to [CANSM434](#)).」()

#### 7.2.13 Effect: E\_SILENT\_TO\_FULL\_COM

**[CANSM550]** 「The effect E\_SILENT\_TO\_FULL\_COM of the CanSM\_BSM state machine (ref. to Figure 7-1) shall be the same as E\_FULLCOM (ref. to [CANSM435](#)).」()

## 7.2.14 Sub state machine: CANSM\_BSM\_S\_PRE\_NOCOM

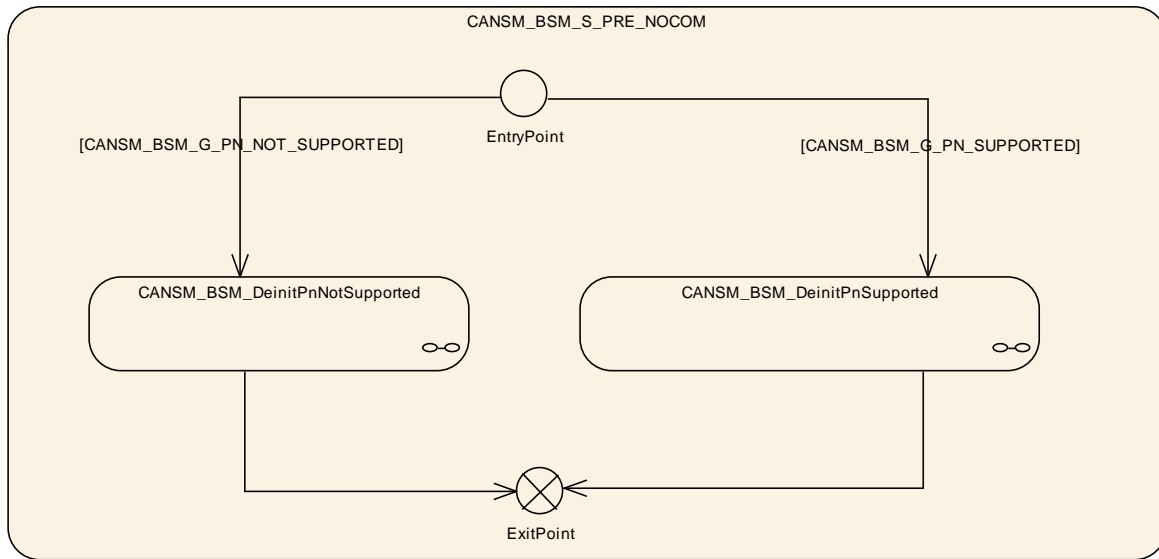


Figure 7-2: CANSM\_BSM\_S\_PRE\_NOCOM, sub state machine of CANSM\_BSM


### 7.2.14.1 Guarding condition: CANSM\_BSM\_G\_PN\_NOT\_SUPPORTED

**[CANSM436]** 「The guarding condition CANSM\_BSM\_G\_PN\_NOT\_SUPPORTED of the sub state machine CANSM\_BSM\_S\_PRE\_NO\_COM (ref. to Figure 7-2) shall evaluate, if the configuration parameter CanTrcvHwPnSupport (ref. to [9], CanTrcv160\_Conf) is FALSE, which is available via the reference CanSMTransceiverId (ref. to [CANSM137\\_Conf](#)) or if no CanSMTransceiverId is configured at all.」()

### 7.2.14.2 Guarding condition: CANSM\_BSM\_G\_PN\_SUPPORTED

**[CANSM437]** 「The guarding condition CANSM\_BSM\_G\_PN\_SUPPORTED of the sub state machine CANSM\_BSM\_S\_PRE\_NO\_COM (ref. to Figure 7-2) shall evaluate, if a CanSMTransceiverId (ref. to [CANSM137\\_Conf](#)) is configured and if the configuration parameter CanTrcvHwPnSupport (ref. to [9], CanTrcv160\_Conf) is TRUE, which is available via the reference CanSMTransceiverId (ref. to [CANSM137\\_Conf](#)).」()

### 7.2.14.3 Sub state machine for deinitialization with partial network support

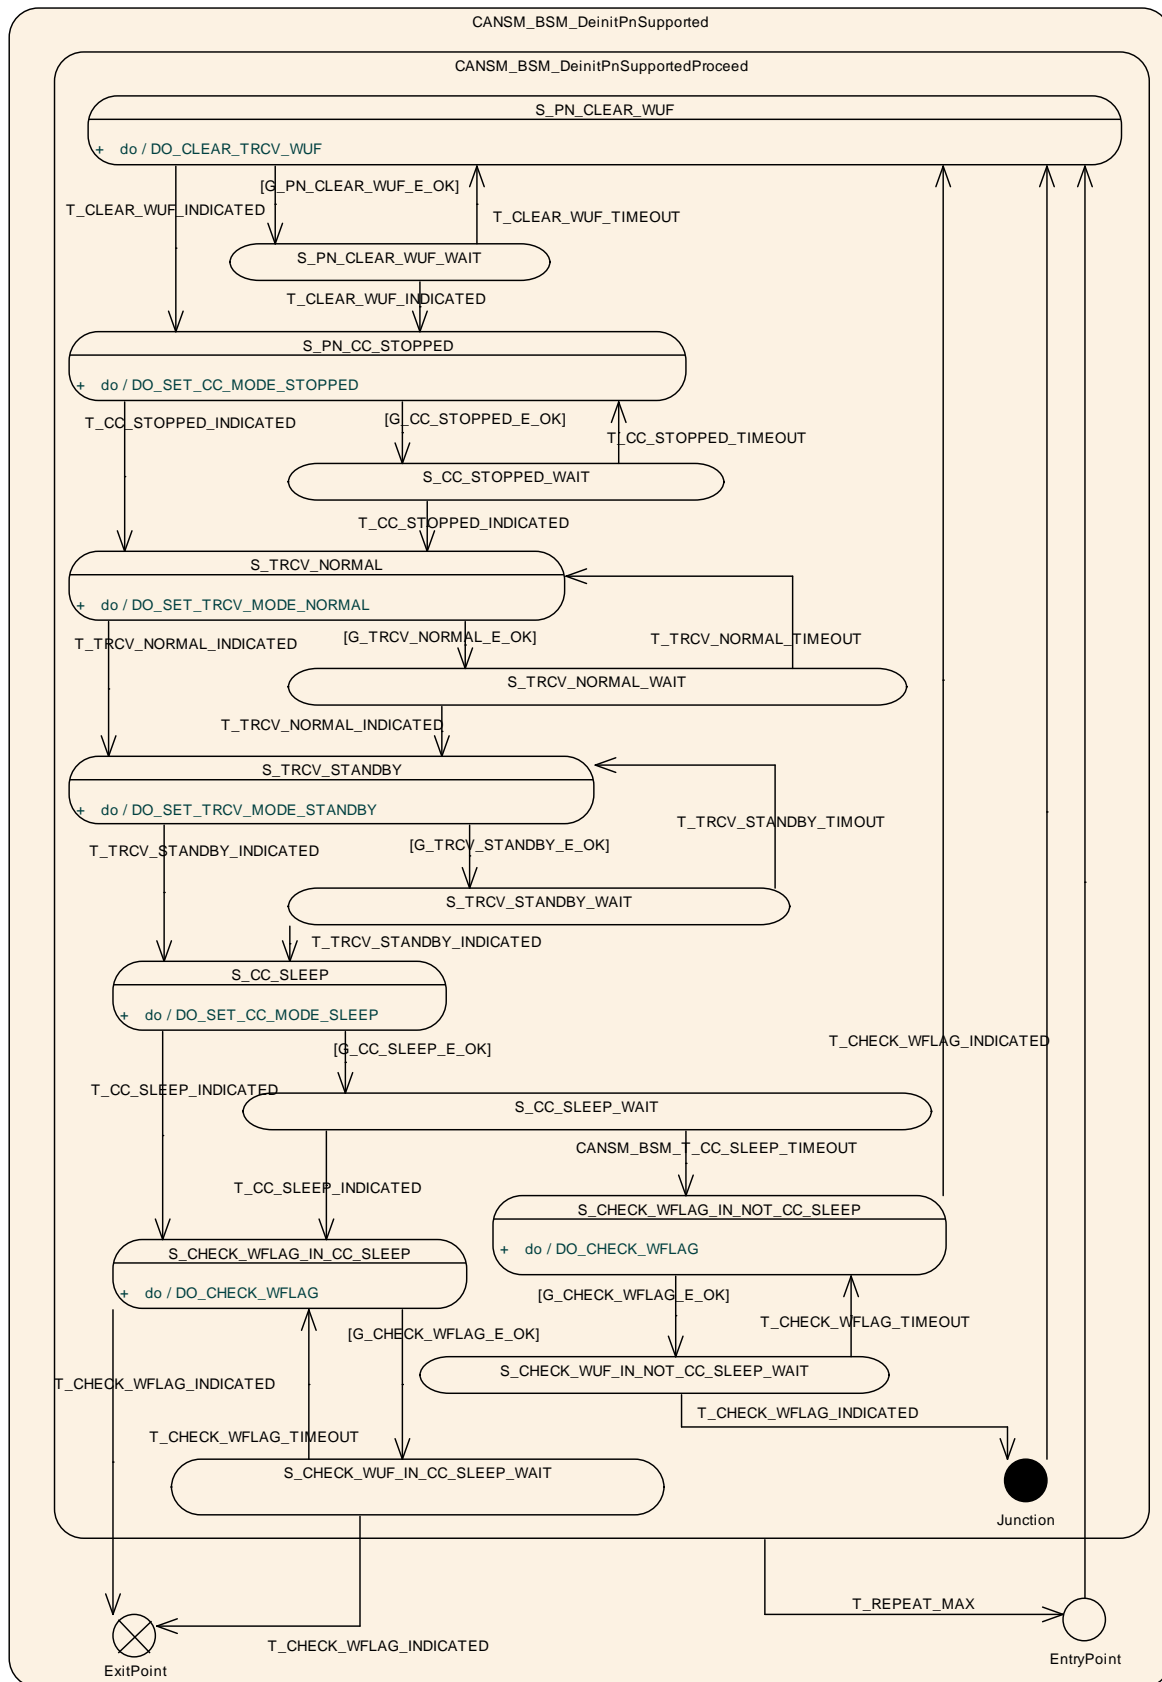

**Figure 7-3: CANSM\_BSM\_DeinitPnSupported, sub state machine of CANSM\_BSM\_S\_PRE\_NOCOM**

#### 7.2.14.3.1 State operation to do in: S\_PN\_CLEAR\_WUF

**[CANS438]** 「As long the sub state machine CANS438\_BSM\_DeinitPnSupported (ref. to Figure 7-3) is in the state S\_PN\_CLEAR\_WUF, the CanSM module operate the do action DO\_CLEAR\_TRCV\_WUF and therefore repeat the API request CanIf\_ClrTrcvWufFlag (ref. to chapter 8.6.1) and use the configured Transceiver (ref. to [CANS437\\_Conf](#)) as API function parameter.」()

#### 7.2.14.3.2 Guarding condition: G\_PN\_CLEAR\_WUF\_E\_OK

**[CANS439]** 「The guarding condition G\_PN\_CLEAR\_WUF\_E\_OK of the sub state machine CANS438\_BSM\_DeinitPnSupported (ref. to Figure 7-3) shall be passed, if the API call of [CANS438](#) has returned E\_OK.」()

#### 7.2.14.3.3 Trigger: T\_CLEAR\_WUF\_INDICATED

**[CANS440]** 「The callback function CanSM\_ClearTrcvWufFlagIndication (ref. to [CANS443](#)) shall trigger the sub state machine CANS438\_BSM\_DeinitPnSupported (ref. to Figure 7-3) of the CAN network with T\_CLEAR\_WUF\_INDICATED, if the function parameter Transceiver of CanSM\_ClearTrcvWufFlagIndication matches to the configured CAN Transceiver (ref. to [CANS437\\_Conf](#)) of the CAN network.」()

#### 7.2.14.3.4 Trigger: T\_CLEAR\_WUF\_TIMEOUT

**[CANS443]** 「After a timeout of CANS438\_MODEREQ\_REPEAT\_TIME (ref. to [CANS436\\_Conf](#)) for the callback function CanSM\_ClearTrcvWufFlagIndication (ref. to [CANS440](#)), this condition shall trigger the sub state machine CANS438\_BSM\_DeinitPnSupported (ref. to Figure 7-3) of the respective network with T\_CLEAR\_WUF\_TIMEOUT.」()

#### 7.2.14.3.5 State operation to do in: S\_PN\_CC\_STOPPED

**[CANS441]** 「As long the sub state machine CANS438\_BSM\_DeinitPnSupported (ref. to Figure 7-3) is in the state S\_PN\_CC\_STOPPED, the CanSM module shall operate the do action DO\_SET\_CC\_MODE\_STOPPED and therefore repeat for all configured CAN controllers of the CAN network (ref. to [CANS441\\_Conf](#)) the API request CanIf\_SetControllerMode (ref. to chapter 8.6.1) with ControllerMode equal to CANIF\_CS\_STOPPED.」()

**7.2.14.3.6 Guarding condition: G\_CC\_STOPPED\_E\_OK**

**[CANSM442]** 「The guarding condition G\_CC\_STOPPED\_E\_OK of the sub state machine CANSM\_BSM\_DeinitPnSupported (ref. to Figure 7-3) shall be passed, if all API calls of [CANSM441](#) have returned E\_OK.」()

**7.2.14.3.7 Trigger: T\_CC\_STOPPED\_INDICATED**

**[CANSM444]** 「If CanSM module has got all mode indications (ref. to [CANSM396](#)) for the configured CAN controllers of the CAN network (ref. to [CANSM141 Conf](#)) after the respective requests to stop the CAN controllers of the CAN network (ref. to [CANSM442](#)), this shall trigger the sub state machine CANSM\_BSM\_DeinitPnSupported (ref. to Figure 7-3) of the CAN network with T\_CC\_STOPPED\_INDICATED.」()

**7.2.14.3.8 Trigger: T\_CC\_STOPPED\_TIMEOUT**

**[CANSM445]** 「After a timeout of CANSM\_MODEREQ\_REPEAT\_TIME (ref. to [CANSM336 Conf](#)) for all supposed controller stopped mode indications (ref. to [CANSM444](#)), this condition shall trigger the sub state machine CANSM\_BSM\_DeinitPnSupported (ref. to Figure 7-3) of the respective network with T\_CC\_STOPPED\_TIMEOUT.」()

**7.2.14.3.9 State operation to do in: S\_TRCV\_NORMAL**

**[CANSM446]** 「As long the sub state machine CANSM\_BSM\_DeinitPnSupported (ref. to Figure 7-3) is in the state S\_TRCV\_NORMAL, the CanSM module shall operate the do action DO\_SET\_TRCV\_MODE\_NORMAL and therefore repeat for the configured CAN Transceiver of the CAN network (ref. to [CANSM137 Conf](#)) the API request CanIf\_SetTrcvMode (ref. to chapter 8.6.1) with TransceiverMode equal to CANTRCV\_TRCVMODE\_NORMAL.」()

**7.2.14.3.10 Guarding condition: G\_TRCV\_NORMAL\_E\_OK**

**[CANSM447]** 「The guarding condition G\_TRCV\_NORMAL\_E\_OK of the sub state machine CANSM\_BSM\_DeinitPnSupported (ref. to Figure 7-3) shall be passed, if the API call of [CANSM446](#) has returned E\_OK.」()

**7.2.14.3.11 Trigger: T\_TRCV\_NORMAL\_INDICATED**

**[CANSM448]** 「If CanSM module has got the CANTRCV\_TRCVMODE\_NORMAL mode indication (ref. to [CANSM399](#)) for the configured CAN Transceiver of the CAN network (ref. to [CANSM137 Conf](#)) after the respective request (ref. to [CANSM446](#)),



this shall trigger the sub state machine `CANSM_BSM_DeinitPnSupported` (ref. to Figure 7-3) of the CAN network with `T_TRCV_NORMAL_INDICATED.()`

#### **7.2.14.3.12 Trigger: T\_TRCV\_NORMAL\_TIMEOUT**

**[CANSM449]** 「After a timeout of `CANSM_MODEREQ_REPEAT_TIME` (ref. to [CANSM336 Conf](#)) for the supposed transceiver normal indication (ref. to [CANSM448](#)), this condition shall trigger the sub state machine `CANSM_BSM_DeinitPnSupported` (ref. to Figure 7-3) of the respective network with `T_TRCV_NORMAL_TIMEOUT.()`

#### **7.2.14.3.13 State operation to do in: S\_TRCV\_STANDBY**

**[CANSM450]** 「As long the sub state machine `CANSM_BSM_DeinitPnSupported` (ref. to Figure 7-3) is in the state `S_TRCV_STANDBY`, the CanSM module shall operate the do action `DO_SET_TRCV_STANDBY` and therefore repeat for the configured CAN Transceiver of the CAN network (ref. to [CANSM137 Conf](#)) the API request `CanIf_SetTrcvMode` (ref. to chapter 8.6.1) with `TransceiverMode` equal to `CANTRCV_TRCVMODE_STANDBY.()`

#### **7.2.14.3.14 Guarding condition: G\_TRCV\_STANDBY\_E\_OK**

**[CANSM451]** 「The guarding condition `G_TRCV_STANDBY_E_OK` of the sub state machine `CANSM_BSM_DeinitPnSupported` (ref. to Figure 7-3) shall be passed, if the API call of [CANSM450](#) has returned `E_OK.()`

#### **7.2.14.3.15 Trigger: T\_TRCV\_STANDBY\_INDICATED**

**[CANSM452]** 「If the CanSM module has got the `CANTRCV_TRCVMODE_STANDBY` mode indication (ref. to [CANSM399](#)) for the configured CAN Transceiver of the CAN network (ref. to [CANSM137 Conf](#)) after the respective request (ref. to [CANSM450](#)), this shall trigger the sub state machine `CANSM_BSM_DeinitPnSupported` (ref. to Figure 7-3) of the CAN network with `T_TRCV_STANDBY_INDICATED.()`

#### **7.2.14.3.16 Trigger: T\_TRCV\_STANDBY\_TIMEOUT**

**[CANSM454]** 「After a timeout of `CANSM_MODEREQ_REPEAT_TIME` (ref. to [CANSM336 Conf](#)) for the supposed transceiver standby indication (ref. to [CANSM452](#)), this condition shall trigger the sub state machine `CANSM_BSM_DeinitPnSupported` (ref. to Figure 7-3) of the respective network with `T_TRCV_STANDBY_TIMEOUT.()`

**7.2.14.3.17 State operation to do in: S\_CC\_SLEEP**

**[CANS453]** «As long the sub state machine CANS453\_DeinitPnSupported (ref. to Figure 7-3) is in the state S\_CC\_SLEEP, the CanSM module shall operate the do action DO\_SET\_CC\_MODE\_SLEEP and therefore repeat for all configured CAN controllers of the CAN network (ref. to [CANS411 Conf](#)) the API request CanIf\_SetControllerMode (ref. to chapter 8.6.1) with ControllerMode equal to CANIF\_CS\_SLEEP.»()

**7.2.14.3.18 Guarding condition: G\_CC\_SLEEP\_E\_OK**

**[CANS455]** «The guarding condition G\_CC\_SLEEP\_E\_OK of the sub state machine CANS453\_DeinitPnSupported (ref. to Figure 7-3) shall be passed, if all API calls of [CANS453](#) have returned E\_OK.»()

**7.2.14.3.19 Trigger: T\_CC\_SLEEP\_INDICATED**

**[CANS456]** «If CanSM module has got all mode indications (ref. to [CANS396](#)) for the configured CAN controllers of the CAN network (ref. to [CANS411 Conf](#)) after the respective requests to set the CAN controllers of the CAN network to sleep mode (ref. to [CANS453](#)), this shall trigger the sub state machine CANS453\_DeinitPnSupported (ref. to Figure 7-3) of the CAN network with T\_CC\_SLEEP\_INDICATED.»()

**7.2.14.3.20 Trigger: CANS453\_T\_CC\_SLEEP\_TIMEOUT**

**[CANS457]** «After a timeout of CANS453\_MODEREQ\_REPEAT\_TIME (ref. to [CANS336 Conf](#)) for all supposed controller sleep mode indications (ref. to [CANS456](#)), this condition shall trigger the sub state machine CANS453\_DeinitPnSupported (ref. to Figure 7-3) of the respective network with CANS453\_T\_CC\_SLEEP\_TIMEOUT.»()

**7.2.14.3.21 State operation to do in: S\_CHECK\_WFLAG\_IN\_CC\_SLEEP**

**[CANS458]** «As long the sub state machine CANS453\_DeinitPnSupported (ref. to Figure 7-3) is in the state S\_CHECK\_WFLAG\_IN\_CC\_SLEEP, the CanSM module operate the do action DO\_CHECK\_WFLAG and therefore repeat the API request CanIf\_CheckTrcvWakeFlag (ref. to chapter 8.6.1) and use the configured CAN Transceiver of the related Network (ref. to [CANS437 Conf](#)) as Transceiver parameter.»()

**7.2.14.3.22 Guarding condition: G\_CHECK\_WFLAG\_E\_OK**

**[CANSM459]** 「The guarding condition G\_CHECK\_WFLAG\_E\_OK of the sub state machine CANSM\_BSM\_DeinitPnSupported (ref. to Figure 7-3) shall be passed, if the API call of [CANSM458](#) or [CANSM462](#) has returned E\_OK.」()

**7.2.14.3.23 Trigger: T\_CHECK\_WFLAG\_INDICATED**

**[CANSM460]** 「The callback function CanSM\_CheckTransceiverWakeFlagIndication (ref. to [CANSM416](#)) shall trigger the sub state machine CANSM\_BSM\_DeinitPnSupported (ref. to Figure 7-3) of the CAN network with T\_CHECK\_WFLAG\_INDICATED, if the function parameter Transceiver of CanSM\_CheckTransceiverWakeFlagIndication matches to the configured CAN Transceiver (ref. to [CANSM137\\_Conf](#)) of the CAN network.」()

**7.2.14.3.24 Trigger: T\_CHECK\_WFLAG\_TIMEOUT**

**[CANSM461]** 「After a timeout of CANSM\_MODEREQ\_REPEAT\_TIME (ref. to [CANSM336\\_Conf](#)) for the callback function CanSM\_CheckTransceiverWakeFlagIndication (ref. to [CANSM460](#)), this condition shall trigger the sub state machine CANSM\_BSM\_DeinitPnSupported (ref. to Figure 7-3) of the respective network with T\_CHECK\_WFLAG\_TIMEOUT.」()


**7.2.14.3.25 State operation to do in: S\_CHECK\_WFLAG\_IN\_NOT\_CC\_SLEEP**

**[CANSM462]** 「As long the sub state machine CANSM\_BSM\_DeinitPnSupported (ref. to Figure 7-3) is in the state S\_CHECK\_WFLAG\_IN\_NOT\_CC\_SLEEP, the CanSM module operate the do action DO\_CHECK\_WFLAG and therefore repeat the API request CanIf\_CheckTrcvWakeFlag (ref. to chapter 8.6.1) and use the configured CAN Transceiver of the related Network (ref. to [CANSM137\\_Conf](#)) as Transceiver parameter.」()

**7.2.14.3.26 Trigger: T\_REPEAT\_MAX**

**[CANSM463]** 「If the sub state machine CANSM\_BSM\_DeinitPnSupported (ref. to Figure 7-3) has repeated any of the CanIf API calls (ref. to [CANSM438](#), [CANSM441](#), [CANSM446](#), [CANSM450](#), [CANSM453](#), [CANSM458](#), [CANSM462](#)) more often than configured (ref. to [CANSM335\\_Conf](#)) without getting the return value E\_OK and without getting the supposed mode indication callbacks (ref. to [CANSM444](#), [CANSM448](#), [CANSM452](#), [CANSM456](#), [CANSM460](#)), this shall trigger the sub state machine CANSM\_BSM\_DeinitPnSupported with T\_REPEAT\_MAX.」()

#### 7.2.14.4 Sub state machine for deinitialization without partial network support

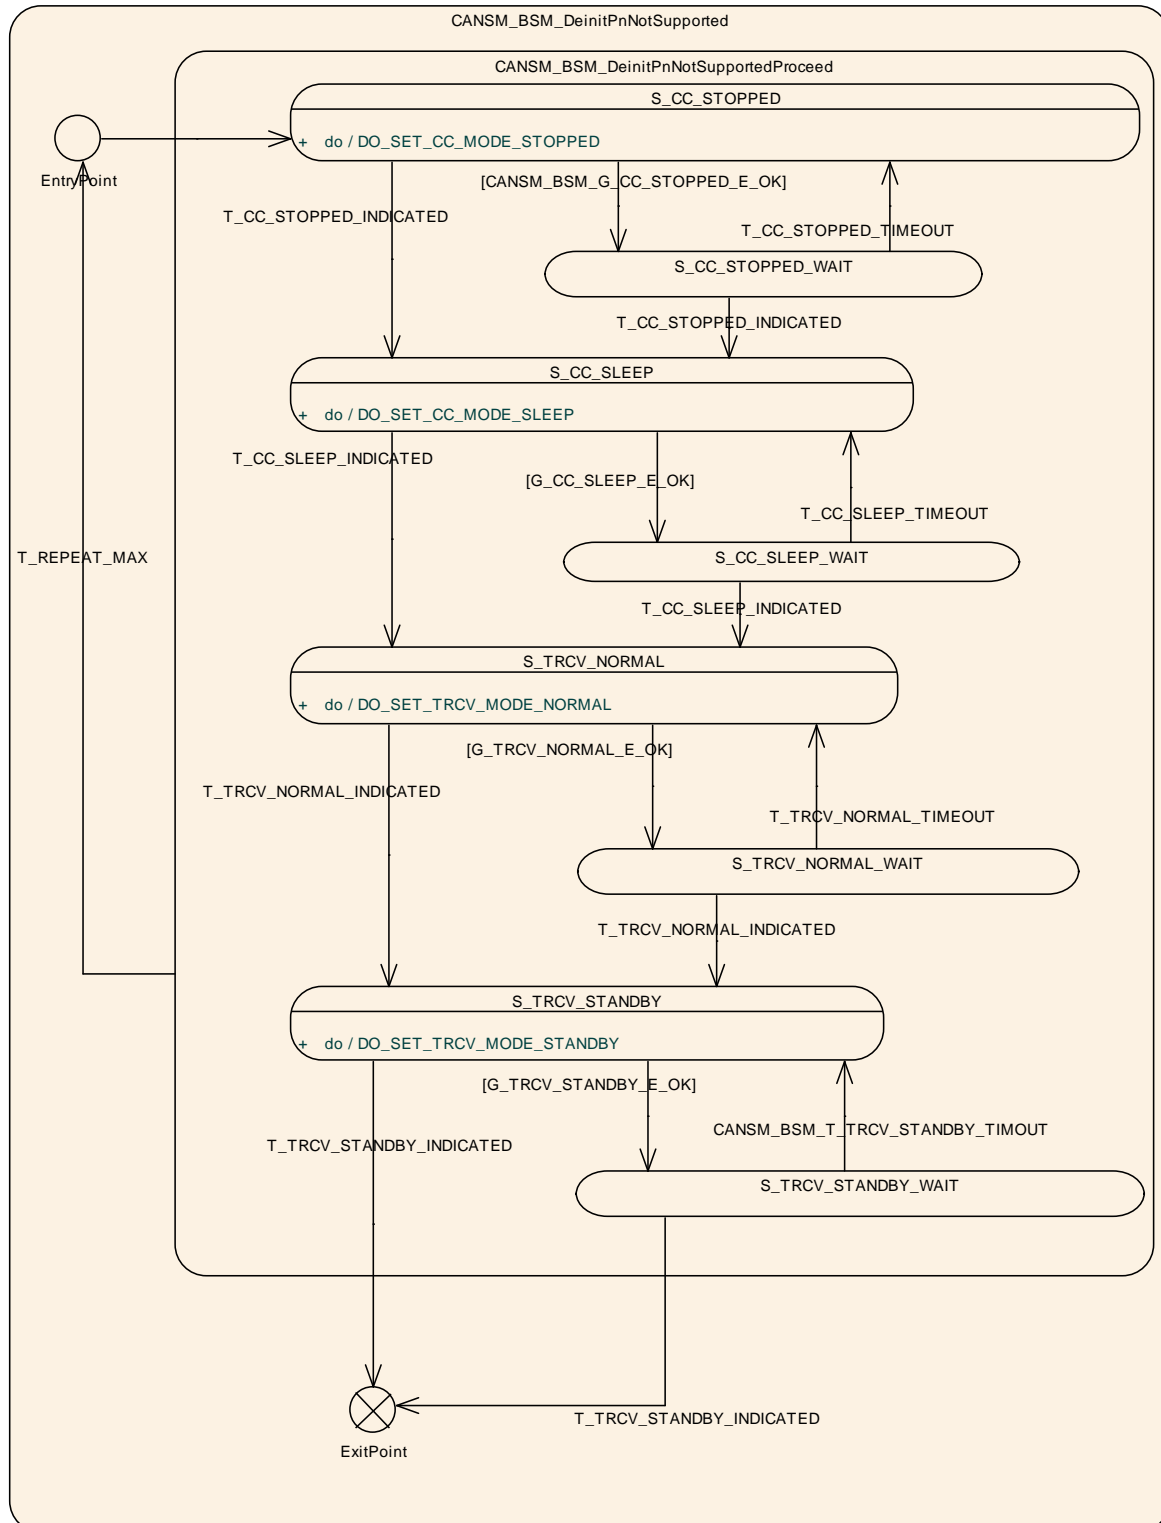

**Figure 7-4: CANSM\_BSM\_DeinitPnNotSupported, sub state machine of CANSM\_BSM\_S\_PRE\_NOCOM**

#### 7.2.14.4.1 State operation to do in: S\_CC\_STOPPED

**[CANS464]** 「As long the sub state machine CANS464\_DeinitPnNotSupported (ref. to Figure 7-4) is in the state S\_CC\_STOPPED, the CanSM module shall operate the do action DO\_SET\_CC\_MODE\_STOPPED and therefore repeat for all configured CAN controllers of the CAN network (ref. to [CANS411\\_Conf](#)) the API request CanIf\_SetControllerMode (ref. to chapter 8.6.1) with ControllerMode equal to CANIF\_CS\_STOPPED.」()

#### 7.2.14.4.2 Guarding condition: CANS464\_G\_CC\_STOPPED\_OK

**[CANS465]** 「The guarding condition CANS464\_G\_CC\_STOPPED\_OK of the sub state machine CANS464\_DeinitPnNotSupported (ref. to Figure 7-4) shall be passed, if all API calls of [CANS464](#) have returned E\_OK.」()

#### 7.2.14.4.3 Trigger: T\_CC\_STOPPED\_INDICATED

**[CANS466]** 「If CanSM module has got all mode indications (ref. to [CANS396](#)) for the configured CAN controllers of the CAN network (ref. to [CANS411\\_Conf](#)) after the respective requests to stop the CAN controllers of the CAN network (ref. to [CANS464](#)), this shall trigger the sub state machine CANS464\_DeinitPnNotSupported (ref. to Figure 7-4) of the CAN network with T\_CC\_STOPPED\_INDICATED.」()

#### 7.2.14.4.4 Trigger: T\_CC\_STOPPED\_TIMEOUT

**[CANS467]** 「After a timeout of CANS467\_MODEREQ\_REPEAT\_TIME (ref. to [CANS336\\_Conf](#)) for all supposed controller stopped mode indications (ref. to [CANS466](#)), this condition shall trigger the sub state machine CANS464\_DeinitPnNotSupported (ref. to Figure 7-4) of the respective network with T\_CC\_STOPPED\_TIMEOUT.」()

#### 7.2.14.4.5 State operation to do in: S\_CC\_SLEEP

**[CANS468]** 「As long the sub state machine CANS468\_DeinitPnNotSupported (ref. to Figure 7-4) is in the state S\_CC\_SLEEP, the CanSM module shall operate the do action DO\_SET\_CC\_MODE\_SLEEP and therefore repeat for all configured CAN controllers of the CAN network (ref. to [CANS411\\_Conf](#)) the API request CanIf\_SetControllerMode (ref. to chapter 8.6.1) with ControllerMode equal to CANIF\_CS\_SLEEP.」()

**7.2.14.4.6 Guarding condition: G\_CC\_SLEEP\_E\_OK**

**[CANSM469]** 「The guarding condition G\_CC\_SLEEP\_E\_OK of the sub state machine CANSM\_BSM\_DeinitPnNotSupported (ref. to Figure 7-4) shall be passed, if all API calls of [CANSM468](#) have returned E\_OK.」()

**7.2.14.4.7 Trigger: T\_CC\_SLEEP\_INDICATED**

**[CANSM470]** 「If CanSM module has got all mode indications (ref. to [CANSM396](#)) for the configured CAN controllers of the CAN network (ref. to [CANSM141 Conf](#)) after the respective requests to set the CAN controllers of the CAN network to sleep mode (ref. to [CANSM468](#)), this shall trigger the sub state machine CANSM\_BSM\_DeinitPnNotSupported (ref. to Figure 7-4) of the CAN network with T\_CC\_SLEEP\_INDICATED.」()

**7.2.14.4.8 Trigger: T\_CC\_SLEEP\_TIMEOUT**

**[CANSM471]** 「After a timeout of CANSM\_MODEREQ\_REPEAT\_TIME (ref. to [CANSM336 Conf](#)) for all supposed controller sleep mode indications (ref. to [CANSM470](#)), this condition shall trigger the sub state machine CANSM\_BSM\_DeinitPnNotSupported (ref. to Figure 7-4) of the respective network with T\_CC\_SLEEP\_TIMEOUT.」()

**7.2.14.4.9 State operation to do in: S\_TRCV\_NORMAL**

**[CANSM472]** 「If for the CAN network a CAN Transceiver is configured (ref. to [CANSM137 Conf](#)), then as long the sub state machine CANSM\_BSM\_DeinitPnNotSupported (ref. to Figure 7-4) is in the state S\_TRCV\_NORMAL, the CanSM module shall operate the do action DO\_SET\_TRCV\_MODE\_NORMAL and therefore repeat for the configured CAN Transceiver of the CAN network (ref. to [CANSM137 Conf](#)) the API request CanIf\_SetTrcvMode (ref. to chapter 8.6.1) with TransceiverMode equal to CANTRCV\_TRCVMODE\_NORMAL.」()

**7.2.14.4.10 Guarding condition: G\_TRCV\_NORMAL\_E\_OK**

**[CANSM473]** 「The guarding condition G\_TRCV\_NORMAL\_E\_OK of the sub state machine CANSM\_BSM\_DeinitPnNotSupported (ref. to Figure 7-4) shall be passed, if the API call of [CANSM472](#) has returned E\_OK.」()

**7.2.14.4.11 Trigger: T\_TRCV\_NORMAL\_INDICATED**

**[CANSM474]** 「If CanSM module has got the CANTRCV\_TRCVMODE\_NORMAL mode indication (ref. to [CANSM399](#)) for the configured CAN Transceiver of the CAN

network (ref. to [CANSIM137\\_Conf](#)) after the respective request (ref. to [CANSIM472](#)), this shall trigger the sub state machine `CANSIM_BSM_DeinitPnNotSupported` (ref. to Figure 7-4) of the CAN network with `T_TRCV_NORMAL_INDICATED.()`

**[CANSIM556]** «If no CAN Transceiver is configured for the CAN network, then this shall trigger the sub state machine `CANSIM_BSM_DeinitPnNotSupported` (ref. to Figure 7-4) of the CAN network in the state `S_TRCV_NORMAL` with `T_TRCV_NORMAL_INDICATED.()`

#### 7.2.14.4.12 Trigger: `T_TRCV_NORMAL_TIMEOUT`

**[CANSIM475]** «After a timeout of `CANSIM_MODEREQ_REPEAT_TIME` (ref. to [CANSIM336\\_Conf](#)) for the supposed transceiver normal indication (ref. to [CANSIM474](#)), this condition shall trigger the sub state machine `CANSIM_BSM_DeinitPnNotSupported` (ref. to Figure 7-4) of the respective network with `T_TRCV_NORMAL_TIMEOUT.()`

#### 7.2.14.4.13 State operation to do in: `S_TRCV_STANDBY`

**[CANSIM476]** «If for the CAN network a CAN Transceiver is configured (ref. to [CANSIM137\\_Conf](#)), then as long the sub state machine `CANSIM_BSM_DeinitPnNotSupported` (ref. to Figure 7-4) is in the state `S_TRCV_STANDBY`, the CanSM module shall operate the do action `DO_SET_TRCV_MODE_STANDBY` and therefore repeat for the configured CAN Transceiver of the CAN network (ref. to [CANSIM137\\_Conf](#)) the API request `CanIf_SetTrcvMode` (ref. to chapter 8.6.1) with `TransceiverMode` equal to `CANTRCV_TRCVMODE_STANDBY.()`

#### 7.2.14.4.14 Guarding condition: `G_TRCV_STANDBY_E_OK`

**[CANSIM477]** «The guarding condition `G_TRCV_STANDBY_E_OK` of the sub state machine `CANSIM_BSM_DeinitPnNotSupported` (ref. to Figure 7-4) shall be passed, if the API call of [CANSIM476](#) has returned `E_OK.()`

#### 7.2.14.4.15 Trigger: `T_TRCV_STANDBY_INDICATED`

**[CANSIM478]** «If CanSM module has got the `CANTRCV_TRCVMODE_STANDBY` mode indication (ref. to [CANSIM399](#)) for the configured CAN Transceiver of the CAN network (ref. to [CANSIM137\\_Conf](#)) after the respective request (ref. to [CANSIM476](#)), this shall trigger the sub state machine `CANSIM_BSM_DeinitPnNotSupported` (ref. to Figure 7-4) of the CAN network with `T_TRCV_STANDBY_INDICATED.()`

**[CANSIM557]** «If no CAN Transceiver is configured for the CAN network (ref. to [CANSIM137\\_Conf](#)), then this shall trigger the sub state machine



CANSM\_BSM\_DeinitPnNotSupported (ref. to Figure 7-4) of the CAN network in the state S\_TRCV\_STANDBY with T\_TRCV\_STANDBY\_INDICATED.>()

#### 7.2.14.4.16 Trigger: CANSM\_BSM\_T\_TRCV\_STANDBY\_TIMEOUT


**[CANSM479]** 「After a timeout of CANSM\_MODEREQ\_REPEAT\_TIME (ref. to [CANSM336 Conf](#)) for the supposed transceiver standby indication (ref. to [CANSM478](#)), this condition shall trigger the sub state machine CANSM\_BSM\_DeinitPnNotSupported (ref. to Figure 7-4) of the respective network with CANSM\_BSM\_T\_TRCV\_STANDBY\_TIMEOUT.>()

#### 7.2.14.4.17 Trigger: T\_REPEAT\_MAX

**[CANSM480]** 「If the sub state machine CANSM\_BSM\_DeinitPnNotSupported (ref. to Figure 7-4) has repeated any of the CanIf API calls (ref. to [CANSM464](#), [CANSM468](#), [CANSM472](#), [CANSM476](#)) more often than configured (ref. to [CANSM335 Conf](#)) without getting the return value E\_OK and without getting the supposed mode indication callbacks (ref. to [CANSM466](#), [CANSM470](#), [CANSM474](#), [CANSM478](#)), this shall trigger the sub state machine CANSM\_BSM\_DeinitPnNotSupported with T\_REPEAT\_MAX.>()



### 7.2.15 Sub state machine to prepare full communication

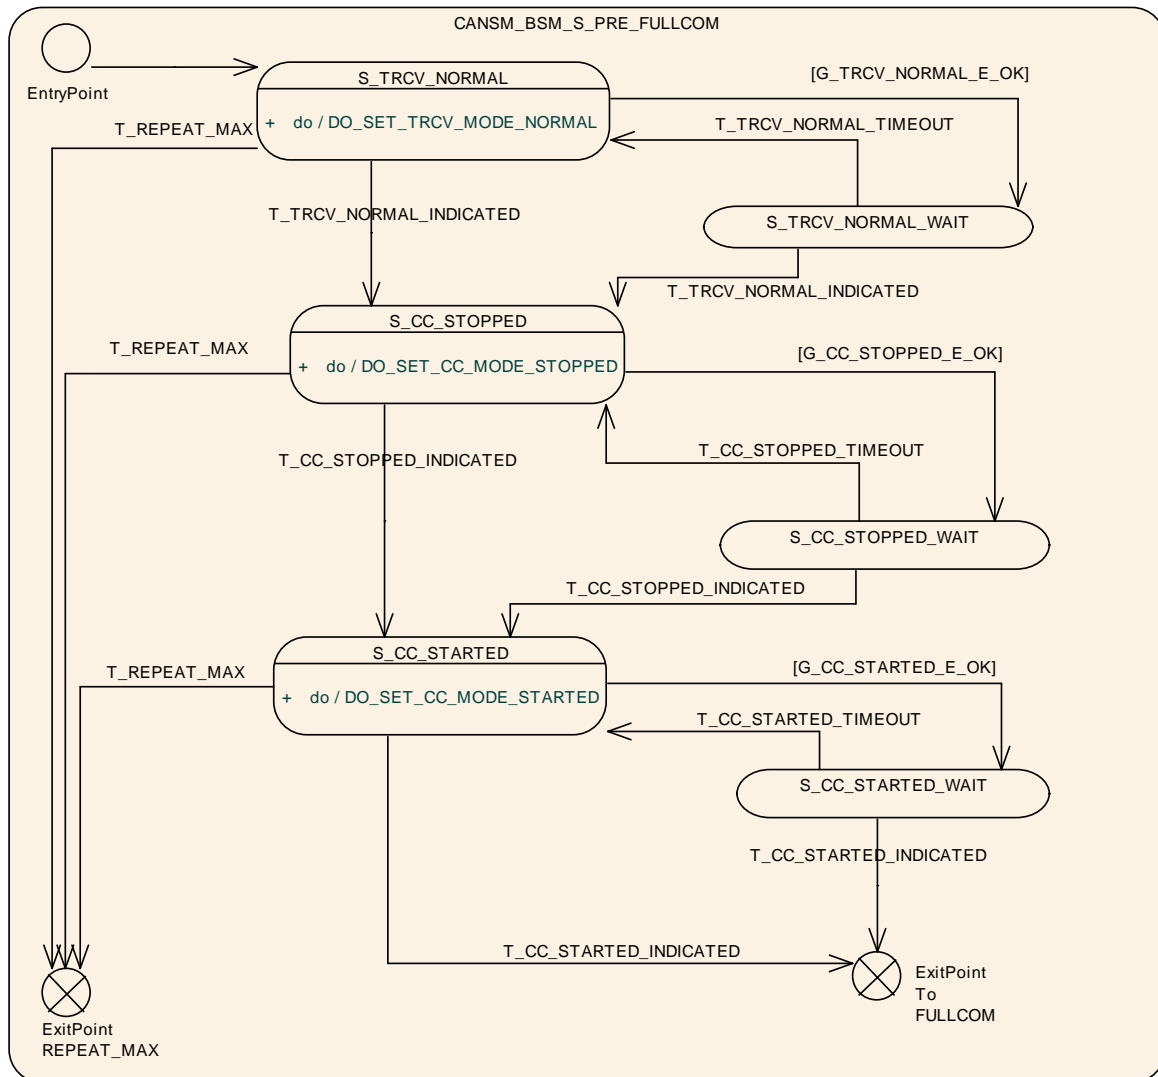

**Figure 7-5: CANSM\_BSM\_S\_PRE\_FULLCOM, sub state machine of CANSM\_BSM**

### 7.2.15.1 State operation to do in: S\_TRCV\_NORMAL

**[CANSM483]** If for the CAN network a CAN Transceiver is configured (ref. to [CANSM137 Conf](#)), then as long the sub state machine CANSM\_BSM\_S\_PRE\_FULLCOM (ref. to Figure 7-5) is in the state S\_TRCV\_NORMAL, the CanSM module shall operate the do action DO\_SET\_TRCV\_MODE\_NORMAL and therefore repeat for the configured CAN Transceiver of the CAN network (ref. to [CANSM137 Conf](#)) the API request CanIf\_SetTrcvMode (ref. to chapter 8.6.1) with TransceiverMode equal to CANTRCV\_TRCVMODE\_NORMAL.()

**7.2.15.2 Guarding condition: G\_TRCV\_NORMAL\_E\_OK**

**[CANS484]** 「The guarding condition G\_TRCV\_NORMAL\_E\_OK of the sub state machine CANS484\_BSM\_S\_PRE\_FULLCOM (ref. to Figure 7-5) shall be passed, if the API call of [CANS483](#) has returned E\_OK.」()

**7.2.15.3 Trigger: T\_TRCV\_NORMAL\_INDICATED**

**[CANS485]** 「If CanSM module has got the CANTRCV\_TRCVMODE\_NORMAL mode indication (ref. to [CANS399](#)) for the configured CAN Transceiver of the CAN network (ref. to [CANS137 Conf](#)) after the respective request (ref. to [CANS483](#)), this shall trigger the sub state machine CANS484\_BSM\_S\_PRE\_FULLCOM (ref. to Figure 7-5) of the CAN network with T\_TRCV\_NORMAL\_INDICATED.」()

**[CANS558]** 「If no CAN Transceiver is configured for the CAN network (ref. to [CANS137 Conf](#)), then this shall trigger the sub state machine CANS484\_BSM\_S\_PRE\_FULLCOM (ref. to Figure 7-5) of the CAN network in the state S\_TRCV\_NORMAL with T\_TRCV\_NORMAL\_INDICATED.」()

**7.2.15.4 Trigger: T\_TRCV\_NORMAL\_TIMEOUT**

**[CANS486]** 「After a timeout of CANS484\_MODEREQ\_REPEAT\_TIME (ref. to [CANS336 Conf](#)) for the supposed transceiver normal indication (ref. to [CANS485](#)), this condition shall trigger the sub state machine CANS484\_BSM\_S\_PRE\_FULLCOM (ref. to Figure 7-5) of the respective network with T\_TRCV\_NORMAL\_TIMEOUT.」()

**7.2.15.5 State operation to do in: S\_CC\_STOPPED**

**[CANS487]** 「As long the sub state machine CANS484\_BSM\_S\_PRE\_FULLCOM (ref. to Figure 7-5) is in the state S\_CC\_STOPPED, the CanSM module shall operate the do action DO\_SET\_CC\_MODE\_STOPPED and therefore repeat for all configured CAN controllers of the CAN network (ref. to [CANS141 Conf](#)) the API request CanIf\_SetControllerMode (ref. to chapter 8.6.1) with ControllerMode equal to CANIF\_CS\_STOPPED.」()

**7.2.15.6 Guarding condition: G\_CC\_STOPPED\_OK**

**[CANS488]** 「The guarding condition G\_CC\_STOPPED\_OK of the sub state machine CANS484\_BSM\_S\_PRE\_FULLCOM (ref. to Figure 7-5) shall be passed, if all API calls of [CANS487](#) have returned E\_OK.」()

**7.2.15.7 Trigger: T\_CC\_STOPPED\_INDICATED**

**[CANS489]** «If CanSM module has got all mode indications (ref. to [CANS436](#)) for the configured CAN controllers of the CAN network (ref. to [CANS411\\_Conf](#)) after the respective requests to stop the CAN controllers of the CAN network (ref. to [CANS487](#)), this shall trigger the sub state machine CANS4\_BSM\_S\_PRE\_FULLCOM (ref. to Figure 7-5) of the CAN network with T\_CC\_STOPPED\_INDICATED.»()

**7.2.15.8 Trigger: T\_CC\_STOPPED\_TIMEOUT**

**[CANS490]** «After a timeout of CANS4\_MODEREQ\_REPEAT\_TIME (ref. to [CANS436\\_Conf](#)) for all supposed controller stopped mode indications (ref. to [CANS489](#)), this condition shall trigger the sub state machine CANS4\_BSM\_S\_PRE\_FULLCOM (ref. to Figure 7-5) of the respective network with T\_CC\_STOPPED\_TIMEOUT.»()

**7.2.15.9 State operation to do in: S\_CC\_STARTED**

**[CANS491]** «As long the sub state machine CANS4\_BSM\_S\_PRE\_FULLCOM (ref. to Figure 7-5) is in the state S\_CC\_STARTED, the CanSM module shall operate the do action DO\_SET\_CC\_MODE\_STARTED and therefore repeat for all configured CAN controllers of the CAN network (ref. to [CANS411\\_Conf](#)) the API request CanIf\_SetControllerMode (ref. to chapter 8.6.1) with ControllerMode equal to CANIF\_CS\_STARTED.»()

**7.2.15.10 Guarding condition: G\_CC\_STARTED\_OK**

**[CANS492]** «The guarding condition G\_CC\_STARTED\_OK of the sub state machine CANS4\_BSM\_S\_PRE\_FULLCOM (ref. to Figure 7-5) shall be passed, if all API calls of [CANS491](#) have returned E\_OK.»()

**7.2.15.11 Trigger: T\_CC\_STARTED\_INDICATED**

**[CANS493]** «If CanSM module has got all mode indications (ref. to [CANS436](#)) for the configured CAN controllers of the CAN network (ref. to [CANS411\\_Conf](#)) after the respective requests to start the CAN controllers of the CAN network (ref. to [CANS491](#)), this shall trigger the sub state machine CANS4\_BSM\_S\_PRE\_FULLCOM (ref. to Figure 7-5) of the CAN network with T\_CC\_STARTED\_INDICATED.»()

**7.2.15.12 Trigger: T\_CC\_STARTED\_TIMEOUT**

**[CANS494]** «After a timeout of CANS4\_MODEREQ\_REPEAT\_TIME (ref. to [CANS436\\_Conf](#)) for all supposed controller started mode indications (ref. to [CANS493](#)), this condition shall trigger the sub state machine

CANSM\_BSM\_S\_PRE\_FULLCOM (ref. to Figure 7-5) of the respective network with T\_CC\_STARTED\_TIMEOUT.>()

### 7.2.15.13 Trigger: T\_REPEAT\_MAX

**[CANSM495]** «If the sub state machine CANSM\_BSM\_S\_PRE\_FULLCOM (ref. to Figure 7-5) has repeated any of the CanIf API calls (ref. to [CANSM483](#), [CANSM487](#), [CANSM491](#)) more often than configured (ref. to [CANSM335 Conf](#)) without getting the return value E\_OK and without getting the supposed mode indication callbacks (ref. to [CANSM485](#), [CANSM489](#), [CANSM493](#)), this shall trigger the sub state machine CANSM\_BSM\_S\_PRE\_FULLCOM with T\_REPEAT\_MAX.>()

### 7.2.16 Sub state machine for requested full communication mode

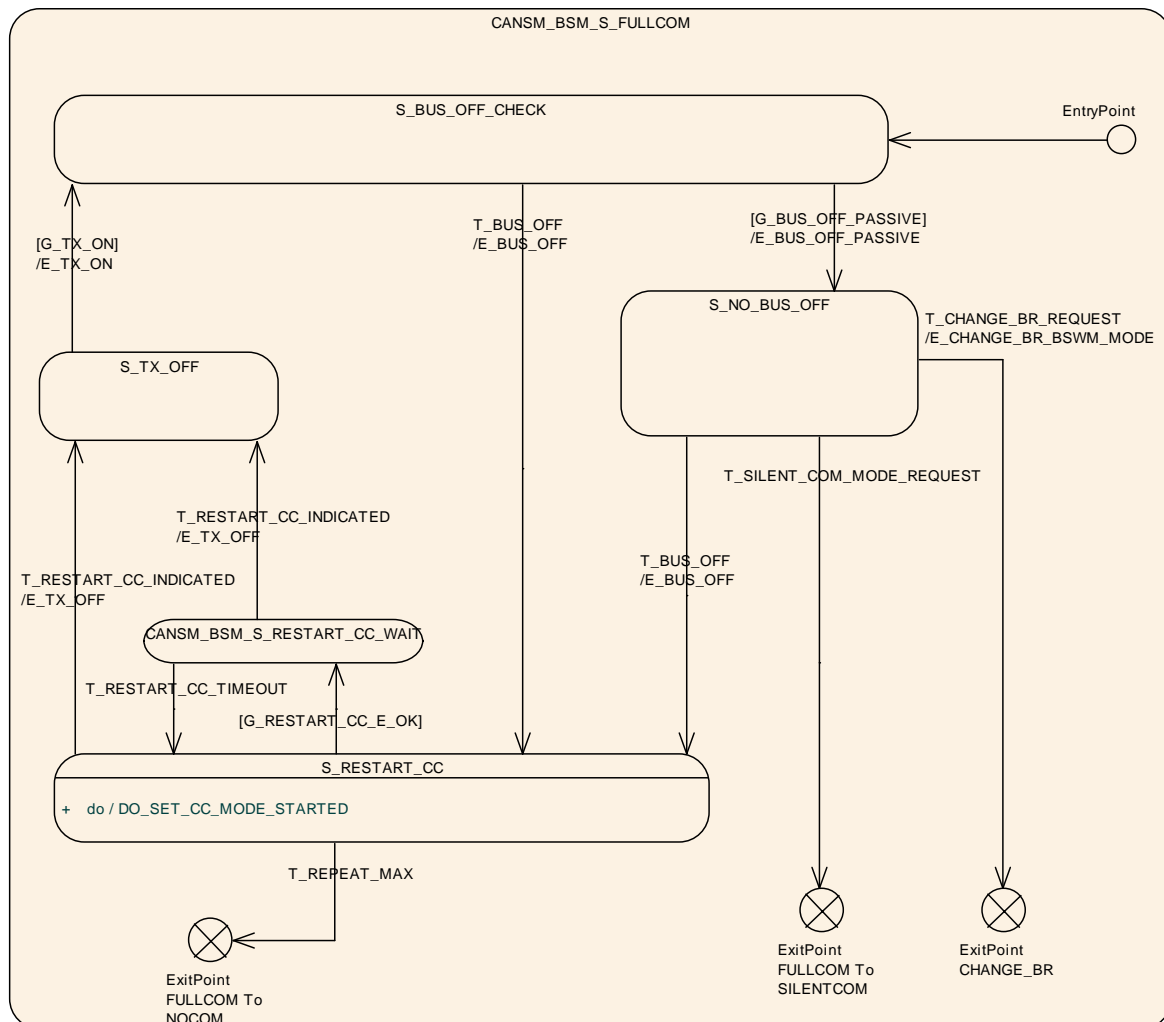


Figure 7-6: CANSM\_BSM\_S\_FULLCOM, sub state machine of CANSM\_BSM

### 7.2.16.1 Guarding condition: G\_BUS\_OFF\_PASSIVE

**[CANSMM496]** 「The guarding condition G\_BUS\_OFF\_PASSIVE of the sub state machine CANSMM\_BSM\_S\_FULLCOM (ref. to Figure 7-6) shall be passed, if CANSMM\_BOR\_TX\_CONFIRMATION\_POLLING is disabled (ref. to [CANSMM339 Conf](#)) and the time duration since the effect E\_TX\_ON is greater or equal the configuration parameter CANSMM\_BOR\_TIME\_TX\_ENSURED (ref. to [CANSMM130 Conf](#)).」()

**[CANSMM497]** 「The guarding condition G\_BUS\_OFF\_PASSIVE of the sub state machine CANSMM\_BSM\_S\_FULLCOM (ref. to Figure 7-6) shall be passed, if CANSMM\_BOR\_TX\_CONFIRMATION\_POLLING is enabled (ref. to [CANSMM339 Conf](#)) and the API CanIf\_GetTxConfirmationState (ref. to chapter 8.6.1) returns CANIF\_TX\_RX\_NOTIFICATION for all configured CAN controllers of the CAN network (ref. to [CANSMM141 Conf](#)).」()

### 7.2.16.2 Effect: E\_BUS\_OFF\_PASSIVE

**[CANSMM498]** 「The effect E\_BUS\_OFF\_PASSIVE of the sub state machine CANSMM\_BSM\_S\_FULLCOM (ref. to Figure 7-6) shall invoke Dem\_ReportErrorStatus (ref. to chapter 8.6.1) with the parameters EventId := CANSMM\_E\_BUS\_OFF (ref. to [CANSMM070 Conf](#)) and EventStatus := DEM\_EVENT\_STATUS\_PASSED.」(BSW00422)

### 7.2.16.3 Trigger: T\_SILENT\_COM\_MODE\_REQUEST

**[CANSMM499]** 「The API request CanSM\_RequestComMode (ref. to [CANSMM062](#)) with the parameter ComM\_Mode equal to COMM\_SILENT\_COMMUNICATION shall trigger the sub state machine CANSMM\_BSM\_S\_FULLCOM (ref. to Figure 7-6) with T\_SILENT\_COM\_MODE\_REQUEST, which corresponds to the function parameter network and the configuration parameter CANSMM\_NETWORK\_HANDLE (ref. to [CANSMM161 Conf](#)).」()

Rationale: Regular use case for the transition of the CanNm Network mode to the CanNm Prepare Bus-Sleep mode .

**[CANSMM554]** 「The API request CanSM\_RequestComMode (ref. to [CANSMM062](#)) with the parameter ComM\_Mode equal to COMM\_NO\_COMMUNICATION shall trigger the sub state machine CANSMM\_BSM\_S\_FULLCOM (ref. to Figure 7-6) with T\_SILENT\_COM\_MODE\_REQUEST, which corresponds to the function parameter network and the configuration parameter CANSMM\_NETWORK\_HANDLE (ref. to [CANSMM161 Conf](#)).」()

*Remark: Depending on the ComM configuration, the ComM module will request COMM\_SILENT\_COMMUNICATION first and then COMM\_NO\_COMMUNICATION or*

*COMM\_NO\_COMMUNICATION directly (ComMNmVariant=LIGHT)".*

#### 7.2.16.4 Trigger: T\_CHANGE\_BR\_REQUEST

**[CANS507]** 「The API function `CanSM_ChangeBaudrate` (ref. to [CANS501](#)) shall trigger the sub state machine `CANSM_BSM_S_FULLCOM` (ref. to Figure 7-6) for the requested CAN network with `T_CHANGE_BR_REQUEST`, if the `CanSM` module has accepted the `CanSM_ChangeBaudrate` request with return of `E_OK.()`

#### 7.2.16.5 Effect: E\_CHANGE\_BR\_BSWM\_MODE

**[CANS528]** 「The effect `E_CHANGE_BR_BSWM_MODE` of the sub state machine `CANSM_BSM_S_FULLCOM` (ref. to Figure 7-6) shall call for the corresponding CAN network the API `BswM_CanSM_CurrentState` with the parameters `Network := CanSMComMNetworkHandleRef` and `CurrentState := CANSM_BSWM_CHANGE_BAUDRATE.()`

#### 7.2.16.6 Trigger: T\_BUS\_OFF

**[CANS500]** 「The callback function `CanSM_ControllerBusOff` (ref. to [CANS064](#)) shall trigger the sub state machine `CANSM_BSM_S_FULLCOM` (ref. to Figure 7-6) for the CAN network with `T_BUS_OFF`, if one of its configured CAN controllers matches to the function parameter `ControllerId` of the callback function `CanSM_ControllerBusOff.()`

#### 7.2.16.7 Effect: E\_BUS\_OFF

**[CANS508]** 「The effect `E_BUS_OFF` of the sub state machine `CANSM_BSM_S_FULLCOM` (ref. to Figure 7-6) shall call at 1<sup>st</sup> place for the corresponding CAN network the API `BswM_CanSM_CurrentState` with the parameters `Network := CanSMComMNetworkHandleRef` and `CurrentState := CANSM_BSWM_BUS_OFF.()`

**[CANS521]** 「The effect `E_BUS_OFF` of the sub state machine `CANSM_BSM_S_FULLCOM` (ref. to Figure 7-6) shall call at 2<sup>nd</sup> place for the corresponding CAN network the API `ComM_BusSM_ModeIndication` with the parameters `Channel := CanSMComMNetworkHandleRef` (ref. to [CANS161 Conf](#)) and `ComMode := COMM_SILENT_COMMUNICATION.()`

**[CANS522]** 「The effect `E_BUS_OFF` of the sub state machine `CANSM_BSM_S_FULLCOM` (ref. to Figure 7-6) shall invoke `Dem_ReportErrorStatus` (ref. to chapter 8.6.1) with the parameters `EventId :=`

CANSM\_E\_BUS\_OFF (ref. to [CANSM070 Conf](#)) and EventStatus := DEM\_EVENT\_STATUS\_PRE\_FAILED.](BSW00422)

#### 7.2.16.8 State operation to do in: S\_RESTART\_CC

**[CANSM509]** 「As long the sub state machine CANSM\_BSM\_S\_FULLCOM (ref. to Figure 7-6) is in the state S\_RESTART\_CC, the CanSM module shall operate the do action DO\_SET\_CC\_MODE\_STARTED and therefore repeat for all configured CAN controllers of the CAN network (ref. to [CANSM141 Conf](#)) the API request CanIf\_SetControllerMode (ref. to chapter 8.6.1) with ControllerMode equal to CANIF\_CS\_STARTED.」()

#### 7.2.16.9 Guarding condition: G\_RESTART\_CC\_OK

**[CANSM510]** 「The guarding condition G\_RESTART\_CC\_OK of the sub state machine CANSM\_BSM\_S\_FULLCOM (ref. to Figure 7-6) shall be passed, if all API calls of [CANSM509](#) have returned E\_OK.」()

#### 7.2.16.10 Trigger: T\_RESTART\_CC\_INDICATED

**[CANSM511]** 「If CanSM module has got all mode indications (ref. to [CANSM396](#)) for the configured CAN controllers of the CAN network (ref. to [CANSM141 Conf](#)) after the respective requests to start the CAN controllers of the CAN network (ref. to [CANSM509](#)), this shall trigger the sub state CANSM\_BSM\_S\_FULLCOM (ref. to Figure 7-6) of the CAN network with T\_RESTART\_CC\_INDICATED.」()

#### 7.2.16.11 Trigger: T\_RESTART\_CC\_TIMEOUT

**[CANSM512]** 「After a timeout of CANSM\_MODEREQ\_REPEAT\_TIME (ref. to [CANSM336 Conf](#)) for all supposed controller started mode indications (ref. to [CANSM511](#)), this condition shall trigger the sub state machine CANSM\_BSM\_S\_FULLCOM (ref. to Figure 7-6) of the respective network with T\_RESTART\_CC\_TIMEOUT.」()

#### 7.2.16.12 Effect: E\_TX\_OFF

**[CANSM513]** 「The effect E\_TX\_OFF of the sub state machine CANSM\_BSM\_S\_FULLCOM (ref. to Figure 7-6) shall call for the configured CAN controllers of the CAN network (ref. to [CANSM141 Conf](#)) the API function CanIf\_SetPduMode (ref. to chapter 8.6.1) with the parameters ControllerId := CanSMControllerId (ref. to [CANSM141 Conf](#)) and PduModeRequest := CANIF\_SET\_TX\_OFFLINE.」()



#### 7.2.16.13 Guarding condition: G\_TX\_ON

**[CANSM514]** 「The guarding condition G\_TX\_ON of the sub state machine CANSM\_BSM\_S\_FULLCOM (ref. to Figure 7-6) shall be passed after a time duration of CanSMBorTimeL1 (ref. to [CANSM128 Conf](#)), if the count of bus-off recovery retries with E\_BUS\_OFF without passing the guarding condition G\_BUS\_OFF\_PASSIVE is lower than CanSMBorCounterL1ToL2 (ref. to [CANSM131 Conf](#)).」()

**[CANSM515]** 「The guarding condition G\_TX\_ON of the sub state machine CANSM\_BSM\_S\_FULLCOM (ref. to Figure 7-6) shall be passed after a time duration of CanSMBorTimeL2 (ref. to [CANSM129 Conf](#)), if the count of bus-off recovery retries with E\_BUS\_OFF without passing the guarding condition G\_BUS\_OFF\_PASSIVE is greater than or equal to CanSMBorCounterL1ToL2 (ref. to [CANSM131 Conf](#)).」()

#### 7.2.16.14 Effect: E\_TX\_ON

**[CANSM516]** 「The effect E\_TX\_ON of the sub state machine CANSM\_BSM\_S\_FULLCOM (ref. to Figure 7-6) shall call at 1<sup>st</sup> place for the configured CAN controllers of the CAN network (ref. to [CANSM141 Conf](#)) the API function CanIf\_SetPduMode (ref. to chapter 8.6.1) with the parameters ControllerId := CanSMControllerId (ref. to [CANSM141 Conf](#)) and PduModeRequest := CANIF\_SET\_ONLINE.」()

**[CANSM517]** 「The effect E\_TX\_ON of the sub state machine CANSM\_BSM\_S\_FULLCOM (ref. to Figure 7-6) shall call at 2<sup>nd</sup> place for the corresponding CAN network the API BswM\_CanSM\_CurrentState with the parameters Network := CanSMComMNetworkHandleRef and CurrentState := CANSM\_BSWM\_FULL\_COMMUNICATION.」()

**[CANSM518]** 「The effect E\_TX\_ON of the sub state machine CANSM\_BSM\_S\_FULLCOM (ref. to Figure 7-6) shall call at 3<sup>rd</sup> place the API ComM\_BusSM\_ModeIndication with the parameters Channel := CanSMComMNetworkHandleRef (ref. to [CANSM161 Conf](#)) and ComMode := COMM\_FULL\_COMMUNICATION.」()

#### 7.2.16.15 Trigger: T\_REPEAT\_MAX

**[CANSM523]** 「If the sub state machine CANSM\_BSM\_S\_FULLCOM (ref. to Figure 7-6) has repeated the CanIf API to restart the CAN controller(s) of the CAN network (ref. to [CANSM509](#)) more often than configured (ref. to [CANSM335 Conf](#)) without getting the return value E\_OK and without getting the supposed mode indication (ref. to [CANSM511](#)), this shall trigger the sub state machine CANSM\_BSM\_S\_FULLCOM with T\_REPEAT\_MAX.」()



## 7.2.17 Sub state machine to operate a requested baud rate change

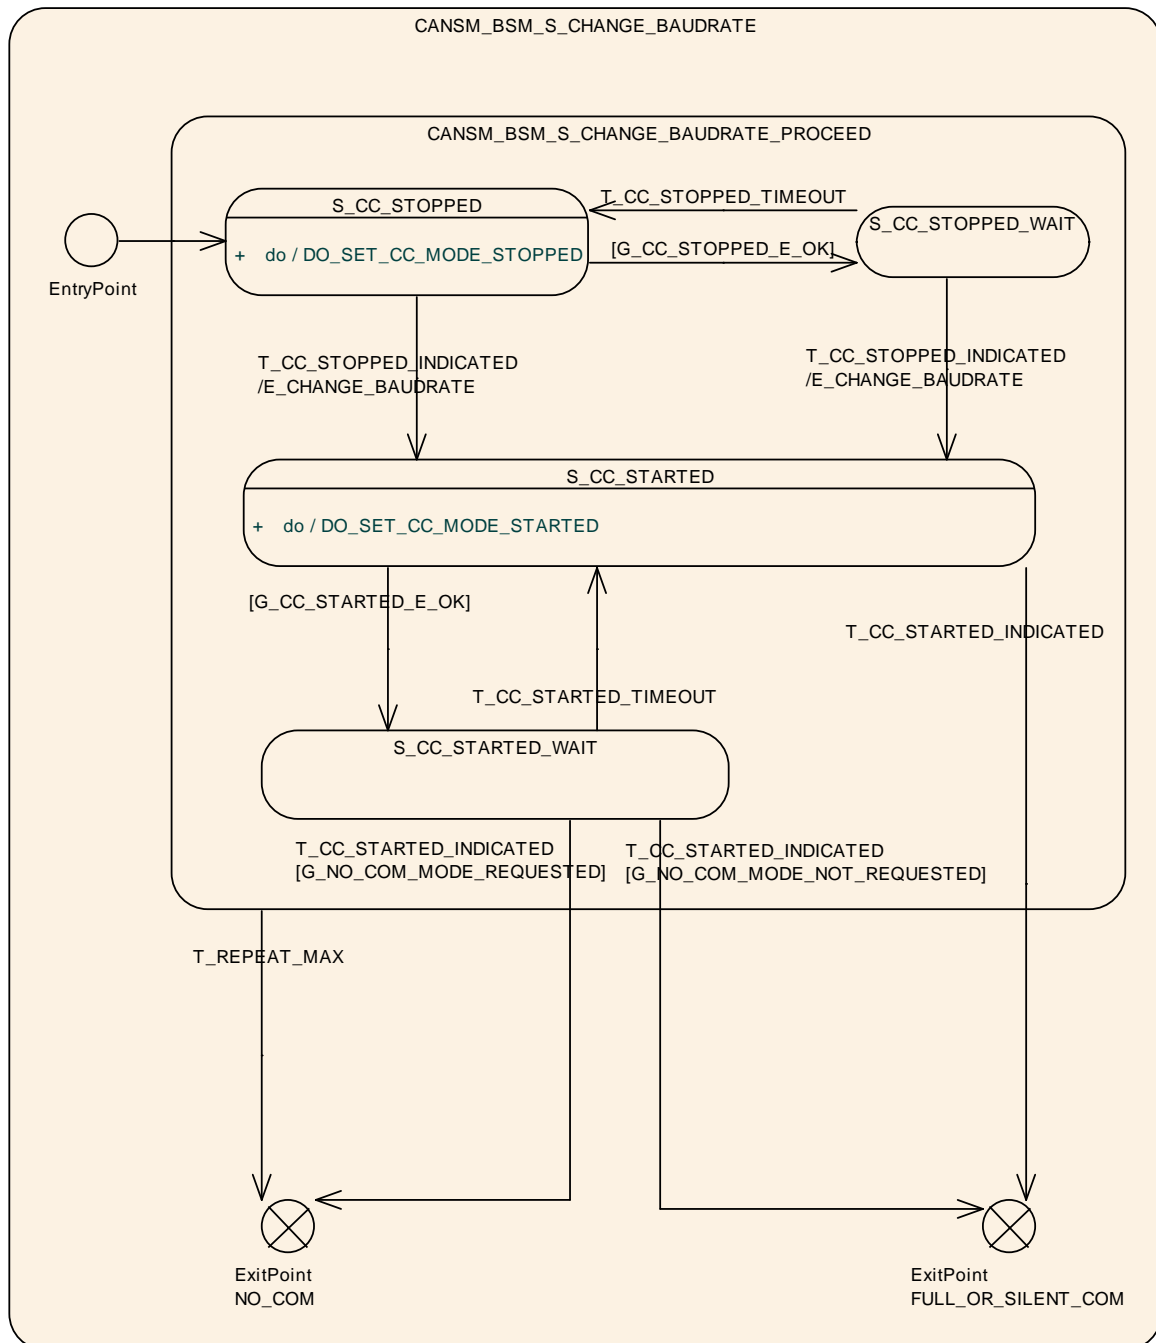


Figure 7-7: CANSM\_BSM\_S\_CHANGE\_BAUDRATE, sub state machine of CANSM\_BSM

### 7.2.17.1 State operation to do in: S\_CC\_STOPPED

**[CANSM524]** 「As long the sub state machine CANSM\_BSM\_S\_CHANGE\_BAUDRATE (ref. to Figure 7-7) is in the state **S\_CC\_STOPPED**, the CanSM module shall operate the do action **DO\_SET\_CC\_MODE\_STOPPED** and therefore repeat for all configured CAN controllers of the CAN network (ref. to [CANSM141 Conf](#)) the API request

CanIf\_SetControllerMode (ref. to chapter 8.6.1) with ControllerMode equal to CANIF\_CS\_STOPPED.>()

#### **7.2.17.2 Guarding condition: G\_CC\_STOPPED\_OK**

**[CANS525]** 「The guarding condition G\_CC\_STOPPED\_OK of the sub state machine CANSM\_BSM\_S\_CHANGE\_BAUDRATE (ref. to Figure 7-7) shall be passed, if all API calls of [CANS524](#) have returned E\_OK.>()

#### **7.2.17.3 Trigger: T\_CC\_STOPPED\_INDICATED**

**[CANS526]** 「If CanSM module has got all mode indications (ref. to [CANS396](#)) for the configured CAN controllers of the CAN network (ref. to [CANS141 Conf](#)) after the respective requests to stop the CAN controllers of the CAN network (ref. to [CANS524](#)), this shall trigger the sub state machine CANSM\_BSM\_S\_CHANGE\_BAUDRATE (ref. to Figure 7-7) of the CAN network with T\_CC\_STOPPED\_INDICATED.>()

#### **7.2.17.4 Trigger: T\_CC\_STOPPED\_TIMEOUT**

**[CANS527]** 「After a timeout of CANSM\_MODEREQ\_REPEAT\_TIME (ref. to [CANS336 Conf](#)) for all supposed controller stopped mode indications (ref. to [CANS526](#)), this condition shall trigger the sub state machine CANSM\_BSM\_S\_CHANGE\_BAUDRATE (ref. to Figure 7-7) of the respective network with T\_CC\_STOPPED\_TIMEOUT.>()

#### **7.2.17.5 Effect: E\_CHANGE\_BAUDRATE**

**[CANS529]** 「The effect E\_CHANGE\_BAUDRATE of the sub state machine CANSM\_BSM\_S\_CHANGE\_BAUDRATE (ref. to Figure 7-7) shall call at 1<sup>st</sup> place for the corresponding CAN network the API ComM\_BusSM\_ModeIndication with the parameters Channel := CanSMComMNetworkHandleRef (ref. to [CANS161 Conf](#)) and ComMode := COMM\_NO\_COMMUNICATION.>()

**[CANS531]** 「The effect E\_CHANGE\_BAUDRATE of the sub state machine CANSM\_BSM\_S\_CHANGE\_BAUDRATE (ref. to Figure 7-7) shall call at 2<sup>nd</sup> place for all configured CAN controllers of the CAN network (ref. to [CANS141 Conf](#)) the API request CanIf\_ChangeBaudrate (ref. to chapter 8.6.2) with the respective ControllerId parameter and shall use as baudrate parameter the checked and remembered baud rate (ref. to [CANS572](#) and [CANS503](#)).>()

#### 7.2.17.6 State operation to do in: S\_CC\_STARTED

**[CANS532]** «As long the sub state machine CANS5\_BSM\_S\_CHANGE\_BAUDRATE (ref. to Figure 7-7) is in the state S\_CC\_STARTED, the CanSM module shall operate the do action DO\_SET\_CC\_MODE\_STARTED and therefore repeat for all configured CAN controllers of the CAN network (ref. to [CANS5141\\_Conf](#)) the API request CanIf\_SetControllerMode (ref. to chapter 8.6.1) with ControllerMode equal to CANIF\_CS\_STARTED.»()

#### 7.2.17.7 Guarding condition: G\_CC\_STARTED\_OK

**[CANS533]** «The guarding condition G\_CC\_STARTED\_OK of the sub state machine CANS5\_BSM\_S\_CHANGE\_BAUDRATE (ref. to Figure 7-7) shall be passed, if all API calls of [CANS532](#) have returned E\_OK.»()

#### 7.2.17.8 Trigger: T\_CC\_STARTED\_INDICATED

**[CANS534]** «If CanSM module has got all mode indications (ref. to [CANS5396](#)) for the configured CAN controllers of the CAN network (ref. to [CANS5141\\_Conf](#)) after the respective requests to start the CAN controllers of the CAN network (ref. to [CANS532](#)), this shall trigger the sub state machine CANS5\_BSM\_S\_CHANGE\_BAUDRATE (ref. to Figure 7-7) of the CAN network with T\_CC\_STARTED\_INDICATED.»()

#### 7.2.17.9 Trigger: T\_CC\_STARTED\_TIMEOUT

**[CANS535]** «After a timeout of CANS5\_MODEREQ\_REPEAT\_TIME (ref. to [CANS5336\\_Conf](#)) for all supposed controller started mode indications (ref. to [CANS534](#)), this condition shall trigger the sub state machine CANS5\_BSM\_S\_CHANGE\_BAUDRATE (ref. to Figure 7-7) of the respective network with T\_CC\_STARTED\_TIMEOUT.»()

#### 7.2.17.10 Trigger: T\_REPEAT\_MAX

**[CANS536]** «If the sub state machine CANS5\_BSM\_S\_CHANGE\_BAUDRATE (ref. to Figure 7-7) has repeated the referenced CanIf APIs (ref. to [CANS5524](#), [CANS532](#)) for the CAN controllers of the corresponding CAN network more often than configured (ref. to [CANS5335\\_Conf](#)) without getting the return value E\_OK and without getting the supposed mode indications (ref. to [CANS5526](#), [CANS534](#)), this shall trigger the sub state machine CANS5\_BSM\_S\_CHANGE\_BAUDRATE with T\_REPEAT\_MAX.»()

#### 7.2.17.11 Guarding condition: G\_NO\_COM\_MODE\_REQUESTED

**[CANSM542]** 「The sub state machine CANSM\_BSM\_S\_CHANGE\_BAUDRATE (ref. to Figure 7-7) shall pass the guarding condition G\_NO\_COM\_MODE\_REQUESTED, if the latest accepted communication mode request with CanSM\_RequestComMode (ref. to [CANSM062](#)) for the respective network handle of the state machine has been with the parameter ComM\_Mode equal to COMM\_NO\_COMMUNICATION.」()

#### 7.2.17.12 Guarding condition: G\_NO\_COM\_MODE\_NOT\_REQUESTED

**[CANSM543]** 「The sub state machine CANSM\_BSM\_S\_CHANGE\_BAUDRATE (ref. to Figure 7-7) shall pass the guarding condition G\_NO\_COM\_MODE\_NOT\_REQUESTED, if the latest accepted communication mode request with CanSM\_RequestComMode (ref. to [CANSM062](#)) for the respective network handle of the state machine has been with the parameter ComM\_Mode equal to COMM\_SILENT\_COMMUNICATION or COMM\_FULL\_COMMUNICATION.」()

### 7.3 Error classification

This chapter lists and classifies all errors that can be detected by this software module. Each error is classified to relevance (development / production) and the related error code (unique label for the error). For development errors this table also specifies the unique values, which correspond to the error codes.

Values for production code Event Ids are assigned externally by the configuration of the DEM. They are published in the file Dem\_IntErrId.h and included via Dem.h.

**[CANSM069]** 「Development error values shall be of type uint8.」()

Type or error	Relevance	Related error code	Value [hex]
API service used without module initialization	Development	CANSM_E_UNINIT	0x01
API service called with wrong pointer	Development	CANSM_E_PARAM_POINTER	0x02
API service called with wrong parameter	Development	CANSM_E_INVALID_NETWORK_HANDLE	0x03
API service called with wrong parameter	Development	CANSM_E_PARAM_CONTROLLER	0x04
API service called with wrong parameter	Development	CANSM_E_PARAM_TRANSCEIVER	0x05
Network mode request during not finished bus-off recovery	Development	CANSM_E_BUSOFF_RECOVERY_ACTIVE	0x06
Network mode request during pending indication	Development	CANSM_E_WAIT_MODE_INDICATION	0x07
Invalid communication mode request	Development	CANSM_E_INVALID_COMM_REQUEST	0x08
Invalid BaudrateConfig for at least one of the CAN Controllers of the	Development	CANSM_E_PARAM_INVALID_BAUDRATE	0x09

requested CAN Network			
Mode request for a network failed more often as allowed by configuration	Development	CANSM_E_MODE_REQUEST_TIMEOUT	0x0A
The bus-off recovery state machine of a CAN network has detected a certain amount of sequential bus-offs without successful recovery	Production	CANSM_E_BUS_OFF (ref. to <a href="#">CANSM070_Conf</a> )	Assigned by DEM

## 7.4 Error detection

**[CANSM363]** 「The detection of development errors shall be configurable as ON / OFF.」()

**[CANSM364]** 「The detection of development errors shall be configurable at pre-compile time.」()

**[CANSM365]** 「The switch *CanSMDevErrorDetect* (ref. to [CANSM133\\_Conf](#)) shall activate or deactivate the detection of all development errors.」()

**[CANSM071]** 「If the *CanSMDevErrorDetect* switch is enabled, the API parameter checking shall be enabled. The detailed description of the detected errors can be found in chapter 7.3 and chapter 8.」(BSW00323, BSW00386)

**[CANSM072]** 「The detection of production code errors cannot be switched off.」()

Remark: Refer to [CANSM498](#), [CANSM522](#) for the detailed description of the production errors “bus-off” and “mode request timeout”.

## 7.5 Error notification

**[CANSM028]** 「Detected development errors shall be reported to the *Det\_ReportError* service of the Development Error Tracer (DET) if the pre-processor switch *CanSMDevErrorDetect* is set “on” (see chapter 10).」(BSW00338, BSW00386)

**[CANSM074]**「 Production errors shall be reported to the Diagnostic Event Manager.」(BSW00339)

Remark: For the configuration of the DEM module it has to be considered, that the bus-off events and CAN-controller-timeout events are already debounced by the CanSM module itself internally. The detailed description for the event status determination of those production errors can be found in to [CANSM498](#), [CANSM520](#), [CANSM522](#).

## 7.6 Interface for AUTOSAR debug and trace

The following requirements shall be considered to export debug information from the CanSM module :

**[CANSM310]** 「The CanSM module shall define every variable as global, which is designated to be accessed by AUTOSAR debugging.」()

Rationale: Make debug information visible

**[CANSM309]** 「The type definitions of the debug-able variables of the CanSM module shall be exported by the standard module header file CanSM.h.」()

Rationale: To allow the debugging tool chain to calculate the size of elements by C-“sizeof” and to (optionally) decode the structure elements.

## 7.7 Non-functional design rules

The CanSM shall cover the software module design requirements of the SRS General [3].

## 8 API specification

### 8.1 Imported types

In this chapter all types included from the following files are listed:

[CANSMS243]

Module	Imported Type
CanIf	CanIf_ControllerModeType
	CanIf_NotifStatusType
	CanIf_PduSetModeType
Can_GeneralTypes	CanTrcv_TrsvModeType
ComM	ComM_ModeType
ComStack_Types	NetworkHandleType
Dem	Dem_EventIdType
	Dem_EventStatusType
Std_Types	Std_ReturnType
	Std_VersionInfoType

### 8.2 Type definitions

The following tables contain the type definitions of the CanSM module.

#### 8.2.1 CanSM\_StateType

<b>Name:</b>	CanSM_StateType		
<b>Type:</b>	Enumeration		
<b>Range:</b>	CANSMS_INITED	--	
	CANSMS_UNINITED	--	
<b>Description:</b>	Defines the values of the internal states of the CanSM module		

#### 8.2.2 CanSM\_ConfigType

<b>Name:</b>	CanSM_ConfigType		
<b>Type:</b>	Structure		
<b>Range:</b>	--	--	
<b>Element:</b>	CanSM	--	--
<b>Description:</b>	This type defines a data structure for the post build parameters of the CanSM. At initialization the CanSM gets a pointer to a structure of this type to get access to its configuration data, which is necessary for initialization.		

#### 8.2.3 CanSM\_BswMCurrentStateType

<b>Name:</b>	CanSM_BswMCurrentStateType	
<b>Type:</b>	Enumeration	
<b>Range:</b>	CANSM_BSWM_NO_COMMUNICATION	--
	CANSM_BSWM_SILENT_COMMUNICATION	--
	CANSM_BSWM_FULL_COMMUNICATION	--
	CANSM_BSWM_BUS_OFF	--
	CANSM_BSWM_CHANGE_BAUDRATE	--
<b>Description:</b>	Can specific communication modes / states notified to the BswM module	

### 8.3 Function definitions

The following sections specify the provided API functions of the CanSM module.

### 8.3.1 CanSM Init

**[CANSM023]** 「

<b>Service name:</b>	CanSM_Init
<b>Syntax:</b>	void const                 CanSM_ConfigType*                 ConfigPtr )
<b>Service ID[hex]:</b>	0x00
<b>Sync/Async:</b>	Synchronous
<b>Reentrancy:</b>	Non Reentrant
<b>Parameters (in):</b>	ConfigPtr   Pointer to init structure for the post build parameters of the CanSM
<b>Parameters (inout):</b>	None
<b>Parameters (out):</b>	None
<b>Return value:</b>	None
<b>Description:</b>	This service initializes the CanSM module

J(BSW0405, BSW101, BSW00406, BSW00358, BSW00414, BSW00405, BSW00404)

**[CANSM179]** 「Only for configuration variant 3: The function CanSM\_Init shall report the development error CANSM\_E\_PARAM\_POINTER to the DET, if the user of this function hands over a NULL-pointer as ConfigPtr.」(BSW00406)

### 8.3.2 CanSM GetVersionInfo

**[CANSM024]** 「

<b>Service name:</b>	CanSM_GetVersionInfo
<b>Syntax:</b>	void CanSM_GetVersionInfo( Std_VersionInfoType* VersionInfo )
<b>Service ID[hex]:</b>	0x01
<b>Sync/Async:</b>	Synchronous
<b>Reentrancy:</b>	Reentrant
<b>Parameters (in):</b>	None
<b>Parameters</b>	None



<b>(inout):</b>		
<b>Parameters (out):</b>	VersionInfo	Pointer to where to store the version information of this module.
<b>Return value:</b>	None	
<b>Description:</b>	This service puts out the version information of this module (module ID, vendor ID, vendor specific version numbers related to BSW00407)	

\_(BSW00407, BSW003)

**[CANSM366]** If the source code for caller and callee of CanSM\_GetVersionInfo is available this function should be realized as a macro. The macro should be defined in the header file CanSM.h.()()

**[CANSM244]** The function CanSM\_GetVersionInfo shall return the version information of this module. The version information includes:

- Module Id
- Vendor Id
- Vendor specific version numbers (BSW00407).()()

**[CANSM367]** The function CanSM\_GetVersionInfo shall be configurable On/Off by the configuration parameter: CANSM\_VERSION\_INFO\_API (ref. to [CANSM311 Conf](#)).()()

**[CANSM368]** The function CanSM\_GetVersionInfo shall be pre compile time configurable by the configuration parameter: CANSM\_VERSION\_INFO\_API (ref. to [CANSM311 Conf](#)).()()

**[CANSM374]** The function CanSM\_GetVersionInfo shall report the development error CANSM\_E\_PARAM\_POINTER to the DET, if the user of this function hands over a NULL-pointer as VersionInfo.()()

### 8.3.3 CanSM\_RequestComMode

**[CANSM062]** If

<b>Service name:</b>	CanSM_RequestComMode	
<b>Syntax:</b>	Std_ReturnType	CanSM_RequestComMode( NetworkHandleType network, ComM_ModeType ComM_Mode )
<b>Service ID[hex]:</b>	0x02	
<b>Sync/Async:</b>	Asynchronous	
<b>Reentrancy:</b>	Reentrant (only for different network handles)	
<b>Parameters (in):</b>	network	Handle of destined communication network for request
	ComM_Mode	Requested communication mode
<b>Parameters</b>	None	

<b>(inout):</b>			
<b>Parameters (out):</b>	None		
<b>Return value:</b>	Std_ReturnType	E_OK: Service accepted E_NOT_OK: Service denied	
<b>Description:</b>	This service shall change the communication mode of a CAN network to the requested one.		

\_(BSW01142, BSW09080, BSW09081, BSW09083)

Remark: Please refer to [10] for a detailed description of the communication modes.

**[CANS369]** 「The function CanSM\_RequestComMode shall accept its request, if the NetworkHandle parameter of the request is a handle contained in the configuration of the CanSM module (ref. to [CANS161\\_Conf](#)).」()

**[CANS370]** 「The function CanSM\_RequestComMode shall deny its request, if the NetworkHandle parameter of the request is not a handle contained in the configuration of the CanSM module (ref. to [CANS161\\_Conf](#)).」()

**[CANS555]** 「The CanSM module shall deny the API request CanSM\_RequestComMode, if the initial transition for the requested CAN network is not finished yet after the CanSM\_Init request (ref. to [CANS423](#), [CANS430](#)).」()

**[CANS183]** 「The function CanSM\_RequestComMode shall call the function Det\_ReportError with ErrorId parameter CANS\_E\_INVALID\_NETWORK\_HANDLE, if it does not accept the network handle of the request.」()

**[CANS402]** 「The function CanSM\_RequestComMode shall deny its request, if the current network mode is COMM\_NO\_COMMUNICATION and the user of this function requests COMM\_SILENT\_COMMUNICATION.」()

Rationale: The only use case for silent communication is to prepare bus sleep on CAN. Therefore a transition from no communication to silent communication is invalid.

**[CANS403]** 「If the function CanSM\_RequestComMode denies its request, because of an invalid requested transistion, it shall invoke the function Det\_ReportError with ErrorId parameter CANS\_E\_INVALID\_COMM\_REQUEST.」()

**[CANS182]** 「If the function `CanSM_RequestComMode` accepts the request, the request shall be considered by the CanSM state machine (ref. to [CANS1427](#), [CANS1429](#), [CANS1499](#), [CANS1542](#) and [CANS1543](#)).」()

**[CANS184]** 「If the CanSM module is not initialized, when the function `CanSM_RequestComMode` is called, then this function shall call the function `Det_ReportError` with `ErrorId` parameter `CANS1_E_UNINIT`.」()

**[CANS1395]** 「If the CanSM module has to deny the request `CanSM_RequestComMode`, because of a pending mode indication (ref. to [CANS1388](#)), then this function shall call the function `Det_ReportError` with the `ErrorId` parameter `CANS1_E_WAIT_MODE_INDICATION` (ref. to chapter 7.3).」()

### 8.3.4 CanSM\_GetCurrentComMode

**[CANS1063]** 「

Service name:	CanSM_GetCurrentComMode		
Syntax:	Std_ReturnType CanSM_GetCurrentComMode( NetworkHandleType network, ComM_ModeType* ComM_ModePtr )		
Service ID[hex]:	0x03		
Sync/Async:	Synchronous		
Reentrancy:	Reentrant		
Parameters (in):	network	Network handle, whose current communication mode shall be put out	
Parameters (inout):	None		
Parameters (out):	ComM_ModePtr	Pointer, where to put out the current communication mode	
Return value:	Std_ReturnType	E_OK: Service accepted E_NOT_OK: Service denied	
Description:	This service shall put out the current communication mode of a CAN network.		

」(BSW01142, BSW09080, BSW09084)

**[CANS1282]** 「The CanSM module shall return `E_NOT_OK` for the API request `CanSM_GetCurrentComMode`, if the initial transition for the requested CAN network with `E_NOCOM` (ref. to [CANS1430](#)) is not finished yet.」()

**[CANS1371]** 「The function `CanSM_GetCurrentComMode` shall accept its request, if the `NetworkHandle` parameter of the request is a handle contained in the configuration of the CanSM module (ref. to [CANS1161\\_Conf](#)).」()

**[CANSM372]** The function `CanSM_GetCurrentComMode` shall deny its request, if the `NetworkHandle` parameter of the request is not a handle contained in the configuration of the CanSM module (ref. to [CANSM161\\_Conf](#)). |()

**[CANSM187]** The function CanSM\_GetCurrentComMode shall call the function Det\_ReportError with ErrorId parameter CANSM\_E\_INVALID\_NETWORK\_HANDLE, if it does not accept the network handle of the request. |()

**[CANSM186]** 「The function `CanSM_GetCurrentComMode` shall put out the current communication mode for the network handle (ref. to [CANSM266](#)) to the designated pointer of type `ComM_ModeType`, if it accepts the request.」()

**[CANSM188]** 「If the CanSM module is not initialized, when the function CanSM\_GetCurrentComMode is called, then this function shall call the function Det\_ReportError with ErrorId parameter CANSM\_E\_UNINIT.」()

**[CANSM360]** 「The function CanSM\_GetCurrentComMode shall report the development error CANSM\_E\_PARAM\_POINTER to the DET, if the user of this function hands over a NULL-pointer as ComM\_ModePtr.」()

### 8.3.5 CanSM CheckBaudrate

**[CANSM501] 「**

<b>Service name:</b>	CanSM_CheckBaudrate	
<b>Syntax:</b>	<pre>Std_ReturnType CanSM_CheckBaudrate(     NetworkHandleType network,     const uint16 Baudrate )</pre>	
<b>Service ID[hex]:</b>	0x0c	
<b>Sync/Async:</b>	Synchronous	
<b>Reentrancy:</b>	Reentrant	
<b>Parameters (in):</b>	network	Handle of the addressed CAN network to check if a baudrate is supported
	Baudrate	Baudrate to check in kbps
<b>Parameters (inout):</b>	None	
<b>Parameters (out):</b>	None	
<b>Return value:</b>	Std_ReturnType	E_OK: Baudrate supported by all configured CAN controllers of the network E_NOT_OK: Baudrate not supported / invalid network
<b>Description:</b>	This service shall check, if a certain baudrate is supported by the configured CAN controllers of a certain CAN network.	

」()

**CANSM564:** 「The CanSM module shall provide the API function CanSM\_CheckBaudrate, if the CanSmChangeBaudrateApi parameter (ref. to [CANSM342 Conf](#)) is configured with the value TRUE. 」()

**CANSM565:** 「The CanSM module shall not provide the API function CanSM\_CheckBaudrate, if the CanSmChangeBaudrateApi parameter (ref. to [CANSM342 Conf](#)) is configured with the value FALSE. 」()

**[CANSM562]** 「The CanSM module shall deny the CanSM\_CheckBaudrate API request, if the NetworkHandle parameter does not match to the configured Network handles of the CanSM module (ref. to [CANSM161 Conf](#)).」()

**[CANSM571]** 「The function CanSM\_CheckBaudrate shall call the function Det\_ReportError with ErrorId parameter CANSM\_E\_INVALID\_NETWORK\_HANDLE (ref. to chapter 7.3), if it does not accept the network handle of the request.」()

**[CANSM563]** 「If the NetworkHandle parameter in the CanSM\_CheckBaudrate request matches to one of the configured Network handles (ref. to [CANSM161 Conf](#)) and the requested baud rate is supported (ref. to [CANSM567](#)), then the function shall return E\_OK. 」()

**[CANSM566]** 「If the NetworkHandle parameter in the CanSM\_CheckBaudrate request matches to one of the configured Network handles (ref. to [CANSM161 Conf](#)) and the requested baud rate is not supported (ref. to [CANSM568](#)), then the function shall return E\_NOT\_OK. 」()

### 8.3.6 CanSM\_ChangeBaudrate

**[CANSM561]** 「

<b>Service name:</b>	CanSM_ChangeBaudrate	
<b>Syntax:</b>	Std_ReturnType CanSM_ChangeBaudrate(NetworkHandleType network, const uint16 Baudrate)	
<b>Service ID[hex]:</b>	0x0e	
<b>Sync/Async:</b>	Asynchronous	
<b>Reentrancy:</b>	Reentrant	
<b>Parameters (in):</b>	network	Handle of the addressed CAN network for the baudrate change
	Baudrate	Requested Baudrate in kbps

<b>Parameters (inout):</b>	None	
<b>Parameters (out):</b>	None	
<b>Return value:</b>	Std_ReturnType	E_OK: Service request accepted E_NOT_OK: Service request not accepted
<b>Description:</b>	This service shall start an asynchronous process to change the baudrate for the configured CAN controllers of a certain CAN network	

**[CANSM569]** 「The CanSM module shall provide the API function CanSM\_ChangeBaudrate, if the CanSmChangeBaudrateApi parameter (ref. to [CANSM342 Conf](#)) is configured with the value TRUE. 」()

**[CANSM570]** The CanSM module shall not provide the API function CanSM\_ChangeBaudrate, if the CanSmChangeBaudrateApi parameter (ref. to [CANSM342 Conf](#)) is configured with the value FALSE. 」()

**[CANSM502]** 「The CanSM module shall deny the CanSM\_ChangeBaudrate API request, if the NetworkHandle parameter does not match to the configured Network handles of the CanSM module (ref. to [CANSM161 Conf](#)).」()

**[CANSM504]** 「The function CanSM\_ChangeBaudrate shall call the function Det\_ReportError with ErrorId parameter CANSM\_E\_INVALID\_NETWORK\_HANDLE (ref. to chapter 7.3), if it does not accept the network handle of the request.」()

**[CANSM505]** 「The function CanSM\_ChangeBaudrate shall deny its request, if the requested CAN network is not in the communication mode COMM\_FULL\_COMMUNICATION.」()

**[CANSM530]** 「The CanSM module shall deny the CanSM\_ChangeBaudrate API request, if the CanSM module is not initialized.」()

**[CANSM506]** 「If the function CanSM\_ChangeBaudrate is called and the CanSM module is not initialized, then this function shall call the function Det\_ReportError with ErrorId parameter CANSM\_E\_UNINIT (ref. to chapter 7.3).」()

**[CANSM573]** 「If the requested baud rate is not equal to the remembered baud rate of the last CanSM\_CheckBaudrate call (ref. to [CANSM572](#)) for the corresponding CAN network or if the remembered result of the last CanSM\_CheckBaudrate call for

the corresponding CAN network has been E\_NOT\_OK, then the CanSM\_ChangeBaudrate call shall return E\_NOT\_OK. ]()

**[CANSM574]** If the requested baud rate is not equal to the remembered baud rate of the last CanSM\_CheckBaudrate call (ref. to [CANSM572](#)) for the corresponding CAN network or if the remembered result of the last CanSM\_CheckBaudrate call for the corresponding CAN network has been E\_NOT\_OK, then the CanSM\_ChangeBaudrate call the function Det\_ReportError with ErrorId parameter CANSM\_E\_PARAM\_INVALID\_BAUDRATE (ref. to chapter 7.3). ]()

**[CANSM503]** If no condition is present to deny the CanSM\_ChangeBaudrate request according to [CANSM502](#), [CANSM505](#), [CANSM530](#) and [CANSM573](#), then the CanSM module shall return E\_OK and start the asynchronous process to change the baud rate of the CAN network's CAN Controllers to the checked and requested baud rate (ref. to [CANSM507](#)). ]()

## 8.4 Call-back notifications

This is a list of functions provided for other modules. The function prototypes of the callback functions shall be provided in the file CanSM\_Cbk.h

### 8.4.1 CanSM\_ControllerBusOff

**[CANSM064]** If

<b>Service name:</b>	CanSM_ControllerBusOff		
<b>Syntax:</b>	void CanSM_ControllerBusOff( uint8 ControllerId )		
<b>Service ID[hex]:</b>	0x04		
<b>Sync/Async:</b>	Synchronous		
<b>Reentrancy:</b>	Reentrant (only for different CanControllers)		
<b>Parameters (in):</b>	ControllerId	CAN controller, which detected a bus-off event	
<b>Parameters (inout):</b>	None		
<b>Parameters (out):</b>	None		
<b>Return value:</b>	None		
<b>Description:</b>	This callback function notifies the CanSM about a bus-off event on a certain CAN controller, which needs to be considered with the specified bus-off recovery handling for the impacted CAN network.		

] (BSW00359, BSW00333, BSW01146)



**[CANSM189]** «If the function `CanSM_ControllerBusOff` gets a `Controller`, which is not configured as `CanSMControllerId` in the configuration of the `CanSM` module, it shall call the function `Det_ReportError` with `ErrorId` parameter `CANSM_E_PARAM_CONTROLLER`.»()

**[CANSM190]** «If the `CanSM` module is not initialized, when the function `CanSM_ControllerBusOff` is called, then the function `CanSM_ControllerBusOff` shall call the function `Det_ReportError` with `ErrorId` parameter `CANSM_E_UNINIT`.»()

**[CANSM377]** «If the `CanSM` module has to deny the request `CanSM_RequestComMode`, because of a not finished bus-off recovery (ref. to [CANSM375](#) and [CANSM376](#)), then this function shall call the function `Det_ReportError` with the `ErrorId` parameter `CANSM_E_BUSOFF_RECOVERY_ACTIVE` (ref. to chapter 7.3).»()

**[CANSM235]** «If the `CanSM` module is initialized and the input parameter `Controller` is one of the CAN controllers configured with the parameter `CanSMControllerId`, this bus-off event shall be considered by the CAN Network state machine (ref. to [CANSM500](#)).»()

Additional remarks:

- 1.) The call context is either on interrupt level (interrupt mode) or on task level (polling mode).
- 2.) Reentrancy is necessary for multiple CAN controller usage.

## 8.4.2 CanSM\_ControllerModeIndication

**[CANSM396]** «

<b>Service name:</b>	CanSM_ControllerModeIndication	
<b>Syntax:</b>	<pre>void CanSM_ControllerModeIndication(     uint8 ControllerId,     CanIf_ControllerModeType ControllerMode )</pre>	
<b>Service ID[hex]:</b>	0x07	
<b>Sync/Async:</b>	Synchronous	
<b>Reentrancy:</b>	Reentrant (only for different CAN controllers)	
<b>Parameters (in):</b>	ControllerId	CAN controller, whose mode has changed
	ControllerMode	Notified CAN controller mode
<b>Parameters (inout):</b>	None	
<b>Parameters (out):</b>	None	
<b>Return value:</b>	None	
<b>Description:</b>	This callback shall notify the <code>CanSM</code> module about a CAN controller mode	



	change.
--	---------

」()

**[CANS397]** 「If the function `CanSM_ControllerModeIndication` gets a `ControllerId`, which is not configured as `CanSMControllerId` in the configuration of the CanSM module, it shall call the function `Det_ReportError` with `ErrorId` parameter `CANS397_E_PARAM_CONTROLLER`.」()

**[CANS398]** 「If the CanSM module is not initialized, when the function `CanSM_ControllerModeIndication` is called, then the function `CanSM_ControllerModeIndication` shall call the function `Det_ReportError` with `ErrorId` parameter `CANS398_E_UNINIT`.」()

### 8.4.3 CanSM\_TransceiverModeIndication

**[CANS399]** 「

<b>Service name:</b>	CanSM_TransceiverModeIndication	
<b>Syntax:</b>	<pre>void CanSM_TransceiverModeIndication(     uint8 TransceiverId,     CanTrcv_TrsvModeType TransceiverMode )</pre>	
<b>Service ID[hex]:</b>	0x09	
<b>Sync/Async:</b>	Synchronous	
<b>Reentrancy:</b>	Reentrant for different CAN Transceivers	
<b>Parameters (in):</b>	TransceiverId	CAN transceiver, whose mode has changed
	TransceiverMode	Notified CAN transceiver mode
<b>Parameters (inout):</b>	None	
<b>Parameters (out):</b>	None	
<b>Return value:</b>	None	
<b>Description:</b>	This callback shall notify the CanSM module about a CAN transceiver mode change.	

」()

**[CANS400]** 「If the function `CanSM_TransceiverModeIndication` gets a `TransceiverId`, which is not configured as `CanSMTransceiverId` in the configuration of the CanSM module, it shall call the function `Det_ReportError` with `ErrorId` parameter `CANS400_E_PARAM_TRANSCEIVER`.」()

**[CANS401]** 「If the CanSM module is not initialized, when the function `CanSM_TransceiverModeIndication` is called, then the function `CanSM_TransceiverModeIndication` shall call the function `Det_ReportError` with `ErrorId` parameter `CANS401_E_UNINIT`.」()

#### 8.4.4 CanSM\_TxTimeoutException

[CANSM410] 「

<b>Service name:</b>	CanSM_TxTimeoutException
<b>Syntax:</b>	void CanSM_TxTimeoutException( NetworkHandleType Channel )
<b>Service ID[hex]:</b>	0x0b
<b>Sync/Async:</b>	Synchronous
<b>Reentrancy:</b>	Reentrant
<b>Parameters (in):</b>	Channel Affected CAN network
<b>Parameters (inout):</b>	None
<b>Parameters (out):</b>	None
<b>Return value:</b>	None
<b>Description:</b>	This function shall notify the CanSM module, that the CanNm has detected for the affected partial CAN network a tx timeout exception, which shall be recovered by the CanSM module with a transition to no communication and back to the requested communication mode again.

」()

[CANSM411] 「The function CanSM\_TxTimeoutException shall report CANSM\_E\_UNINIT to the DET, if the CanSM is not initialized yet.」()

[CANSM412] 「If the function CanSM\_TxTimeoutException is referenced with a Channel, which is not configured as CanSMNetworkHandle in the CanSM configuration, it shall report CANSM\_E\_INVALID\_NETWORK\_HANDLE to the DET.」()

Remarks: Reentrancy is necessary for different Channels.

#### 8.4.5 CanSM\_ClearTrcvWufFlagIndication

[CANSM413] 「

<b>Service name:</b>	CanSM_ClearTrcvWufFlagIndication
<b>Syntax:</b>	void CanSM_ClearTrcvWufFlagIndication( uint8 Transceiver )
<b>Service ID[hex]:</b>	0x08
<b>Sync/Async:</b>	Synchronous
<b>Reentrancy:</b>	Reentrant for different CAN Transceivers
<b>Parameters (in):</b>	Transceiver Requested Transceiver
<b>Parameters (inout):</b>	None
<b>Parameters (out):</b>	None
<b>Return value:</b>	None
<b>Description:</b>	This callback function shall indicate the CanIf_ClearTrcvWufFlag API process end for the notified CAN Transceiver.

」()

**[CANS414]** 「The function `CanSM_ClearTrcvWufFlagIndication` shall report `CANS4_E_UNINIT` to the DET, if the CanSM is not initialized yet.」()

**[CANS415]** 「If the function `CanSM_ClearTrcvWufFlagIndication` gets a `TransceiverId`, which is not configured (ref. to [CANS4137 Conf](#)) in the configuration of the CanSM module, it shall call the function `Det_ReportError` with `ErrorId` parameter `CANS4_E_PARAM_TRANSCEIVER`.」()

#### 8.4.6 CanSM\_CheckTransceiverWakeFlagIndication

**[CANS416]** 「

<b>Service name:</b>	CanSM_CheckTransceiverWakeFlagIndication	
<b>Syntax:</b>	void CanSM_CheckTransceiverWakeFlagIndication( uint8 Transceiver )	
<b>Service ID[hex]:</b>	0x0a	
<b>Sync/Async:</b>	Synchronous	
<b>Reentrancy:</b>	Reentrant for different CAN Transceivers	
<b>Parameters (in):</b>	Transceiver	Requested Transceiver
<b>Parameters (inout):</b>	None	
<b>Parameters (out):</b>	None	
<b>Return value:</b>	None	
<b>Description:</b>	This callback function indicates the CheckTransceiverWakeFlag API process end for the notified CAN Transceiver.	

」()

**[CANS417]** 「The function `CanSM_CheckTransceiverWakeFlagIndication` shall report `CANS4_E_UNINIT` to the DET, if the CanSM module is not initialized yet.」()

**[CANS418]** 「If the function `CanSM_CheckTransceiverWakeFlagIndication` gets a `TransceiverId`, which is not configured (ref. to [CANS4137 Conf](#)) in the configuration of the CanSM module, it shall call the function `Det_ReportError` with `ErrorId` parameter `CANS4_E_PARAM_TRANSCEIVER`.」()

#### 8.4.7 CanSM\_ConfirmPnAvailability

[CANS419]「

<b>Service name:</b>	CanSM_ConfirmPnAvailability
<b>Syntax:</b>	void CanSM_ConfirmPnAvailability( uint8 TransceiverId )
<b>Service ID[hex]:</b>	0x06
<b>Sync/Async:</b>	Synchronous
<b>Reentrancy:</b>	Reentrant
<b>Parameters (in):</b>	TransceiverId   CAN transceiver, which was checked for PN availability
<b>Parameters (inout):</b>	None
<b>Parameters (out):</b>	None
<b>Return value:</b>	None
<b>Description:</b>	This callback function indicates that the transceiver is running in PN communication mode.

」()

[CANS446]「The function CanSM\_ConfirmPnAvailability shall notify the CanNm module (ref. to [CANS422](#)), if it is called with a configured Transceiver as input parameter (ref. to [CANS137\\_Conf](#)).」()

[CANS420]「

The function CanSM\_ConfirmPnAvailability shall report CANS\_E\_UNINIT to the DET, if the CanSM module is not initialized yet.」()

[CANS421]「

If the function CanSM\_ConfirmPnAvailability gets a TransceiverId, which is not configured (ref. to [CANS137\\_Conf](#)) in the configuration of the CanSM module, it shall call the function Det\_ReportError with ErrorId parameter CANS\_E\_PARAM\_TRANSCEIVER.」()

### 8.5 Scheduled functions

These functions are directly called by Basic Software Scheduler. The following functions shall have no return value and no parameter. All functions shall be non-reentrant.

Terms and definitions:

**Fixed cyclic:** Fixed cyclic means that one cycle time is defined at configuration and shall not be changed because functionality is requiring that fixed timing (e.g. filters).

**Variable cyclic:** Variable cyclic means that the cycle times are defined at configuration, but might be mode dependent and therefore vary during runtime.

**On pre condition:** On pre condition means that no cycle time can be defined. The function will be called when conditions are fulfilled. Alternatively, the function may be

called cyclically however the cycle time will be assigned dynamically during runtime by other modules.

### 8.5.1 CanSM\_MainFunction

[CANSM065] ⌈

<b>Service name:</b>	CanSM_MainFunction
<b>Syntax:</b>	void CanSM_MainFunction( void )
<b>Service ID[hex]:</b>	0x05
<b>Timing:</b>	FIXED_CYCLIC
<b>Description:</b>	Scheduled function of the CanSM

⌋(BSW0424, BSW00425, BSW00376)

[CANSM167] ⌈The main function of the CanSM module shall operate the effects of the CanSM state machine (ref. to chapter 7.2), which the CanSM module shall implement for each configured CAN Network.⌋()

## 8.6 Expected Interfaces

In this chapter all interfaces required from other modules are listed.

### 8.6.1 Mandatory Interfaces

This chapter defines all interfaces, which are required to fulfill the core functionality of the module.

API function	Description
BswM_CanSM_CurrentState	Function called by CanSM to indicate its current state.
CanIf_CheckTrcvWakeFlag	Requests the CanIf module to check the Wake flag of the designated CAN transceiver.
CanIf_ClearTrcvWufFlag	Requests the CanIf module to clear the WUF flag of the designated CAN transceiver.
CanIf_GetTxConfirmationState	This service reports, if any TX confirmation has been done for the whole CAN controller since the last CAN controller start.
CanIf_SetControllerMode	This service calls the corresponding CAN Driver service for changing of the CAN controller mode.
CanIf_SetPduMode	This service sets the requested mode at the L-PDUs of a predefined logical PDU channel.
CanIf_SetTrcvMode	This service changes the operation mode of the transceiver TransceiverId, via calling the corresponding CAN Transceiver Driver service.
CanNm_ConfirmPnAvailability	Enables the PN filter functionality on the indicated NM channel. Availability: The API is only available if CanNmPnEnabled is TRUE.
ComM_BusSM_ModeIndication	Indication of the actual bus mode by the corresponding Bus State Manager. ComM shall propagate the indicated state to the users with means of the RTE and BswM.
Dem_ReportErrorStatus	Queues the reported events from the BSW modules (API is only used by BSW modules). The interface has an asynchronous behavior.

	because the processing of the event is done within the Dem main function.
--	---

### 8.6.2 Optional Interfaces

This chapter defines all interfaces, which are required to fulfill an optional functionality of the module.

<b>API function</b>	<b>Description</b>
CanIf_ChangeBaudrate	This service shall change the baudrate of the CAN controller.
CanIf_CheckBaudrate	This service shall check, if a certain CAN controller supports a requested baudrate
Det_ReportError	Service to report development errors.

### 8.6.3 Configurable Interfaces

In this chapter all interfaces are listed where the target functions could be configured. The target function is usually a callback function. The names of these kind of interfaces is not fixed because they are configurable.

There are no configurable interfaces for the CanSM module.

## 9 Sequence diagrams

All interactions of the CanSM module with the depending modules CanIf, ComM, BswM, Dem and CanNm and Dcm are specified in the state machine diagrams (ref. to Figure 7-1- Figure 7-7). Therefore the CanSM SWS provides only some exemplary sequences for the use case to operate the DCM request to change the baud rate. This also includes the sequences to start and to stop the CAN controller(s) of a CAN network.

Remark: For the special use case of CAN network deinitialization with partial network support please refer to chapter 9 of [9] (Specification of CAN Transceiver Driver).

## 9.1 Sequence for baud rate change request from the DCM module

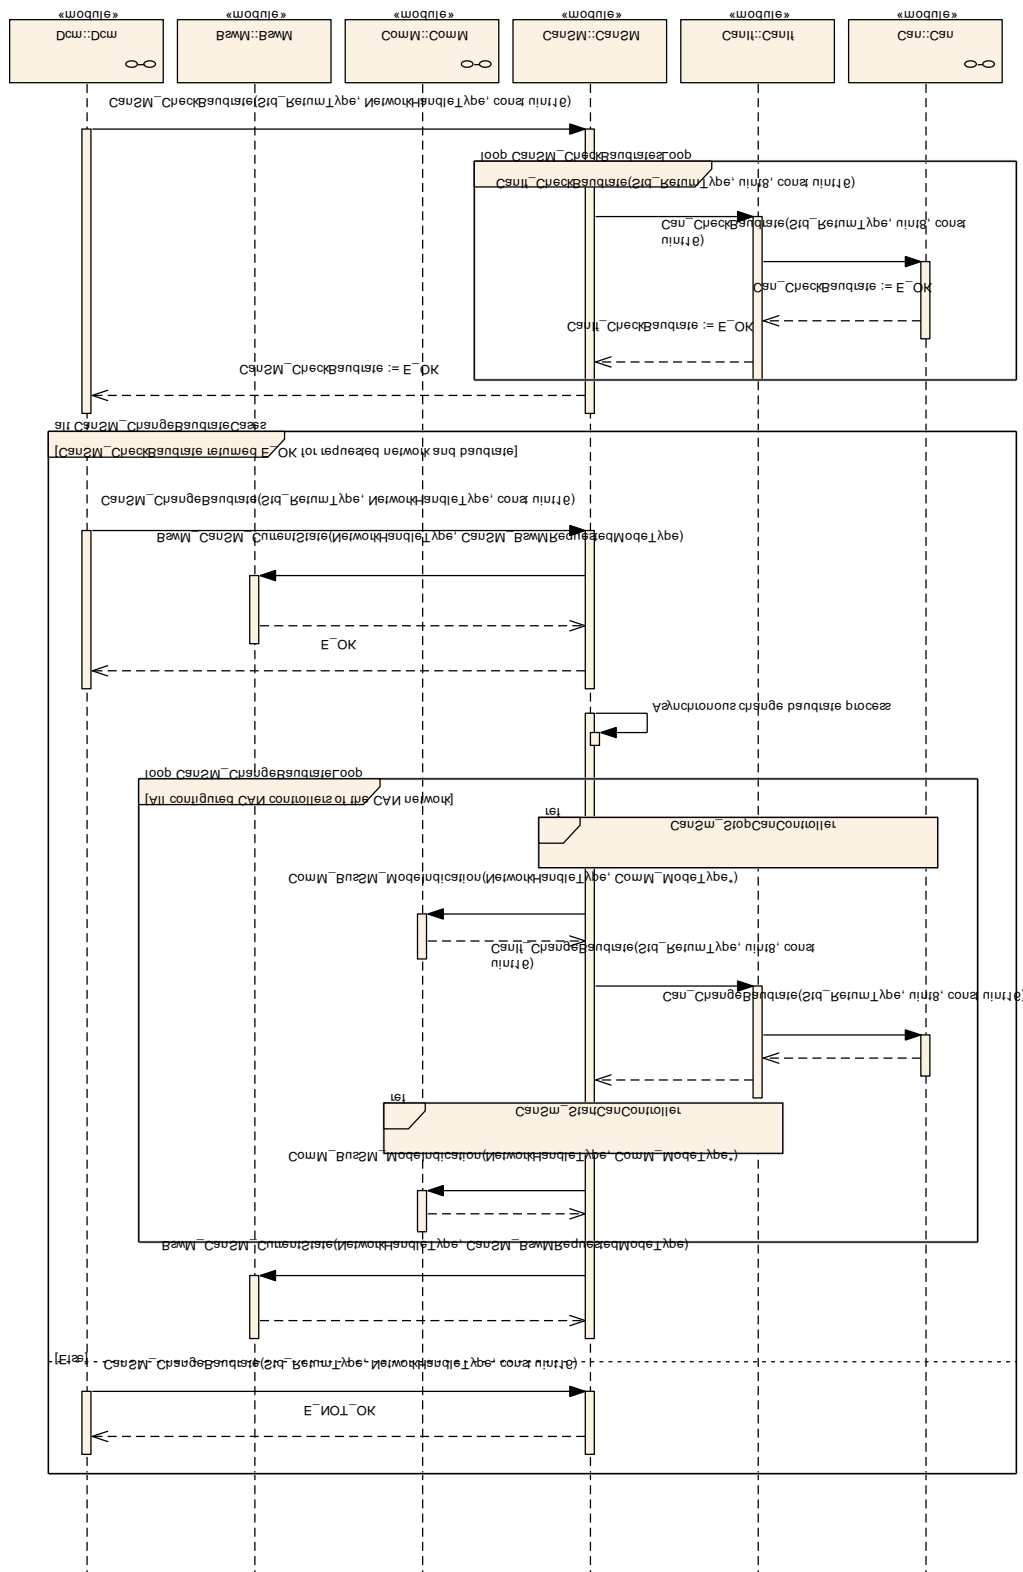


figure 9-1: Sequence for baud rate change request from the DCM module



## 9.2 Sequence diagram CanSm\_StartCanController


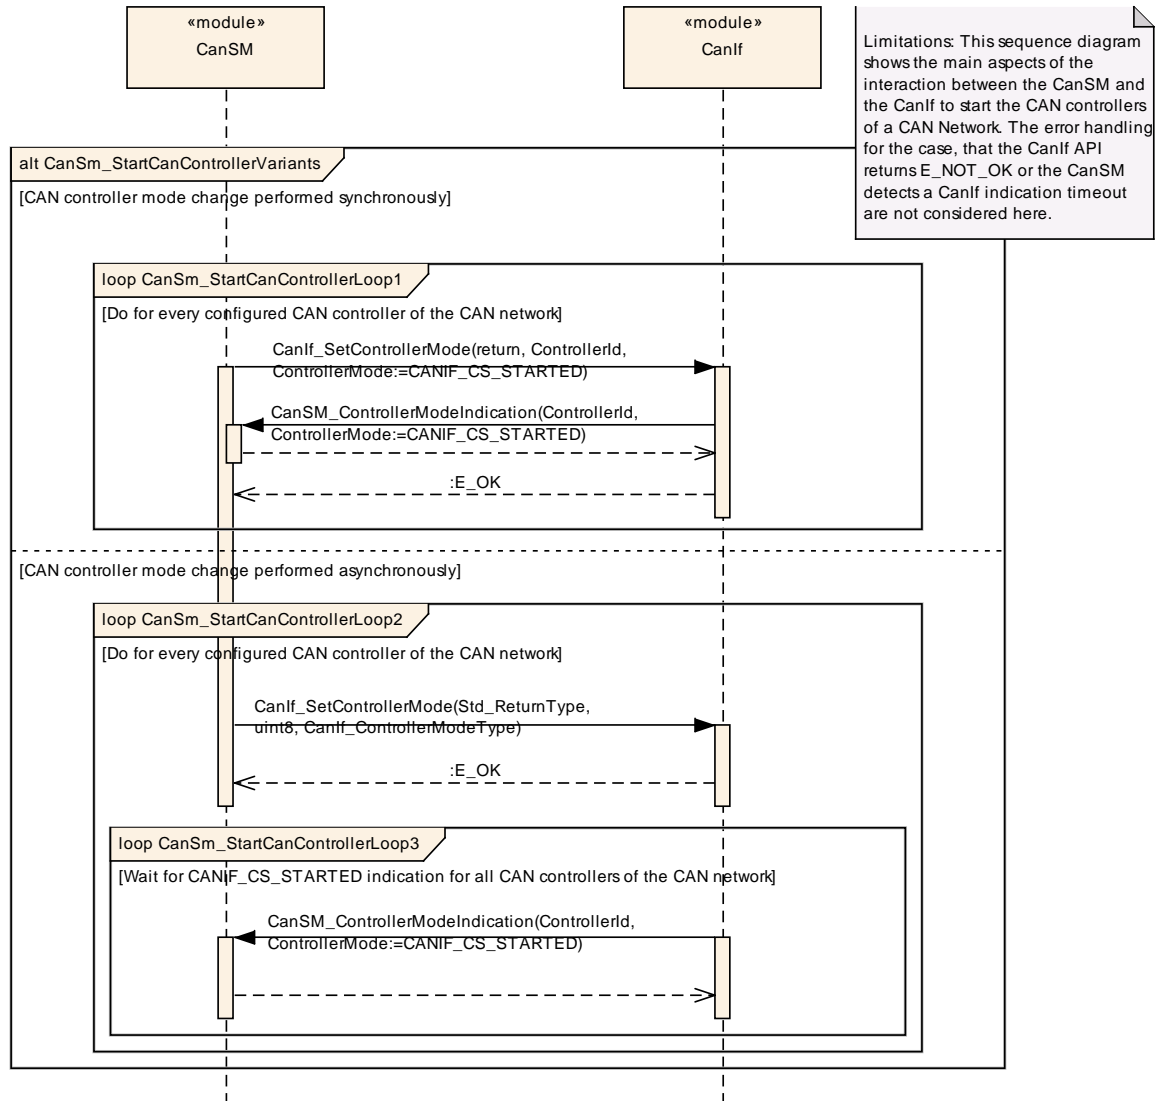


figure 9-2: Sequence diagram CanSm\_StartCanController

### 9.3 Sequence diagram CanSm\_StopCanController

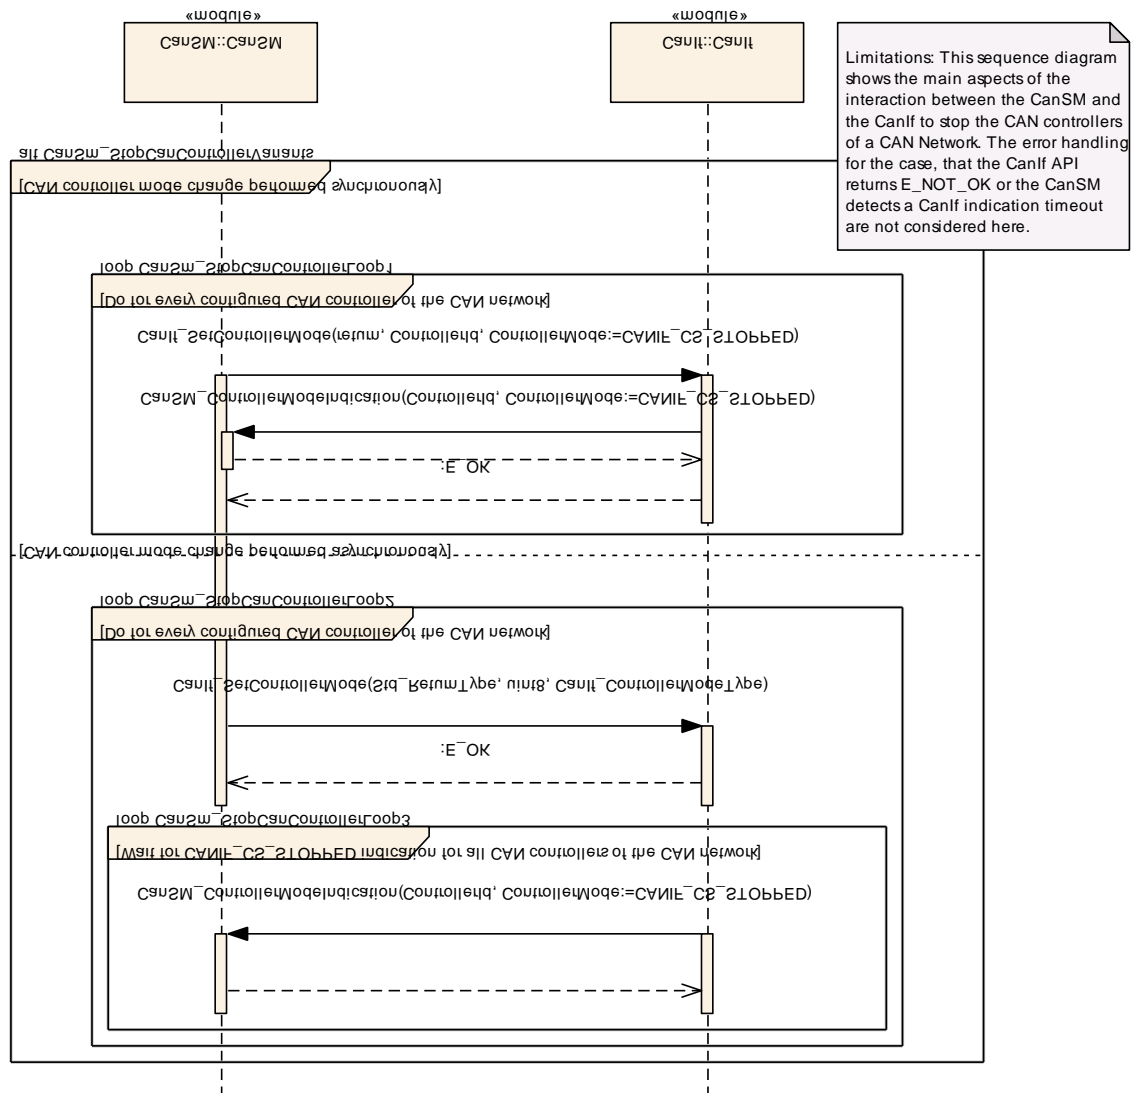

**figure 9-3: Sequence diagram CanSm\_StopCanController**

## 10 Configuration specification

In general, this chapter defines configuration parameters and their clustering into containers. In order to support the specification Chapter 10.1 describes fundamentals. It also specifies a template (table) you shall use for the parameter specification. We intend to leave Chapter 10.1 in the specification to guarantee comprehension.

Chapter 10.2 specifies the structure (containers) and the parameters of the module CanSM.

Chapter 10.3 specifies published information of the module CanSM.

### 10.1 How to read this chapter

In addition to this section, it is highly recommended to read the documents:

- AUTOSAR Layered Software Architecture [2]
- AUTOSAR ECU Configuration Specification [4]  
This document describes the AUTOSAR configuration methodology and the AUTOSAR configuration meta model in detail.

The following is only a short survey of the topic and it will not replace the ECU Configuration Specification document.

### 10.2 Containers and configuration parameters

The following chapters summarize all configuration parameters of the CanSM module. The detailed meanings of the parameters describe chapter 7 and chapter 8.

#### 10.2.1 Variants

**[CANSM250]** 「VARIANT-PRE-COMPILE: Only pre-compile parameters」()

**[CANSM251]** 「VARIANT-LINK-TIME: Mix of pre-compile and link time parameters」()

**[CANSM252]** 「VARIANT-POST-BUILD: Mix of pre compile-, link time and post build time parameters」()

#### 10.2.2 CanSM

<b>Module Name</b>	CanSM
<b>Module Description</b>	Configuration of the CanSM module

<b>Included Containers</b>		
<b>Container Name</b>	<b>Multiplicity</b>	<b>Scope / Dependency</b>
CanSMConfiguration	1	This container contains the global parameters of the CanSM and sub containers, which are for the CAN network specific configuration.

CanSMGeneral	1	Container for general pre-compile parameters of the CanSM module
--------------	---	--

### 10.2.3 CanSMGeneral

<b>SWS Item</b>	<b>CANSM314_Conf :</b>
<b>Container Name</b>	CanSMGeneral
<b>Description</b>	Container for general pre-compile parameters of the CanSM module
<b>Configuration Parameters</b>	

<b>SWS Item</b>	<b>CANSM133_Conf :</b>		
<b>Name</b>	CanSMDevErrorDetect {CANSM_DEV_ERROR_DETECT}		
<b>Description</b>	Enables and disables the development error detection and notification mechanism.		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucBooleanParamDef		
<b>Default value</b>	--		
<b>ConfigurationClass</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	--	
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: Local		

<b>SWS Item</b>	<b>CANSM312_Conf :</b>		
<b>Name</b>	CanSMMainFunctionTimePeriod {CANSM_MAIN_FUNCTION_TIME_PERIOD}		
<b>Description</b>	This parameter defines the cycle time of the function CanSM_MainFunction in seconds		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucFloatParamDef		
<b>Range</b>	0.001 .. 65.535		
<b>Default value</b>	--		
<b>ConfigurationClass</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	--	
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: Local		

<b>SWS Item</b>	<b>CANSM311_Conf :</b>		
<b>Name</b>	CanSMVersionInfoApi {CANSM_VERSION_INFO_API}		
<b>Description</b>	Activate/Deactivate the version information API (CanSM_GetVersionInfo). true: version information API activated false: version information API deactivated		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucBooleanParamDef		
<b>Default value</b>	--		
<b>ConfigurationClass</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	--	
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: Local		

<b>SWS Item</b>	<b>CANSM342_Conf :</b>		
<b>Name</b>	CanSmChangeBaudrateApi {CANSM_CHANGE_BAUDRATE_API}		
<b>Description</b>	The support of the Can_ChangeBaudrate API is optional. If this parameter is set to true the Can_ChangeBaudrate API shall be supported. Otherwise the API is not supported.		

<b>Multiplicity</b>	1		
<b>Type</b>	EcucBooleanParamDef		
<b>Default value</b>	false		
<b>ConfigurationClass</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	--	
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: ECU		

#### No Included Containers

### 10.2.4 CanSMConfiguration

<b>SWS Item</b>	<b>CANSM123_Conf :</b>
<b>Container Name</b>	CanSMConfiguration [Multi Config Container]
<b>Description</b>	This container contains the global parameters of the CanSM and sub containers, which are for the CAN network specific configuration.
<b>Configuration Parameters</b>	

<b>SWS Item</b>	<b>CANSM335_Conf :</b>		
<b>Name</b>	CanSMModeRequestRepetitionMax {CANSM_MODEREQ_MAX}		
<b>Description</b>	Specifies the maximal amount of mode request repetitions without a respective mode indication from the CanIf module until the CanSM module reports a development error to the DET and tries to go back to no communication.		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucIntegerParamDef		
<b>Range</b>	0 .. 255		
<b>Default value</b>	--		
<b>ConfigurationClass</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME
	<b>Post-build time</b>	X	VARIANT-POST-BUILD
<b>Scope / Dependency</b>	scope: Local		

<b>SWS Item</b>	<b>CANSM336_Conf :</b>		
<b>Name</b>	CanSMModeRequestRepetitionTime {CANSM_MODEREQ_REPEAT_TIME}		
<b>Description</b>	Specifies in which time duration the CanSM module shall repeat mode change requests by using the API of the CanIf module.		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucFloatParamDef		
<b>Range</b>	0 .. 65.535		
<b>Default value</b>	--		
<b>ConfigurationClass</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME
	<b>Post-build time</b>	X	VARIANT-POST-BUILD
<b>Scope / Dependency</b>	scope: Local		

<b>Included Containers</b>		
<b>Container Name</b>	<b>Multiplicity</b>	<b>Scope / Dependency</b>
CanSMManagerNetwork	1..*	This container contains the CAN network specific parameters of each CAN network

## 10.2.5 CanSMManagerNetwork

<b>SWS Item</b>	<b>CANSM126_Conf :</b>
<b>Container Name</b>	CanSMManagerNetwork
<b>Description</b>	This container contains the CAN network specific parameters of each CAN network
<b>Configuration Parameters</b>	

<b>SWS Item</b>	<b>CANSM131_Conf :</b>		
<b>Name</b>	CanSMBorCounterL1ToL2 {CANSM_BOR_COUNTER_L1_TO_L2}		
<b>Description</b>	This threshold defines the count of bus-offs until the bus-off recovery switches from level 1 (short recovery time) to level 2 (long recovery time).		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucIntegerParamDef		
<b>Range</b>	0 .. 255		
<b>Default value</b>	--		
<b>ConfigurationClass</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME
	<b>Post-build time</b>	X	VARIANT-POST-BUILD
<b>Scope / Dependency</b>	scope: Local		

<b>SWS Item</b>	<b>CANSM128_Conf :</b>		
<b>Name</b>	CanSMBorTimeL1 {CANSM_BOR_TIME_L1}		
<b>Description</b>	This time parameter defines in seconds the duration of the bus-off recovery time in level 1 (short recovery time).		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucFloatParamDef		
<b>Range</b>	0 .. 65.535		
<b>Default value</b>	--		
<b>ConfigurationClass</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME
	<b>Post-build time</b>	X	VARIANT-POST-BUILD
<b>Scope / Dependency</b>	scope: Local		

<b>SWS Item</b>	<b>CANSM129_Conf :</b>		
<b>Name</b>	CanSMBorTimeL2 {CANSM_BOR_TIME_L2}		
<b>Description</b>	This time parameter defines in seconds the duration of the bus-off recovery time in level 2 (long recovery time).		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucFloatParamDef		
<b>Range</b>	0 .. 65.535		
<b>Default value</b>	--		
<b>ConfigurationClass</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME
	<b>Post-build time</b>	X	VARIANT-POST-BUILD
<b>Scope / Dependency</b>	scope: Local		

<b>SWS Item</b>	<b>CANSM130_Conf :</b>		
<b>Name</b>	CanSMBorTimeTxEnsured {CANSM_BOR_TIME_TX_ENSURED}		
<b>Description</b>	This parameter defines in seconds the duration of the bus-off event check. This check assesses, if the recovery has been successful after the recovery reenables the transmit path. If a new bus-off occurs during this time period, the CanSM assesses this bus-off as sequential bus-off without successful recovery. Because a bus-off only can be detected, when PDUs are transmitted, the time has to be great enough to ensure that PDUs are transmitted again (e. g. time period of the fastest cyclic transmitted PDU of		

	the COM module / ComTxModeTimePeriodFactor).		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucFloatParamDef		
<b>Range</b>	0 .. 65.535		
<b>Default value</b>	--		
<b>ConfigurationClass</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME
	<b>Post-build time</b>	X	VARIANT-POST-BUILD
<b>Scope / Dependency</b>	scope: Local dependency: CANSMBOR_TX_CONFIRMATION_POLLING disabled		

<b>SWS Item</b>	<b>CANSMBOR_TX_CONFIRMATION_POLLING</b>		
<b>Name</b>	CanSMBorTxConfirmationPolling {CANSMBOR_TX_CONFIRMATION_POLLING}		
<b>Description</b>	This parameter shall configure, if the CanSM polls the CanIf_GetTxConfirmationState API to decide the bus-off state to be recovered instead of using the CanSMBorTimeTxEnsured parameter for this decision.		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucBooleanParamDef		
<b>Default value</b>	--		
<b>ConfigurationClass</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	--	
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: Local		

<b>SWS Item</b>	<b>CANSMBOR_TX_CONFIRMATION_POLLING</b>		
<b>Name</b>	CanSMComMNetworkHandleRef {CANSMBOR_TX_CONFIRMATION_POLLING}		
<b>Description</b>	Unique handle to identify one certain CAN network. Reference to one of the network handles configured for the ComM.		
<b>Multiplicity</b>	1		
<b>Type</b>	Reference to [ ComMChannel ]		
<b>ConfigurationClass</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME
	<b>Post-build time</b>	X	VARIANT-POST-BUILD
<b>Scope / Dependency</b>	scope: Local dependency: ComM		

<b>SWS Item</b>	<b>CANSMBOR_TX_CONFIRMATION_POLLING</b>		
<b>Name</b>	CanSMTransceiverId {CANSMBOR_TX_CONFIRMATION_POLLING}		
<b>Description</b>	ID of the CAN transceiver assigned to the configured network handle. Reference to one of the transceivers managed by the CanIf module.		
<b>Multiplicity</b>	0..1		
<b>Type</b>	Reference to [ CanIfTrcvCfg ]		
<b>ConfigurationClass</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME
	<b>Post-build time</b>	X	VARIANT-POST-BUILD
<b>Scope / Dependency</b>	scope: Local dependency: CanIf		

<b>Included Containers</b>		
<b>Container Name</b>	<b>Multiplicity</b>	<b>Scope / Dependency</b>
CanSMController	1..*	This container contains the controller IDs assigned to a CAN network.
CanSMDemEventParameterRefs	0..1	Container for the references to DemEventParameter elements which shall be invoked using the API

		Dem_ReportErrorStatus API in case the corresponding error occurs. The EventId is taken from the referenced DemEventParameter's DemEventId value. The standardized errors are provided in the container and can be extended by vendor specific error references.
--	--	---

### 10.2.6 CanSMDemEventParameterRefs

<b>SWS Item</b>	<b>CANSM127_Conf :</b>
<b>Container Name</b>	CanSMDemEventParameterRefs
<b>Description</b>	Container for the references to DemEventParameter elements which shall be invoked using the API Dem_ReportErrorStatus API in case the corresponding error occurs. The EventId is taken from the referenced DemEventParameter's DemEventId value. The standardized errors are provided in the container and can be extended by vendor specific error references.
<b>Configuration Parameters</b>	

<b>SWS Item</b>	<b>CANSM070_Conf :</b>		
<b>Name</b>	CANSM_E_BUS_OFF {CANSM_E_BUS_OFF}		
<b>Description</b>	Reference to configured DEM event to report bus off errors for this CAN network.		
<b>Multiplicity</b>	0..1		
<b>Type</b>	Reference to [ DemEventParameter ]		
<b>ConfigurationClass</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME
	<b>Post-build time</b>	X	VARIANT-POST-BUILD
<b>Scope / Dependency</b>	scope: dependency: Dem		Local

**No Included Containers**

### 10.2.7 CanSMController

<b>SWS Item</b>	<b>CANSM338_Conf :</b>
<b>Container Name</b>	CanSMController
<b>Description</b>	This container contains the controller IDs assigned to a CAN network.
<b>Configuration Parameters</b>	

<b>SWS Item</b>	<b>CANSM141_Conf :</b>		
<b>Name</b>	CanSMControllerId {CANSM_CONTROLLER_ID}		
<b>Description</b>	Unique handle to identify one certain CAN controller. Reference to one of the CAN controllers managed by the CanIf module.		
<b>Multiplicity</b>	1		
<b>Type</b>	Reference to [ CanIfCtrlCfg ]		
<b>ConfigurationClass</b>	<b>Pre-compile time</b>	X	VARIANT-PRE-COMPILE
	<b>Link time</b>	X	VARIANT-LINK-TIME
	<b>Post-build time</b>	X	VARIANT-POST-BUILD
<b>Scope / Dependency</b>	scope: dependency: CanIf		Local

**No Included Containers**



### 10.3 Published Information

[CANS559] 「The standardized common published parameters as required by BSW00402 in the General Requirements on Basic Software Modules [3] shall be published within the header file of this module and need to be provided in the BSW Module Description. The according module abbreviation can be found in the List of Basic Software Modules [1].」()

Additional module-specific published parameters are listed below if applicable.

## 11 Changes between AR3.0 and AR4.0 rev001

### 11.1 Deleted SWS Items

SWS Item	Rationale
CANSM061	Cleared to solve issues of improvement process
CANSM211	Cleared to solve issues of improvement process
CANSM212	Cleared to solve issues of improvement process
CANSM214	Cleared to solve issues of improvement process
CANSM215	Cleared to solve issues of improvement process
CANSM216	Cleared to solve issues of improvement process
CANSM169	Cleared to solve issues of improvement process
CANSM236	Cleared to solve issues of improvement process
CANSM155	Requirement ID from standard text removed
CANSM172	
CANSM262	
CANSM263	
CANSM267	
CANSM274	
CANSM277	
CANSM291	
CANSM296	
CANSM300	
CANSM175	
CANSM138	
CANSM139	
CANSM198	
CANSM077	
CANSM076	
CANSM078	
CANSM079	
CANSM290	Work on clarification
CANSM293	Avoid mix of use cases for peripheral requests and mode transitions between communication mode requests from ComM and bus-off handling
CANSM037	Cleared after improvement process
CANSM007	Cleared to consider latest SWS template
CANSM242	Cleared to consider latest SWS template
CANSM249	Deleted to solve
CANSM027	Deleted to solve
CANSM180	Deleted to solve
CANSM181	Deleted to solve
CANSM185	Deleted to solve
CANSM303	
CANSM315	): Bus-off recovery handling sequence misinterpretation
CANSM316_Conf CANSM270 CANSM317 CANSM318 CANSM320 CANSM319 CANSM321 CANSM323 CANSM325 CANSM326 CANSM357 CANSM322	Deleted during changes to solve [Can][CanIf][CanSm][CanTrcv] Full COM Request have to be asynchronous but is specified synchronous

CANSM328	
CANSM329	
CANSM330	
CANSM358	
CANSM331	
CANSM359	
CANSM332	
CANSM333	
CANSM356	
CANSM344	
CANSM345	
CANSM346	
CANSM343	

## 11.2 Replaced SWS Items

<i>SWS Item</i>	<i>replaced by SWS Item</i>	<i>Rationale</i>
CANSM057	<a href="#">CANSM287</a> , <a href="#">CANSM288</a>	Made requirement atomic
CANSM122	<a href="#">CANSM250</a> , <a href="#">CANSM251</a> , <a href="#">CANSM252</a>	One requirement per variant

## 11.3 Changed SWS Items

SWS Item	Change	Rationale
CANSM027	Linefeed removed within standard requirement	
<a href="#">CANSM074</a>	Changed to prescribed standard text	
CANSM128	Removed to CanStateManagerNetworks Container in ECUCParameterDefinitions of Meta Model and new generation of artifacts	
CANSM129	Removed to CanStateManagerNetworks Container in ECUCParameterDefinitions of Meta Model and new generation of artifacts	
CANSM024	CanSM_GetVersionInfo corrected in BSW Model and new generation of artifacts	
CANSM123	Multiplicity changed in MM and new generation of artifacts	
CANSM397	Refer to new requirements CANSM340-CANSM342	Avoid mix of use cases for peripheral requests and mode transitions between communication mode requests from ComM and bus-off handling
CANSM070	Specified as configuration parameter of the CanSM, which references as diagnostic event parameter from the DEM	Optimize configuration
CANSM334	Specified as configuration parameter of the CanSM, which references as diagnostic event parameter from the DEM	Optimize configuration
<a href="#">CANSM250</a>	Variant 1 renamed into VARIANT-PRE-COMPILE	
<a href="#">CANSM251</a>	Variant 2 renamed into VARIANT-LINK-TIME	
<a href="#">CANSM252</a>	Variant 3 renamed into VARIANT-POST-BUILD	
<a href="#">CANSM161_Conf</a>	CanSMNetworkHandle => CanSMComMNetworkHandleRef	
<a href="#">CANSM174</a>	"The CanSM module (CanSM.c) shall include the header file ComM.h" changed into "the header file CanSM.h shall include the header file ComM.h"	
CANSM289	CANSM_CS_STARTED replaced with CANIF_CS_STARED	Typo
<a href="#">CANSM265</a>	Instruction order changed (first callback, then internal state change)	
<a href="#">CANSM349</a>	Instruction order changed (first callback, then internal state change)	
<a href="#">CANSM256</a>	Instruction order changed (first callback, then internal state change)	
<a href="#">CANSM261</a>	Instruction order changed (first callback, then internal state change)	
<a href="#">CANSM276</a>	Instruction order changed (first callback, then internal state change)	
<a href="#">CANSM281</a>	Instruction order changed (first callback, then internal state change)	
<a href="#">CANSM353</a>	Instruction order changed (first callback, then internal state change)	
CANSM315	Typo: therefore => therefore	
CANSM279	Typo (missing <)>)	
CANSM235	Formulation (regard => handle)	
CANSM346	Formulation (consider => handle)	

CANSM353	Typo: Full replaced with silent; wrong requirement references corrected	
CANSM349	BswM_CanSM_RequestMode changed into BswM_CanSM_CurrentState	
CANSM350	BswM_CanSM_RequestMode changed into BswM_CanSM_CurrentState	
CANSM351	BswM_CanSM_RequestMode changed into BswM_CanSM_CurrentState	
CANSM352	BswM_CanSM_RequestMode changed into BswM_CanSM_CurrentState	
CANSM281	BswM_CanSM_RequestMode changed into BswM_CanSM_CurrentState	
CANSM354	BswM_CanSM_RequestMode changed into BswM_CanSM_CurrentState	
CANSM355	BswM_CanSM_RequestMode changed into BswM_CanSM_CurrentState	
CANSM356	BswM_CanSM_RequestMode changed into BswM_CanSM_CurrentState	
CANSM357	BswM_CanSM_RequestMode changed into BswM_CanSM_CurrentState	
CANSM358	BswM_CanSM_RequestMode changed into BswM_CanSM_CurrentState	
CANSM359	BswM_CanSM_RequestMode changed into BswM_CanSM_CurrentState	
CANSM265 CANSM349 CANSM256 CANSM264 CANSM350 CANSM261 CANSM271 CANSM351 CANSM272 CANSM275 CANSM352 CANSM276 CANSM280 CANSM281 CANSM353	First change internal state, then issue callbacks	
CANSM284	CANSM_UNINITED removed	
CANSM255 CANSM268	Removed reference to chapter 7.1	Reference to same chapter while in same chapter
CANSM025	Version check corrected	[Csm] Version Check requirement needs correction
CANSM125	CANSM_MODULE_ID specified as uint16	
CANSM257 CANSM258 CANSM259 CANSM270	CanIf_SetTransceiverMode replaced with CanIf_SetTrcvMode	[Csm] Mismatch in the API name of the CanIf module
CANSM257 CANSM258	Typos	
CANSM167	Main function shall only implement the parts of the bus-off recovery state machine, which depend on time	Changed in scope of the document improvement process by TO
CANSM259 CANSM260 CANSM264 CANSM269 CANSM270 CANSM271	CanSMNetworkHandle replaced with CanSMComMNetworkHandleRef where necessary	[Csm] Wrong container name used to describe the requirements

CANS273 CANS275 CANS279 CANS280 CANS281		
CANS257 CANS259 CANS270 CANS258 CANS260 CANS269 CANS273 CANS279 CANS289 CANS337 CANS340 CANS323 CANS328 CANS329	Solved inconsistency between API parameters specified in BSW UML and referenced parameters in the CANS requirements	[CanSm] Mismatch in the API argument name of the CanIf module
CANS062	Synchronous API	CANS: CanSM_RequestComMode sync vs. async
CANS336_Conf	Parameter name changed into: CanSMModeRequestRepetitionTime / CANS_MODEREQ_REPEAT_TIME  Description revised	[Can][CanIf][CanSm][CanTrcv] Full COM Request have to be asynchronous but is specified synchronous
CANS335_Conf	Parameter name changed into: CanSMModeRequestRepetitionMax / CANS_MODEREQ_MAX  Description revised	
CANS334_Conf	Parameter name changed into: CANS_E_MODE_REQUEST_TIMEOUT Description revised	
CANS257	Relation to requirement CANS379	
CANS258	Relation to requirement CANS382	
CANS265	Relation to requirement CANS383	
CANS349	Formulation changed to consider each network separately	
CANS256	Formulation changed to consider each network separately	
CANS260	Relation to requirement CANS390	
CANS264	Relation to requirement CANS260	
CANS350	Relation to requirement CANS264	
CANS261	Relation to requirement CANS350	
CANS269	Relation to requirement CANS393	
CANS271	Relation to requirement CANS269	
CANS351	Relation to requirement CANS271	
CANS337	Relation to requirement CANS289	
CANS339	Relation to requirement CANS337	
CANS338	Relation to requirement CANS339	
CANS354	Relation to requirement CANS338	
CANS340	Removed term of network mode request, because obsolete (requests are blocked during recovery)	
CANS341	Relation to requirement CANS342	
CANS342	Relation to requirement CANS340	
CANS355	Relation to requirement CANS341	

CANSM295	Relation to requirement CANSM294	
	1.) Removed term of network mode request, because obsolete (requests are blocked during recovery)	
CANSM297	2.) Added relation to CANSM355	
CANSM299	Relation to requirement CANSM298	
CANSM288	Bus-off counter to 0 from no to full communication instead of after PowerOn	
CANSM279	Also go to silent, if no communication is requested	
CANSM280	Relation to requirement CANSM279	
CANSM281	Relation to requirement CANSM280	
CANSM353	Relation to requirement CANSM281	
CANSM256 CANSM350 CANSM272 CANSM276 CANSM353 CANSM354 CANSM355	"Channel_Id" changed into "Network" "CanSM_Requested_Mode" changed into "CurrentState"	
CANSM295 CANSM299	paramters" corrected into "parameters"	
CANSM069	New development errors CANSM_E_WAIT_MODE_INDICATION, CANSM_E_INVALID_COMM_REQUEST	
CANSM069	New development error: CANSM_E_BUSOFF_RECOVERY_ACTIVE,	[CanSm] V1.1.36; C7.2; State transition description does not care about error conditions

## 11.4 Added SWS Items

<b>SWS Item</b>	<b>Rationale</b>
<a href="#">CANSM242</a>	Requirement for file structure
<a href="#">CANSM243</a>	Requirement for imported type
<a href="#">CANSM244</a>	Standard requirement for CanSM_GetVersionInfo
<a href="#">CANSM249</a>	Missing ID for standard requirement
CANSM310	
CANSM309	
CANSM306	
CANSM307	
CANSM308	
<a href="#">CANSM374</a>	

<a href="#">CANS312</a>	
CANS315	
CANS337	Avoid mix of use cases for peripheral requests and mode transitions between communication mode requests from ComM and bus-off handling
CANS338	Avoid mix of use cases for peripheral requests and mode transitions between communication mode requests from ComM and bus-off handling
CANS339	Avoid mix of use cases for peripheral requests and mode transitions between communication mode requests from ComM and bus-off handling
CANS340	Avoid mix of use cases for peripheral requests and mode transitions between communication mode requests from ComM and bus-off handling
CANS341	Avoid mix of use cases for peripheral requests and mode transitions between communication mode requests from ComM and bus-off handling
CANS342	Avoid mix of use cases for peripheral requests and mode transitions between communication mode requests from ComM and bus-off handling
CANS343	New recovery for can controller timeouts events
CANS344	New recovery for can controller timeouts events
CANS345	New recovery for can controller timeouts events
CANS346	New recovery for can controller timeouts events
CANS317 – CANS333	New recovery for can controller timeouts events
CANS347 – CANS359	
CANS360	NULL pointer exception for the function CanSM_GetCurrentComMode
CANS361	Added to consider latest SWS template and to solve
CANS362	Added to consider latest SWS template and to solve
CANS363	
CANS364	
CANS365	
CANS366	
CANS367	
CANS368	
CANS369	
CANS370	
CANS371	
CANS372	
CANS375 CANS376 CANS377	Solution of [CanSm] V1.1.36; C7.2; State transition description does not care about error conditions
CANS378 CANS381 CANS386 CANS387 CANS388 CANS390 CANS385 CANS391 CANS392 CANS393 CANS394 CANS395 CANS396 CANS397 CANS398 CANS399 CANS400 CANS401 CANS402 CANS403	Added during changes to solve [Can][CanIf][CanSm][CanTrcv] Full COM Request have to be asynchronous but is specified synchronous
CAN001_PI	Rework of Published Information



--	--

## 12 Changes between AUTOSAR R4.0 rev001 and rev002

### 12.1 Deleted SWS Items

SWS Item	Rationale
CANSM285	[CanSm] Internal network mode cannot be initialized to CANSM_UNINITED
CANSM022	[CanSm] export of main function

### 12.2 Replaced SWS Items

SWS Item	replaced by SWS Item	Rationale

### 12.3 Changed SWS Items

SWS Item	Change	Rationale
CANSM349 CANSM256 CANSM350 CANSM261 CANSM351 CANSM272 CANSM352 CANSM276 CANSM281 CANSM353 CANSM354 CANSM338 CANSM341 CANSM355	CanSMNetworkHandle replaced with CanSMComMNetworkHandleRef	"Wrong container name used to describe the requirements"
CANSM070_Conf CANSM334_Conf	Multiplicity changed from 1 to 0..1	[CanSm] Multiplicity of CanSmDemEventParameterRefs
CANSM314_Conf CANSM123_Conf CANSM126_Conf CANSM127_Conf CANSM338_Conf	Following parameters and containers renamed: - CanStateManagerConfiguration to CanSMConfiguration - CanStateManagerController to CanSMController - CanStateManagerGeneral to CanSMGeneral - CanStateManagerNetwork to CanSMManagerNetwork - CanSmDemEventParameterRefs to CanSMDemEventParameterRefs	[CanSm] Ecuc Parameter naming in CanSm
CANSM025	Requirement changed according to changed BSW004	[mult] SRS_General: BSW004
CANSM292 CANSM294 CANSM298	Evaluation of the new configuration parameter CANSM_BOR_TX_CONFIRMATION_POLLING ( <a href="#">CANSM339_Conf</a> )	[CanSm][CanIf] Bus-Off recovery optimization
<a href="#">CANSM257</a> <a href="#">CANSM392</a>	CANTRCV_STANDBY replaced with CANIF_TRCV_MODE_STANDBY	[CanSm] Mismatch in the enumeration values of the CanIf module: Update of generated

		artifacts
<a href="#">CANSM259</a> <a href="#">CANSM391</a> <a href="#">CANSM378</a>	CANTRCV_NORMAL replaced with CANIF_TRCV_MODE_NORMAL	[CanSm] Mismatch in the enumeration values of the CanIf module: Update of generated artifacts
<a href="#">CANSM337_Conf</a>	Changed description field	[diverse] Clarify harmonized channel ID in COM-Stack
<a href="#">CANSM399</a> <a href="#">CANSM243</a>	Type of function parameter TransceiverMode changed to CanTrcv_TrcvModeType	[CanTrcv][LinTrcv][LinIf][LinSM] APIs to be removed from State Diagram

## 12.4 Added SWS Items

<b>SWS Item</b>	<b>Rationale</b>
<a href="#">CANSM339_Conf</a>	[CanSm][CanIf] Bus-Off recovery optimization
<a href="#">CANSM404</a>	[CanSm][CanIf] Bus-Off recovery optimization
<a href="#">CANSM405</a>	[CanSm][CanIf] Bus-Off recovery optimization
<a href="#">CANSM406</a>	[CanSm][CanIf] Bus-Off recovery optimization
<a href="#">CANSM407</a>	[CanSm] PDU channel modes of CanIf not correctly served
<a href="#">CANSM408</a>	[CanSm] PDU channel modes of CanIf not correctly served
<a href="#">CANSM409</a>	[CanSm] PDU channel modes of CanIf not correctly served

## 13 Changes between AUTOSAR R4.0 rev002 and rev003

### 13.1 Deleted SWS Items

<b>SWS Item</b>	<b>Rationale</b>
CANSM349	Solution for implementation [CanSm] Contradiction between CanSM and ComM for call of ComM_BusSM_ModelIndication()"
CANSM337_Conf	Implementation Task [CanSm][EthSM][FrSM][LinSM][BswM] Local network index of Bus SM modules
CANSM334_Conf	Completion of Production error concept in Com Stack)
CANSM132_Conf	Solution of [CanSm] Bus off recovery time independent of error detection time)

### 13.2 Replaced SWS Items

<b>SWS Item</b>	<b>replaced by SWS Item</b>	<b>Rationale</b>
CANSM255 CANSM268 CANSM378	CANSM424 CANSM427	– 1.) Implementation [CanSm] Instruction order for transition to no communication
CANSM257 CANSM381 CANSM407	CANSM429 CANSM480	– 2.) Implementation [Dcm][BswM][CanSm][CanIf][Can] change of baudrate within UDS service linkcontrol
CANSM258 CANSM265 CANSM256	CANSM483 CANSM500	– 3.) Implementation [CanSm] Instruction order of Entering NoCom
CANSM259 CANSM390 CANSM260	CANSM507 CANSM529	– 4.) Implementation [CanTrcv][CanIf][CanSm][CanNm] Handling if PN functionality is disabled in the Trcv
CANSM409 CANSM264 CANSM350	CANSM531 CANSM543	– 5.) Implementation [CanSM][CanNm] Partial Networking – Error handling for missing ACK (WUF retransmission)
CANSM261 CANSM394 CANSM391 CANSM392 CANSM393 CANSM408 CANSM269 CANSM271 CANSM351 CANSM272 CANSM273 CANSM275 CANSM352 CANSM276 CANSM279 CANSM280 CANSM281 CANSM353 CANSM286 CANSM302 CANSM287 CANSM288 CANSM289	CANSM550 CANSM554	

CANSM337 CANSM339 CANSM354 CANSM338 CANSM292 CANSM404 CANSM340 CANSM342 CANSM341 CANSM355 CANSM294 CANSM405 CANSM295 CANSM297 CANSM298 CANSM406 CANSM299 CANSM301 CANSM386 CANSM387 CANSM388		
--	--	--

### 13.3 Changed SWS Items

SWS Item	Change	Rationale
CANSM256	Dependency to removed CANSM349 replaced with dependency to existing <a href="#">CANSM265</a>	Solution for implementation [CanSm] Contradiction between CanSM and ComM for call of ComM_BusSM_ModelIndication()
CANSM130_Conf	Dependency to CANSM_BOR_TX_CONFIRMATION_POLLING added for CanSMBorTimeTxEnsured	Implementation [CanSm][CanIf] Bus-Off recovery optimization)
CANSM266	Clarification: The CanSM module shall store the latest notified current network mode to the ComM for each configured CAN network internally (ref. to CANSM126_Conf).	1.) Implementation [CanSm] Instruction order for transition to no communication 2.) Implementation [CanSm] Instruction order of Entering NoCom
CANSM186	Reference to CANSM266 for clarification	1.) Implementation [CanSm] Instruction order for transition to no communication 2.) Implementation [CanSm] Instruction order of Entering NoCom
CANSM282	Reference to CANSM430 for clarification	1.) Implementation [CanSm] Instruction order for transition to no communication 2.) Implementation [CanSm] Instruction order of Entering

		NoCom
CANSM182	Reference to CANSM427, CANSM429, CANSM499, CANSM524 and CANSM543 for clarification	1.) Implementation [CanSm] Instruction order for transition to no communication  2.) Implementation [CanSm] Instruction order of Entering NoCom
CANSM235	Reference to CANSM500 for clarification	1.) Implementation [CanSm] Instruction order for transition to no communication  2.) Implementation [CanSm] Instruction order of Entering NoCom
CANSM167	Main function not only for bus-off recovery, but for all effects of the CanSM state machine	Asynchronous interaction behavior of the CanIf API and the CanSM state machine: e. g. for Implementation [CanSm] Instruction order for transition to no communication
CANSM385	Part removed with specifies transition to “no communication”	e. .g: Implementation [CanSm] Instruction order for transition to no communication
CANSM137_Conf	CanSMTransceiverId multiplicity changed to 0...1  CanSMTransceiverId (CANSM137_Conf ) references CanIfTrcvCfg instead of CanTrcvChannel now	1.) Solution of CanSm: Controller of CanIf -> ControllerId)  2.) Solution [CanSM]: Multiplicity of configuration parameter CanSMTransceiverId)
CANSM141_Conf	CanSMControllerId (CANSM141_Conf ) references CanIfCtrlCfg instead of CanController now	Solution CanSm: Controller of CanIf -> ControllerId)
CANSM385 CANSM072 CANSM074	CANSM_E_MODE_REQUEST_TIMEOUT changed into DET error	Solution Completion of Production error concept in Com Stack)
CANSM335_Conf	Description of CANSM335_Conf changed: ... „reports a development error to the DET“ ...	Solution for reopened [CanSm] Bus off recovery time independent of error detection time

## 13.4 Added SWS Items

SWS Item	Rationale
CANSM501 CANSM502 CANSM503 CANSM504 CANSM505	Implementation [Dcm][BswM][CanSm][CanIf][Can] change of baudrate within UDS service linkcontrol:

CANS506 CANS530 CANS544 CANS545 CANS547 CANS551 CANS552 CANS553	
CANS413 CANS414 CANS415 CANS416 CANS417 CANS418	Implementation [CanSm] Instruction order of Entering NoCom
CANS419 CANS420 CANS421 CANS422 CANS546 CANS548	Implementation [CanTrcv][CanIf][CanSm][CanNm] Handling if PN functionality is disabled in the Trcv
CANS410 CANS411 CANS412 CANS549	Implementation [CanSM][CanNm] Partial Networking - Error handling for missing ACK (WUF retransmission)
CANS555	Solution of [CanSM] Clarification required for CanSM_RequestComMode
CANS556, CANS557, CANS558	Solution of [CanSM]: Multiplicity of configuration parameter CanSMTransceiverId)
CANS560	Solution [CanSm] Modification required on handling CanTrcv)
CANS561-CANS574	[Dcm][BswM][CanSm][CanIf][Can] change of baudrate within UDS service linkcontrol)

## 14 Not applicable requirements

**[CANSM999]** 「 These requirements are not applicable to this specification. 」  
(BSW170, BSW00375, BSW00395, BSW00416, BSW00437, BSW168, BSW00423, BSW00426, BSW00427, BSW00428, BSW00429, BSW00431, BSW00432, BSW00433, BSW00434, BSW00336, BSW00417, BSW161, BSW162, BSW005, BSW00326, BSW00347, BSW00314, BSW00435, BSW00353, BSW00361, BSW00377, BSW00308, BSW00309, BSW00360, BSW00341, BSW00439, BSW00440)