


- 1) Open Boards Manager from **Tools** → **Boards** → **Boards Manager**
- 2) Find 'Arduino AVR Boards' tab and ensure that **version > 1.6.23** is installed

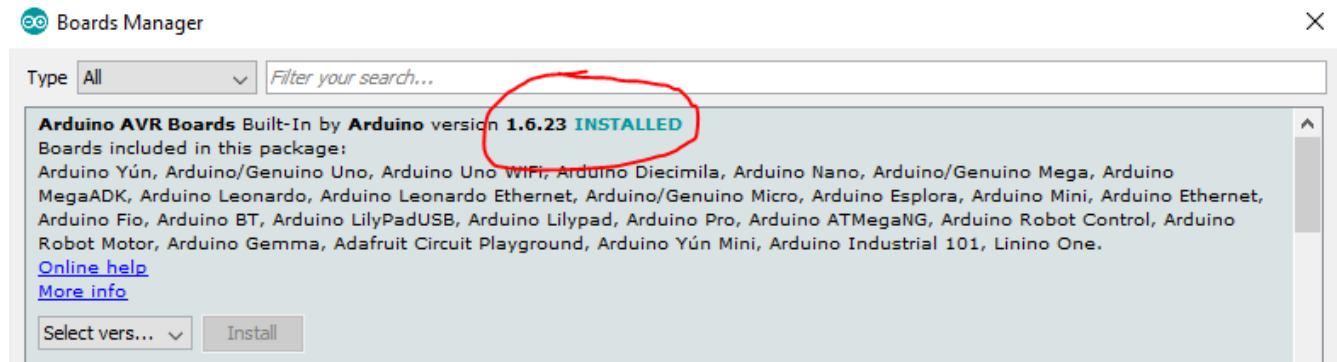

- 3) If older version is installed, upgrade it to latest as follows:

