



- 7
- 4
- 2
- 6

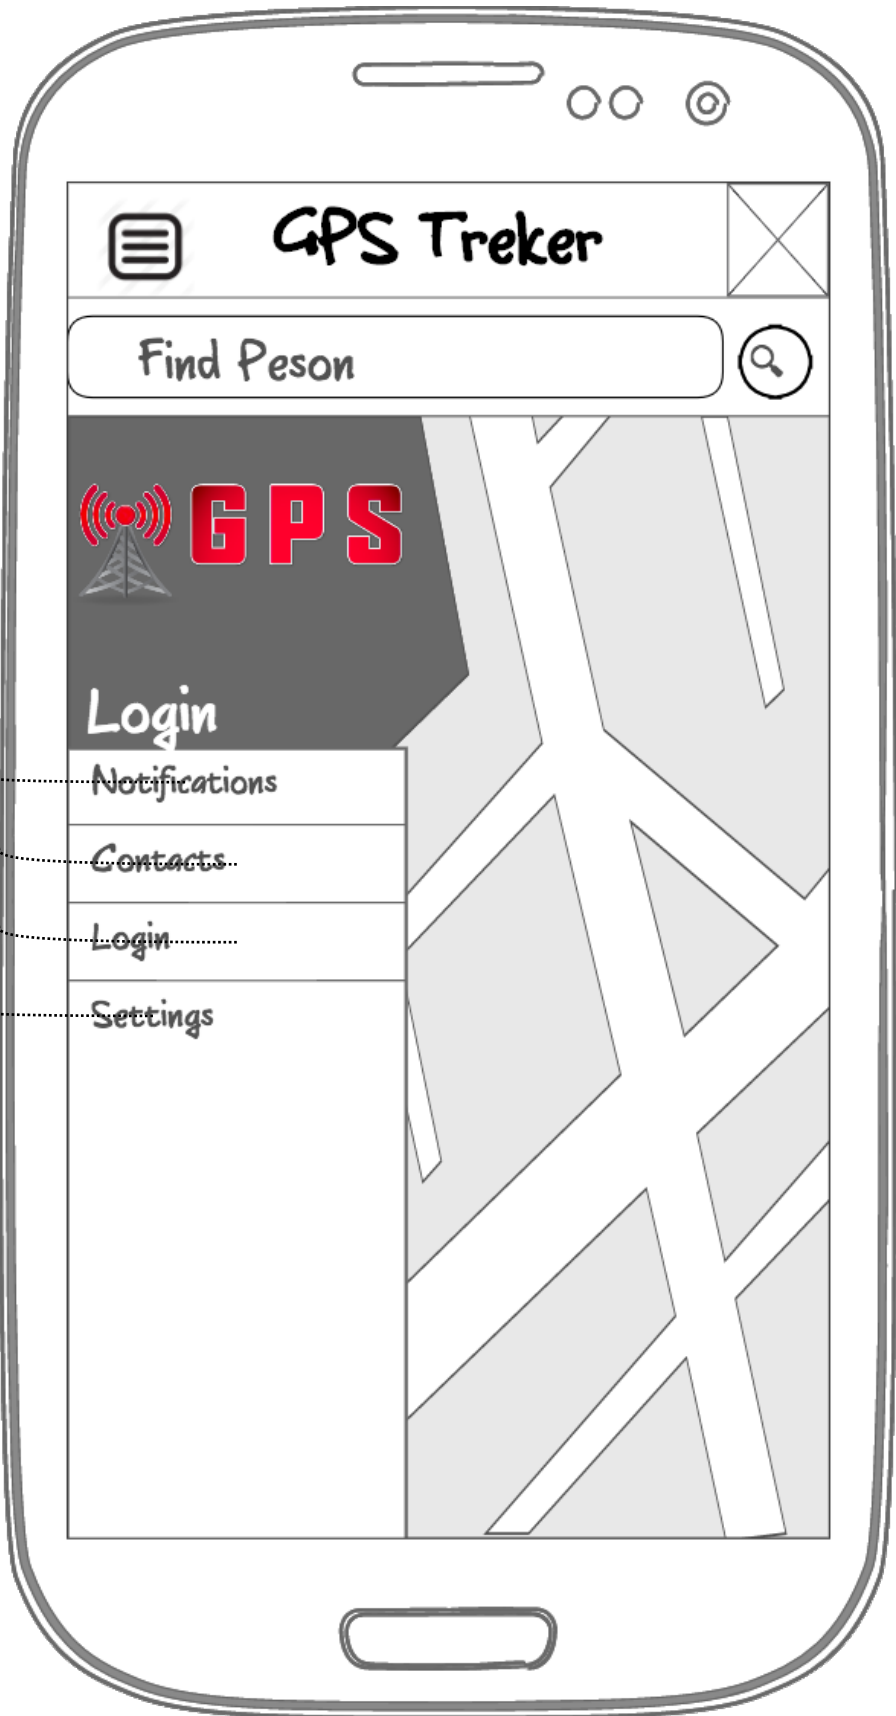

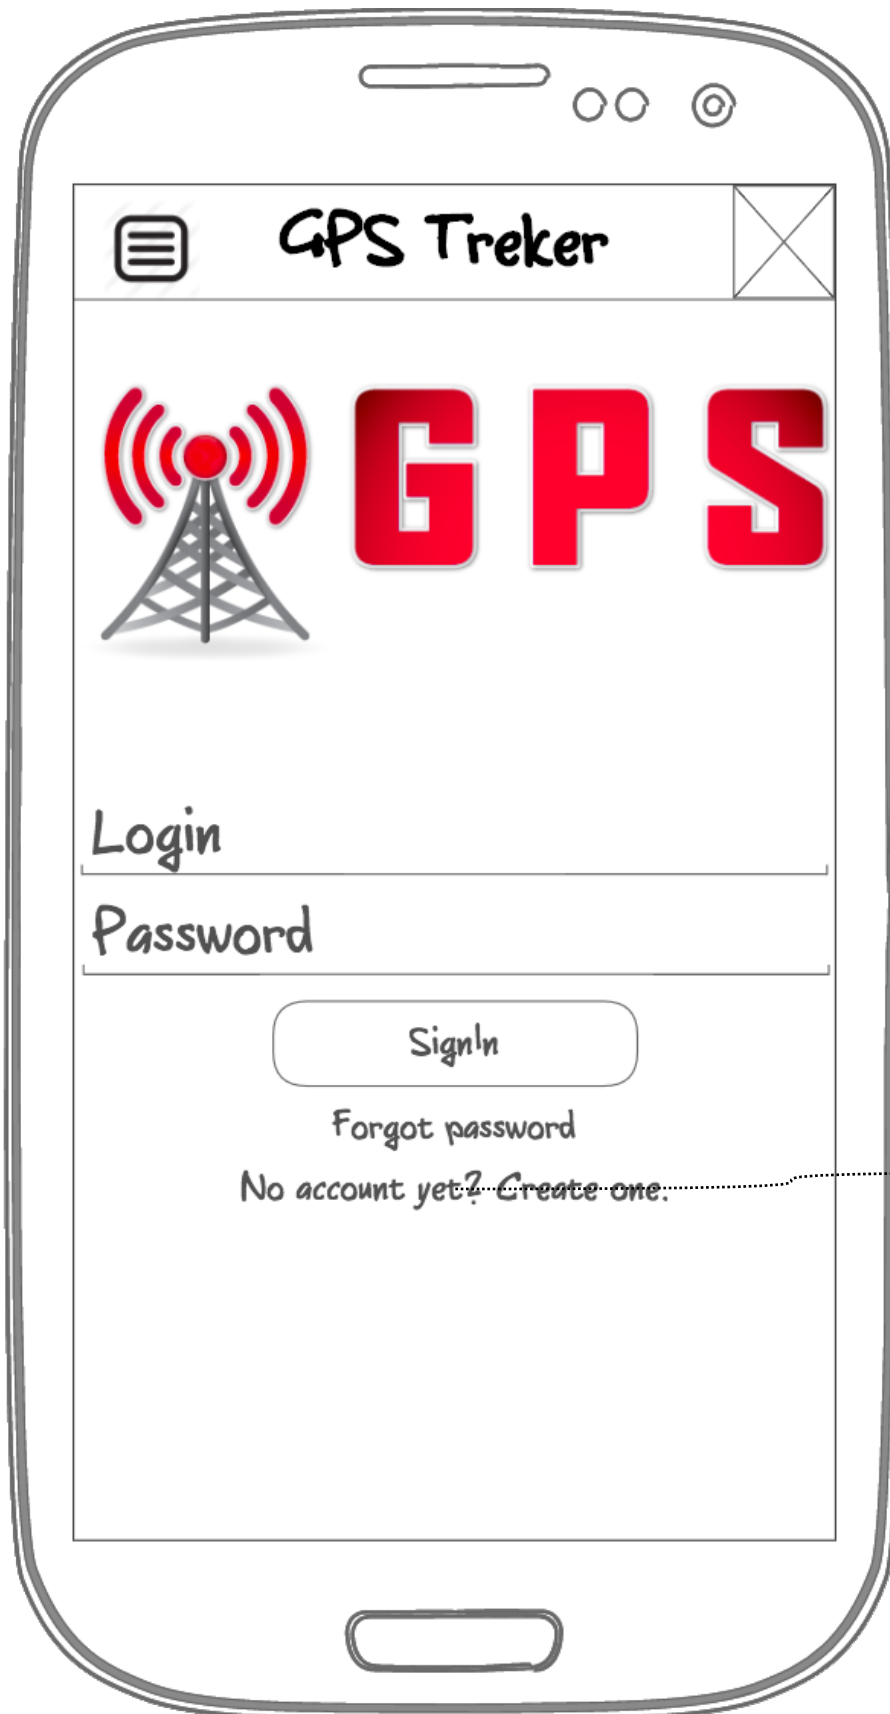



The image shows a hand-drawn illustration of a smartphone screen. At the top of the screen is a status bar with a battery icon, two signal strength indicators, and a camera icon. Below the status bar is the app's header, which includes a hamburger menu icon on the left, the title "GPS Treker" in the center, and a close button (an 'X' in a square) on the right. The main content area of the app features a large red antenna icon with signal waves on the left and the letters "GPS" in a large, bold, red font on the right. Below this, there are five text input fields, each with a label: "Email", "Login", "Password", "Confirm Password", and "Phone". At the bottom of the form is a rounded rectangular button labeled "SignUp". The entire app interface is contained within a rounded rectangle that represents the phone's screen, with a home button icon visible at the very bottom of the phone's frame.




# GPS Treker





# GPS

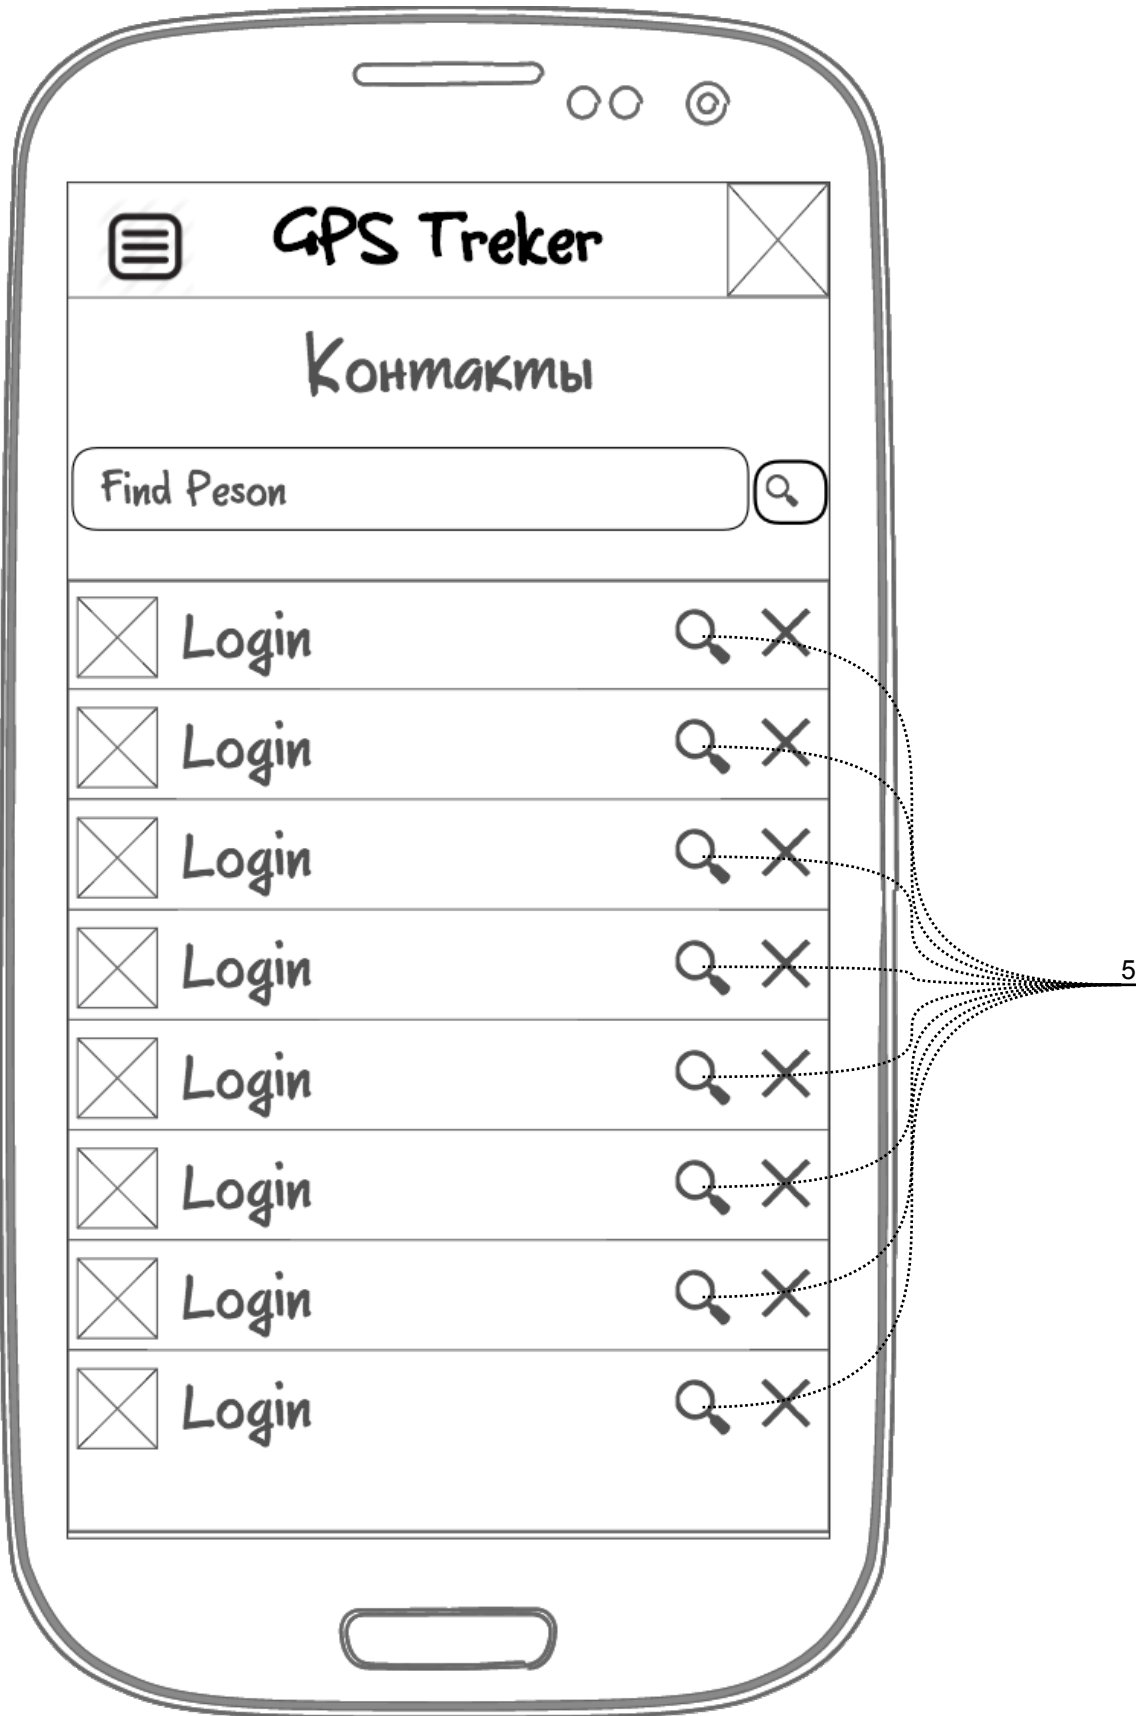



The sketch shows a mobile application interface for 'GPS Treker'. At the top, there is a header bar with a menu icon (three horizontal lines) on the left, the title 'GPS Treker' in the center, and a close icon (an 'X' in a square) on the right. Below the header, the main content area is titled 'Настройки' (Settings). It contains several input fields: 'Логин' (Login), 'Почта' (Email), and a placeholder for a profile picture represented by a square with an 'X'. Below these is a section titled 'Настройка экстренного вызова' (Emergency call settings). This section includes three radio button options: 'Вызов экстренной службы' (Emergency service call), 'Вызов номера' (Call number), and 'Отключить' (Disable). The 'Вызов номера' option is selected, and below it is a text input field containing the placeholder '+7 xxx xxx xx xx'. At the bottom of the settings area is a large button labeled 'Сохранить' (Save). A dotted line with the number '1' points to this button from the left margin.

GPS Treker

Настройки

Логин

Почта

Placeholder for profile picture

Настройка экстренного вызова

- ☒ Вызов экстренной службы
- ☐ Вызов номера  
+7 xxx xxx xx xx
- ☐ Отключить

Сохранить

1

