

Red parts are for
firmware flushing

Lane number select:
open – bit '0'
closed – bit '1'

Start / finish select:
open – start
closed – finish

Green parts are for
transmitter only

Blue parts are for
receiver only



