

Connecting BAXI Luna Platinum (on the below picture) to BSB-LAN Adapter



1. Power off the heater (to make fully sure: pull it out from the 230V wall plug)
2. Carefully pull out the Operating Unit from the heater.

It could be either the main operating unit on the right picture above or if you have your main operating unit placed elsewhere and it is also used as a room thermostat, then the unit to pull out will look like the one in the left picture above. Once pulled, it will look like this:




3. Unscrew the 2 screws in the bottom holding the front side of the heater in place and open the heater:



4. Once opened, grab the top of the plastic housing (includes the electronics of the heater) and slowly pull it downwards (there are some clips to hold it in place, those will click out):



5. CL-/CL+ terminals are on the M2 terminal block, so unscrew the plastic cover on the left to access the M2 terminal block:

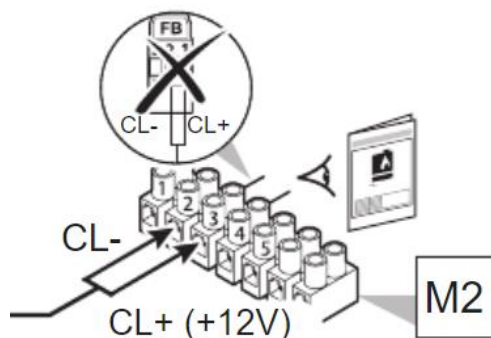

6. CL-/CL+ terminals are the 2nd and 3rd terminals (from the top) on the M2 terminal block, where the respective CL-/CL+ terminals of the BSB-LAN adapter should be connected. Please make sure to not use terminal 1 (it is constant 12v).

