

REMOTE COMMANDS TABLE FOR MODEL : CD600

Remote Control Unit : RC004CD
RC Format : RC-5

No.	Name	Code	Notice	RC Unit
1	0	2000	Numerical button (Select track)	Yes
2	1	2001	Numerical button (Select track)	Yes
3	2	2002	Numerical button (Select track)	Yes
4	3	2003	Numerical button (Select track)	Yes
5	4	2004	Numerical button (Select track)	Yes
6	5	2005	Numerical button (Select track)	Yes
7	6	2006	Numerical button (Select track)	Yes
8	7	2007	Numerical button (Select track)	Yes
9	8	2008	Numerical button (Select track)	Yes
10	9	2009	Numerical button (Select track)	Yes
11	TIME	2011	Time display (lap/track remain/total remain)	Yes
12	POWER	2012	Power on/off	Yes
13	POWER ON	201201	Power on	No
14	POWER OFF	201202	Power off	No
15	RECALL/SCROLL	2015	Program recall/Text scroll	Yes
16	RANDOM	2028	Random play	Yes
17	REPEAT	2029	Repeat (All/Track/Off)	Yes
18	NEXT	2032	Track skip (Next)	Yes
19	PREVIOUS	2033	Track skip (Next)	Yes
20	FOLDER +	2038	Folder up	Yes
21	FOLDER -	2039	Folder down	Yes
22	PROGRAM	2041	Program Play	Yes
23	AMS	2043	Auto music scan	Yes
24	OPEN/CLOSE	2045	Tray open/Close	Yes
25	PAUSE	2048	Pause/Pause off	Yes
26	CANCEL	2049	Delete Programmed track	Yes
27	REVIEW	2050	Search (Backward)	Yes
28	CUE	2052	Search (Forward)	Yes
29	PLAY	2053	Play/Pause off	Yes
30	STOP	2054	Stop	Yes
31	A-B	2059	A-B Repeat	Yes
32	SOUND MODE	2066	Audio EX	Yes
33	DISPLAY	2071	Display off/on	Yes
34	MENU	2082	Menu on/off	Yes
35	ENTER	2087	Enter	Yes
36	QUICK REPLAY	205304	Quick Replay	Yes
37	TEXT	2088	Display Text	Yes
38	INPUT FWD	160013	For Amplifier Control	Yes
39	INPUT REV	160014	For Amplifier Control	Yes
40	MUTE	1613	For Amplifier Control	Yes
41	VOLUME UP	1616	For Amplifier Control	Yes
42	VOLUME DOWN	1617	For Amplifier Control	Yes