

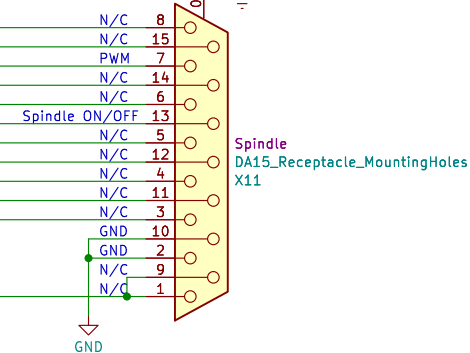
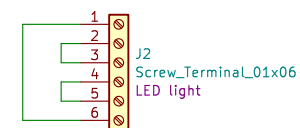


Earth is not connected to GND

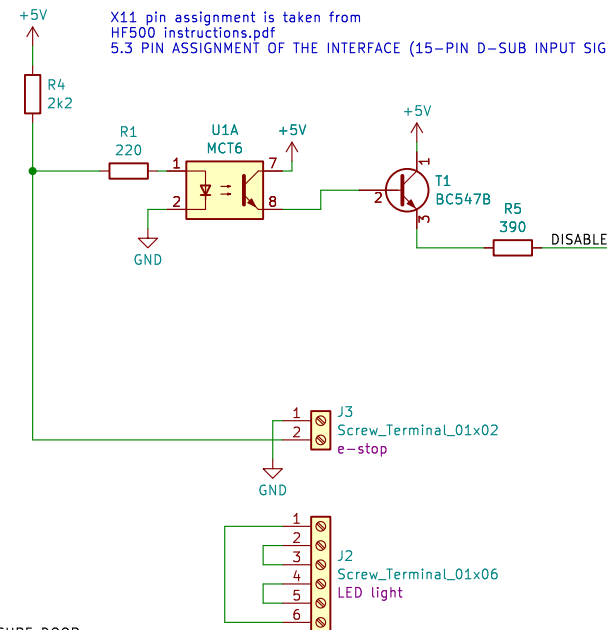

X11 pin assignment is taken from HF500 instructions.pdf 5.3 PIN ASSIGNMENT OF THE INTERFACE (15-PIN D-SUB INPUT SIGNALS)

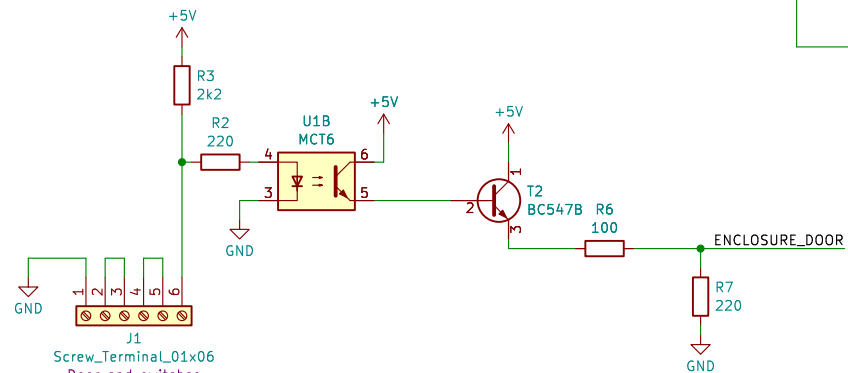

Ondřej Sluka

Sheet: /

File: enclosure-controller-board.kicad_sch

Title: Stepcraft enclosure controller board

Size: A4

Date:

KiCad E.D.A. kicad 7.0.10-7.0.10-ubuntu22.04.1

Rev:

Id: 1/1