



Welcome to MorphWiz 2

MorphWiz 2 is a spectral audio morphing synthesizer. Up to four sources (samples) can be combined to construct hybrid sounds. The resulting sound is a smooth transition in the timbre, for instance, a sound that starts as a trumpet and gradually changes into a cello. MorphWiz 2 includes an analyzer to incorporate your own samples, in addition to a vast array of synthesizer features. These include an arpeggiator, modulation matrix, four envelopes, up to four LFOs with complex curves, a morphable resonant filter, and an effects section.

MorphWiz 2 for iOS includes a multi-touch performance playing surface. As with a fretless stringed instrument, such as a violin, the playing surface enables precise control of the pitch and character of each synthesizer voice. The synthesizer engine is compatible with MIDI Polyphonic Expression (MPE).

System requirements

🍏 iPadOS

iPadOS

iPadOS 12.0 or later
Recommended minimum device iPad (6th Generation).

File locations

You can find MorphWiz 2 files in the following default locations:

🍏 iOS

iOS

- **Shared Presets** /iCloud Drive/MorphWizPro/Wizdom/MorphWizPro/presets/presets*
- **Shared Sample Data** /iCloud Drive/MorphWizPro/Wizdom/MorphWizPro/presets/sources
- **Local Presets** /On My iPad/MorphWizPro/Wizdom/MorphWizPro/presets
- **Local Sample Data** /On My iPad/MorphWizPro/Wizdom/MorphWizPro/sources

Acknowledgements

Concept by **Jordan Rudess**

Design and Programming by **Peter Johnson**

[MorphKit](#) Spectral Audio Morphing based on [SpectMorph](#) by **Stefan Westerfeld**

[AlephOne Fretless](#) by **Robert Fielding**

Mist Reverb based on Mutable Instruments Clouds / [Parasites](#) by **Emilie Gillet** and **Matthias Puech**

iPad splash screen has been designed using images from [freepik.com](#)

[Made with JUCE](#)

Samples provided by:

- Kurt Ader & Pete Jung [KApro](#)
- [Jimmy T](#)
- [BT](#)
- [Jordan Rudess](#)
- [Carl Helder](#)
- [Peter Johnson](#)

Presets designed by

- [Daniel Müller](#)
- [Wayne Ingram](#)
- [Jordan Rudess](#)

Copyright ©2024 Wizdom Music Inc.
All rights reserved


Overview

MorphWiz 2 is an easy-to-use, yet powerful sample based synthesizer that offers considerable expressive control over the character of the sound or timbre.

MorphWiz 2 features a spectral audio morphing synthesizer engine. You can import and analyzer samples to be manipulated using the morphing engine. Samples may be edited to adjust start/end, loop points, and pitch. Once encoded and saved samples can be used as Sources and incorporated to create new instruments. The real-time spectral audio morphing smoothly transitions from one Source to the next, without using cross-fades. The engine supports up to four Sources.

To design new sounds with MorphWiz 2 you need to understand how its parts are combined together, and they contribute to what you hear.

The diagram below shows signal flow from left to right through the different sound generating and processing modules.

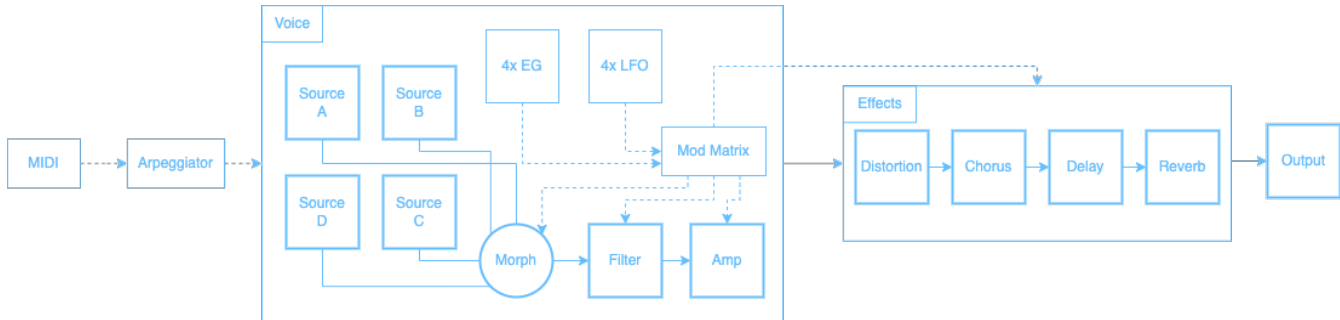

There are three basic stages:

- Each sound can contain up to four Sources: A, B, C, and D. Each Source consists of a single sample. These Sources are used to create the basic tone of the sound. Sources are mixed through the morphing engine and processed by a single morphable filter and amplifier. All modulation in this section applies per voice.
- The filter is a single morphable filter with cutoff and resonance controls. The multi-mode allows the filter mode to be smoothly adjusted from low-pass, through notch, to high-pass. The filter slope may be either 12dB/octave or 24dB/octave. A band-pass mode is also available. All modulation in this section applies per voice.
- After each individual voice is mixed together, they pass through the effects stage. Any modulation of the Effects section is applied to the entire audio signal. Effect modulation is applied from the most recently active voice.

Sounds may be saved into Presets and collected into Banks. The Preset Browser is used to manage the presets. The Sources Manager may also be used to organize the available sample sources.

iOS only


iOS supports sharing Presets and Sources with iCloud Drive

Interface overview

The MorphWiz 2 user interface is arranged into three sections as shown in the screenshot below.

Standalone app interface

The standalone app interface includes the isomorphic playing surface.

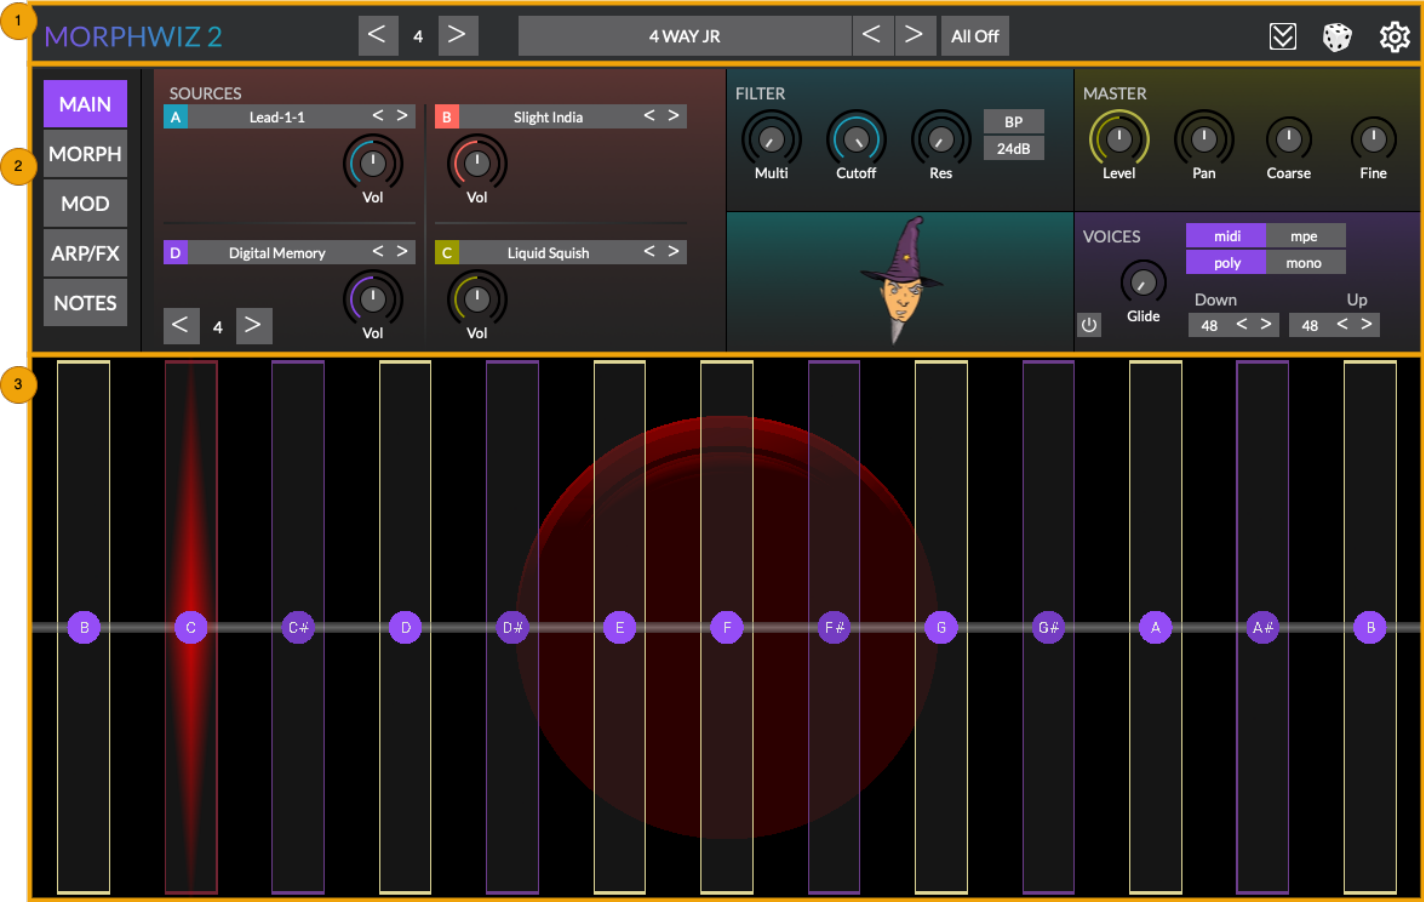


Plugin interface

The plugin interface (when running as an AU/VST) is a compressed version of the interface without the isomorphic playing surface. On iOS the AUv3 interface will appear the same as the standalone app.



Name bar

The Name bar provides functions for preset management and accessing global settings. The bar is always present.

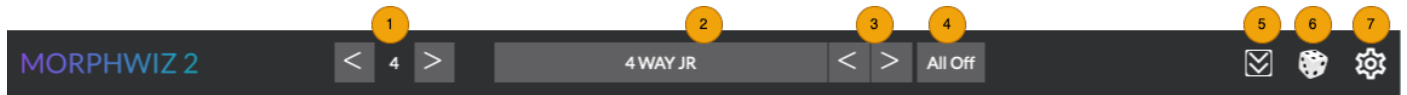

Octave (1)

Standalone app only

Change the current octave of the isomorphic playing surface.

Preset Name (2)

Shows the name of the current preset. Tapping or clicking on this area opens the [Preset browser](#) of available presets that can then be loaded into the synthesizer.

Next Preset Buttons (3)

The left and right arrows load the previous and next preset in the bank.

All Off (4)

In the event of a stuck MIDI note this button will turn off all playing sound.

Expand (5)

Standalone app only

The size of the Parameter editor section can be expanded. This button rotates through 3 size settings: no Parameter editor, show the Parameter editor, show the larger Parameter editor.

Random (6)

Randomize the Sources used in the current preset.


Settings (7)

Standalone app only

Configure the audio and MIDI interfaces used by the application, access the online help.

Parameter editors

The Parameter editor section contains the editable synthesizer parameters and the preset browser. The left hand side of the Parameter editor contains a menu from which additional pages of parameters may be accessed.

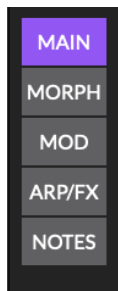

MAIN

The main synthesizer parameters, including Source selection, filter, voice configuration and master controls.

MORPH

The morph parameters allow for the selection of the four sound sources. The X-Y performance pad controls the real-time manipulation of the spectral morphing.

SOURCES

The Sample Editor to load your own sound samples, edit, and encode the sound ready to be used by the synthesizer engine.

MOD

The modulation matrix is used to assign modulation sources to destination parameters. This includes low frequency oscillators (LFO) and envelope generators along with a range of input parameters from the playing surface or via external MIDI.

ARP/FX

The arpeggiator and master effects section. The effects include Distortion, Chorus, Delay and Reverb.

NOTES

Standalone app only

Configuration for the isomorphic playing surface. The musical scale may be selected along with parameters that effect the behavior of the playing surface. In addition, there are controls for voice management, pitch bend, and master volume. Finally, there are several parameters for real-time audio visualizer, affectionately known as “Blobby”.

Isomorphic playing surface

Standalone app only

The [Isomorphic playing surface](#) is the area that contains the notes and expression input to the synthesizer, and is where you play the instrument. It occupies the bottom section of the user interface.

The notes are arranged similarly to a stringed instrument, for example, a guitar. Each note occupies the vertical column (or fret) with lower pitch on the left, higher pitch on the right.


Horizontally, each row of notes represents a string, with the lowest pitch in the bottom left and the highest in the top right. There are a maximum of six strings. Notes are arranged in 4ths.

The playing surface is fretless in that it is possible to seamlessly slide the pitch of the a note, as you would by sliding along a guitar string. The accuracy of the note selection can be adjusted such that the initial touch is rounded to the nearest note. By adjusting this accuracy the instrument can become fully fretless in the same way that a violin is fretless. The pitch of the note is then dependent upon the skill of the musician.

In addition, sliding vertically up and down along the fret column can adjust the timbre of the note via the morphing synthesizer engine.

Preset browser

The Preset browser is used for loading and sharing presets.

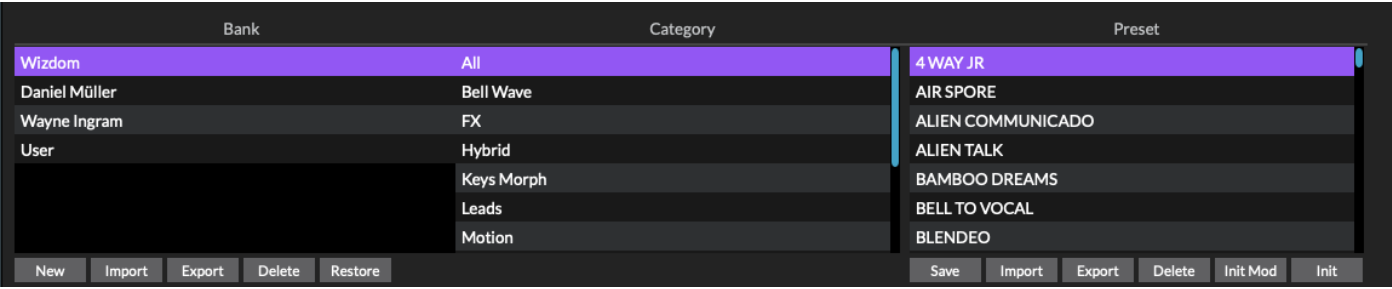

There are two different views for the Preset browser results list.

- Browser view: Tap or click the Browse button to open browser view.
- Name bar list: Tap or click the preset field in the Name bar to display a list of presets.

Browser list parameters

The Browser is split into three columns: bank, category and preset. A bank contains any number of presets sorted by category.

Bank

Banks are sorted alphabetically with the factory bank listed first. Simply tap or click a bank name to change the current bank and show the list of associated presets. Each bank is a folder saved within the operating system’s disc file system.

- **New:** Create a new preset bank.
- **Import:** Import a preset bank and save it into the local list.
- **Export:** Export a user created present bank to an external file.
- **Delete:** To delete a user created bank.
- **Restore:** This will restore the default factory bank to initial values.

Delete and Restore
Any changes will be lost and cannot be undone.

Category

The categories are a predefined list of types. Simply tap or click a category name to change the category and show the list of associated presets. Each category is a sub-folder saved within the bank folder.

Preset

Presets are sorted alphabetically. Simply tap or click a preset name to the load preset. The current preset will be replaced and any changes will be overwritten. Each preset is a file saved within the operating system’s disc file system.

- **Save:** Save the current preset.
- **Import:** Import a preset.
- **Export:** Export the selected preset.
- **Delete:** To delete a preset.
- **Init Mod:** Initialize the modulation matrix to the default settings.
- **Init:** Load the default preset.

Delete
Any changes will be lost and cannot be undone.

Init Mod

Initialize the modulation matrix to default values overwriting any current settings.

Init

Initialize the synthesizer to the default patch, a good starting point to create your own presets.

Sound sources

The sources section describes which sound samples are assigned to each of the four Sources. A Source is similar to an oscillator or tone generator in an analog synthesizer. Each Source consists of a single sample and that sample may include a start, end, and loop point. Multi-samples and velocity layered samples are not supported. However, do not let that distract from the power of the spectral morphing engine. Sample playback reconstructs the partials from the encoded sound sample. Such additive resynthesis is able to provide accurate sample playback across the frequency spectrum.



Sources controls


- **Source A/B/C/D:** Click or tap the Source name to show the [Sources Editor](#). A new sound source may be loaded into the selected slot, an existing sound may be edited, or a new sound created (sampled).
- **Next/Previous:** Load the previous or next source (arrows right of the Source name).
- **Vol A/B/C/D:** Adjust the individual output level of the sound source. The area left of the Vol knob provides a visual representation of the Source shape or waveform. This oscilloscope shows properties of the wave, such as amplitude or frequency.

Standalone app only

- **Octave:** Change the current octave of the isomorphic playing surface. Under Source D. Duplicated from the Name bar.

Sources sampler

The sampler records audio and encodes the recording into a format that the synthesizer can playback. There are a number of parameters to control the analysis of the audio sample.

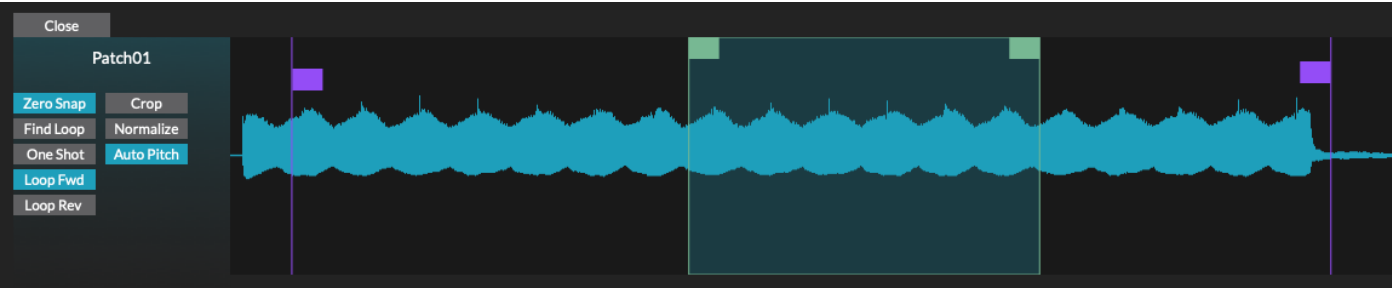

- **Close:** Close the waveform editor

Source analysis parameters

Encoding of the sample ready for use by the synthesizer engine happens in the background. Samples have to be encoded before they can be loaded as Sources. An activity spinner in the bottom left of the waveform editor shows when background encoding is in progress.



- **Zero Snap:** When enabled, the sample markers are snapped to zero crossings while dragging their locations.
- **Find Loop:** Attempt to find a loop within the sample. If no loop is detected, the nearest zero crossing points to the loop markers are chosen.
- **One Shot:** The sample will play through to the end then stop.
- **Crop:** Remove the left side up until the start marker and the right side from the end marker, and save a new sample.
- **Normalize:** Normalize the volume for the sample.
- **Auto Pitch:** Auto-tune the sample to the middle-C (C3).

Looping

MorphWiz 2 does not require you to define exact loop points. The spectral re-synthesizer only needs approximately correct loop points to avoid audio clicks. This is different to traditional samplers that replay the original sample data and require perfect loop points or cross-fades.

Dictate the type of looping of the sustained section. When on, the sample will have a looping sustain section.


- **Loop Fwd:** The sustained loop section is played forward, when the end of the loop is reached playback jumps back to the start of the loop.
- **Loop Rev:** The sustained loop section is played forward to the end of the loop, then in reverse back to the start of the loop.

Waveform editor

The waveform display of the audio associated with the currently loaded audio sample file.

The vertical purple lines displayed over the waveform indicate playback start and end points. Drag handle right or left to trim unwanted audio playback from the start or the end of the sound. The green section shows the looped portion of the audio, when **Loop Fwd** or **Loop Rev** is enabled.

Tap or click and hold to hear a preview on the originally recorded audio.

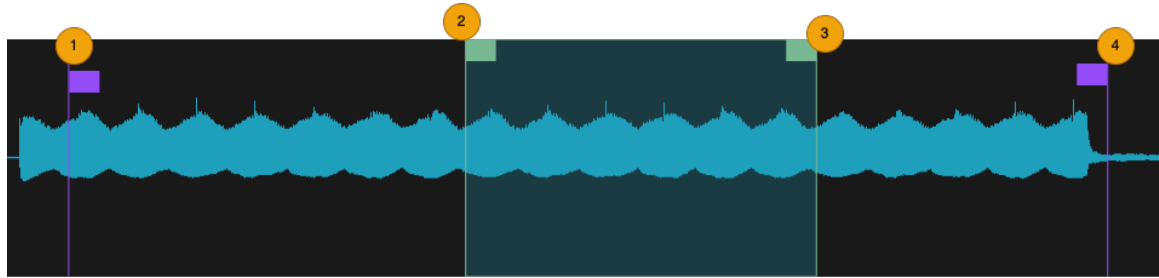

- Start marker (1)
- Loop Start marker (2)
- Loop End marker (3)
- End Marker (4)


Filter

The filter is a zero delay feedback multi-mode filter with resonance and morphable mode. It's a state variable filter which can simultaneously produce several filter responses (Low Pass, High Pass, Band Pass and Band Reject or Notch).

The filter mode may be varied continuously from Low Pass, to Notch, to High Pass. The filter cuts frequencies above or below the cutoff point (depending if it's configured to Low Pass or High Pass) or a range band (if it's configured for Notch, also known as Band Reject).

The filter is switchable to have either 2-pole (12dB/oct) or a 4-pole (24dB/oct) slope.

The filter design is inspired by the classic Oberheim ®SEM filter.

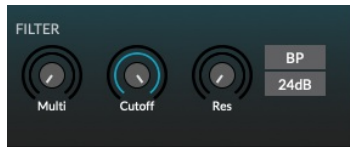

The output from all four sources is sent to the filter at levels determined by independent controls in each source.


Filter parameters

- **Multi:** Filter Mode. Low Pass when the knob points to the lowest point on the left. Notch is in the centre position. High pass when the knob points fully to the right.
- **Cutoff:** Base cutoff frequency. Unlike what happens in a Low Pass filter, this frequency will have different actions according to the selected filter mode. If the filter mode is set, to High Pass, and the cutoff frequency is set very high, we will hardly have any sound (only the frequencies above the cutoff point will pass without attenuation). If we have the filter at the Notch point (center) we will have just a narrow band cutoff. If we choose Band Pass (have the Mode knob at the switched BP position) then we will only have a narrow band of frequencies around the cutoff point audible.
- **Resonance:** Boost the frequencies around the cutoff point, creating a boosting peak bell around that point.
- **BP:** Enable band pass mode. This is like the Notch inverted, which means that all frequencies are cut except for a narrow range, with the peak at the cutoff point. The filter lets pass only this range (band) of frequencies.
- **24dB:** When on enable a 4-pole (24dB/oct) slope, otherwise 2-pole (12dB/oct) slope.

Master Voice


The master voice section provides high-level control over various attributes of a preset such as polyphony, pitch bend, and glide.

Master parameters

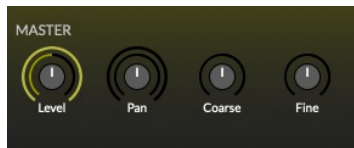

- **Level:** Adjust the final level of the output.
- **Pan:** Adjust the stereo position of the final output.
- **Coarse:** Adjust the tuning in semitones.
- **Fine:** Adjust the tuning in cents.

Voice parameters

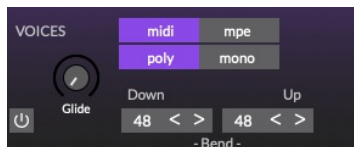

- **MIDI:** Enable conventional MIDI input processing. For use with the isomorphic playing surface and external MIDI keyboard controllers. The synthesizer plays all MIDI data received on all 16 MIDI channels, as per MIDI Omni Mode 1. However, the synthesizer adheres to per channel control change messages, as per MIDI Omni Mode 4. In other words, a note received on channel 1 will be effected by a control change message on channel 1. While a note on channel 2 will be effected by a control change message on channel 2. Both notes may play polyphonically and control changes occur independently. Likewise, if both notes were received on channel 1 and the control change message was also received on channel 1, the controller will effect both playing notes.
- **MPE:** Enable MIDI Polyphonic Expression input processing. A Lower Zone is assigned with channel 1 as the Master Channel and one or more Member Channels allocated increasing from channel 2.
- **Poly/Mono:** Toggle between polyphonic and monophonic voice modes. The maximum polyphony is 16 voices.
- **Glide:** Set the portamento rate or time. Glide causes slides from one note pitch to the next. This parameter can be enabled or disabled by the toggle button next to the knob.
- **Pitch bend Down/Up:** Sets the maximum range for upward and downward pitch bend modulation, typically performed with your keyboard pitch wheel or by sliding your finger across the isomorphic playing surface.

Note

When in *MIDI* mode both the pitch bend down and up ranges may be set. In *MPE* mode the pitch bend range is the equivalent of pitch bend down. For best results use a pitch bend down/up range of 48 with the isomorphic playing surface (iOS). When changing bend range and MIDI mode, ensure that both pitch bend down up ranges are set to 48 when returning to the isomorphic playing surface. While using an external keyboard controller it is necessary to match the pitch bend down/up range to that set within the external controller.

Note

When in Mono mode the isomorphic playing surface will also behave monophonically. This may cause an unexpected behaviour in the Arpeggiator as played notes are not stacked. Therefore it is recommended to use Poly mode when using the Arpeggiator. This does not apply when using external MIDI keyboards.


Legato

When Mono is selected, an option is available to enable legato mode on the envelop generators. Playing of new notes while an existing note is held will not trigger the attack phase of the enveloper generator.

Morph control

The morph controls determine how the four Sources are combined to produce a new timbre. It is shown when **MORPH** is selected on the Parameter menu. There are four basic types of interaction.

- **XY:** All four Sources are active and the X and Y knobs control the morph between them.
- **Linear:** All four Source are active and the Y knob controls the morph between them.
- **2:** Only Sources A and D are active and the Y knob controls the morph between them.
- **Single:** Only Source D is active and therefore there is no morphing of Sources.

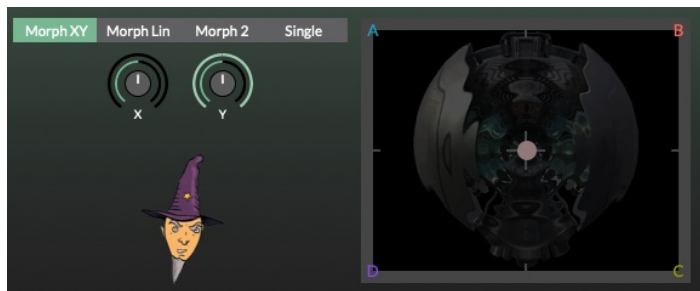

Morph parameters

- **X:** Sets the amount of morphing modulation along the X-axis.
- **Y:** Sets the amount of morphing modulation along the Y-axis.
- **XY Pad:** Drag the handle modulate the two X and Y parameters simultaneously. In Linear modes the handle modulates only the Y parameter.
- **Wizard:** The Wizard shows the real-time oscilloscope and frequency spectrum of each Voice, prior to the Effects section.


Modulation Matrix

The modulation matrix is shown when **MOD** is selected on the Parameter menu. The matrix connects modulation sources to synthesizer parameter destinations.

The modulation sources comprise of four envelope generators in ADSR configuration, four low frequency oscillators, a random noise generator, and thirteen MIDI sources. These sources are arranged in a modulation rack and each source is processed by an appropriate modulation curve.

Almost every knob in the MorphWiz 2 interface is a modulation destination, representing a parameter that can be modulated by as many as five modulators. This not only includes voice parameters, but also effects and the arpeggiator; even other modulation parameters can be modulation destinations. Each mod rack entry may have its own intensity (amount it affects the destination).

Modulation rack

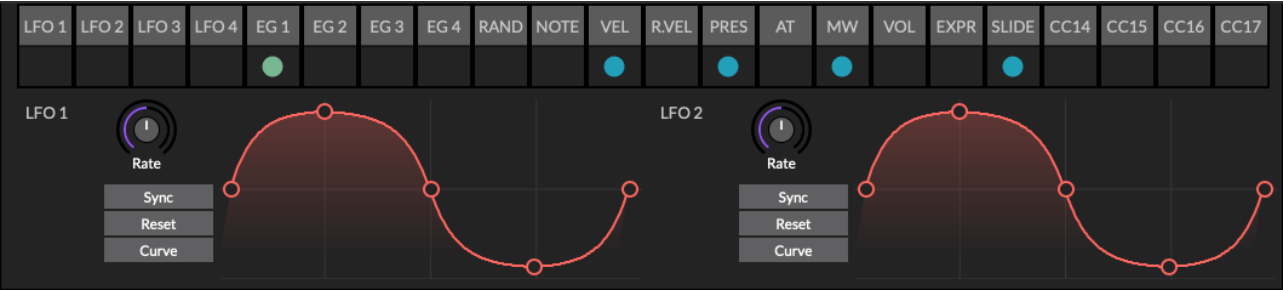

Destination

Tap or click the top section of the modulation source, where the name is written, to show the modulation rack destinations.

To assign a destination, click or tap menu “Add Dest” and select the destination. Up to five destinations may be added to the rack. To return to the mod track, click or tap the Close button.




Each destination has the following parameters

- **Intensity:** The amount of modulation applied to the destination.
- **Power button:** Enable or disable the source modulation applied to the destination.
- **Close button:** Removes the destination.


Curve

Tap or click the bottom section of the modulation source, to show the modulation curve for the source. As shown in the image below, complex modulation curves may be created by adding additional control points. Double tap or click the curve to add additional control points. Double tapping or clicking an existing control point will delete that point. The curvature is adjustable by dragging the section of the curve between two control points. Straight lines may be bent to form smooth waves.

Low Frequency Oscillators (LFO)

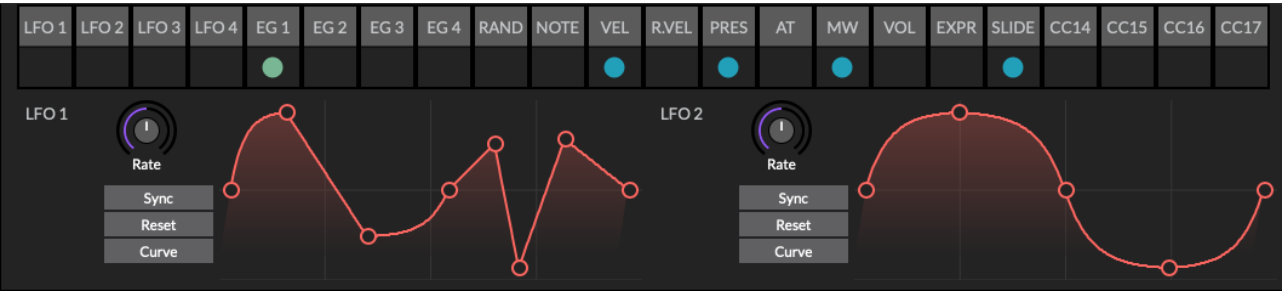

- **Rate:** The frequency of the oscillator.
- **Sync:** Sync the rate of the LFO to the host clock.
- **Reset:** Reset the LFO when a new note is received.
- **Curve:** A collection of preset and user saveable waveforms.

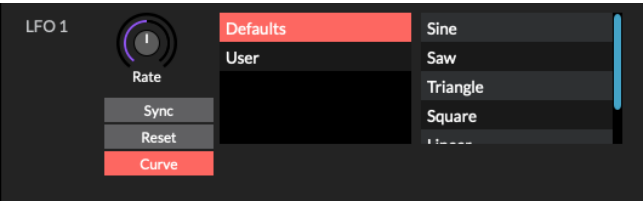

Envelope Generators (EG)

There are four envelope generators (colored light green). These follow the classic Attack Decay Sustain Release (ADSR) shape.



Drag the circular handles on the curve to adjust slope. Or use the knobs below the curve. The curvature of the Attack, Decay and Release slopes may be modified by dragging the smaller handle in the middle of the line. Thus adjusting the slope from linear to exponential. Additional control points cannot be added.

If `:ref:legato` mode is enabled, each envelope will not drop to zero in the event of a retrigger while the envelope is active - instead, the envelope ramps to the new amplitude over the attack period.

External sources

External modulation sources include those coming from MIDI continuous controller (CC) messages, along with a random noise generator. The MIDI sources have been chosen from the most commonly used controllers and those of the MPE specification, they are:

External Source MIDI Value

NOTE	Note On
VEL	Note On velocity
R.VEL	Note Off velocity
AT	Aftertouch MIDI 0xA0
MW	Mod Wheel CC#1
VOL	Volume CC#7
EXPR	Expression CC#11
Slide	Brightness CC#74
CC14	CC#14
CC15	CC#15
CC16	CC#16
CC17	CC#17

In addition the synthesizer responds to program change, sustain pedal, pitch bend range, and GeoSynth note-tie messages.

Note

Envelope Generator 1 (EG1) and VEL (Note On velocity) are hard-coded to the VCA Amp level.



- **Preset:** A collection of preset waveforms (linear, stepped).

Random generator

- **Rate:** The frequency at which the random waveform is generated.
- **Sync:** Sync the rate of the random generator to the host clock.

Initialize Modulation Matrix

The modulation matrix may be reset to a default state via the [Init Mod](#) button on the [Preset browser](#).

Effects

The effects rack is shown when **FX** is selected on the Parameter menu. The effects rack contains three sub-sections: the arpeggiator, FX1, and FX2. Each of the FX sub-sections contain two effects. These are Distortion and Chorus on FX1, and Delay and Reverb on FX2.


The effects are applied to the signal path after all the voices are mixed and before the final output. Signal flow is linear through each effect, like a chain of guitar effect pedals, flowing: Distortion, Chorus, Delay, Reverb. Each effect may be individually enabled and mixed with the dry signal.

Certain parameters in the effects rack may also be modulated by the modulation matrix. As the modulation matrix is per voice, the most recently active voice’s modulation matrix is used to modulate the effect parameters.



Distortion


Distortion effect with multiple algorithms including overdrive, bitcrusher and waveshaping.

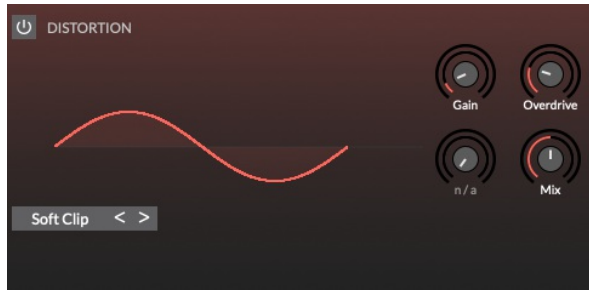

- **Enable:** Bypass the effect on and off.
- **Type:** Select the algorithm type.
- **Gain:** Set the amount of input gain applied before the distortion effect. This enables you to produce heavily saturated distortions with some distortion types.
- **Overdrive:** Overdrive amount. The precise effect varies with each distortion algorithm.
- **Sat:** Set the amount of bit saturation (Bit Saturator algorithm only).
- **Mix:** Determine the wet/dry balance (0% = dry only; 50% = equal mix; 100% = wet only).

Chorus

Stereo chorus with varying degrees of spacial dimension.

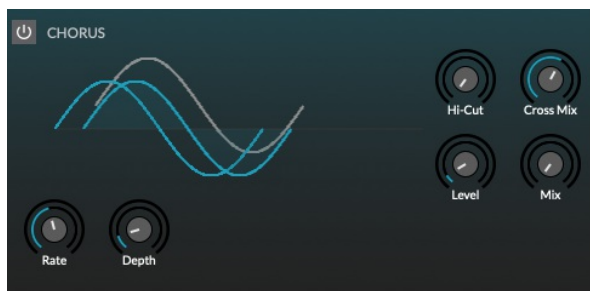

- **Enable:** Bypass the effect on and off.
- **Rate:** Set the modulation speed.
- **Depth:** Set the modulation intensity.
- **Hi-Cut:** high-pass filter cutoff frequency.
- **Cross Mix:** Mix the dimension cross beams
- **Level:** Set the level of the modulated signal.
- **Mix:** Determine the wet/dry balance (0% = dry only; 50% = equal mix; 100% = wet only).

Delay

Stereo delay with feedback and independent channel delay times.




- **Enable:** Bypass the effect on and off.
- **Sync Left:** Turn on to synchronize left channel delay rate with the host tempo.
- **Delay Left:** Set the left channel delay time in msec when the Sync button is off, or in beats when the Sync button is on. See Sync button parameter below.
- **Sync Right:** Turn on to synchronize right channel delay rate with the host tempo.
- **Delay Right:** Set the right channel delay time in msec when the Sync button is off, or in beats when the Sync button is on. See Sync button parameter below.
- **Feedback:** Determine the amount of delayed signal fed back to the input of the delay.
- **Mix:** Determine the wet/dry balance (0% = dry only; 50% = equal mix; 100% = wet only).

Reverb

- **Enable:** Bypass the effect on and off.
- **Type:** Select the type of reverb processor.

Plate reverb

Plate reverb with a vintage character.

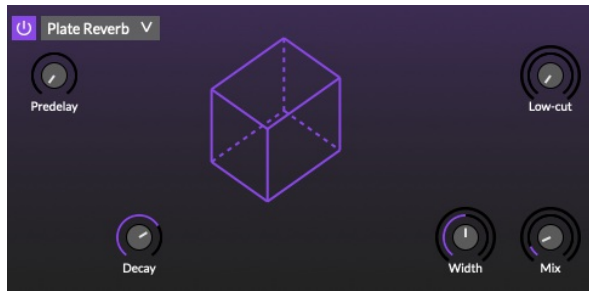


- **Predelay:** Set the amount of initial delay before diffuse reflections begin.
- **Decay:** Set the decay time of the gated reverb tail. Larger values equal longer reverb times.
- **Low-cut:** Determine the amount of high frequency loss in the reflections.
- **Width:** Determine how much reflections are spread across the stereo field.
- **Mix:** Determine the wet/dry balance (0% = dry only; 50% = equal mix; 100% = wet only).

Mist reverb

Granular audio processor that creates textures and soundscapes by combining multiple overlapping, delayed, transposed and enveloped segments of sound taken from the input.


Based on the Mutable Instruments Clouds Eurorack module.

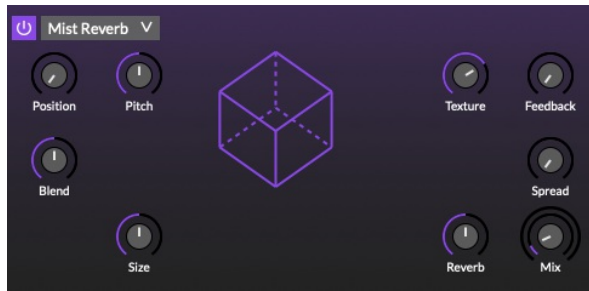

- **Position:** Selects from which part of the input the audio grains are played.
- **Pitch:** Adjust the grain pitch. At 12 o'clock the buffer is played at its original frequency.
- **Blend:** Granular dry/wet balance.
- **Size:** Adjust the grain size.
- **Texture:** Morphs through various shapes of grain envelopes: square (boxcar), triangle, and then Hann window. Past 2 o'clock, activates a diffuser which smears transients.
- **Feedback:** Feedback amount.
- **Spread:** Stereo spread, the amount of random panning/balance applied to the grains.
- **Reverb:** Reverberation amount.
- **Mix:** Determine the wet/dry balance (0% = dry only; 50% = equal mix; 100% = wet only).

Arpeggiator

MorphWiz 2 features a flexible and powerful arpeggiator. The arpeggiator rack is shown when FX is selected on the Parameter menu and ARP is selected on the sub-section menu.

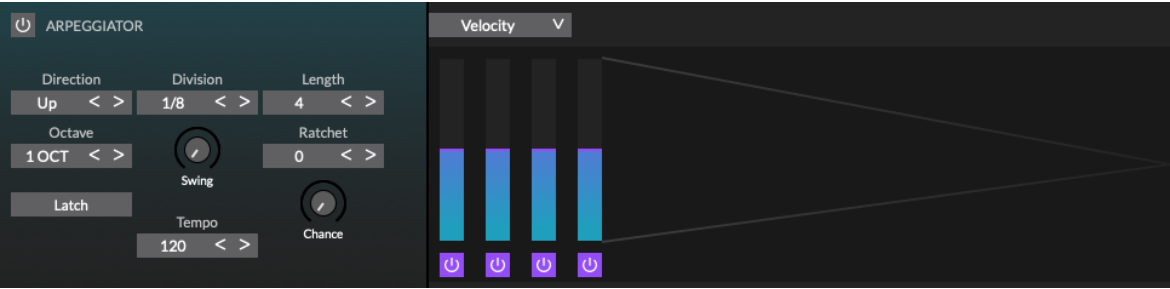

The arpeggiator subpage consists of two main sections:

- **Basic arpeggiator controls:** These buttons and knobs determine the basic behavior of the arpeggiator.
- **Arpeggiator sequencer controls:** These buttons, pop-up menus, and knobs let you edit one or more arpeggiator sequencers.

Basic arpeggiator controls


The basic arpeggiator controls consist of several buttons, menus, and knobs.



- **Enable:** Turn the arpeggiator on and off. When active, the arpeggiator responds to incoming MIDI notes.
- **Direction:** Determine the order in which incoming notes are organized into a pattern, from the following choices:
 - **Up:** Plays the current notes from lowest to highest.
 - **Down:** Plays the current notes from highest to lowest.
 - **Up/Down:** Plays the current notes from lowest to highest and back again.
 - **Down/Up:** Plays the current notes from highest to lowest and back again.
 - **Played:** Plays the current notes in the order they were originally played.
 - **Random:** Plays the current notes in a random, non-repeating order.
- **Division:** The time between each arpeggiated note.
- **Length:** Set the length of each arpeggiated note.
- **Octave:** Determine if the arpeggiator pattern is played only at its original pitch or across higher octaves when the pattern is repeated.
- **Swing:** Change the timing of the arpeggiator, moving even-numbered steps to later positions without changing the timing of odd-numbered steps. This can add a more relaxed feel or groove to the part. Swing generally works best when combined with a Rate knob setting of 1/4 of a beat (16th note swing feel) or a Rate knob setting of 1/2 a beat (8th note swing).
- **Ratchet:** The number of subdivisions of a note added to an arpeggiated note.
- **Chance:** Set the probability that an arpeggiated will be ratcheted.
- **Latch:** Hold the arpeggiator pattern when you lift your hands from the keyboard. Set to Off to stop the arpeggiator pattern when you lift your hands.
- **Tempo:** Set the global tempo.

Arpeggiator sequencer

The arpeggiator sequencer section is similar in functionality to a step sequencer. Each bar represents a step. A step may be active or in-active, and used to modulate synthesizer parameters via the modulation matrix.

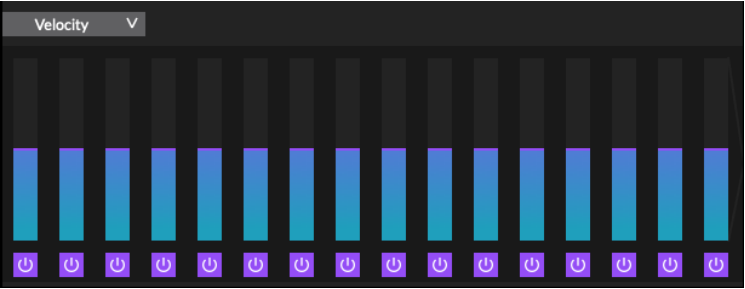

- **Target pop-up menu:** Choose the parameter to view and edit.
 - **Velocity:** Set the velocity of the note generated by the arpeggiator
 - **Tune:** Determines the tuning offsets for each step in semitones.
 - **Duration:** Set the note length for each step.
 - **Mod Wheel CC1:** Modulate the Mod Wheel source in the modulation matrix.
 - **Slide CC74:** Modulate the Slide source in the modulation matrix.
 - **Expr :**Modulate the Expr source in the modulation matrix.
- **Step Value bar:** Drag the bar up and down to change the value of the selected target parameter.
- **Step Enable:** Enable or disable the step.

Playing surface

Standalone app only


The isomorphic playing surface is the area that contains the notes and expression input to the synthesizer, and is where you play the instrument. It occupies the bottom section of the user interface.

The notes are arranged similarly to a stringed instrument, for example, a guitar. Each note occupies the vertical column (or fret) with lower pitch on the left, higher pitch on the right.

Horizontally, each row of notes represents a string, with the lowest pitch in the bottom left and the highest in the top right. There are a maximum of six strings. Notes are arranged in 4ths.

The playing surface is fretless in that it is possible to seamlessly slide the pitch of the a note, as you would by sliding along a guitar string. The accuracy of the note selection can be adjusted such that the initial touch is rounded to the nearest note. By adjusting this accuracy the instrument can become fully fretless in the same way that a violin is fretless. The pitch of the note is then dependent upon the skill of the musician.

In addition, sliding vertically up and down along the fret column can adjust the timbre of the note via the morphing synthesizer engine.

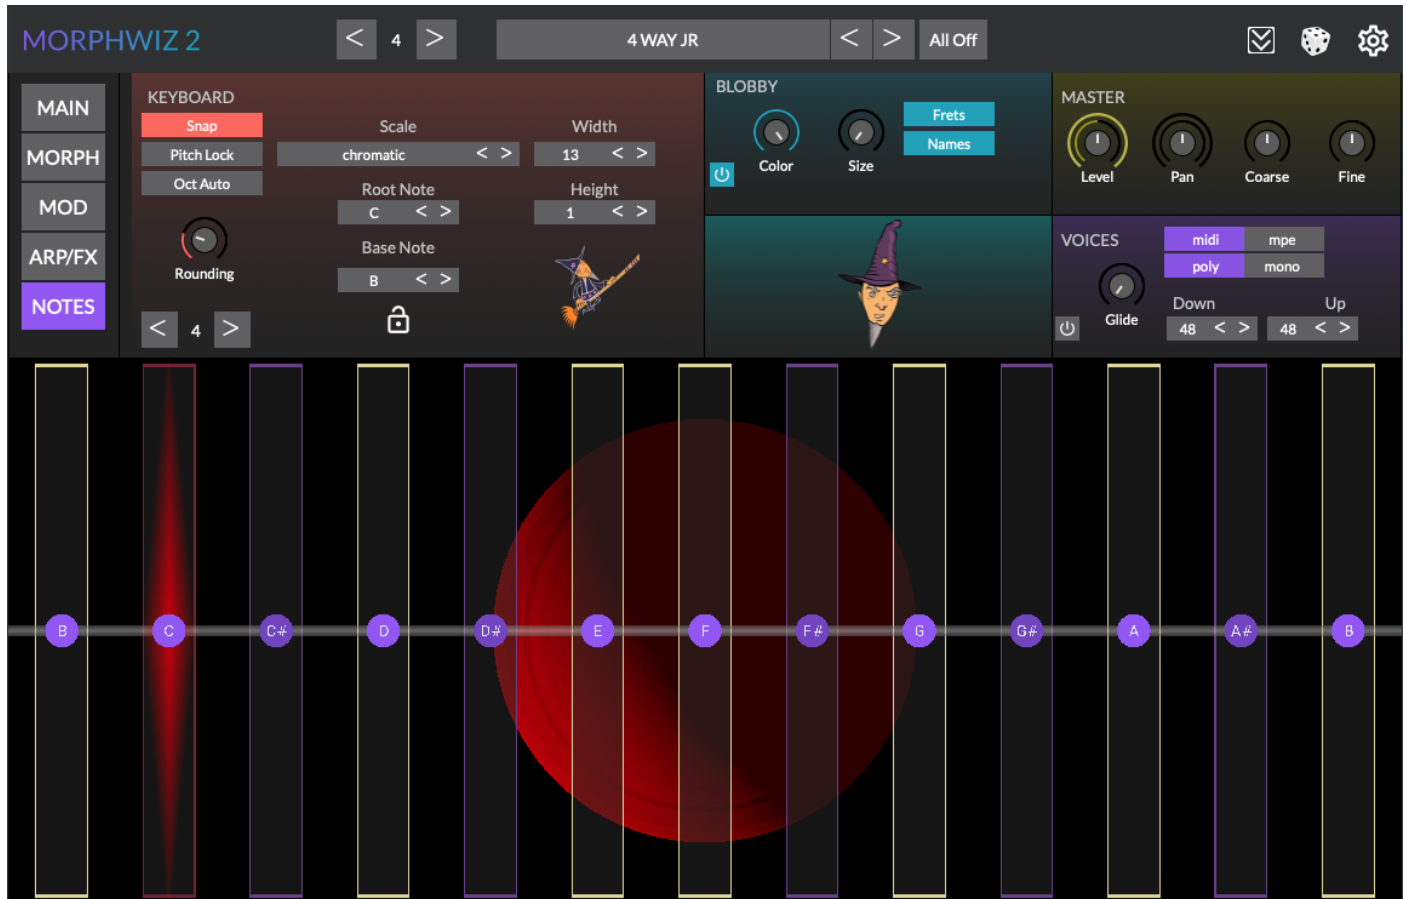

Playing surface parameters

The playing surface parameters are shown when **NOTES** is selected on the Parameter menu.

- **Snap:** The touch point on the surface snaps to the nearest note (fret). Turning this off allows you to play with variable pitch intonation.
- **Pitch Lock:** With this enabled, pitch slides are locked to the next note rather than smooth slide in pitch.
- **Oct Auto:** Adjusts the octave of the playing surface as you play notes. Four notes between the root and the fifth are required to increase or decrease the octave, For example, playing the sequence of notes G, D, C#, C will decrease the octave. While playing the sequence C, C# D, G will increase the octave. In other words four notes are required: root, any two, and fifth.
- **Rounding:** Adjusts the accuracy fret detection when the surface is touched.
- **Octave:** Adjusts the current octave down/up.
- **Scale:** Select the layout of the notes based on the scale.
- **Root Note:** Select the root note, indicated in red glow.
- **Base Note:** Set the first note, in the bottom left corner.
- **Padlock:** Lock the playing surface layout between preset changes. The playing surface layout is saved with the preset.
- **Width:** Adjust the number of notes shown Horizontally (along the string).
- **Height:** Adjust the number of rows (or strings), up to a maximum of six.

Blobby

Blobby is the pet name for the real-time audio visualizer.



- **Enable:** Show or hide the visualizer.
- **Color:** Adjust the colors of the visualizer.
- **Size:** Adjust the size of the visualizer.
- **Frets:** Show or hide the fret markers.
- **Notes:** Show or hide the note name markers.