



Series caps (C1/C2) should normally be 1/10 parallel caps (C3/C4) to provide the impedance transformation. Parallel caps mainly determine the resonant frequency.

C7/C8 are primarily used to adjust the resonant frequency in this case.

ANTENNA MATCHING CIRCUIT



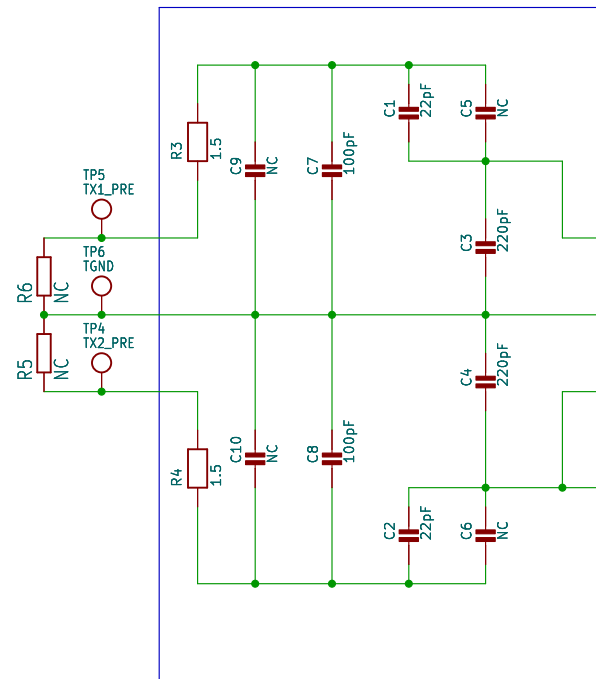


VCC = Internal LDO Output

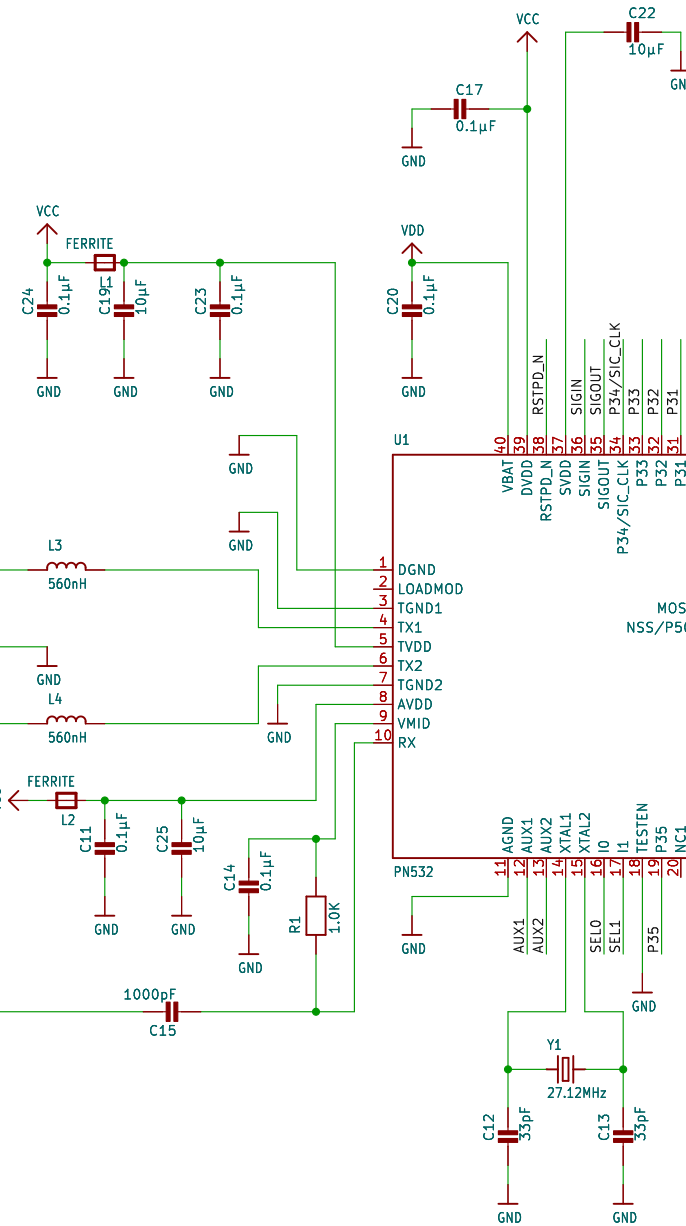

For 887-1424-1-ND use 33pF Caps

 For 887-1329-1-ND use 16 or 22pF caps

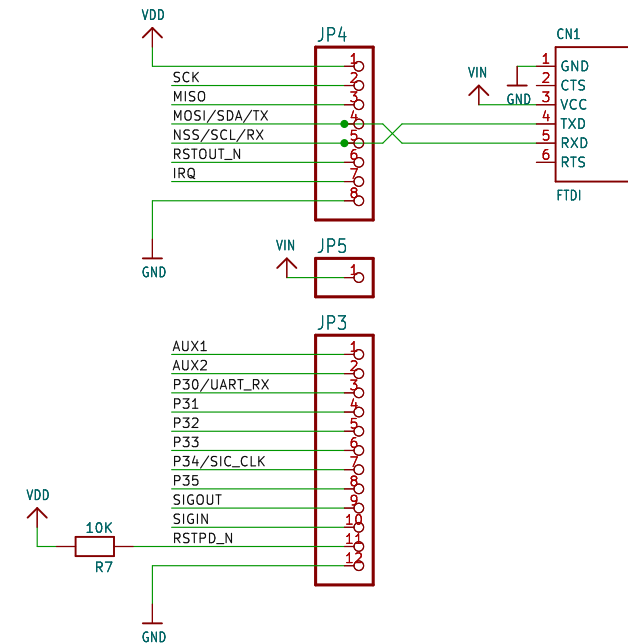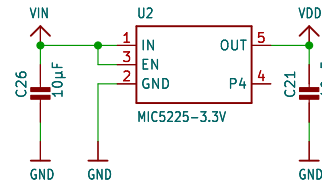

	UART	SPT	TZC
SEL0	0	0	1
SEL1	0	1	0

Sheet: /
File: working.kicad_sch

Title:

Size: User Date:
KiCad E.D.A. eeschema 7.0.6

Rev:
Id: 1/1