

eMotor Drive Kit for the AURIX™ product family

32-bit TriCore™ AURIX™ microcontrollers

About this document

Scope and purpose

This application note gives an overview of how to spin a Permanent Magnetic Synchronous Motor (PMSM) with Field Oriented Control (FOC), and also provides a brief introduction to the hardware of the eMotor Drive Kit.

The Generic Timer Module (GTM) generates the PWM, the VADC measures the phase current, and the DSADC or GPT12 determines the motor position. These modules are available in the AURIX™ family of TriCore™ products from Infineon. Thanks to the high performance of the TriCore™ microcontroller and its GTM, the generation of PWM's to control a B6 bridge, both types of ADC, and the implementation of further algorithms such as Field Oriented Control, needs less CPU load.

Intended audience

This document assumes that readers have access to the TriCore™ Architecture Manuals and have at least some general knowledge of the TriCore™ instruction set, architectural features, and peripheral modules.

Note: *A basic knowledge of motor drive applications and FOC (Field Oriented Control) are mandatory.*

Table of contents

| | | |
|----------|--|----|
| | About this document | 1 |
| | Table of contents | 2 |
| 1 | Introduction | 4 |
| 1.1 | Hardware | 4 |
| 1.1.1 | Motor Position Sensor | 4 |
| 1.1.2 | PWM | 6 |
| 1.1.3 | Current sensing | 7 |
| 1.2 | FOC | 9 |
| 1.2.1 | Clarke transformation | 10 |
| 1.2.2 | Park transformation | 11 |
| 1.2.3 | Space Vector Modulation | 11 |
| 1.2.4 | Continuous and discontinuous SVM | 14 |
| 2 | eMotor Drive Kit | 15 |
| 2.1 | Features | 15 |
| 2.2 | Block Diagram | 16 |
| 2.2.1 | Placement | 17 |
| 2.3 | eMotor Drive Kit board | 17 |
| 2.3.1 | Connectors | 18 |
| 2.3.1.1 | Power Supply | 18 |
| 2.3.1.2 | Motor | 18 |
| 2.3.1.3 | Resolver | 18 |
| 2.3.1.4 | Encoder | 18 |
| 2.3.1.5 | Hall | 18 |
| 2.3.2 | Motor Control | 18 |
| 2.3.2.1 | PWM Pattern | 18 |
| 2.3.2.2 | Current Control | 18 |
| 2.3.2.3 | Position Sensing | 19 |
| 2.3.3 | 3 Phase Bridge Driver TLE9180 | 19 |
| 2.3.3.1 | Overview | 19 |
| 2.3.4 | OptiMOS™ Power Transistor | 20 |
| 2.4 | Signal description | 20 |
| 2.5 | Connector Pin assignment | 24 |
| 2.5.1 | Resolver connector pin out | 24 |
| 2.5.2 | Encoder connector pin out | 25 |
| 2.5.3 | Hall connector pin out | 25 |
| 3 | Schematics and Layout | 26 |
| 3.1 | Schematic | 26 |
| 3.2 | Layout | 27 |

Table of contents

| | |
|-------------------------------|----|
| References | 29 |
| Revision history | 30 |
| Disclaimer | 31 |

1 Introduction

1 Introduction

In the automotive arena, multi-phase motors are increasingly replacing brushed motors. For example, Permanent Magnetic Synchronous Motors (PMSM) are used in hydraulic pumps, for assisting steering systems, and in transmission systems. In the past many applications were addressed with DC motors, but today automotive suppliers would like to use PMSM motors to achieve greater robustness and efficiency.

For most of these applications FOC (Field Oriented Control) is a favored method. The eMotor Drive Kit supports this method.

With the eMotor Drive Kit it allows to drive a 3 Phase brushless motor. Applications can be developed easily. The eMotor Drive Kit is equipped with a variety of interfaces for position detection and current measurement. Additionally a driver IC (TLE 9180) and a complete B6 bridge allow spinning a motor up to 50 Watt.

Thanks to the Application Kit and the connectors it is easy to develop TriCore™ based applications with the corresponding tools. Subsequently the applications can be downloaded and tested.

For detailed technical information about TriCore™ based products (TC2xx and TC3xx for example) please refer to the corresponding User Manual of the devices.

1.1 Hardware

The eMotor Drive Kit has the following features:

- Fits to all Application Kits
- Drives a 3 Phase PMSM / BLDC (12 Volt / 50 Watt)
- Sensing of Motor Position with Resolver/Encoder/Hall
- Phase Current Measurement with up to 3 Shunts in Ground Path
- Configuration / Diagnostic of the TLE 9180 via SPI

1.1.1 Motor Position Sensor

The hardware can be used with a resolver, encoder, or with hall sensors.

Resolver

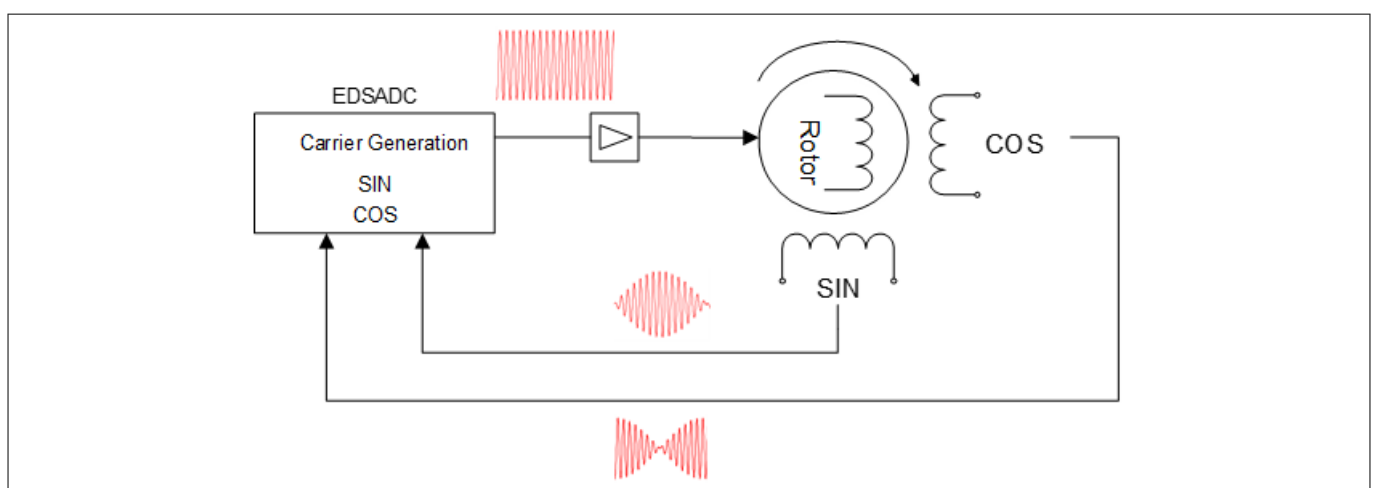


Figure 1 Resolver

Assembled with a resolver the carrier signal for the excitation coil is generated by the carrier generator of the Delta-Sigma Analog Converter. Both received return signals are evaluated in the Delta-Sigma Analog Converter. Actions include removing the carrier, delay compensation, and filtering. Position calculation is made by the CPU.

1 Introduction

Note: The 3 Phase motor in the eMotor Drive Kit does not include a resolver.

Encoder

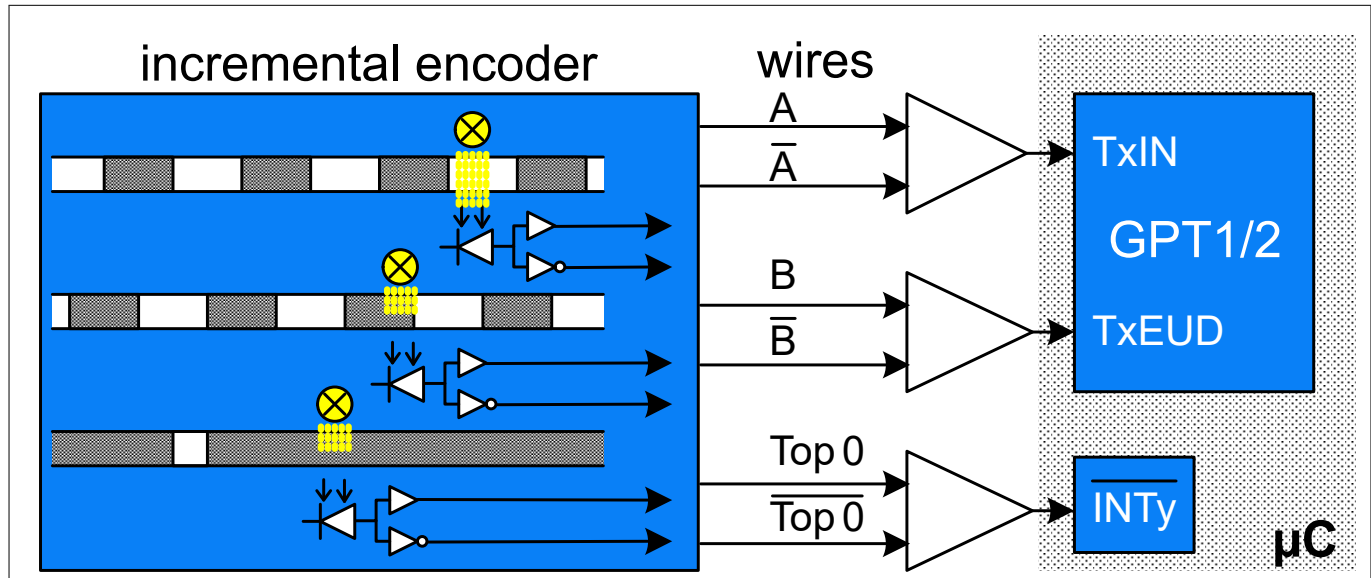


Figure 2 Encoder

Mounted with an encoder, the motor delivers three signals. Two of them provide a square wave signal with a 90 degree phase shift. The third one generates once per revolution a short pulse for synchronization. To increase the robustness of the system for long distances, a line driver circuit is recommended. The GPT12 peripheral is ideal for evaluating the motor position.

Hall sensors

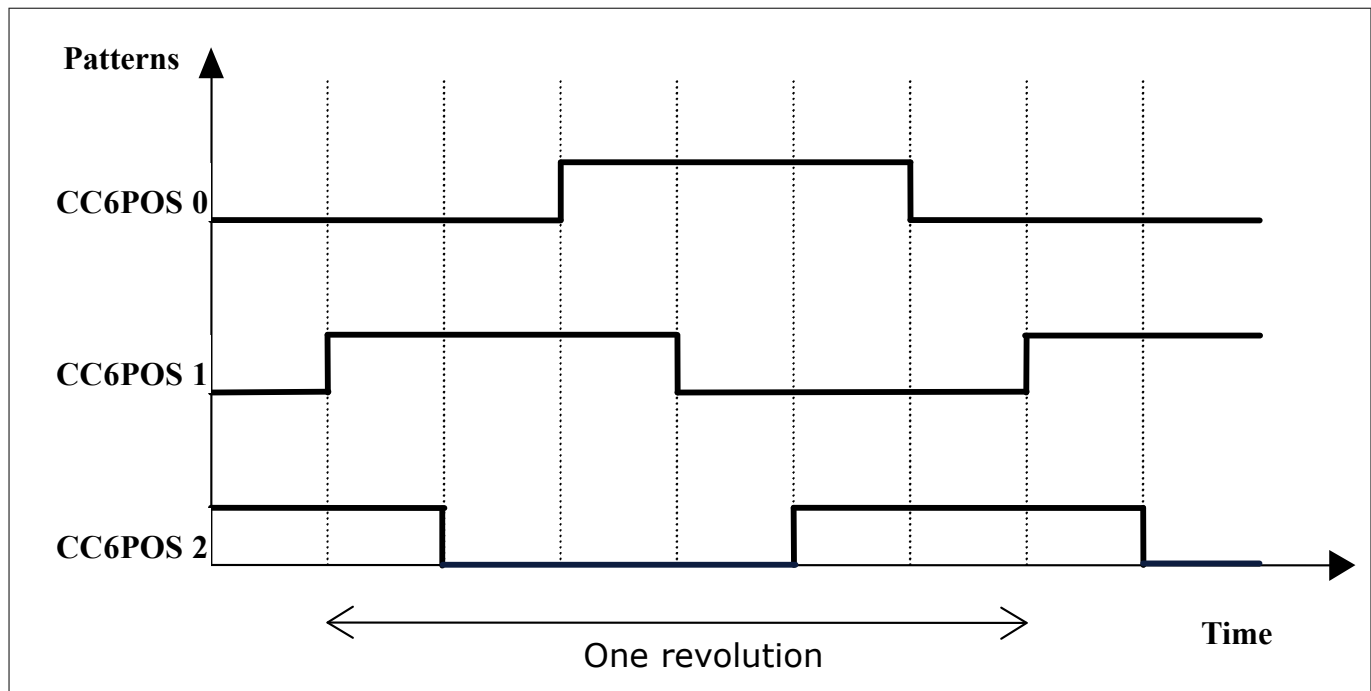


Figure 3 Hall sensor

Using Hall sensors at least each 60 degrees, an edge is generated. The SPEx of the GTM can be used to process the Hall signals.

1 Introduction

1.1.2 PWM

PWM generation is done with the GTM. If the Dead Time Module is not available, seven timers are required.

- Channel 0 works as master timer, resets all CN0, and updates the CM0 and CM1 of all corresponding timers.
- Channels 1 to 6 are assigned to the low-side / high-side switches of the B6 power bridge.

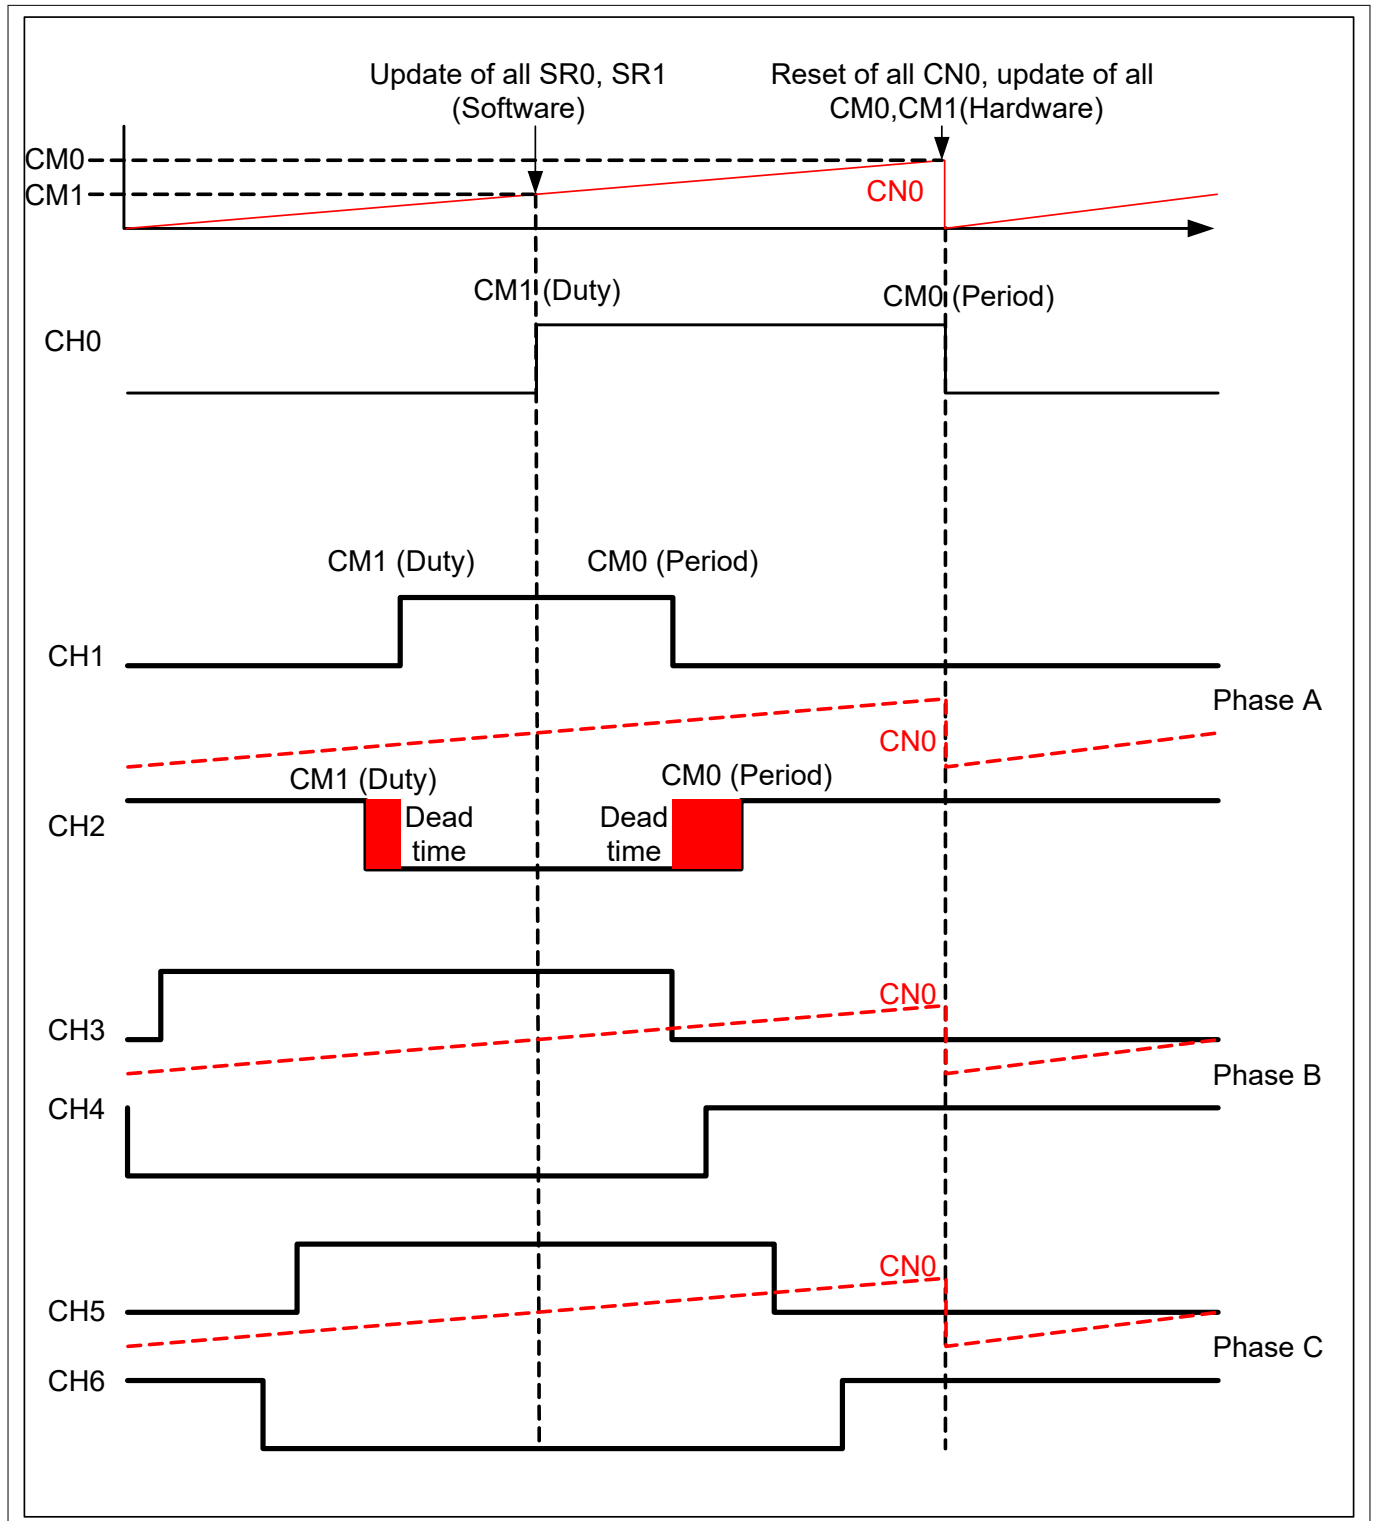


Figure 4 PWM generation with GTM

If the Dead Time Module is used, three channels are required.

1 Introduction

- Channels 0 to 2 are assigned to the low-side / high-side switches of the B6 power bridge.
- Channel 0 works as master timer. At CM0 count direction is changed and all SRs are updated.
- Update of SR0 can happen at begin and end of each PWM.
- Dead-time can be individually configured for each PWM.

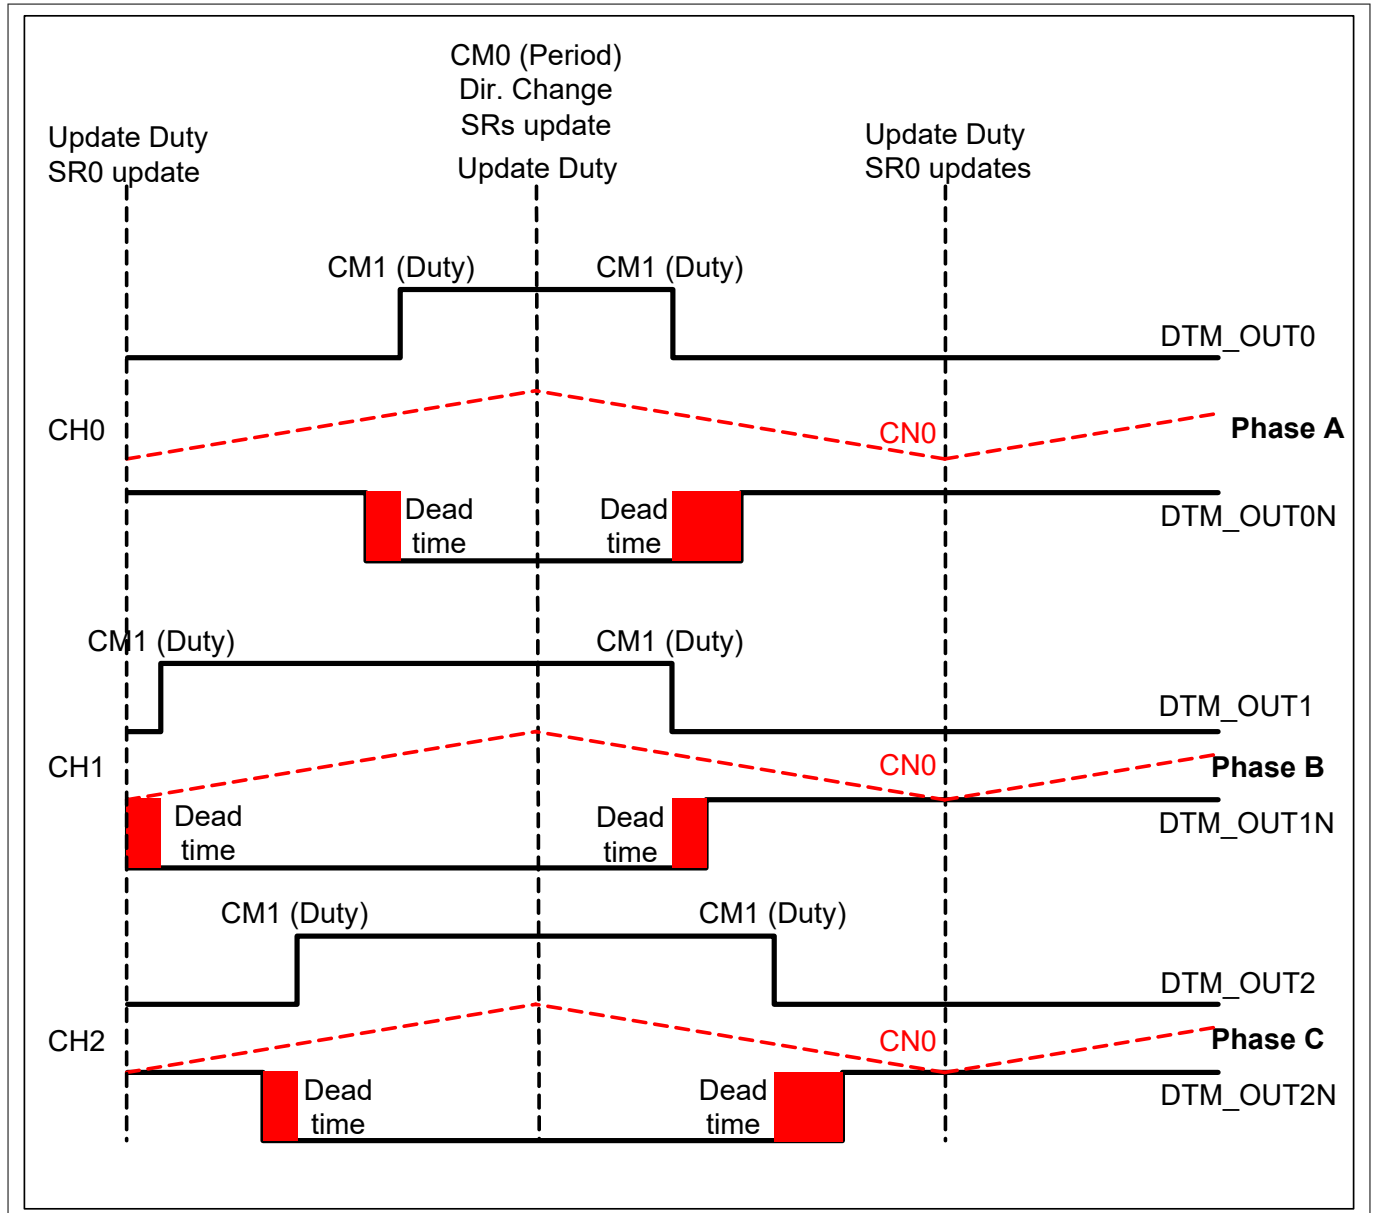


Figure 5 PWM generation with GTM (Dead Time Module)

1.1.3 Current sensing

Current sensing is implemented with three shunts in the low path of the B6 ridge. Typically two currents are measured. The third one is calculated. The current measurement needs to be done when the low-side switches are closed. Therefore the triggers become active in the middle of the PWM signal. The trigger is released with an additional timer channel 7.

- If no Dead Time Module is available, 8 channels are allocated to handle PWM generation and current measurement.
- If a Dead Time Module is used the number of needed channels are reduced to four.

1 Introduction

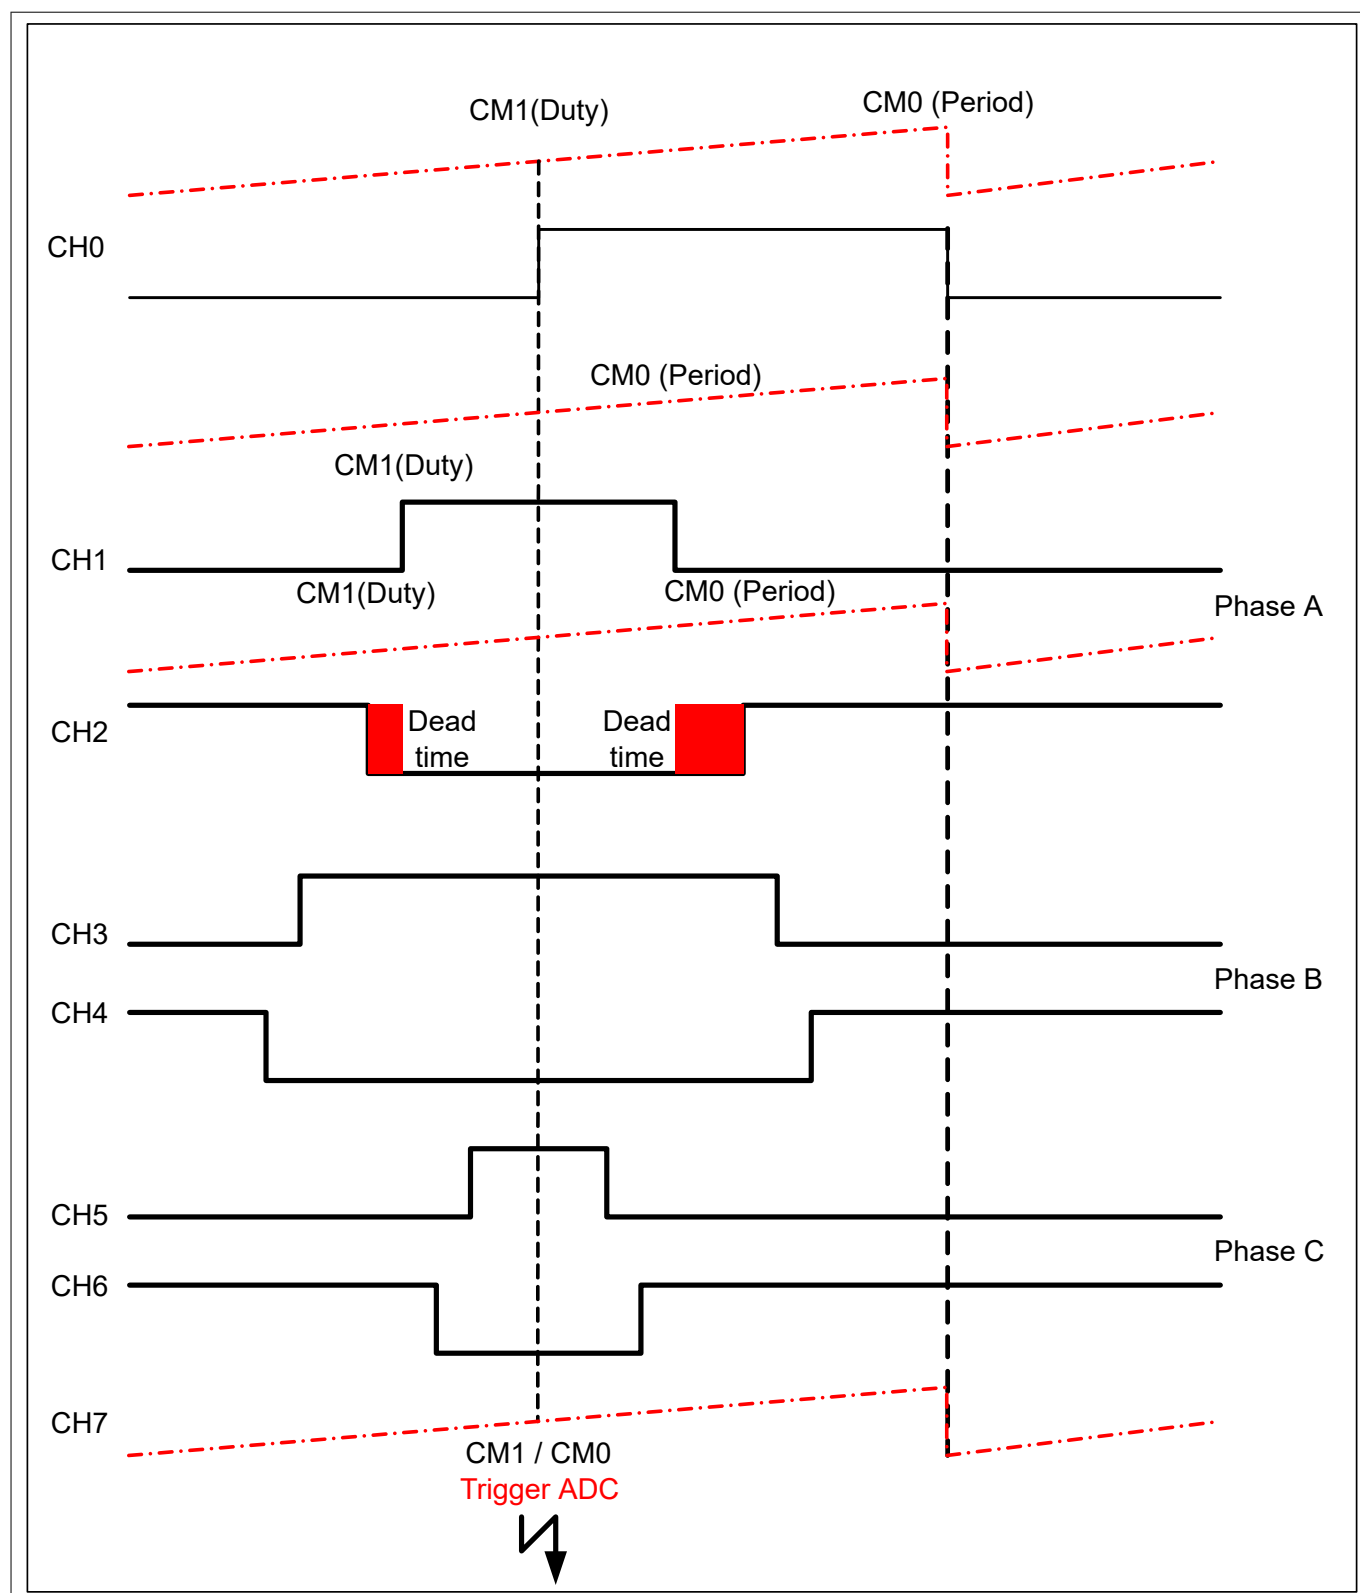


Figure 6 Current measurement

1 Introduction

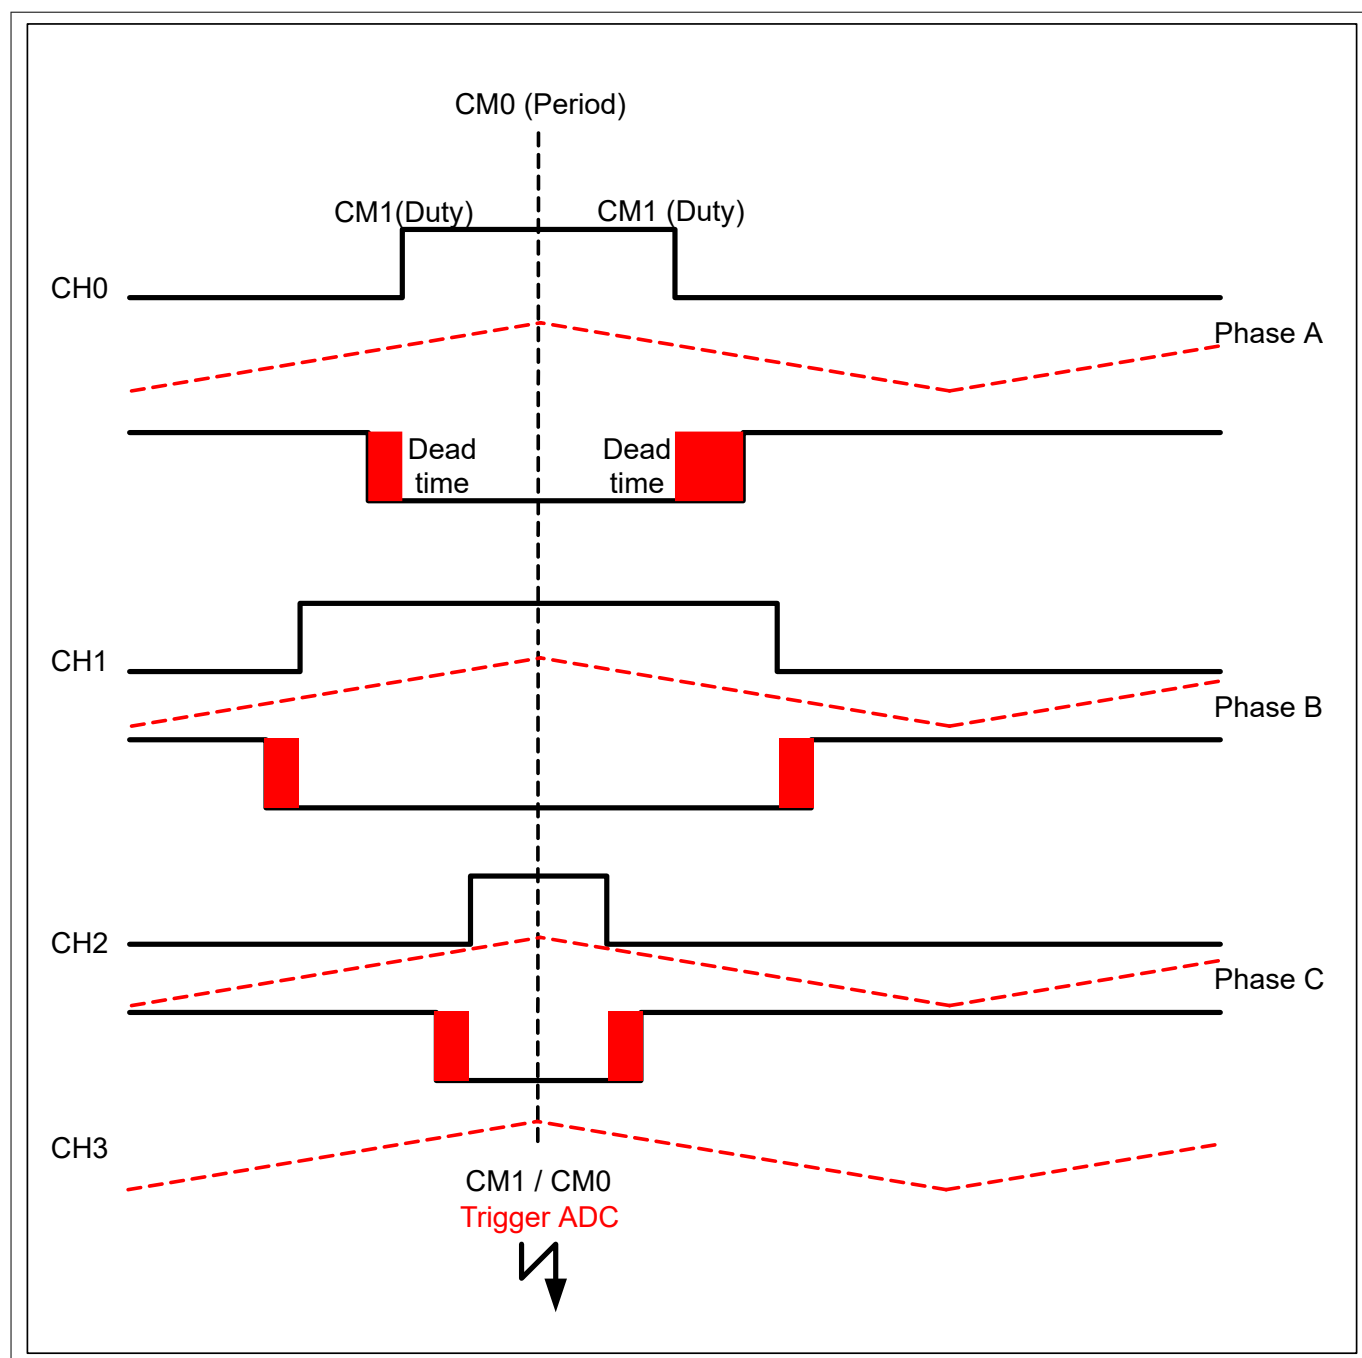


Figure 7 Current measurement (using Dead Time Module)

1.2 FOC

Field Oriented Control or vector control is a math technique for controlling brushless DC and AC induction. It consists of two types of transformations and the use of a Proportional-Integral controller.

The diagram illustrates a motor control system with field weakening. The main components and their interconnections are as follows:

- Reference Input:** A reference current $i_{sq\ ref}$ is provided to the system.
- Field Weakening:** A block labeled "Field Weakening" receives the reference current and outputs a signal to the "Current Modul".
- Current Control:** The "Current Modul" receives feedback signals i_{sq} and i_{sd} from the "Park t." block. It outputs a reference current $i_{sd\ ref}$ to a summing junction.
- Speed Feedback:** A speed feedback loop uses a PI controller to generate a reference voltage $V_{Sd\ ref}$ based on the reference current and a feedback signal ω_e .
- Voltage Decoupling:** A "Voltage Decoupling" block receives $V_{Sd\ ref}$ and ω_e to produce the d,q components of the reference voltage.
- Reverse Park Transform:** The d,q components are transformed into the α,β components using the "Reverse Park t." block.
- Space Vector PWM:** The α,β components are processed by a "Space Vector PWM" block to generate the reference voltages $V_{S\alpha\ ref}$ and $V_{S\beta\ ref}$.
- PWM Generation:** A "PWM Generation Unit" takes the reference voltages and produces the PWM signals for the inverter.
- 3-phase Inverter:** The PWM signals drive a "3-phase inverter" connected to a "Motor". The inverter is supplied with DC voltage V_{DC} .
- Sensor Interface:** A "Sensor Interface" block receives feedback signals from the motor, including the speed ω_e and the currents i_a and i_b .
- Clarke Transform:** The motor currents i_a and i_b are transformed into the α,β components using the "Clarke t." block.
- Park Transform:** The α,β components are transformed into the d,q components using the "Park t." block.

1.2.1 Clarke transformation

www.infineon.com

Phase b

$2\pi/3$

Phase c

Phase a

$i_\alpha = i_a$

i_β

i_c

i_b

α

β

Stator current

Clarke transformation (abc \rightarrow $\alpha\beta$)

V1.1
2024-08-14

1 Introduction

1.2.2 Park transformation

The park transformation allows direct access to the rotation of the rotor. The output of the calculation are direct currents split in to I_q and I_d .

- I_q is the torque given current.
- I_d is the magnetization current.

The vectors need to be transformed back, and thanks to space vector modulation the GTM module generates the corresponding PWM signals.

For synchronous machines only the I_q component needs to be controlled with a PI controller.

The I_d component is controlled to zero.

Inputs for this calculation are α , β Frame and the rotor position (φ).

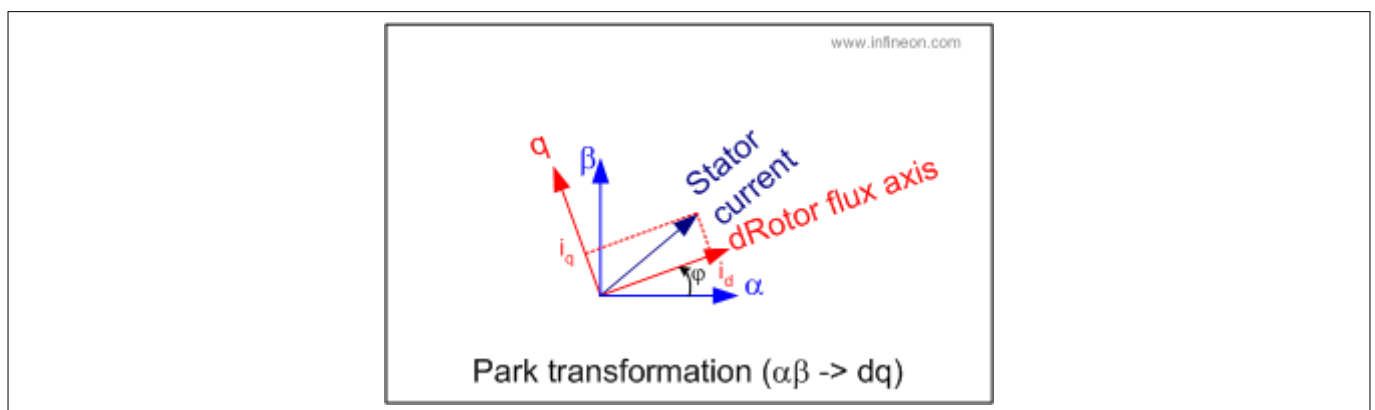


Figure 10 Park transformation

For Interior Permanent Magnet (IPM) motor voltage, de-coupling allows driving the motor more efficiently. It is not implemented.

For Field weakening the I_d component can be influenced, so it is possible to drive the motor faster at the nominal speed.

1.2.3 Space Vector Modulation

Space Vector Modulation (SVM) is used to generate a three phase sinusoidal PWM signal, to drive the power switches.

The three phased inverter is made of three half-bridges with a total of 6 switches:

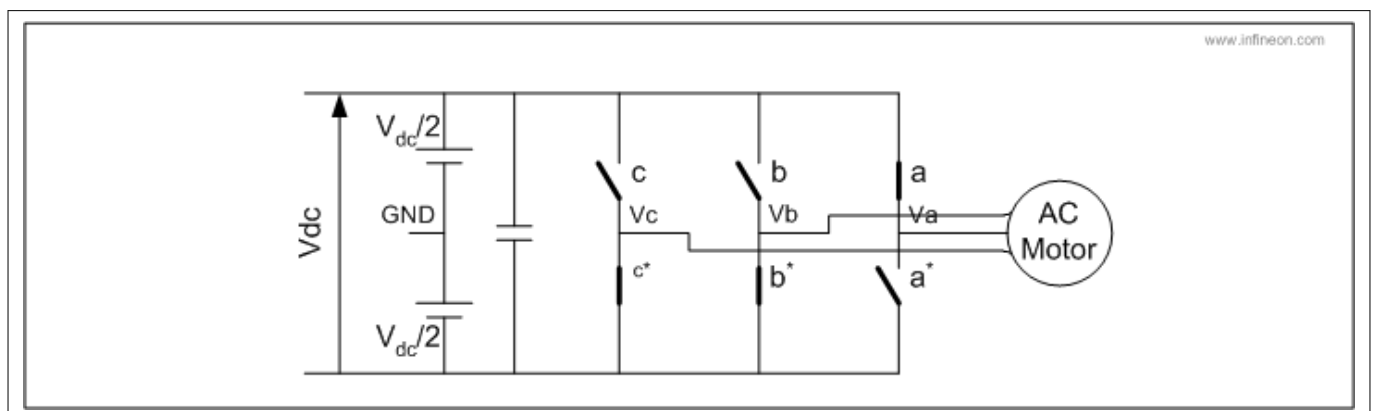


Figure 11 Inverter in state [001]

The state of the inverter is defined by vector[CBA].

- C represents the state of the high-side switch c with 0 for opened and 1 for closed.

1 Introduction

- B represents the state of the high-side switch b.
- A represents the state of the high-side switch a.

We obtain the following 8 possible vectors:

$$\vec{V}_0 = [0 \ 0 \ 0]$$

$$\vec{V}_1 = [0 \ 0 \ 1]$$

$$\vec{V}_2 = [0 \ 1 \ 0]$$

$$\vec{V}_3 = [0 \ 1 \ 1]$$

$$\vec{V}_4 = [1 \ 0 \ 0]$$

$$\vec{V}_5 = [1 \ 0 \ 1]$$

$$\vec{V}_6 = [1 \ 1 \ 0]$$

$$\vec{V}_7 = [1 \ 1 \ 1]$$

For the vectors [000] and [111] the stator is in short circuit. These vectors are called ZERO vectors.

All other vectors produce a space vector equal to:

$$\vec{V}_k = \frac{2}{3} V_{dc} e^{j \frac{(k-1)\pi}{3}}$$

Where:

$$k = [1..6]$$

The vectors can be represented in the (α, β) stationary reference frame and define 6 areas named "sectors" (sector 1 to sector 6):

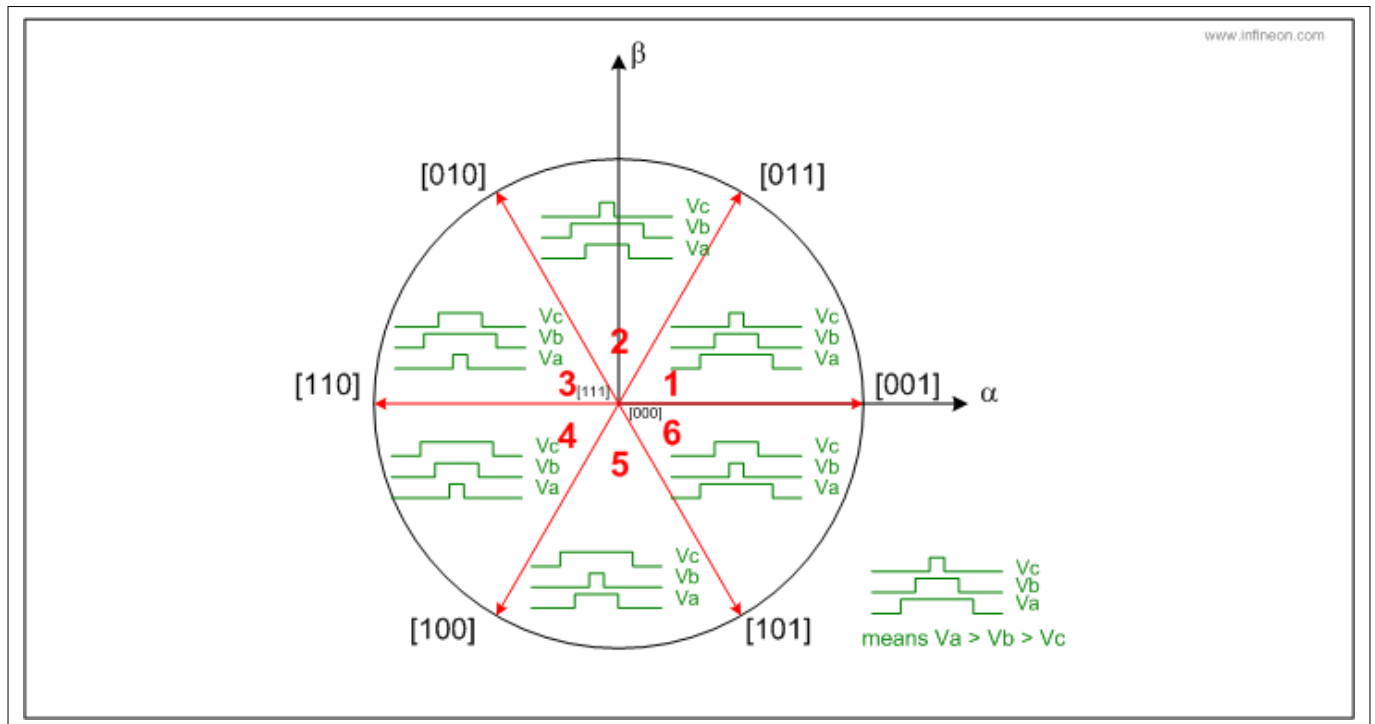


Figure 12 Inverter in state [001]

Any space vector voltage $\vec{V}_{\alpha\beta}$ can be represented as the weighted average of two adjacent space vectors and the vector ZERO:

1 Introduction

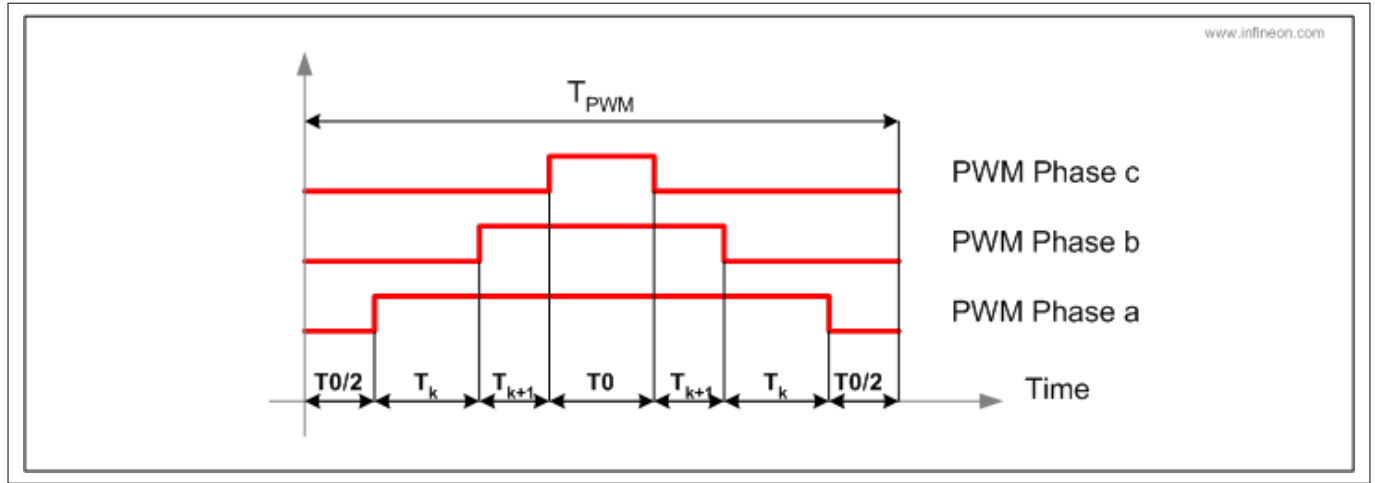


Figure 13 Space Vector Modulation pulses

The space vector algorithm produces the following phase potentials:

$$V_a(\omega, t) = \begin{cases} \frac{\sqrt{3}}{2} \left| \vec{V}_{\alpha\beta} \right| \cos\left(\omega t - \frac{\pi}{3}\right), & \text{if } 0 \leq \omega t < \frac{\pi}{3} \\ \frac{3}{2} \left| \vec{V}_{\alpha\beta} \right| \cos(\omega t), & \text{if } \frac{\pi}{3} \leq \omega t < \frac{2\pi}{3} \\ \frac{\sqrt{3}}{2} \left| \vec{V}_{\alpha\beta} \right| \cos\left(\omega t + \frac{\pi}{3}\right), & \text{if } \frac{2\pi}{3} \leq \omega t < \pi \\ \frac{\sqrt{3}}{2} \left| \vec{V}_{\alpha\beta} \right| \cos\left(\omega t - \frac{\pi}{3}\right), & \text{if } \pi \leq \omega t < \frac{4\pi}{3} \\ \frac{3}{2} \left| \vec{V}_{\alpha\beta} \right| \cos(\omega t), & \text{if } \frac{4\pi}{3} \leq \omega t < \frac{5\pi}{3} \\ \frac{\sqrt{3}}{2} \left| \vec{V}_{\alpha\beta} \right| \cos\left(\omega t + \frac{\pi}{3}\right), & \text{if } \frac{5\pi}{3} \leq \omega t < 2\pi \end{cases}$$

$$V_b(\omega t) = V_a\left(\omega t - \frac{2\pi}{3}\right)$$

$$V_c(\omega t) = V_a\left(\omega t + \frac{2\pi}{3}\right)$$

And the following line to line voltages:

$$V_{ab}(\omega t) = \sqrt{3} \left| \vec{V}_{\alpha\beta} \right| \sin\left(\omega t + \frac{\pi}{3}\right)$$

$$V_{bc}(\omega t) = V_{ab}\left(\omega t - \frac{2\pi}{3}\right)$$

1 Introduction

1.2.4 Continuous and discontinuous SVM

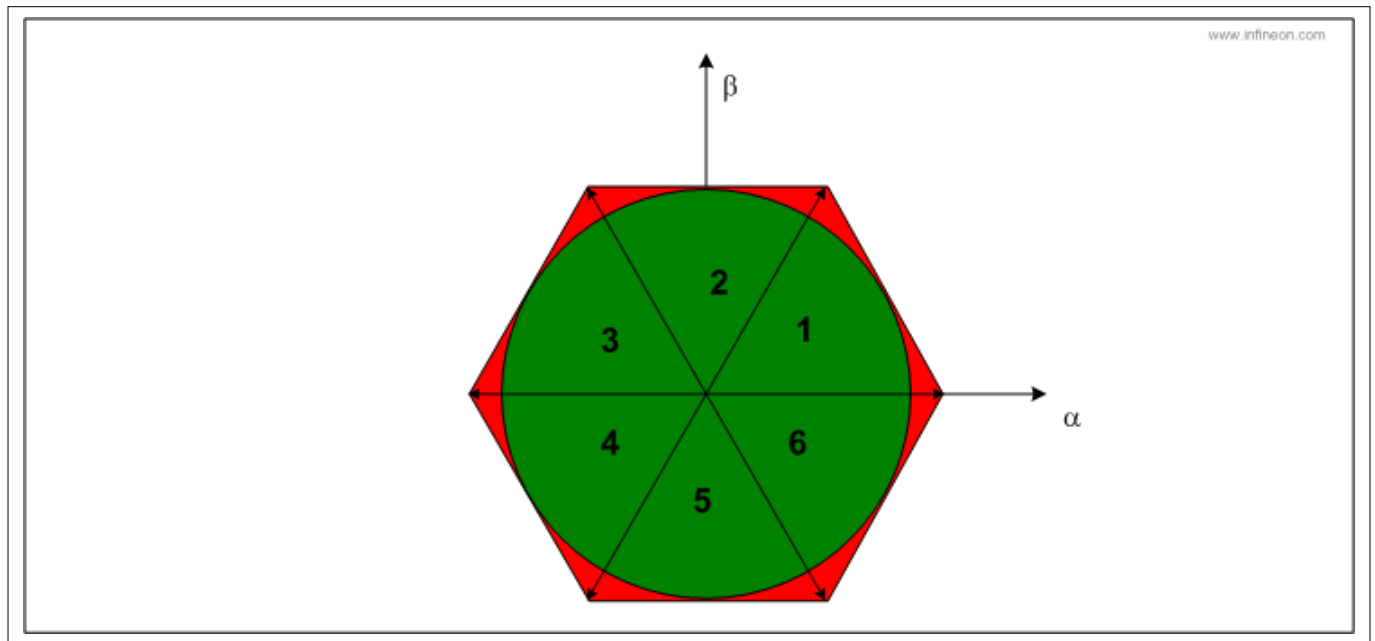


Figure 14 Continuous versus discontinuous area

The range available for the continuous Space Vector Modulation is represented by the circle inside the hexagon in the figure, and corresponds to a modulation index of 0.906% ($\frac{\pi}{2\sqrt{3}}$), because the output voltage is limited by the DC-link voltage.

The total hexagon area can still be used for saturated SVM, but introduces more harmonics.

In the continuous domain, the maximum fundamental phase voltage that can be produced by the inverter for a given DC link voltage is:

$$V_{\max} = 2 \frac{V_{dc}}{\pi}$$

2 eMotor Drive Kit

The chapter provides a short description of the eMotor Drive Kit board.

2.1 Features

- Driving of a 3 Phase PMSM / BLDC (12Volt / max.50 Watt)
- Sensing of Motor Position with Resolver, Encoder or Hall Sensors
- Phase Current Measurement with DC Link Shunt
- Phase Current Measurement with 2 / 3 Shunts in Ground Path
- Configuration / Diagnostic via SPI
- eMotor Drive Kit fits perfectly to Application Kit TC2xx, TC3xx
- Low Power Status LED
- Dimension: 100mm x 120mm

Connectors

The eMotor Drive Kit offers a wide variety of Connectors:

- 4 mm Multicomp A2.107 for 12 Power Supply
- 4 mm Multicomp A2.107 for Motor Connection
- Phoenix Contact PTSA 0,5/6-2,5-Z for Resolver
- Phoenix Contact PTSA 0,5/6-2,5-Z for Hall Sensors
- Phoenix Contact PTSA 0,5/8-2,5-Z for Encoder
- General purpose 10-Pin plug connector for Encoder
- Two 40-Pin Connectors with I/O Signals

Components

- Infineon´s Next Generation Bridge Driver TLE 9180
- Dual N-Channel MOSFETs IBG20N04S4-08A
- Low Dropout Linear Voltage Regulator TLE42744
- NPN/PNP Silicon AF Transistor Array BC847PN
- Rail To Rail Quad CMOS Operational Amplifier With Shut Down LMV344ID
- Single Supply, General Purpose Dual Operational Amplifier OPA2171A
- Quadruple RS-485 Differential Line Receiver SN65LBC175A
- LED to validate Power Supply (5Volt)

2 eMotor Drive Kit

2.2 Block Diagram

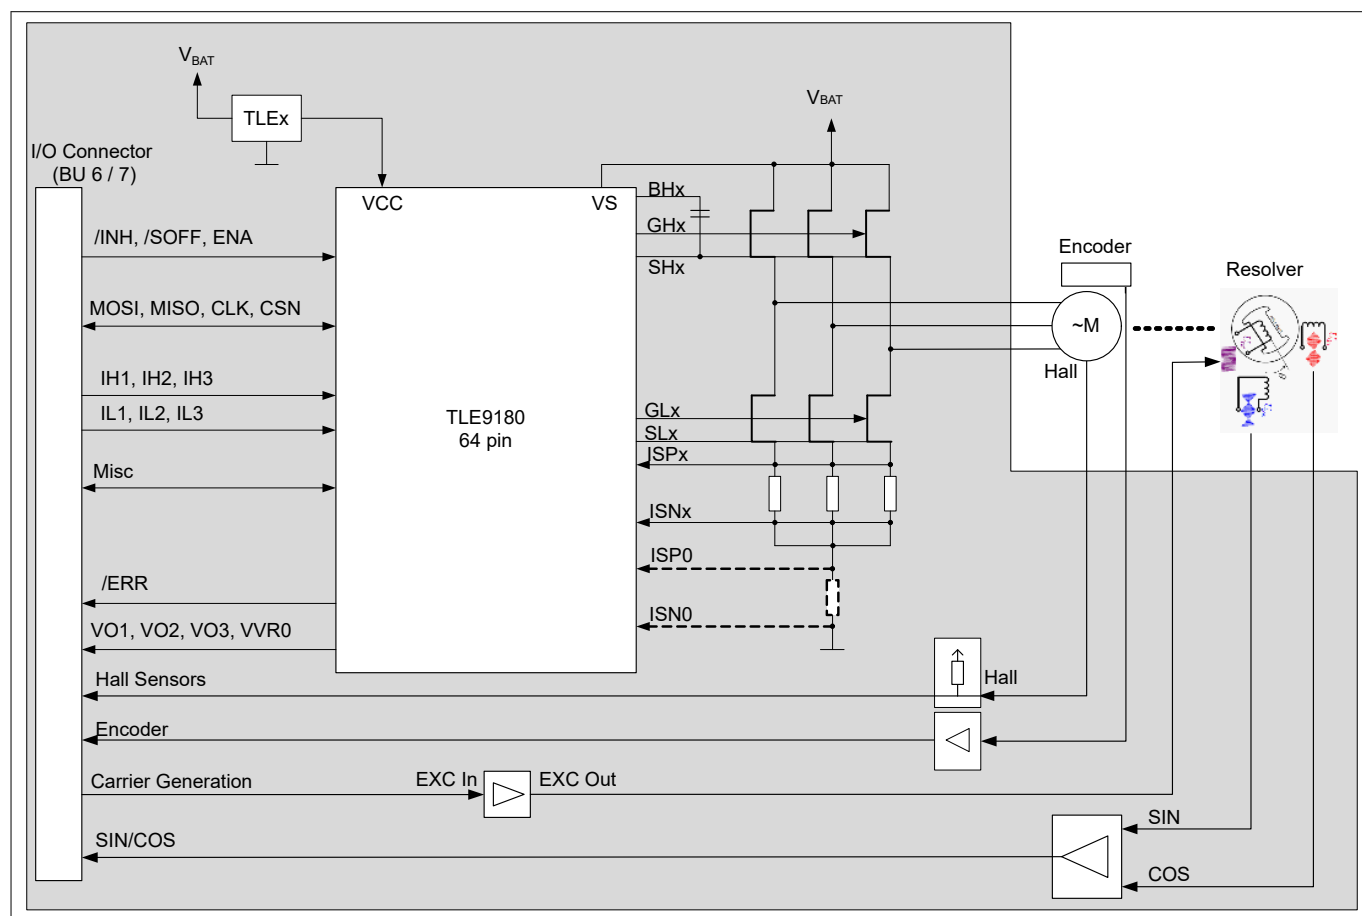


Figure 15 eMotor Drive Kit Block Schematic

2 eMotor Drive Kit

2.2.1 Placement

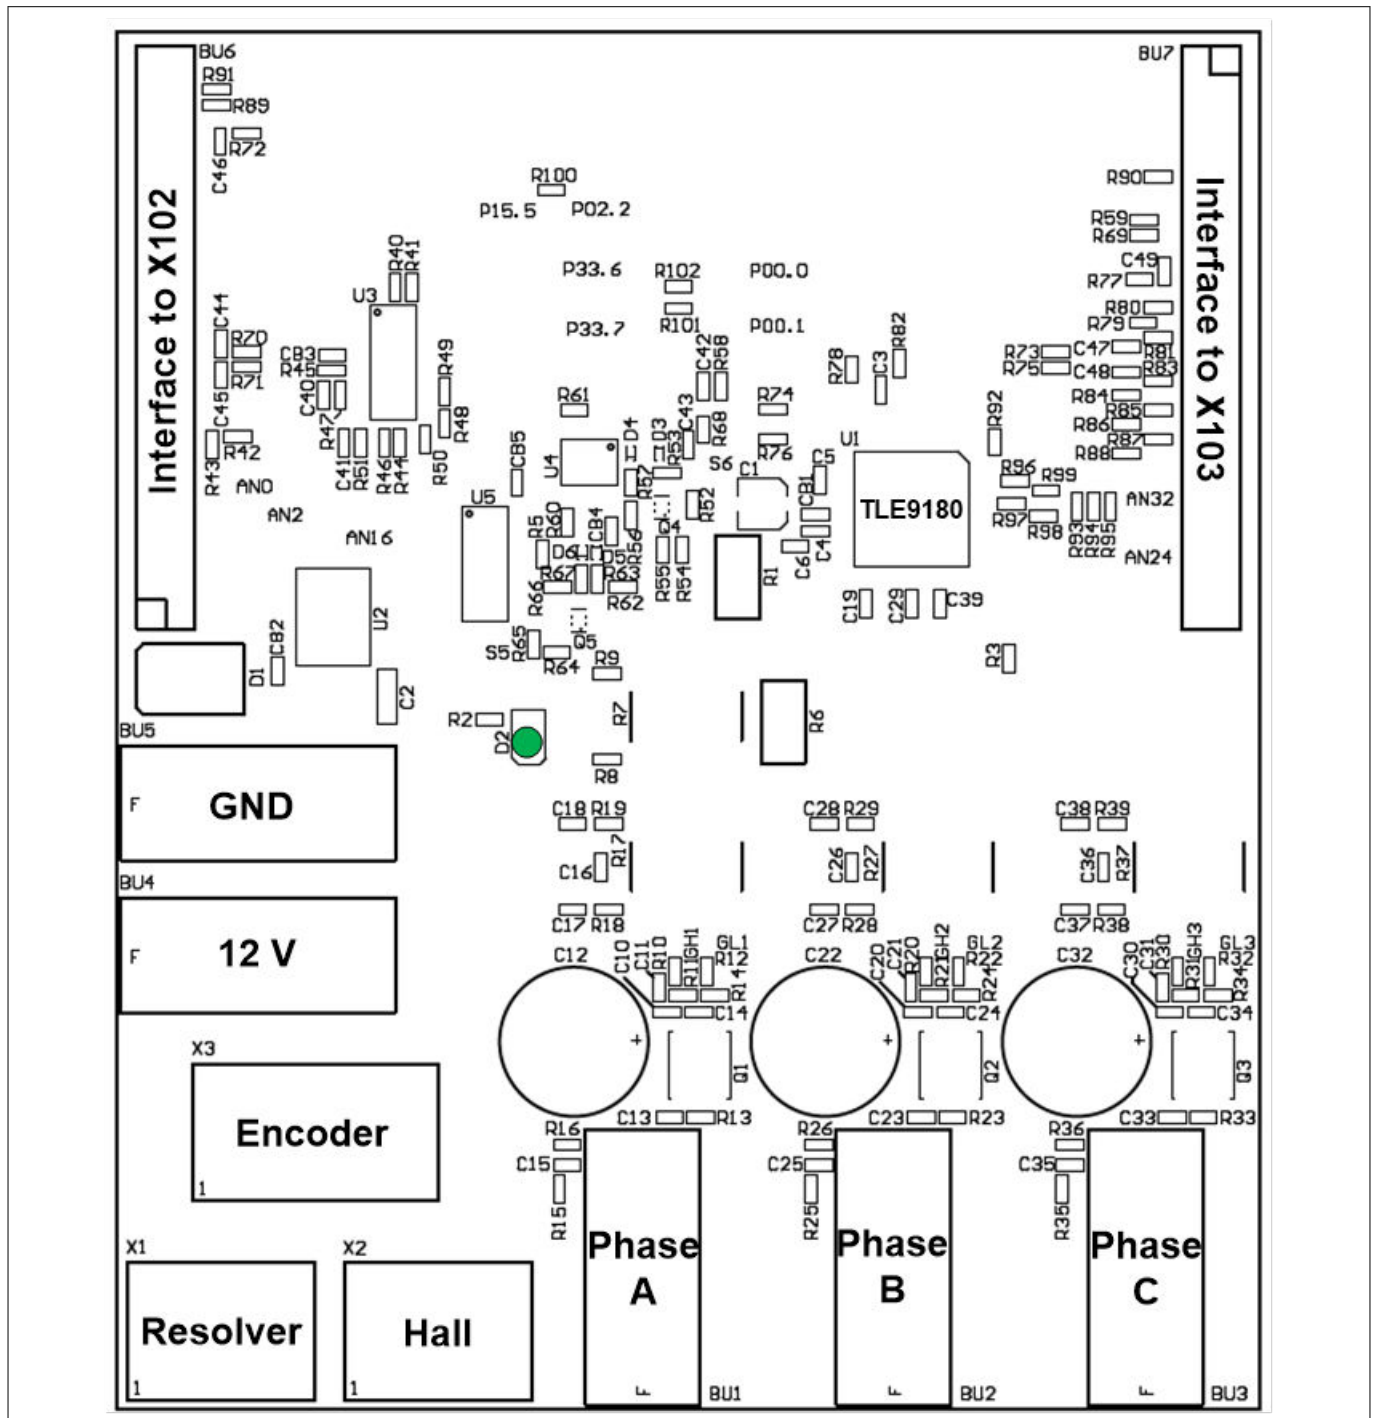


Figure 16 eMotor Drive Kit Top Placement

2.3 eMotor Drive Kit board

The eMotor Drive Kit follows a daughter board approach. It has to be used with one of the Application Kit 's via the connectors BU6 and BU7, see [Figure 17](#). The power supply of the eMotor Drive Kit supplies the Application Kit.

2 eMotor Drive Kit

2.3.1 Connectors

The eMotor Drive Kit provides connectors for one 3 Phase motor, several sensor types and power supply.

2.3.1.1 Power Supply

The 3 Phase Bridge Driver IC needs 2 different supply voltages. The 12 V are supplied externally. The 5V are generated internally via the Infineon TLE 42744 DV50.

The LED (+5V) indicates the status of the 5V voltage.

The Board has to be connected to an external 12V DC power supply via BU4 (12V) and BU5 (GND).

The maximum power consumption is not specified but the current should not exceed 3 A.

2.3.1.2 Motor

The eMotor Drive Kit supports the control of a 3 phase permanent magnetic synchronous motor. Three general purpose connectors (Black, red, yellow) need to be connected with the motor.

2.3.1.3 Resolver

The eMotor Drive Kit supports Resolver interface. Thanks to the DSADC no external resolver IC is needed. The pinout for the resolver connector is shown in [Figure 18](#). The TC23x does not offer the DSADC. The position evaluation can be realized with the VADC.

2.3.1.4 Encoder

The eMotor Drive Kit supports Encoder interface. Via a differential line receiver the encoder is connected with GPT12_T3 module. The pinout for the encoder connector is shown in [Figure 19](#).

2.3.1.5 Hall

The eMotor Drive Kit supports Hall Sensor interface. The three hall sensor signals are connected with Sensor Pattern Evaluation (SPEX) module of the GTM module. The pinout for the Hall connector is shown in [Figure 20](#).

Note: *Not all AURIX™ devices offer the SPEX module.*

2.3.2 Motor Control

The hardware of the eMotor Drive Kit has been designed to support the field oriented control of a PMSM motor. The motor position and the phase current need to be known to apply the right PWM pattern.

2.3.2.1 PWM Pattern

Normally the motor is controlled via space vector modulation. Six independent PWM are generated with the GTM. The update of the PWM pattern occurs periodically.

2.3.2.2 Current Control

The current can be measured based on the application. At least one shunt is required in the DC Link. A more advanced method is to measure the current in each phase. By default the eMotor Drive Kit uses this method.

Up to 3 integrated amplifiers in the TLE 9180 support the current measurement. The outputs of the amplifiers are connected with 3 independent ADC channels. Depending of the Application Kit used, the phase current is measured with different channels. For detailed information see [Chapter 2.3](#).

2 eMotor Drive Kit

The trigger for the ADC channels can be realized with the same Timer module as the PWM's are generated.

2.3.2.3 Position Sensing

Depending on the application, Hall sensors, the encoder, or the resolver are mainly used.

Hall sensor signals are directly connected with the SPE module. It can be used to evaluate three Hall sensor inputs.

The Microcontroller evaluates the Hall sensor signals, connected to TINx inputs. With a simple state machine the motor position can be evaluated. For detailed information see [Chapter 2.4](#).

The carrier for the primary coil of the resolver is generated with the internal carrier generator. For driving the coil an external circuit is on the board. The secondary coils are connected via external circuit with the DSADC. The COS signal and the SIN signal are processed via external OPAMP and connected to DSADC. The processing of the signals and the calculation of the motor position is done internally with software.

The encoder signals are connected to a differential line receiver on board. The outputs are connected to the GPT12 module.

- Enc A is connected to T3INA.
- Enc B is connected to T3EUDA.
- The Top zero is connected to T4INA
- reset always the internal counter

2.3.3 3 Phase Bridge Driver TLE9180

The TLE9180 is an advanced gate driver IC dedicated to control 6 external N-channel MOSFETs forming an inverter for high current 3 phase motor drives application in the automotive sector.

2.3.3.1 Overview

An advanced high voltage technology allows the TLE9180 to support applications for single and mixed battery systems with battery voltages of 12V, 24V and 48V even within tough automotive environments in combination with high motor currents. Therefore bridge, motor and supply related pins can withstand voltages of up to 90V. Motor related pins can even withstand negative voltage transients down to -7..-15V without destruction.

All low- and high-side output stages are based on a floating concept and its driver strength allows it to drive the lowest RDS(on) MOSFETs.

An integrated SPI interface is used to configure the TLE9180 for the application after power-up. After successful power-up, parameters can be adjusted by SPI, and monitoring data, configuration and error registers can be read. Cyclic redundancy check over data and address bits ensures safe communication and data integrity.

GND related bridge currents can be measured with up to 3 integrated current sense amplifiers. The outputs of the current sense amplifiers support 5V ADCs and the robust inputs can withstand negative transients down to -10V without destruction. Low Noise, low settling times and high accuracy are the main features of the integrated current sense amplifiers. Gain and the zero current voltage offset can be adjusted by SPI. The offset can be calibrated.

Diagnostic coverage and redundancy have increased steadily in recent years in automotive drive applications. Therefore the TLE9180 offers a wide range of diagnostic features, such as monitoring of power supply voltages and system parameters. A testability of safety relevant supervision functions has been integrated. The failure behavior, the threshold voltages and the filter times of the supervisions of the device are adjustable via SPI.

The TLE9180 is integrated

- in a VQFN48 7*7 package with an exposed pad
- in a LQFP64 package with an exposed pad

Due to its exposed pad the gate driver IC provides an excellent thermal characteristic.

2 eMotor Drive Kit

2.3.4 OptiMOS™ Power Transistor

For the B6 bridges, three dual N.channel MOSFET IPG20N04S4-08A in a smart PG-TDSON-8-10 package are selected.

2.4 Signal description

For more information about the signals please take a look in the documentation of the selected TC2xx/TC3xx devices, the datasheet of the TLE 9180, and/or the schematics of the board.

Table 1 Connector BU6

| Short name | Description | Pin number |
|-------------|------------------------------------|------------|
| VCC_IN | Supply Input TriBoard(5,5V...50V) | 1 |
| VEXTA | nc. | 2 |
| GND | Ground | 3 |
| GND | Ground | 4 |
| CH2NA | Analog input / Resolver VCC/2 | 5 |
| CH2PA | Analog input / Resolver SIN | 6 |
| CH0NA | Analog input / Resolver VCC/2 | 9 |
| CH0PA | Analog input / Resolver COS | 10 |
| VRO | Analog input / Reference Voltage | 11 |
| VO1 | Analog input / Phase current 1 | 12 |
| PFB1_Enable | Enable PFB1 | 17 |
| PFB1 | Phase Feedback | 13 |
| PFB2 | Phase Feedback | 18 |
| PFB3 | Phase Feedback | 20 |
| MOSI | QSPI | 27 |
| MISO | QSPI | 28 |
| CSN | QSPI | 29 |
| CLK_SPI | QSPI | 30 |
| /ERR | Error | 33 |
| /SOFF | Independent Save State | 37 |
| /ENA | Enable | 38 |

Table 2 Connector BU7

| Short name | Description | Pin number |
|------------|------------------------------------|------------|
| VCC_IN | Supply Input TriBoard(5,5V...50V) | 1 |
| VEXTB | nc. | 2 |
| GND | Ground | 3 |
| GND | Ground | 4 |

(table continues...)

2 eMotor Drive Kit

Table 2 (continued) Connector BU7

| Short name | Description | Pin number |
|------------|--------------------------------|------------|
| /INH | Inhibit (active low) | 10 |
| CGPWM_N | Primary Coil | 13 |
| CGPWM_P | Primary Coil | 14 |
| HALLA | HALL A | 16 |
| HALLB | HALL B | 17 |
| HALLC | HALL C | 18 |
| ENC_A | Encoder A | 19 |
| ENC_B | Encoder B | 20 |
| ENC_Z | Encoder Top Zero | 21 |
| IL1 | PWM Lowside 1 | 24 |
| /IH1 | PWM Highside 1 | 25 |
| IL2 | PWM Lowside 2 | 26 |
| /IH2 | PWM Highside 2 | 27 |
| IL3 | PWM Lowside 3 | 28 |
| /IH3 | PWM Highside 3 | 29 |
| VO3 | Analog input / Phase current 3 | 38 |
| VO2 | Analog input / Phase current 3 | 40 |

Table 3 Resolver X1

| Short name | Description |
|------------|--------------------|
| S1 | Secondary coil SIN |
| S2 | Secondary coil SIN |
| S3 | Secondary coil COS |
| S4 | Secondary coil COS |
| S5 | Primary Coil |
| S6 | Primary Coil |

Table 4 Hall X2

| Short name | Description |
|------------|---------------|
| HALLA | Hall Sensor A |
| HALLB | Hall Sensor B |
| HALLC | Hall Sensor C |

2 eMotor Drive Kit

Table 5 Encoder

| Short name | Description |
|------------|-----------------------------------|
| ENC_CH_A | Incremental Signal Channel A |
| ENC_CH_AN | Neg. Incremental Signal Channel A |
| ENC_CH_B | Incremental Signal Channel B |
| ENC_CH_BN | Neg. Incremental Signal Channel B |
| ENC_CH_Z | Incremental Signal Channel Z |
| ENC_CH_ZN | Neg. Incremental Signal Channel Z |

Table 6 TLE9180

| Short name | Description |
|------------|---|
| APC | Activation of phase cut off FETs |
| /ERR | Error signal (active low) |
| IH1 | Input for high-side switch 1 (active low) |
| IL1 | Input for low-side switch 1 (active high) |
| IL2 | Input for low-side switch 2 (active high) |
| IH2 | Input for high-side switch 2 (active low) |
| IH3 | Input for high-side switch 3 (active low) |
| IL3 | Input for low-side switch 3 (active high) |
| MISO | SPI Master In, Slave Out |
| MOSI | SPI Master Out, Slave In |
| CSN | SPI Chip Select |
| CLK_SPI | SPI clock input |
| VCC | Power supply for digital I/O pins and input for VCC monitoring |
| SOFF | Independent safe state switch off (active low) |
| VDH | Connection to drain of high-side switches for short circuit detection; Supply for CP2 |
| CH2 | + Terminal for pump capacitor of charge pump 2 |
| CL2 | - Terminal for pump capacitor of charge pump 2 |
| INH | Inhibit pin (active low) |
| VS | Voltage supply |
| CH1 | + Terminal for pump capacitor of charge pump 1 |
| CL1 | - Terminal for pump capacitor of charge pump 1 |
| CP_GND | Charge pump GND |
| CB | Buffer capacitor for charge pump 1 |
| GL1 | Output to gate low-side switch 1 |
| SL1 | Connection to source low-side switch 1 |

(table continues...)

2 eMotor Drive Kit

Table 6 (continued) TLE9180

| Short name | Description |
|------------|---|
| BH1 | Bootstrap pin for + terminal of bootstrap capacitor CBS1 |
| SH1 | Connection to source high-side switch 1 |
| GH1 | Output to gate high-side switch 1 |
| SL2 | Connection to source low-side switch 2 |
| GL2 | Output to gate low-side switch 2 |
| BH2 | Bootstrap pin for + terminal of bootstrap capacitor CBS2 |
| SH2 | Connection to source high-side switch 2 |
| GH2 | Output to gate high-side switch 2 |
| BH3 | Bootstrap pin for + terminal of bootstrap capacitor CBS3 |
| SH3 | Connection to source high-side switch 3 |
| GH3 | Output to gate high-side switch 3 |
| SL3 | Connection to source low-side switch 3 |
| GL3 | Output to gate low-side switch 3 |
| GND | GND |
| PFB3 | Phase feedback of motor connection phase 3 |
| PFB2 | Phase feedback of motor connection phase 2 |
| PFB1 | Phase feedback of motor connection phase 1 |
| VRO | Output of reference voltage of differential amplifier |
| VO3 | Output of differential 3 amplifier for shunt signal amplification |
| VO2 | Output of differential 2 amplifier for shunt signal amplification |
| VO1 | Output of differential 1 amplifier for shunt signal amplification |
| ISP | + Input of differential amplifier for shunt signal amplification |
| ISN | - Input of differential amplifier for shunt signal amplification |
| AGND | Analog ground especially for the current sense differential amplifier |
| ENA | Enable pin (active high) |

2.5 Connector Pin assignment

| BU6 connected to X102 | | | | BU7 connected to X103 | | | |
|-----------------------|----|----|-----------------------|-----------------------|----|----|----------------------|
| n.c. | 39 | 40 | n.c. | VEXTB | 2 | 1 | VCC_IN |
| /SOFF | 37 | 38 | ENA | GND | 4 | 3 | GND |
| n.c. | 35 | 36 | n.c. | n.c. | 6 | 5 | n.c. |
| ERR | 33 | 34 | n.c. | n.c. | 8 | 7 | n.c. |
| n.c. | 31 | 32 | n.c. | /INH | 10 | 9 | n.c. |
| CSN | 29 | 30 | CLK_SPI | n.c. | 12 | 11 | n.c. |
| MOSI | 27 | 28 | MISO | CGPWM_P (Prim. Coil) | 14 | 13 | CGPWM_N (Prim. Coil) |
| n.c. | 25 | 26 | n.c. | HALLA | 16 | 15 | n.c. |
| n.c. | 23 | 24 | n.c. | HALLC | 18 | 17 | HALLB |
| n.c. | 21 | 22 | n.c. | ENC_B | 20 | 19 | ENC_A |
| n.c. | 19 | 20 | PFB2 | n.c. | 22 | 21 | ENC_C |
| PFB1_Enable | 17 | 18 | PFB3 | IL1 | 24 | 23 | n.c. |
| n.c. | 15 | 16 | n.c. | IL2 | 26 | 25 | /IH1 |
| PFB1 | 13 | 14 | n.c. | IL3 | 28 | 27 | /IH2 |
| VRO | 11 | 12 | VO1 | n.c. | 30 | 29 | /IH3 |
| CH0NA (COS. Sec.Coil) | 9 | 10 | CH0PA (COS. Sec.Coil) | n.c. | 32 | 31 | n.c. |
| n.c. | 7 | 8 | n.c. | n.c. | 34 | 33 | n.c. |
| CH2NA (SIN. Sec.Coil) | 5 | 6 | CH2PA (SIN. Sec.Coil) | n.c. | 36 | 35 | n.c. |
| GND | 3 | 4 | GND | VO3 | 38 | 37 | n.c. |
| VCC_IN | 1 | 2 | VEXTA | VO2 | 40 | 39 | n.c. |

Figure 17 eMotor Drive kit Top Placement

2.5.1 Resolver connector pin out

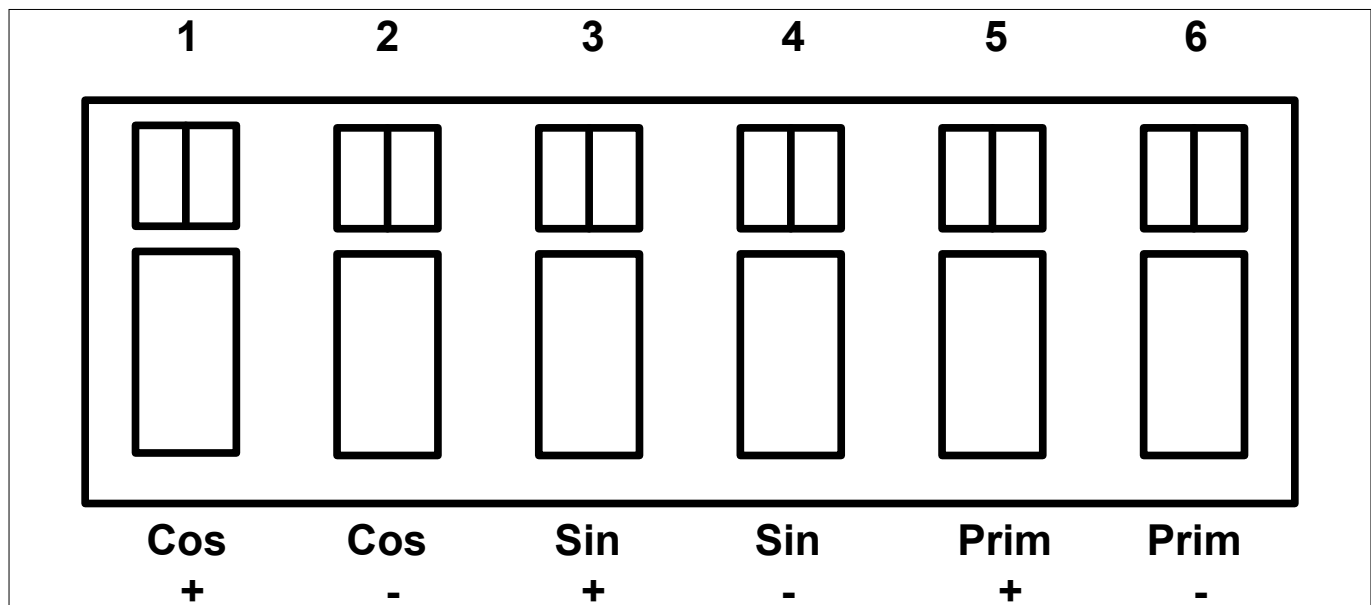


Figure 18 Resolver connector pin out

2.5.2 Encoder connector pin out

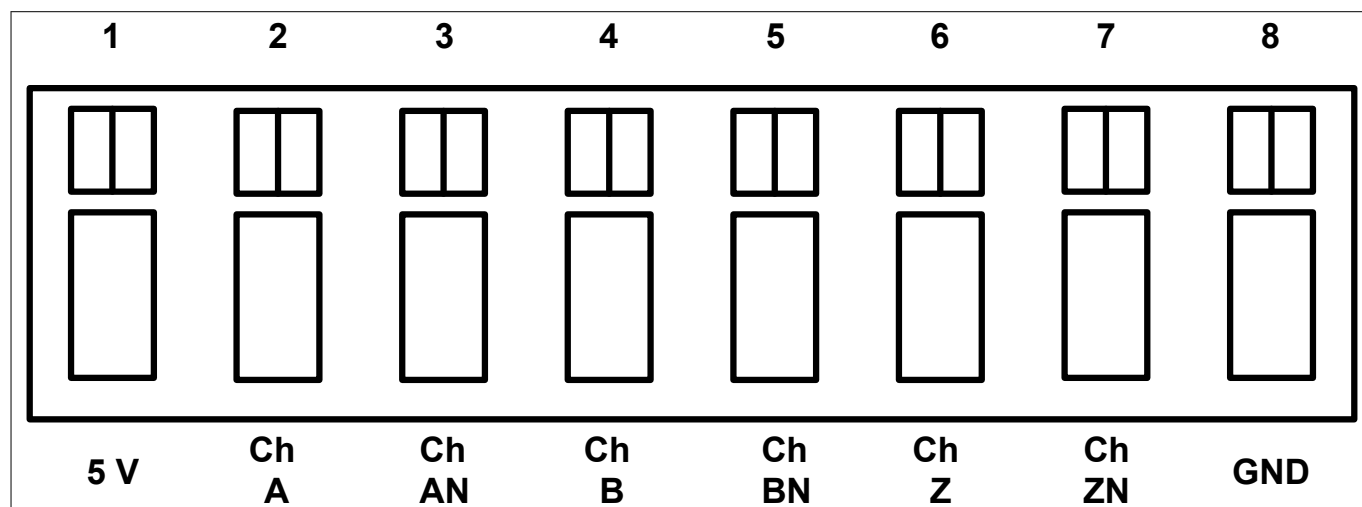


Figure 19 Encoder connector pin out

2.5.3 Hall connector pin out

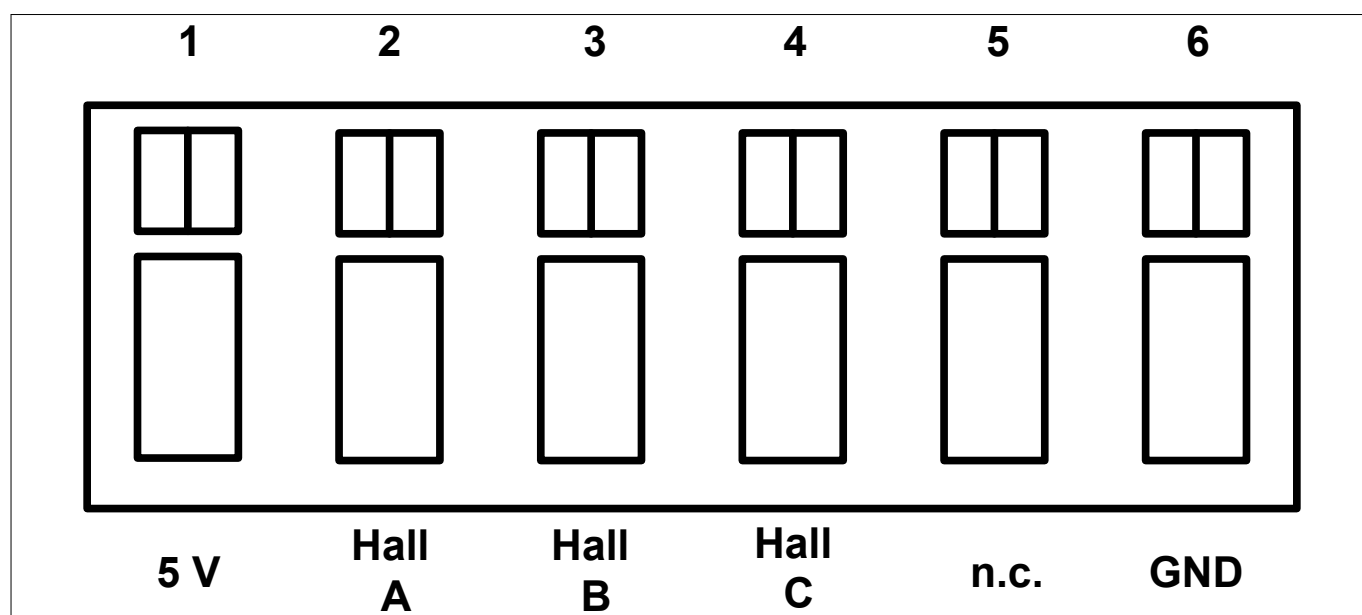


Figure 20 Hall connector pin out

3 Schematics and Layout

3 Schematics and Layout

3.1 Schematic

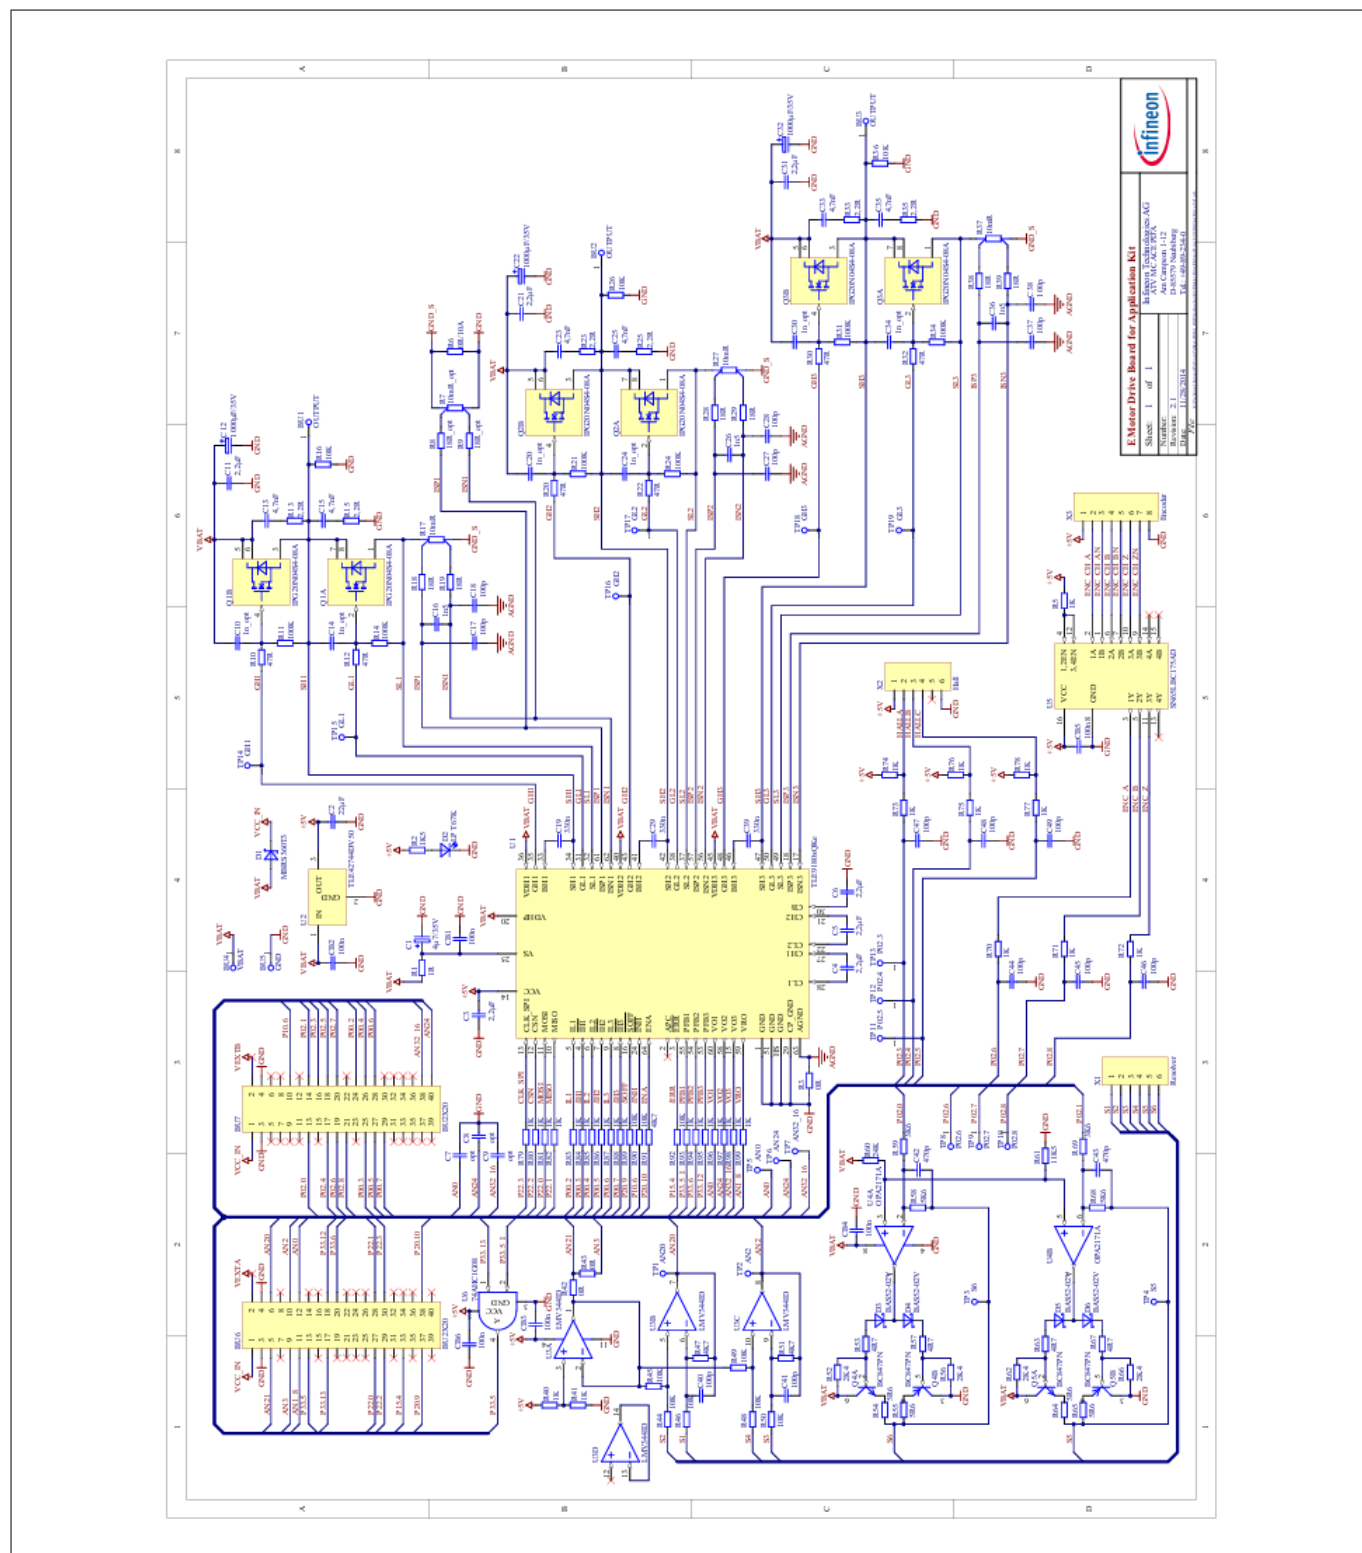


Figure 21 Schematic

3.2 Layout

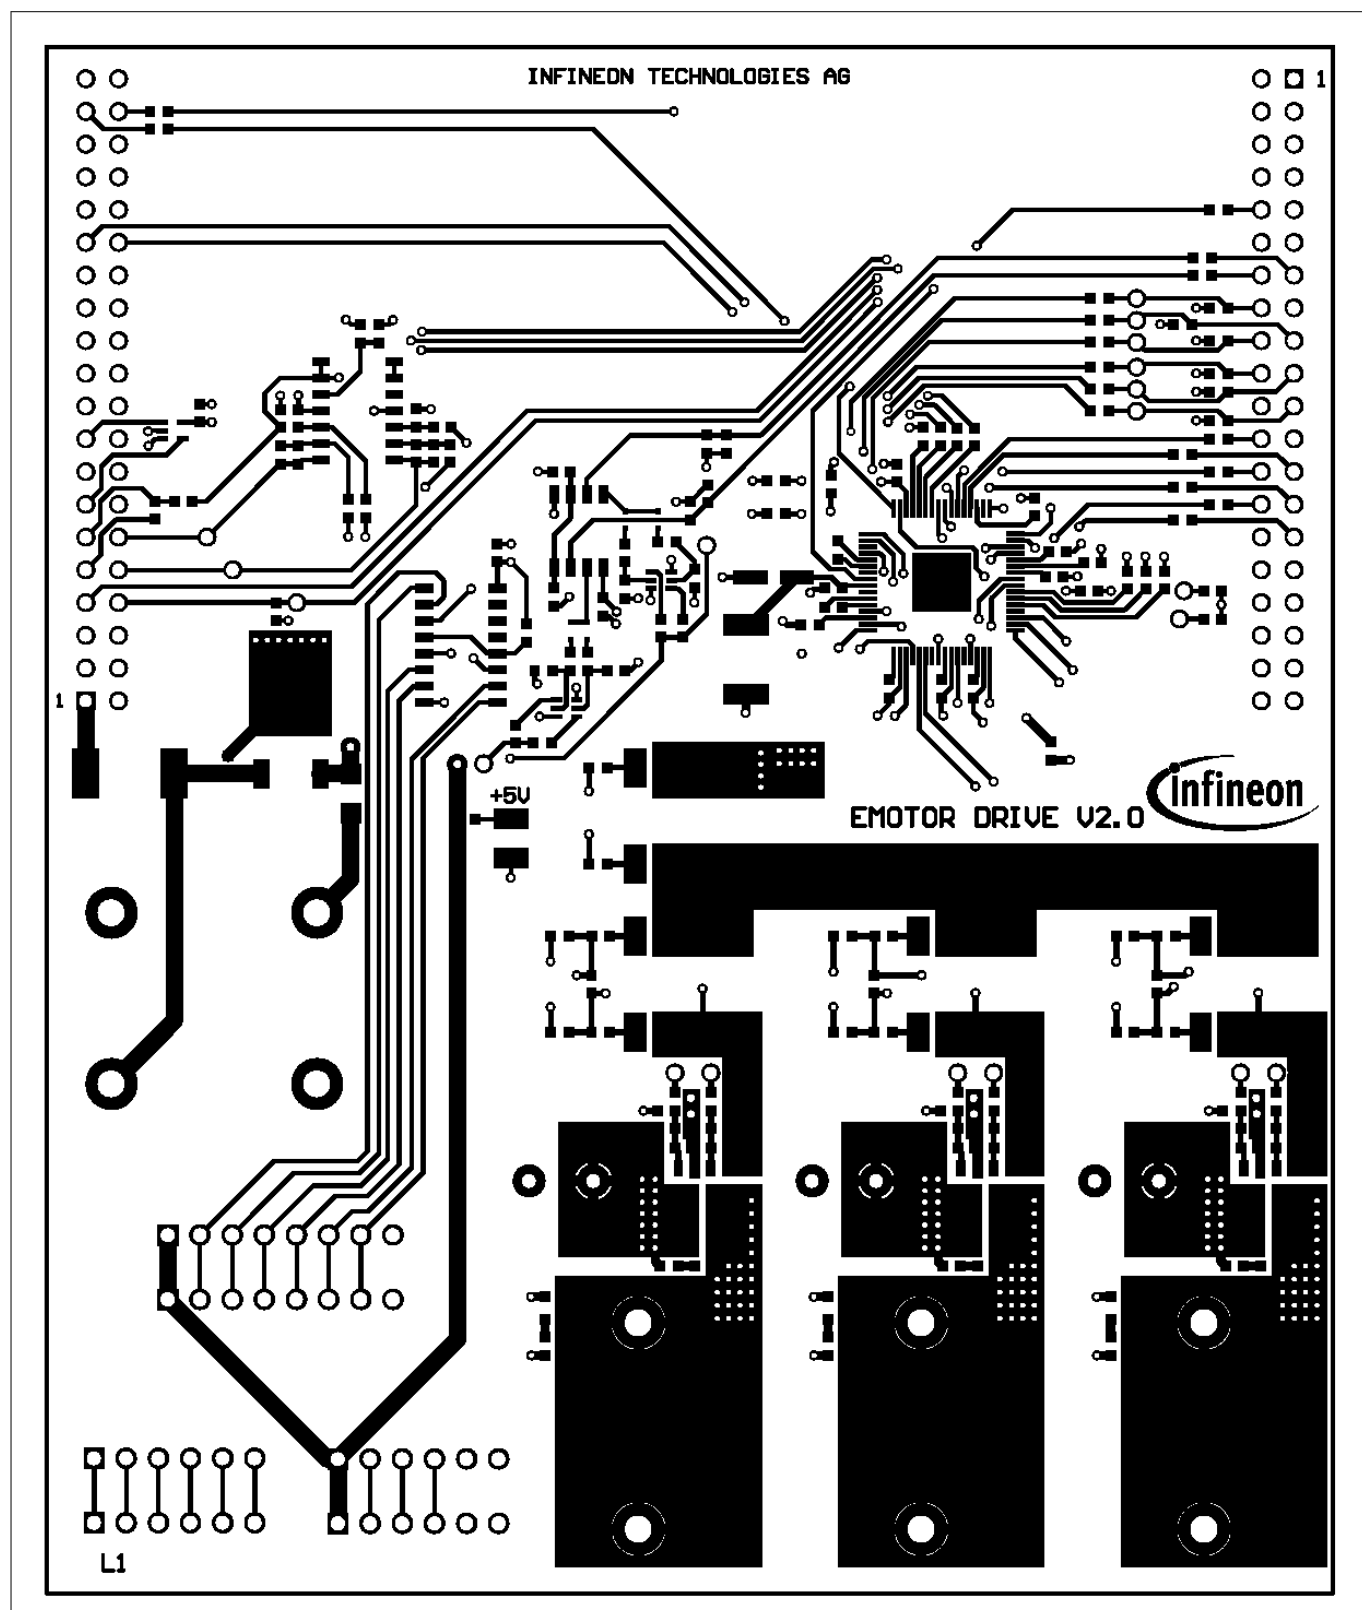


Figure 22 Layout Plot Top Layer

3 Schematics and Layout

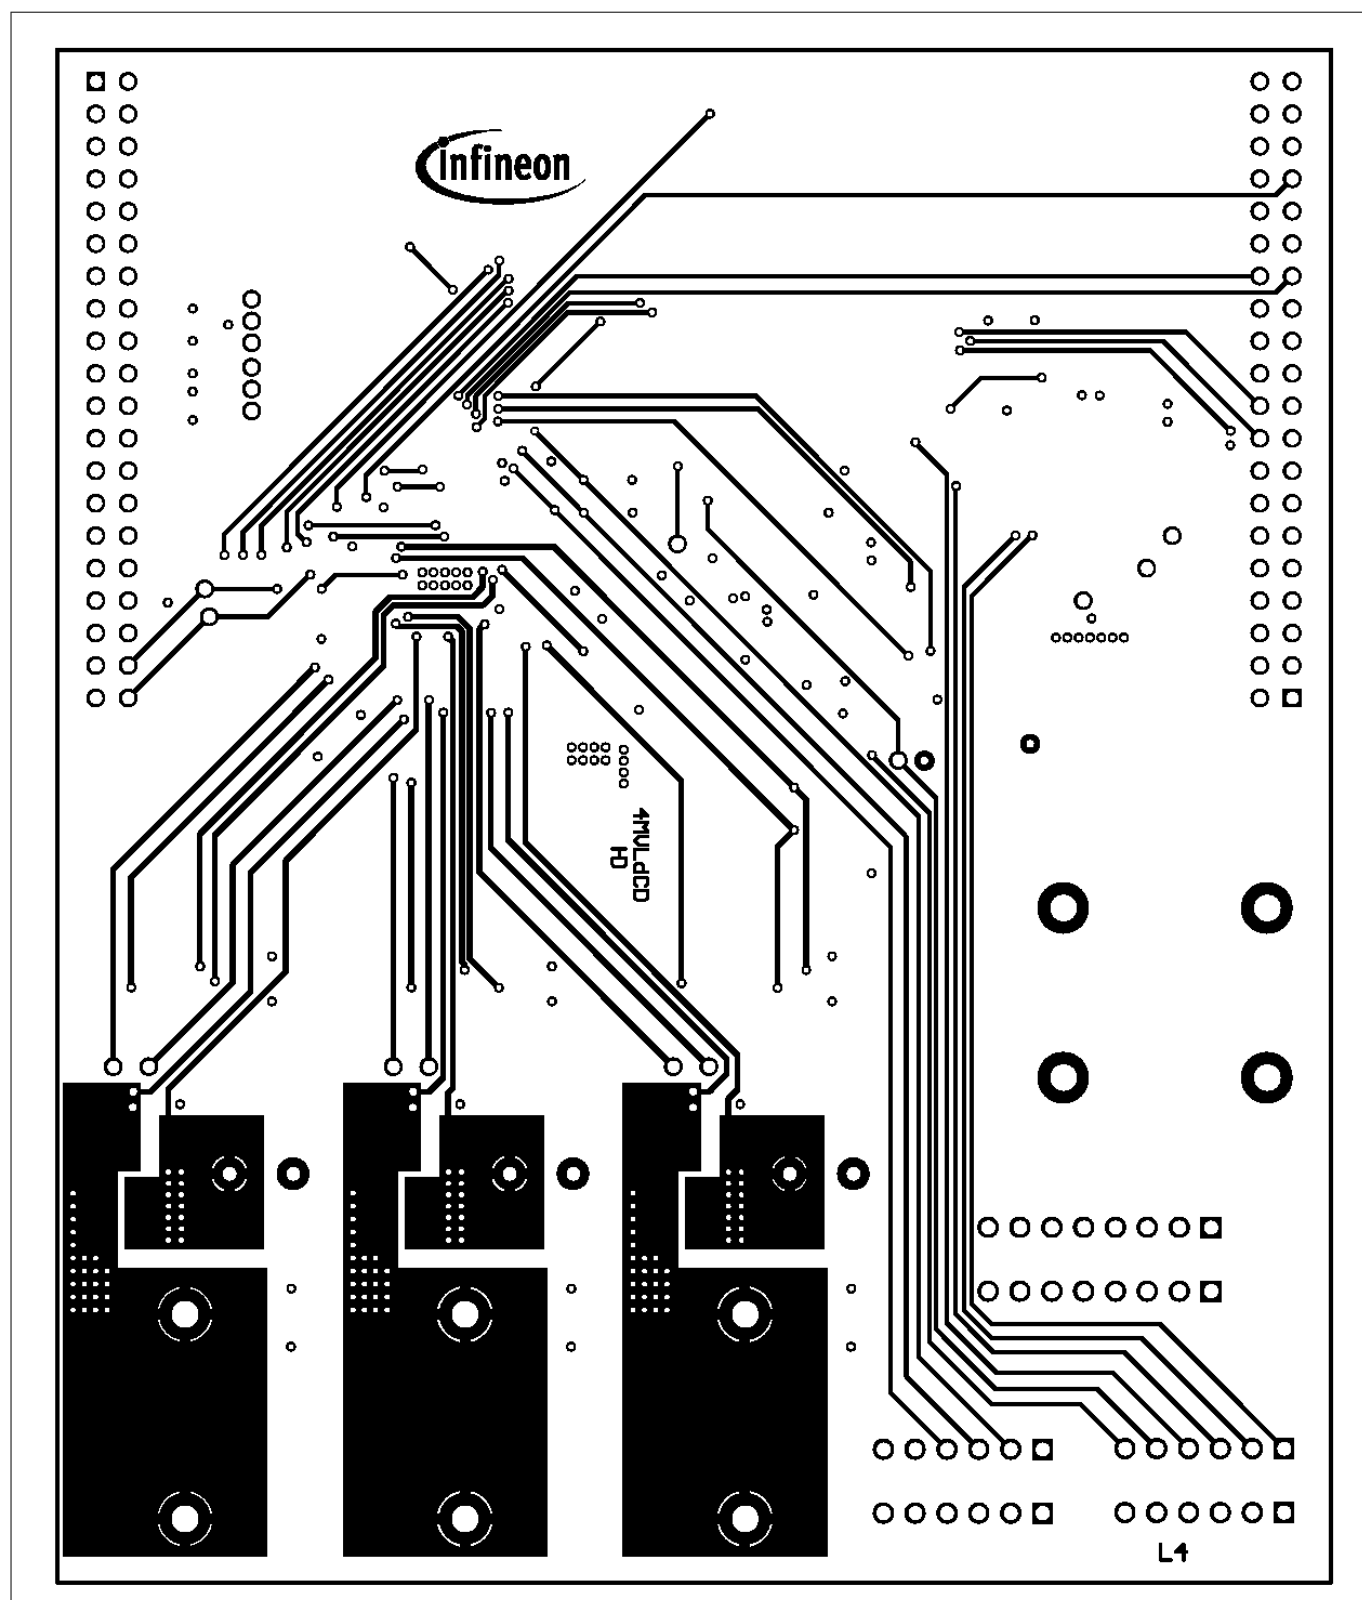


Figure 23 Layout Plot Bottom Layer

References

- [1] AURIX™ User's Manual TC21x/TC22x/TC23x Family, V1.1 2014-12
- [2] AURIX™ User's Manual TC27x C-Step, V2.2 2014-12
- [3] Application Kit Manual TC2X4 V1.0
- [4] Application Kit Manual TC3X7 V2.0
- [5] Application Note AP32298
- [6] Datasheet TLE9180D-31QK Rev. 1.0
- [7] Nanotec Datasheet Brushless DC Motor DB42S02

Revision history

Revision history

| Document revision | Date | Description of changes |
|-------------------|----------------|-------------------------------------|
| V1.0 | September 2018 | First release |
| V1.1 | 2024-04-17 | Template update; no content update. |

Trademarks

All referenced product or service names and trademarks are the property of their respective owners.

Edition 2024-08-14

Published by

Infineon Technologies AG
81726 Munich, Germany

© 2024 Infineon Technologies AG
All Rights Reserved.

Do you have a question about any aspect of this document?

Email: erratum@infineon.com

Document reference
IFX-kwq1710150011638

Important notice

The information contained in this application note is given as a hint for the implementation of the product only and shall in no event be regarded as a description or warranty of a certain functionality, condition or quality of the product. Before implementation of the product, the recipient of this application note must verify any function and other technical information given herein in the real application. Infineon Technologies hereby disclaims any and all warranties and liabilities of any kind (including without limitation warranties of non-infringement of intellectual property rights of any third party) with respect to any and all information given in this application note.

The data contained in this document is exclusively intended for technically trained staff. It is the responsibility of customer's technical departments to evaluate the suitability of the product for the intended application and the completeness of the product information given in this document with respect to such application.

Warnings

Due to technical requirements products may contain dangerous substances. For information on the types in question please contact your nearest Infineon Technologies office.

Except as otherwise explicitly approved by Infineon Technologies in a written document signed by authorized representatives of Infineon Technologies, Infineon Technologies' products may not be used in any applications where a failure of the product or any consequences of the use thereof can reasonably be expected to result in personal injury.