

Volca Drum

Features

Function	
Velocity (MIDI)	NO
Pitch Bend	NO
Voices/Parts	6
Patterns	16
Tempo Division	YES
Pattern Chain	YES
Step Jump	YES
Motion Recording	YES
Auto Tune	n/a

Global Parameters (FUNC+PwrOn)

Key	Function	LED
1	Auto Power Off	On
2	Battery Type (NiMH/Alkaline)	NiMH
3	Sync Out Polarity (Fall/Rise)	Fall
4	Sync In Polarity (Fall/Rise)	Fall
5	Tempo Range	Full
6	MIDI Clock Src (Auto/Int)	Auto
7	MIDI RX Short Message	On
8	Sync Unit	1 Step

(REC: Save, Play: Cancel)

FUNC

Category	Function	Description
Part	1-6	Select without trigger/sound
	Copy	Copy part
Randomize	Choke	Select choked parts
	Layer	Randomize selected layer
	Pattern	Randomize steps,slices,acc.
Model	Tube/String	Change waveguide model
	On/Off	Motion on/off
Motion	Clr. Part	Clear motion rec for part
	Clr. All	Clear all motion recording
Clear	Part	Clear active part
	All	Clear sequence

Note Values (single channel)

Part	Note (MIDI)
Part 1	C5 (60)
Part 2	D5 (62)
Part 3	E5 (64)
Part 4	F5 (65)
Part 5	G5 (67)
Part 6	A5 (69)

MIDI Channel:

(MEMORY+Power On: Set MIDI chan)

MIDI Controller (split channel)

CC	Function	Rec	Ctrl
10	Pan		
14	Select 1		
15	Select 2		
16	Select 1-2		
17-19	Level		
20-22	EG Attack	✓	
23-25	EG Release	✓	
26-28	Pitch	✓	
29-31	Mod Amount	✓	
46-48	Mod Rate	✓	
49	Bit Reduction		
50	Fold		
51	Drive		
52	Dry Gain		
103	Pan		
116	Waveg. Model		
117	Decay	✓	
118	Body	✓	
119	Tune	✓	

For single channel see manual.

