

Volca Kick

Features

Function	
Velocity (MIDI)	NO
Pitch Bend	NO
Paraphonic	NO
Patterns	16
Tempo Division	NO
Pattern Chain	YES
Step Jump	NO
Motion Recording	YES
Auto Tune	YES

Global Parameters (FUNC+PwrOn)

Key	Function	LED
1	Auto Power Off	On
2	Battery Type (NiMH/Alkaline)	NiMH
3	Sync Out Polarity (Fall/Rise)	Fall
4	Sync In Polarity (Fall/Rise)	Fall
5	Tempo Range	Full
6	MIDI Clock Src (Auto/Int)	Auto
7	MIDI RX Short Message	On
8	Sync Unit	1 Step

(REC: Save, Play: Cancel)

FUNC

Category	Function	Description
Roll	1/4	Roll 4 per step
	1/2	Roll 2 per step
	1/1	Roll 1 per step
	4/3	Roll triples per step
	2/1	Roll every 2 steps
	3/1	Roll every 3 steps
	1 Oct Up	Transpose +1 oct
	2 Oct Up	Transpose +2 oct
	Sustain	Activate Sustain
Motion Sequence	On/off	Motion on/off
	Clear	Clear all motion recording
Clear	Act. Step	Reset active steps / undo
	Accent	Clear all accent information
	Slide	Clear all slide information
	Bend Reverse	Reverse Bend knob
	All	Clear all
Pitch	Octave	Transpose in octaves
Swing	Swing	Negative swing

MIDI Channel:

(MEMORY+Power On: Set MIDI chan)

MIDI Controller

CC	Function	M.Rec	Ctrl
40	Pulse Color	✓	
41	Pulse Level	✓	
42	Amp Attack	✓	
43	Amp Decay	✓	
44	Drive	✓	
45	Tone	✓	
46	Resonator Pitch	✓	
47	Resonator Bend	✓	
48	Resonator Time	✓	
49	Accent	✓	

