



How to install FTDI driver


1.

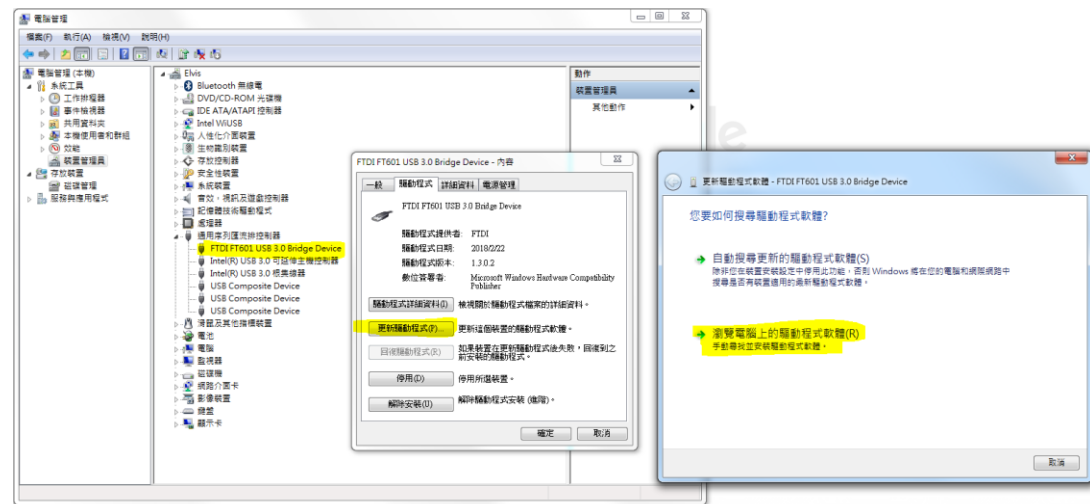

2.

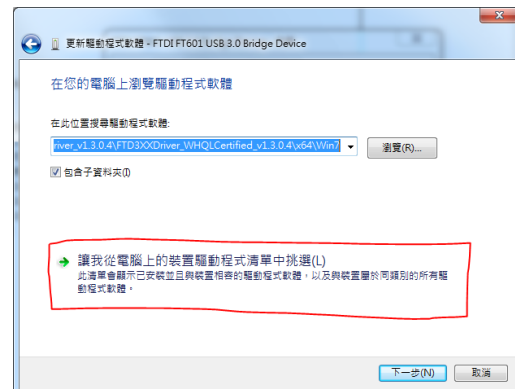

3.

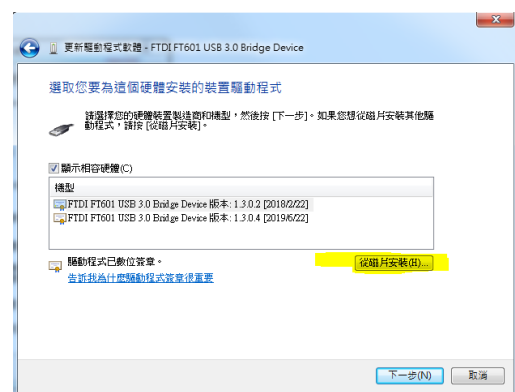

4. Select .inf file and then finish

