



# Evaluation Kit

Instructions

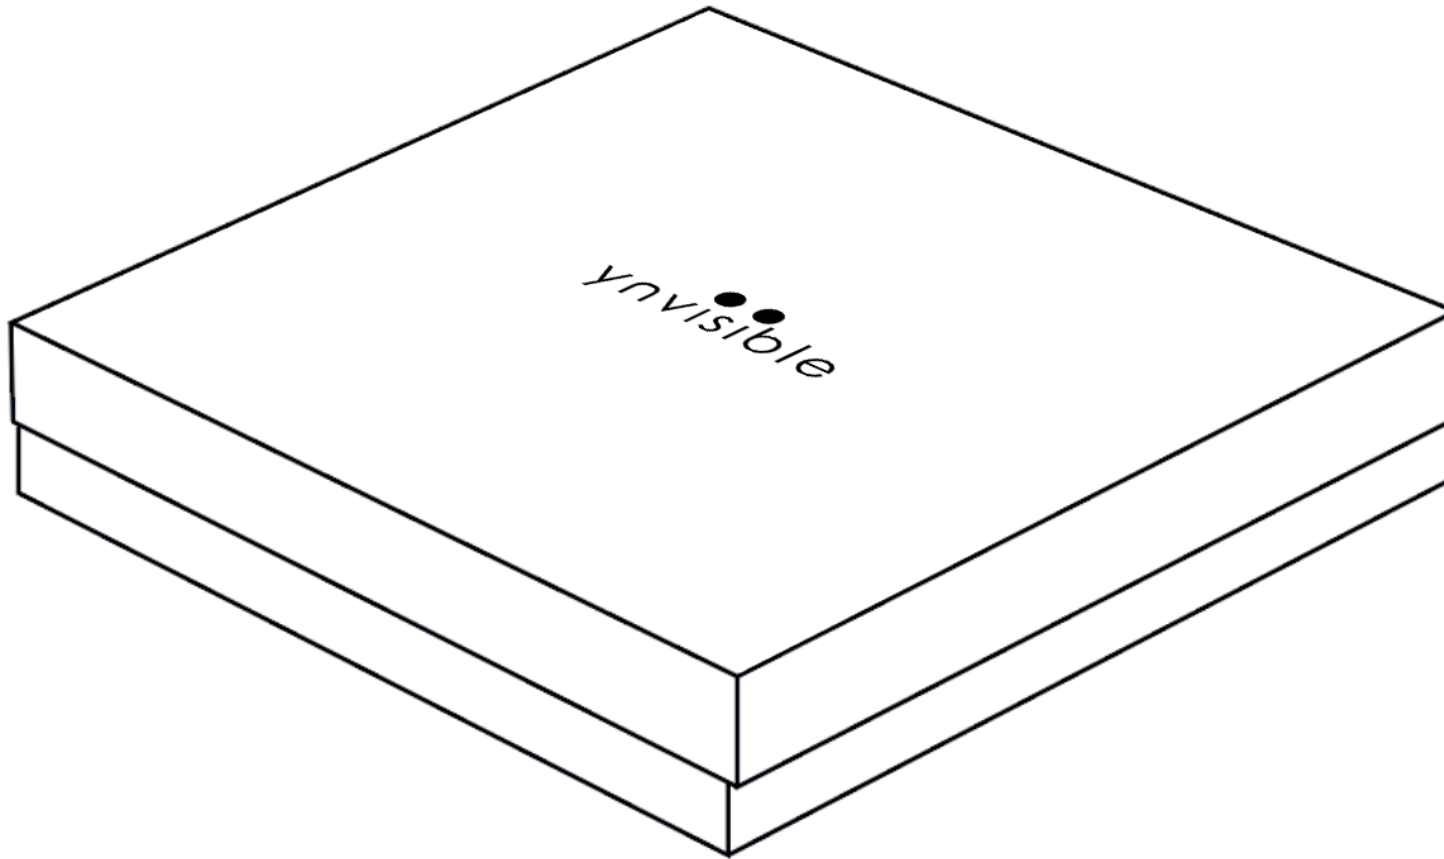


# Content

Driver

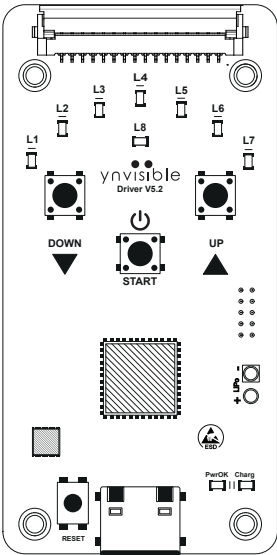


Content	Quantity
Driver	1
DISP433V1PV1	1
DISP444V1PV2	1
DISP434V1PV1	3
DISP431V2PV1	2
DISP438V2PV1	1
DISP442V2PV1	1
DISP443V2PV1	1
DISP437V2PV1	1
DISP440V2PV1	1

E-Paper Displays

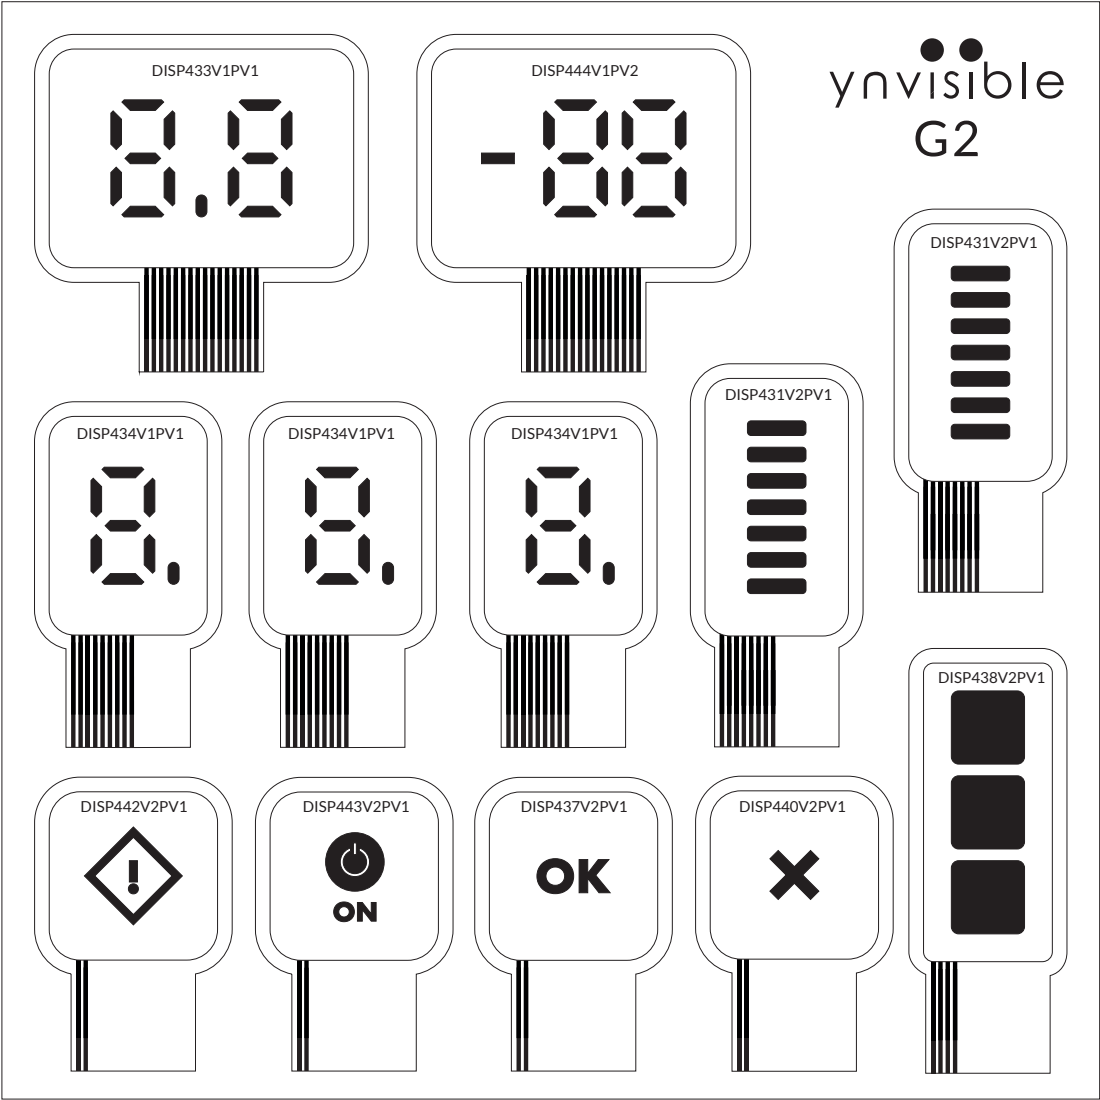

# Driver


- 1 Multicolor LED: L8
- 2 Selection LEDs: L1 to L7
- 3 Selection Down Button: DOWN
- 4 Selection Up Button: UP
- 5 Start Button: START / Power On
- 6 Reset Button: RESET / Manual power Off
- 7 Battery Charging (when Lipo present) : Charg
- 8 Power OK LED: PwrOK
- 9 Signage Connector
- 10 QWIIIC connector ( for developers)
- 11 Lipo battery connector

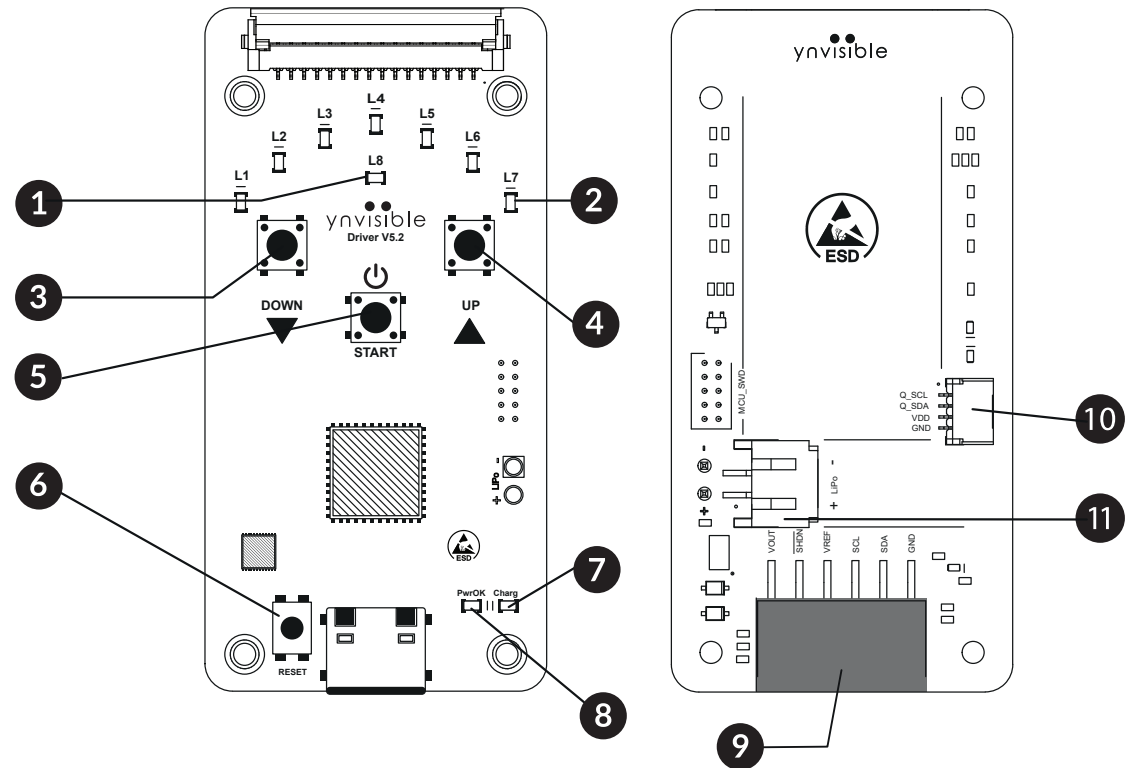

# Power supply

## Step 1 ( Driver connection)

- Connect the Driver v5 to the power supply using the USB-C connector.

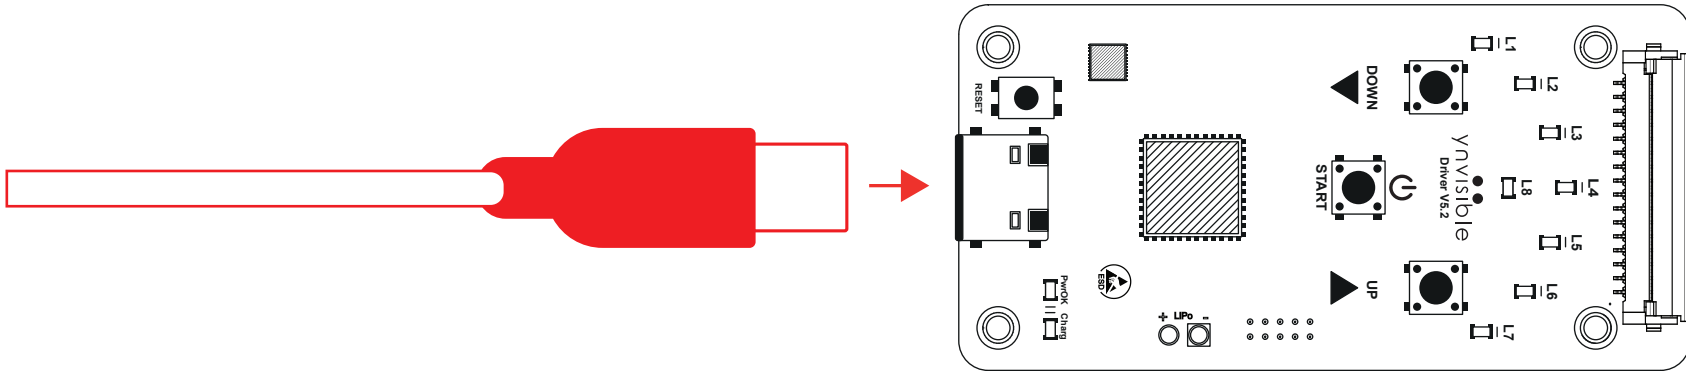

# Power ON

## Step 2 ( turning the driver on)

- Press and hold the START button (figure 1). The PwrOK LED and the L8-Red LED will light up (figure 2). Keep it pressed (for about 4 seconds) until the Selection LEDs light up with the boot-up animation: LED L8-Blue and the Selection LEDs will light up in increasing order and turn OFF in decreasing order, leaving only L1, L8-Blue and PwrOK ON (figure 3).

## Note

To power OFF the driver remove the usb cable  
Alternatively, press the RESET button (all LEDs will turn OFF)

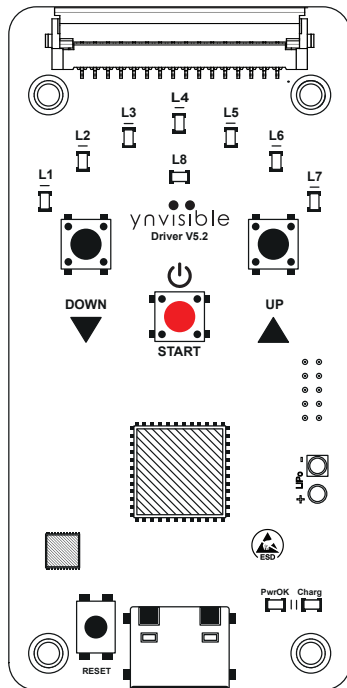


Figure 1

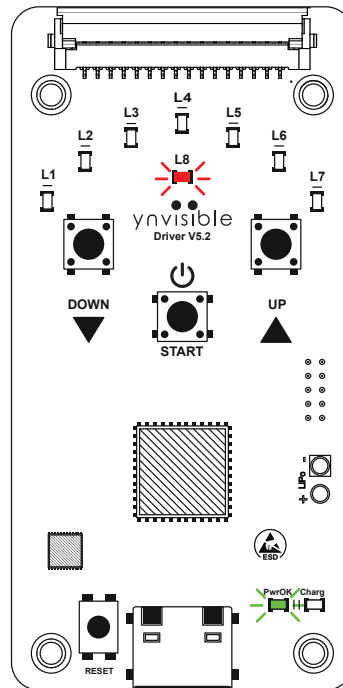


Figure 2

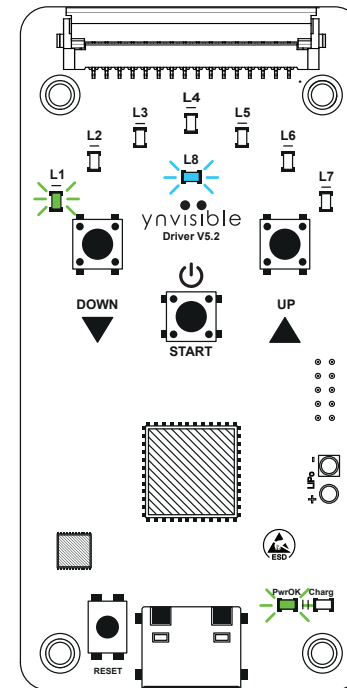


Figure 3

# Display connection

The driver is a simple and intuitive tool to operate the display.

- Open the FPC connector (gently push it upwards) (figure 4 and 5)
- Connect the display (figure 6)
- Close gently the FPC connector (figure 7)

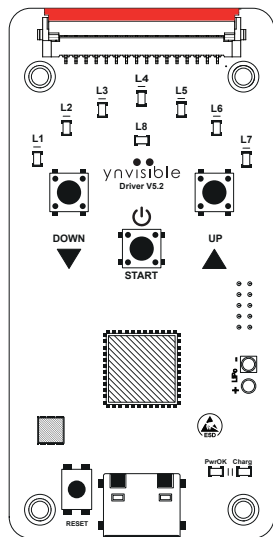


Figure 4

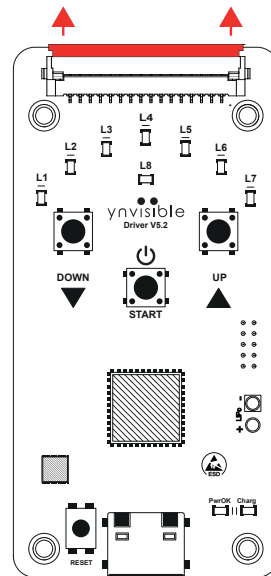


Figure 5

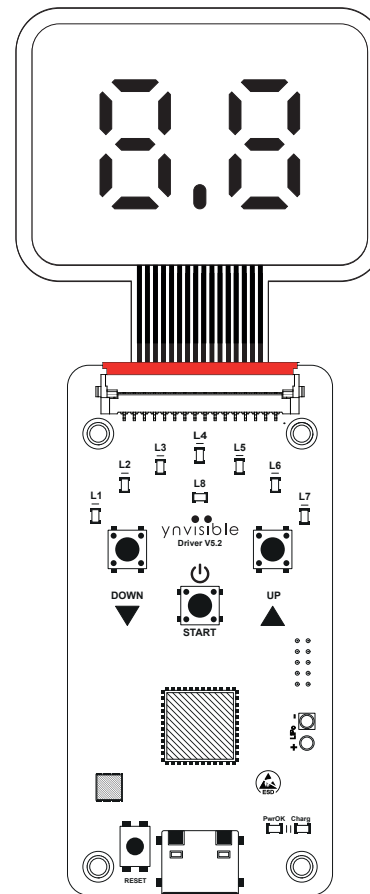


Figure 6

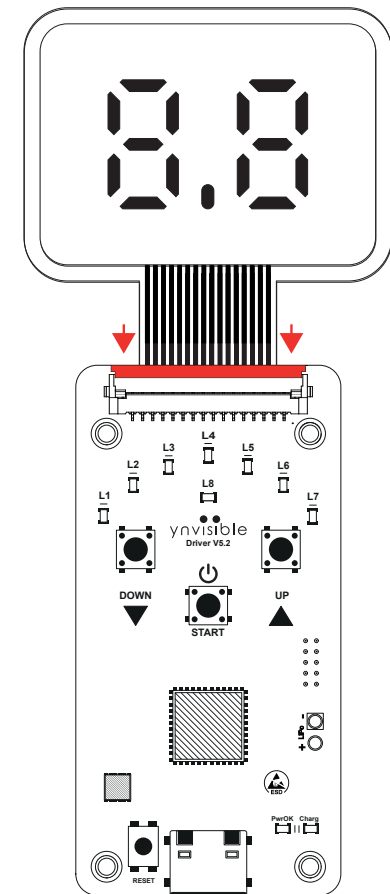


Figure 7

# Animations

To select an animation, follow these steps:

- Use the UP and DOWN buttons to select the desired animation.
- When the UP button is pressed, the Selection LEDs light up in ascending order.
- When the DOWN button is pressed, the Selection LEDs light up in descending order.
- After animation 7 (LED L7 ON), LEDs L1 and L2 light up, followed by L1 and L3, etc.
- After reaching the L1, L2 and L5 set (16th animation), it returns to animation 1 (only L1 ON), as indicated in Animation Table (page 9).
- Press the START button to begin the animation.
  - LED L8 - Green turns ON
- Press the START button to pause/resume the animation.
  - LED L8 - Green blinks while paused)
- Press and hold for 2 seconds to cancel the animation.
  - LED L8 - Blues turns ON
- Repeat the procedure to either restart or select a new animation.

## Note:

The UP and DOWN buttons are disabled while an animation is running, and become available again after canceling the animation (press START for ~2 seconds).

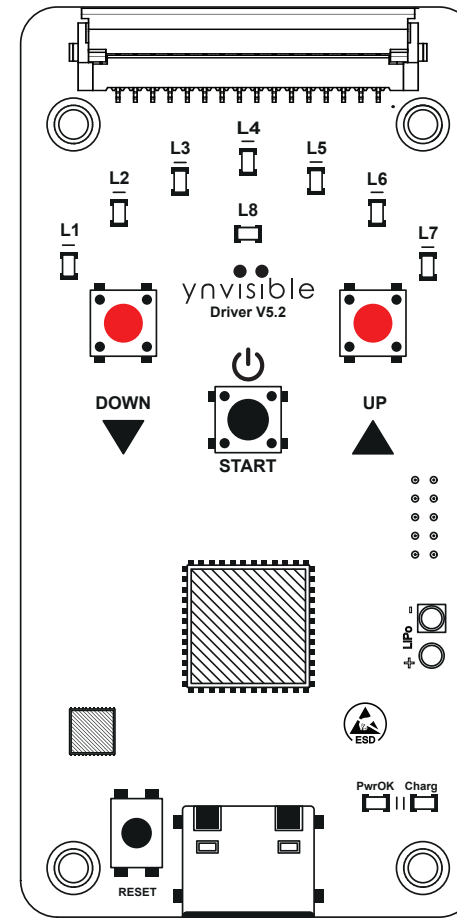


Figure 7

# Available animations

Animation	Active LEDs	Display Part Number	Display Description	Animation Description
1	L1	All Displays	all	Toggle Color/Bleach
2	L2	DISP444V1PV2	15 seg display (Negative)	Positive - Count Up
3	L3	DISP444V1PV2	15 seg display (Negative)	Positive - Count Down
4	L4	DISP444V1PV2	15 seg display (Negative)	Negative - Count Up
5	L5	DISP444V1PV2	15 seg display (Negative)	Negative - Count Down
6	L6	DISP433V1PV1	15 seg display (Dot)	Dot ON - Count Up
7	L7	DISP433V1PV1	15 seg display (Dot)	Dot ON - Count Down
8	L1+L2	DISP442V2PV1 / DISP443V2PV1 DISP437V2PV1 / DISP440V2PV1	1 seg display	ON (for some seconds) and then turn OFF
9	L1+L3	DISP434V1PV1	7 seg display	Count Up, Dot ON (blink on cycle transition)
10	L1+L4	DISP434V1PV1	7 seg display	Count Down, Dot ON (blink on cycle transition)
11	L1+L5	DISP431V2PV1	bar graph seg display	Count Up
12	L1+L6	DISP431V2PV1	bar graph seg display	Count Down
13	L1+L7	DISP438V2PV1	3 seg display	Count Up
14	L1 + L2 + L3	DISP438V2PV1	3 seg display	Count Down
15	L1 + L2 + L4	DISP438V2PV1	3 seg display	Middle ON, Top ON, Bottom ON