
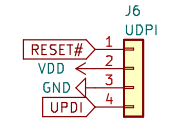


The AVR MCU may be driven directly from J2 if you do not want the RS485 comms. In that case, most of the components above this text box may be omitted.

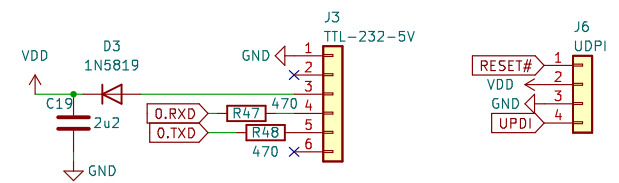

- H1 MountingHole
- H2 MountingHole
- H3 MountingHole
- H4 MountingHole