

FRIDAY, DECEMBER 22, 2017



Configuring Synchronized Capture with Multiple Cameras

What is Synchronized Capture?

Synchronized capture is when two or more cameras are capturing images at the same time; our definition of "the same time" is that the cameras must take start exposing each set of images within microseconds of each other. To achieve this, we show how to use one "primary" camera to trigger one or more "secondary" cameras, using the primary camera's strobe (by default, strobes occur when a camera begins to capture images.). This also ensures that the frame rates of the secondary cameras follow that of the primary camera.

Note: An alternative method of synchronized capture is to have all cameras triggered by an external hardware trigger (for example, a function generator). Any hardware trigger that provides a 3.3 or 5 V square wave TTL signal can trigger the cameras. This application note does not explicitly cover the configuration of an external hardware trigger, but users who want to use an external hardware trigger can act as if the external hardware trigger is the primary camera, and follow the physical layout section mentioned in the article (if a pull-up resistor is implemented, this can be ignored, as external hardware triggers don't need it).

Configuring Synchronized Capture

Note: The pullup resistor values in the examples below are for demonstration purposes only. You may need to use lower resistor values to strengthen the signal.

There are two steps to configuring synchronized capture:

Feedback


1. Create a physical connection between the cameras by linking their GPIO pins.
2. Configure inputs and outputs for each camera either with the SDK demo application or with code.

Step 1—Connect the Cameras

The first step is to create a physical link between the cameras. The methods vary depending on the camera used.

Blackfly S (BFS)

BFS cameras have a 6-pin GPIO. The BFS GPIO has both a non-isolated output and an opto-isolated output. If using the opto-isolated output as in our example below, the primary camera requires a pull-up resistor to strengthen its strobe signal.

DIAGRAM	COLOR	PIN	LINE	FUNCTION	DESCRIPTION
	Green	1	3	V _{AUX} GPI	Auxiliary Input Voltage (DC) Non-isolated Input
	Black	2	0	OPTOIN	Opto-isolated Input
	Red	3	2	VOUT GPIO	Camera Power Output Non-isolated Input/Ouput
	White	4	1	OPTOOUT	Opto-isolated Output
	Blue	5	N/A	Opto GND	Opto-isolated Ground
	Brown	6	N/A	GND	Camera Power Ground


To configure primary and secondary BFS cameras:

1. Connect the primary camera's pin 4 (white wire, opto-isolated output) to each secondary camera's pin 1 (green wire, non-isolated input).
2. Connect the primary camera's pin 5 (blue wire, opto-isolated ground) to each secondary camera's pin 6

(brown wire, ground).


To configure the pull-up resistor needed to strengthen the signal:

1. Connect one end of a 10 k Ω resistor to the primary camera's pin 3 (red wire, 3.3 V output).
2. Connect the other end of the resistor to the primary camera's pin 4 (white wire) and to each secondary camera's pin 1 (green wire).
3. Connect the primary camera's pin 6 (brown wire) to each secondary camera's pin 6 (brown wire). Note: the secondary camera's pin 6 is already connected to the primary camera's pin 5.

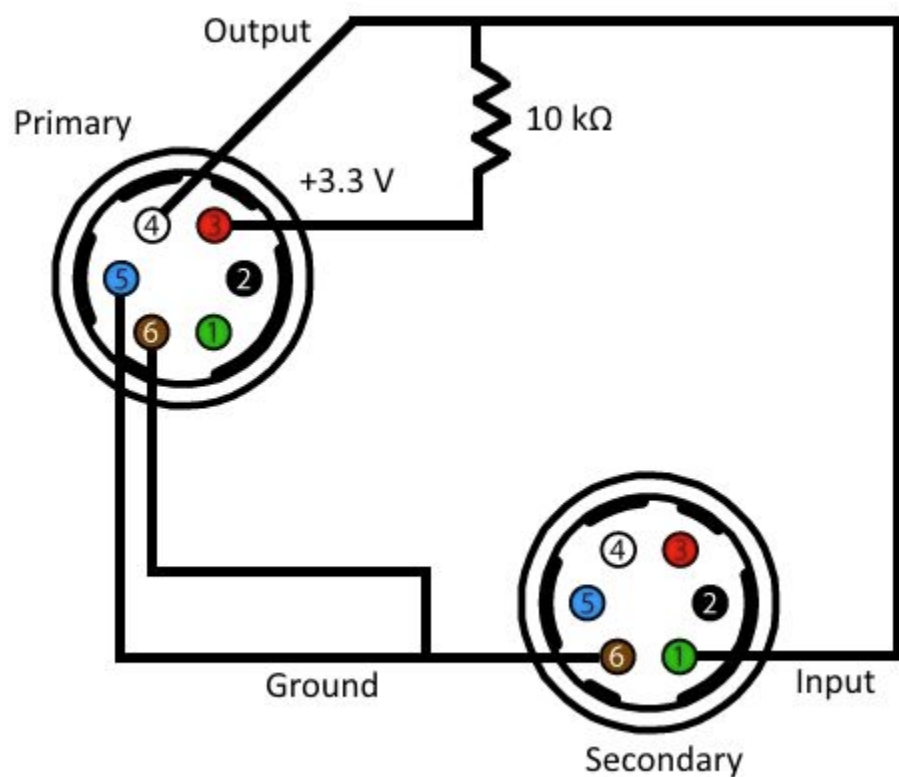

Blackfly [BFLY]

BFLY cameras use a 6-pin GPIO connector. The BFLY GPIO has only opto-isolated output pins, so the primary camera requires a pull-up resistor to strengthen its strobe signal. We recommend using an external pullup voltage of 5 V or higher instead of the camera's 3.3 V output due to component tolerances.

DIAGRAM	COLOR	PIN	FUNCTION	DESCRIPTION
	Green	1	V_{EXT}	+12 V DC Camera Power
	Black	2	I0	Opto-isolated input (GPIO 0)
	Red	3	NC / +3.3 V	+3.3 V output. Current 120 mA (nominal). Firmware enabled (OUTPUT_VOLTAGE_ENABLE: 19D0h)
	White	4	O1	Opto-isolated output (GPIO 1)
	Blue	5	OPTO_GND	Ground for opto-isolated I/O, not connected to camera ground
	Brown	6	GND	DC camera power ground


To configure primary and secondary BFLY cameras:

1. Connect the primary camera's pin 4 (white wire, opto-isolated output) to each secondary camera's pin 2 (black wire, opto-isolated input).
2. Connect the primary camera's pin 5 (blue wire, opto-ground) to each secondary camera's pin 5 (blue wire, opto-ground).

To configure the pull-up resistor needed to strengthen the signal:


1. Connect one end of a 2 K Ω resistor to an external voltage of 5 V or greater.
2. Connect the other end of the resistor to the primary camera's pin 4 (white wire) and to each secondary camera's pin 2 (black wire).

3. Connect the primary camera's pin 6 (brown wire) to each camera's pin 5 (blue wire). Note: the secondary camera's pin 5 is already connected to the primary camera's pin 5.
4. Connect the external power supply's ground to the already connected ground pins (blue wire).

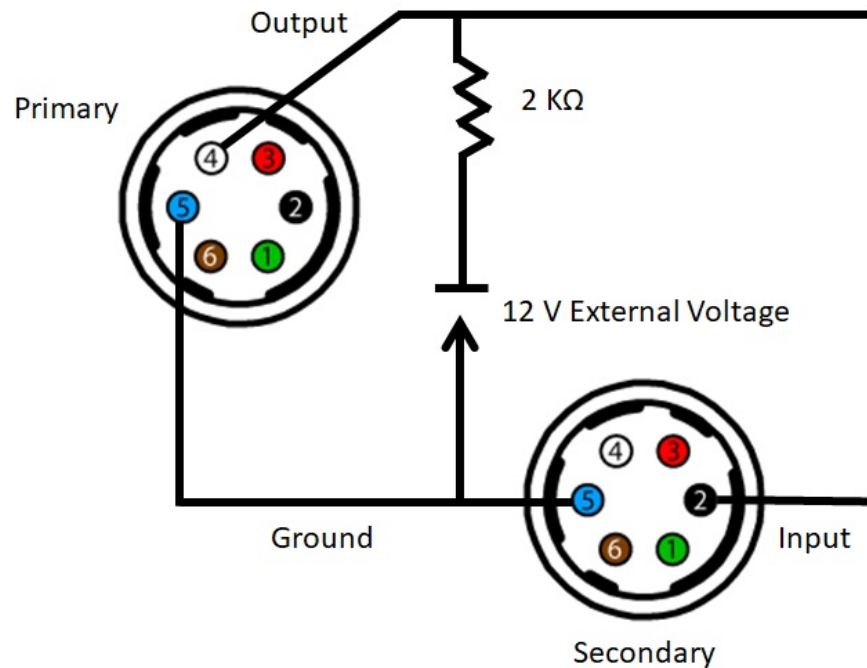


Chameleon 3 (CM3)

CM3 uses a 9-pin GPIO. It has two non-opto input/output pins that can be used as either input or output. Non-opto pins do not need a pull-up resistor combination to strength the strobe signal. This example uses the non-opto pins.

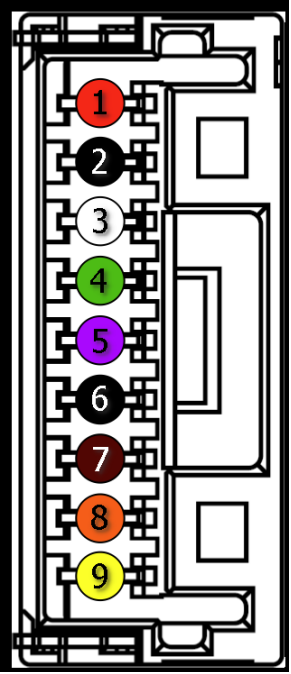DIAGRAM	COLOR	PIN	FUNCTION	DESCRIPTION
	Red	1	V_{EXT}	Allows the camera to be powered externally 5 - 24 VDC
	Black	2	GND	Ground for Input/Output, V_{EXT} , +3.3 V pins
	White	3	+3.3 V	Power external circuitry fused at 150 mA maximum
	Green	4	GPIO3 / Line3	Input/Output
	Purple	5	GPIO2 / Line2	Input/Output
	Black	6	GND	Ground for Input/Output, V_{EXT} , +3.3 V pins
	Brown	7	OPTO_GND	Ground for opto-isolated IO pins
	Orange	8	OPTO_OUT / Line1	Opto-isolated output
	Yellow	9	OPTO_IN / Line0	Opto-isolated input


To configure primary and secondary CM3 cameras:

1. Connect the primary camera's pin 5 (purple wire, output) to each secondary camera's pin 4 (green wire, input).
2. Connect the primary camera's pin 6 (black wire, ground) to each secondary camera's pin 6 (black wire, ground).

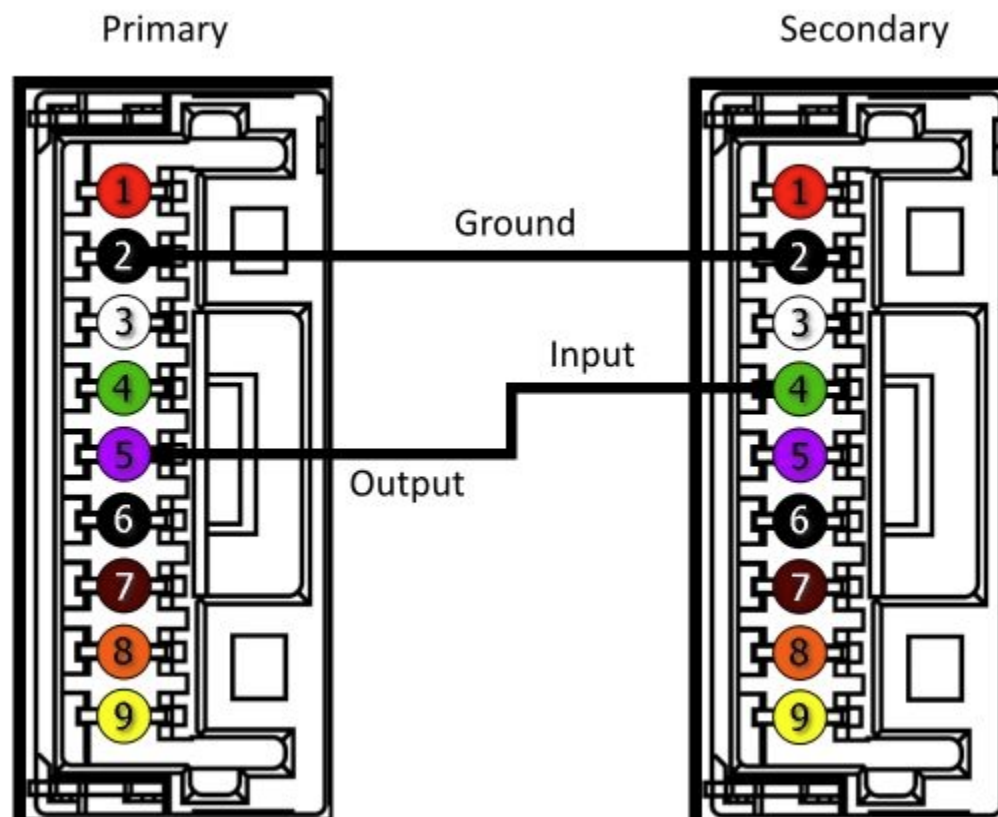


Flea3 [FL3] and Grasshopper3 [GS3]

FL3 and GS3 each use an 8-pin GPIO. They have two non-opto input/output pins that can be used as either input or output. Non-opto pins do not need a pull-up resistor combination to strength the strobe signal. This example uses the non-opto pins.

DIAGRAM	COLOR	PIN	FUNCTION	DESCRIPTION
	Black	1	IO	Opto-isolated input (default Trigger in)
	White	2	O1	Opto-isolated output
	Red	3	IO2	Input/Output/serial transmit (TX)
	Green	4	IO3	Input/Output/serial receive (RX)
	Brown	5	GND	Ground for bi-directional IO, V_{EXT} , +3.3 V pins
	Blue	6	OPTO_GND	Ground for opto-isolated IO pins
	Orange	7	V_{EXT}	Allows the camera to be powered externally
	Yellow	8	+3.3 V	Power external circuitry up to 150 mA


To configure primary and secondary FL3 or GS3 cameras:

1. Connect the primary camera's pin 3 (red wire, output) to each secondary camera's pin 4 (green wire, input).
2. Connect the primary camera's pin 5 (brown wire, ground) to each secondary camera's pin 5 (brown wire, ground).

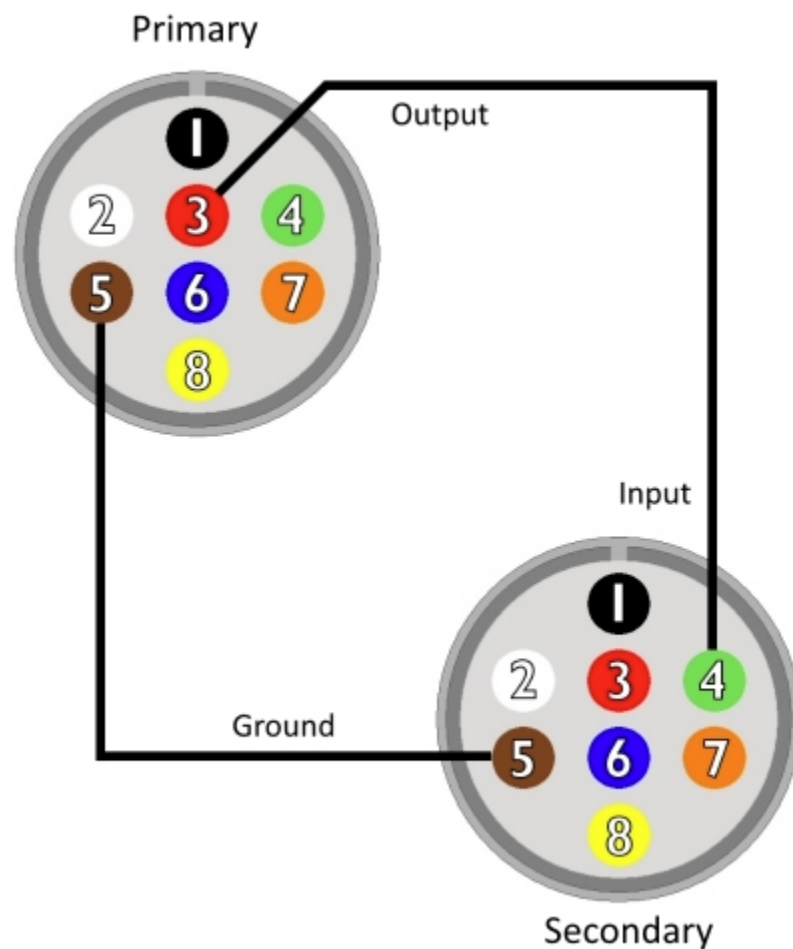

Oryx (ORX)

ORX cameras have a 12-pin GPIO. It has two non-opto input/output pins that can be used as either input or output. Non-opto pins do not need a pull-up resistor combination to strength the strobe signal. This example uses the non-opto pins.

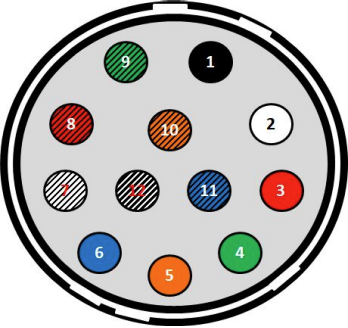	COLOR	PIN	LINE	FUNCTION	DESCRIPTION
	Black	1	N/A	GND	DC camera power ground
	White	2	N/A	POWER	DC camera power
	Red	3	Line 1	GPIO_OPT_OUT1	Opto-isolated output (GPO1)
	Green	4	Line 4	GPIO_OPT_OUT2	Opto-isolated output (GPO2)
	Orange	5	Line 0	GPIO_OPT_IN1	Opto-isolated input (GPI1)
	Blue	6	Line 3	GPIO_OPT_IN2	Opto-isolated input (GPI2)
	White/black stripes	7	Line 2	GPIO_TTL_IO3	TTL input/output 3*
	Red/black stripes	8	Line 5	GPIO_TTL_IO4	TTL input/output 4*
	Green/black stripes	9	N/A	GND	DC camera power ground
	Orange/black stripes	10	N/A	POWER	DC camera power
	Blue/black stripes	11	Line 6	3.3 V OUTPUT	+3.3 V output, current 120 mA (nominal) - firmware enabled


*When configured as output line format is open drain, not TTL. Users should attach their own external pull-up resistor.

	COLOR	PIN	LINE	FUNCTION	DESCRIPTION
	Black/white stripes	12	N/A	OPTO_GND	Ground for opto-isolated I/O, not connected to camera ground

*When configured as output line format is open drain, not TTL. Users should attach their own external pull-up resistor.


To configure primary and secondary ORX cameras:

1. Connect the primary camera's pin 7 (white with black stripes wire, output) to each secondary camera's pin 8 (red with black stripes wire, input).
2. Connect the primary camera's pin 9 (green with black stripes wire, ground) to each secondary camera's pin 9 (green with black stripes wire, ground).

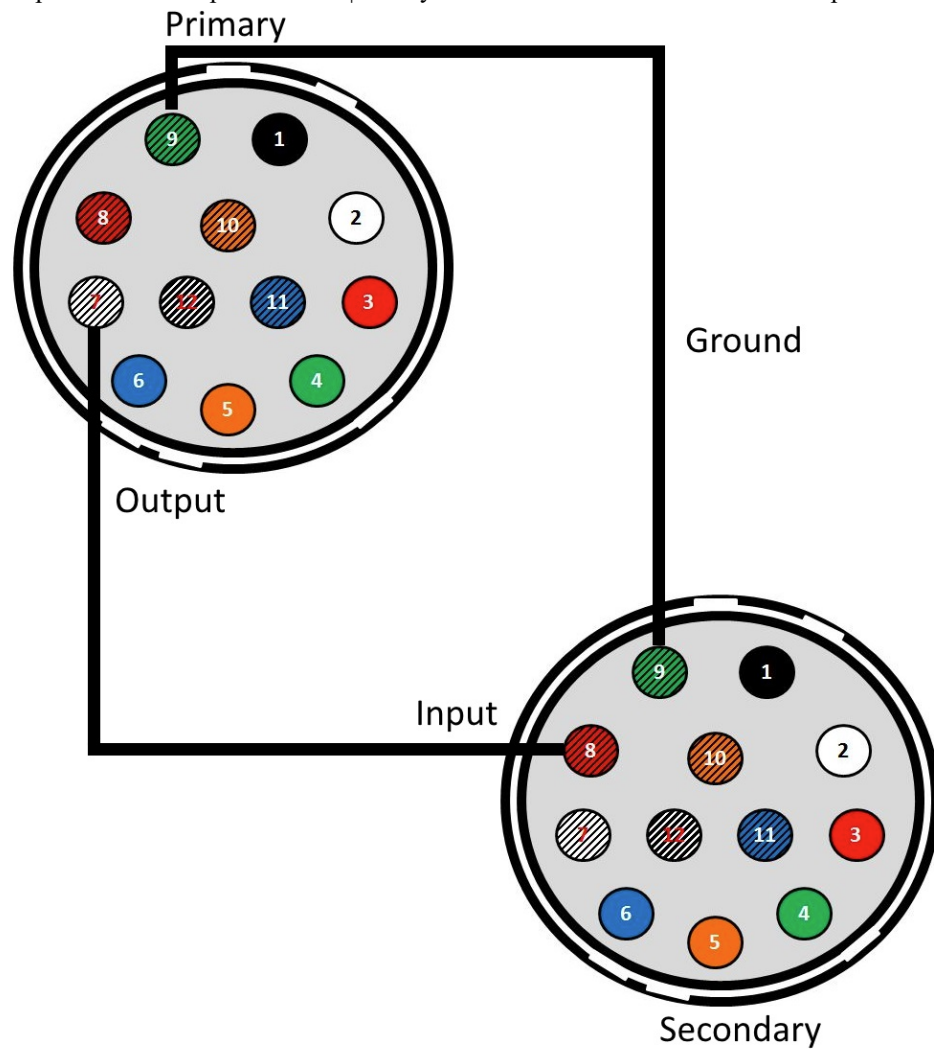


Firefly-DL [FFY-DL]

The Firefly DL uses a 6-pin GPIO. It only has non-opto isolated pins that can be used as either input or output. Non-opto pins do not need a pull-up resistor to strengthen the strobe signal.

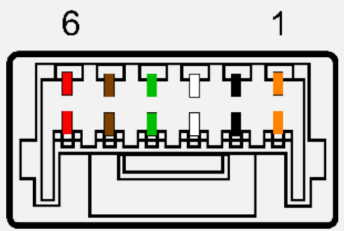DIAGRAM	COLOR	PIN	LINE	FUNCTION	DESCRIPTION
	Orange	1	Line 0	GPIO0	Non-isolated Input/Output TXD(output) for 1.8V UART
	Black	2	Line 1	GPIO1	Non-isolated Input/Output RXD(input) for 1.8V UART
	White	3	Line 2	GPIO2	Non-isolated Input/Output
	Green	4	Line 3	GPIO3	Non-isolated Input/Output
	Brown	5	N/A	GND	Camera Power Ground
	Red	6	N/A	Vout	Camera Power Output

To configure primary and secondary FFY-DL cameras:

1. Connect the primary camera's pin 3 (white wire, output) to each secondary camera's pin 4 (green wire, input)
2. Connect the primary camera's pin 5 (brown wire, ground) to each secondary camera's pin 5 (brown wire, ground)

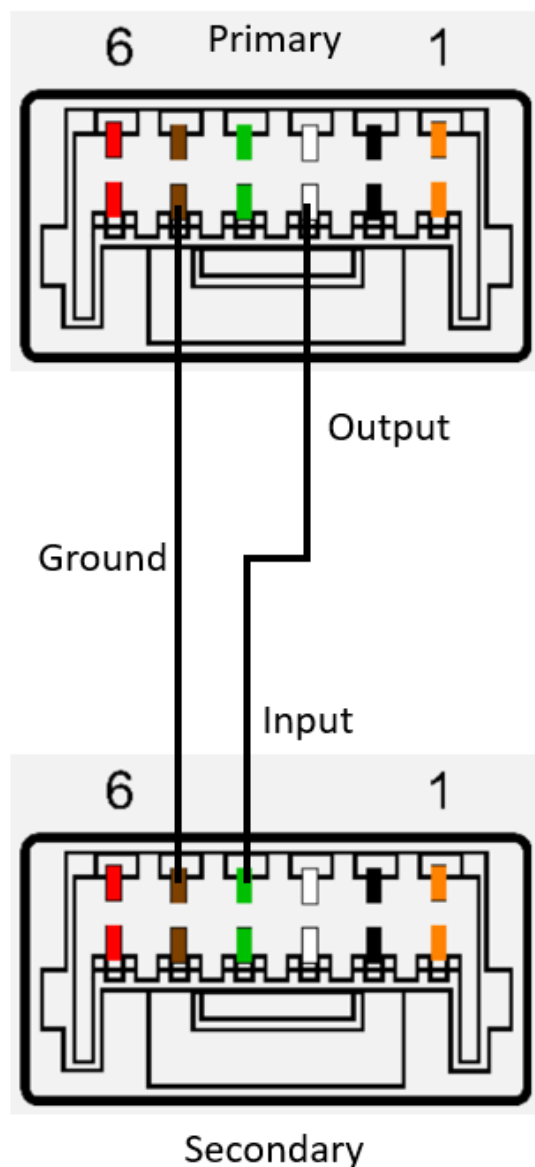

Step 2—Configure the Cameras

After the cameras have been physically connected, use either the SDK's demo program or write code to configure the GPIO lines.

Using SpinView

SpinView is the demo program available with the Spinnaker SDK.

For the primary camera:

1. Open SpinView.
2. Select the camera.
3. On the Features tab, click Digital IO Control.
4. Set the output line
 1. For **CM3**, **FL3**, **GS3**, **FFY-DL**, and **ORX** cameras, select Line2 from the Line Selection dropdown, set Line Mode to Output and set Line Source to ExposureActive.
 2. For **BFS** cameras, select Line1 from the Line Selection dropdown and set Line Mode to Output.
5. For **BFS** and **BFLY** cameras enable the 3.3V line
 1. For **BFS** cameras from the line selection drop-down select Line2 and check the checkbox for 3.3V Enable.
 2. For **BFLY** cameras, set 3.3V Enable to true
6. (Optional) Save the settings in a user set:
 1. Click User Set Control.
 2. From the User Set Selector drop-down, select User Set 0 or User Set 1.
 3. Click User Set Save.
 4. (Optional) From the User Set Default drop-down, select User Set 0 or User Set 1. This will ensure that this userset is loaded when the camera is booted up.

For each secondary camera:

1. Open SpinView and select the camera.
2. Select the GPIO tab.
 1. Set the trigger source
 2. For **BFS**, **CM3**, **FL3**, **FFY-DL**, and **GS3** cameras, from the Trigger Source drop-down, select Line 3.
 3. For **ORX** cameras, from the Trigger Source drop-down, select Line 5.
 4. For **BFLY** cameras, from the Trigger Source drop-down, select Line 0
3. From the Trigger Overlap drop-down, select Read Out.
4. From the Trigger Mode drop-down, select On.

5. (Optional) Save the settings in a user set:

1. Click User Set Control.
2. From the User Set Selector drop-down, select User Set 0 or User Set 1.
3. Click User Set Save.
4. (Optional) From the User Set Default drop-down, select User Set 0 or User Set 1. This will ensure that this userset is loaded when the camera is booted up.

Saving the settings to a user set ensures the camera starts up with these settings even after a power cycle.

To start streaming, select each camera and click Play.



Using FlyCap2 (BFLY, FL3, GS3, CM3)

FlyCap2 is the demo program available with the FlyCapture2 SDK.

For the primary camera:

1. Open FlyCap2, select the camera and click Configure Selected.
2. For BFLY camera only, enable the 3.3 V line (red):
 1. In the Camera Control dialog, select the Camera Registers tab.
 2. Enter Register 19D0h (OUTPUT_VOLTAGE_ENABLE) and click Read Register.
 3. Set bit 31 to 1.
 4. Click Write Register.
3. For all cameras, enable the strobe:
 1. Select the Trigger/Strobe tab.
 2. For BFLY camera only, enable the strobe for GPIO1.
For all other cameras, enable the strobe for GPIO2.
4. Save the settings:
 1. Select the Advanced Camera Settings tab.
 2. Select a Memory Channel (either 1 or 2).
 3. Click Save.

For each secondary camera:

1. Open FlyCap2, select the camera and click Configure Selected.
2. In the Camera Control dialog, select the Trigger/Strobe tab.
3. For BFLY camera only, set the Source to 0.
For all other cameras, set the Source to 3.
4. Set the Mode to 0 or 14. (Not all models support trigger mode 14.)
5. Select Enable/disable trigger.
6. Save the settings:
 1. Select the Advanced Camera Settings tab.
 2. Select a Memory Channel (either 1 or 2).
 3. Click Save.

Saving the settings to a memory channel ensures the camera starts up with these settings even after a power cycle.

Start Saving Images at the Same Time

Once you have configured the primary and secondary cameras you can start saving synchronized images.

Note: If saving images at high bandwidth, we recommend using a console application instead SpinView or FlyCap2. For details, see [Saving Images at High Bandwidth](#).

For both SpinView and FlyCap2:

1. Ensure the primary camera's trigger mode is turned on.
2. In the streaming window for the primary camera, click on the recording button.
3. Modify the recording settings as necessary.
4. Click the Start Recording button.
5. Keep the recording window open.
6. Repeat steps 1 through 5 for the secondary camera.
7. Turn off trigger mode for the primary camera. This starts capture for both cameras.

Using Custom Code

Both the Spinnaker SDK and the FlyCapture2 SDK come with example code. Elements of these two code examples can be combined to configure multiple cameras.

SDK	EXAMPLES	LOCATION
Spinnaker SDK	AcquisitionMultipleCamera Trigger	\src\ of the SDK directory Example: C:\Program Files\Point Grey Research\Spinnaker\src
FlyCapture2 SDK	MultipleCameraEx AsyncTriggerEx	\src\ of the SDK directory Example: C:\Program Files\Point Grey Research\FlyCapture2\src

In the example configurations above, FL3, GS3, and CM3 use switchable input/output GPIO pins for their strobe outputs. The strobe must be turned on when using these cameras for synchronized capture. To turn on the strobe, create an instance of the StrobeControl struct using the following code:

```
StrobeControl strobe;  
  
strobe.source = 2;  
  
error = cam.GetStrobe(&strobe);  
  
strobe.onOff = true;  
  
error = cam.SetStrobe(&strobe);
```

Troubleshooting

Secondary camera captures images at half the frame rate of the primary camera

Cause: The secondary camera isn't using overlapping triggering

Solution: On the secondary camera, switch to using Trigger Overlap as described above. Not all camera models support Trigger Overlap (Trigger Mode 14). To determine if it is supported, consult the Technical Reference for your camera, available from the camera's support page.

For more information on trigger modes and differences between overlapped and non-overlapped triggering, see the following knowledge base articles:

- [Maximum framerate possible in asynchronous \(trigger\) mode](#)
- [What external trigger modes are supported by my camera?](#)

Secondary camera captures images at a very slow frame rate

Cause: The camera's exposure (shutter) value is too large.

Solution: Exposure (shutter) time can be adjusted.

- In SpinView—On the Settings tab
- In FlyCap2—On the Camera Settings tab of the Camera Control dialog.

I can't properly trigger more than one secondary camera

Cause: the physical setups shown above have been tested with only one secondary camera; we do not guarantee they will work for multiple secondary cameras.

Solution: Modify the pull up resistor setup to accommodate the additional cameras.

Feedback