

# Anduril 2 cheat sheet

From Off Advanced Mode	
1C	On (ramp mode, memorized level)
1H	On (ramp mode, floor level)
2C	On (ramp mode, ceiling level)
2H	On (momentary turbo)
3C	Battcheck mode
3H	Strobe mode (whichever was used last)
4C	Lockout mode
5C	Momentary mode
7C	Aux LEDs: Next pattern
7H	Aux LEDs: Next color
9H	Misc config menu (varies per light)
10H	Simple UI Ramp Config Menu
13H	Factory reset (on some lights)
15C	Version check

Simple UI Ramp Config Menu 7H from Off	
1	Floor default: 20/150
2	Ceiling default: 120/150
3	Steps default: 5
4	Turbo default: 0
	Style no turbo

Battery Check Mode (3C)	
1C	Off
2C	Next mode (Temp check, Beacon, SOS)
7H	Voltage Config Menu

Misc Config 9H from Off	
1	Tint 0 = smooth ramp style 1 = toggle
2	Jump 1 to 150 Start between 20 and level 50

Ramp Mode (On)	
1C	On
1H	Ramp (up, with reversing)
2H	Ramp (down)
2C	Go to/from ceiling or turbo
3C	Change ramp style (smooth / stepped)
3H	Tint ramping (on some lights) / Momentary turbo (on lights without tint ramping)
4C	Lockout mode
5C	Momentary mode
5H	Sunset Timer and Add 5 Mins
7H	Ramp config menu 1: floor 2: ceiling 3: speed/steps
10C	Turn on manual memory and save current brightness
10H	Ramp Extras config menu

Ramp Config Menu (Smooth) 7H from On	
1	Floor default: 1/150
2	Ceiling default: 120/150
3	Ramp default: 1 Speed fastest speed

Ramp Config (Stepped) 7H from On	
1	Floor default: 20/150
2	Ceiling default: 120/150
3	# of steps default: 7

Ramp Extras 10H from On	
1	Enable Automatic Mem
2	Set Manual Mem Timeout
3	Ramp after Moon or Not 0: Ramp after moon 1: Don't ramp after moon
4	Advanced UI turbo style 0: No Turbo 1: 2C goes to full power 2: 2C goes to ceiling, then turbo

Lockout	
1C/1H	Momentary moon (lowest floor)
2C/2H	Momentary moon (highest floor, or manual mem level)
3C	Unlock (go to "Off" mode)
4C	On (ramp mode, memorized level)
4H	On (ramp mode, floor level)
5C	On (ramp mode, ceiling level)
7C	Aux LEDs: Next pattern
7H	Aux LEDs: Next color
10H	Auto-lock config menu: 1 click == 1 min

Strobe Mode 3H from Off	
1C	Turn Off
2C	Next Mode
1H	Increase Brightness/Strobe
2H	Decrease Brightness/Strobe
5C	Momentary Mode
Candle -> Bike -> Party -> Tactical -> Lightning	

Aux Colors	
7H from Off or Lockout	
- Red	
- Yellow (Red+Green)	
- Green	
- Cyan (Green+Blue)	
- Blue	
- Purple (Blue+Red)	
- White (Red+Green+Blue)	
- Disco	
- Rainbow	
- Voltage	