

# Anduril 2 cheat sheet

## From Off Advanced Mode

1C	On (ramp mode, memorized level)
1H	On (ramp mode, floor level)
2C	On (ramp mode, ceiling level)
2H	On (momentary turbo)
3C	Battcheck mode
3H	Strobe mode (whichever was used last)
4C	Lockout mode
5C	Momentary mode
7C	Aux LEDs: Next pattern
7H	Aux LEDs: Next color
9H	Misc config menu (varies per light)
10C	Simple UI
10H	Simple UI Ramp Config Menu
13H	Factory reset (on some lights)
15C	Version check

## Simple UI Ramp 10H from Off

1	Floor	default: 20/150
2	Ceiling	default: 120/150
3	Steps	default: 5
4	Turbo Style	default: 0 no turbo

## Battery Check (3C) from Off

1C	Off
2C	Next mode Temp check, Beacon, SOS
7H	Voltage Config Menu

## Misc Config 9H from Off

1	Tint ramp	0 = smooth 1 = toggle
2	Jump Start	1 to 150 usually between 20 and 50

## Blinky Mode 3C from Off

Batt	1C	Off
Batt	2C	Next
Batt	7H	Voltage config
Temp	1C	Off
Temp	2C	Next
Temp	7H	Thermal config
Beacon	1C	Off
Beacon	1H	Timing
Temp check -> Beacon -> SOS		

## Ramp Mode (On)

1C	On
1H	Ramp (up, with reversing)
2H	Ramp (down)
2C	Go to/from ceiling or turbo
3C	Change ramp style (smooth / stepped)
3H	Tint ramping (on some lights) / Momentary turbo (on lights without tint ramping)
4C	Lockout mode
5C	Momentary mode
5H	Sunset Timer and Add 5 Mins
7H	Ramp config menu 1: floor 2: ceiling 3: speed/steps
10C	Turn on manual memory and save current brightness
10H	Ramp Extras config menu

## Ramp Config Menu (Smooth) 7H from On

1	Floor	default: 1/150
2	Ceiling	default: 120/150
3	Ramp	default: 1
	Speed	fastest speed

## Ramp Config (Stepped) 7H from On

1	Floor	default: 20/150
2	Ceiling	default: 120/150
3	# of steps	default: 7

## Ramp Extras 10H from On

1	Enable Automatic Mem
2	Set Manual Mem Timeout
3	Ramp after Moon or Not 0: Ramp after moon 1: Don't ramp after moon
4	Advanced UI turbo style 0: No Turbo 1: 2C goes to full power 2: 2C goes to ceiling, then turbo

## Lockout

1C/1H	Momentary moon (lowest floor)
2C/2H	Momentary moon (highest floor, or manual mem level)
3C	Unlock (go to "Off" mode)
4C	On (ramp mode, memorized level)
4H	On (ramp mode, floor level)
5C	On (ramp mode, ceiling level)
7C	Aux LEDs: Next pattern
7H	Aux LEDs: Next color
10H	Auto-lock config menu: 1 click == 1 min

## Strobe Mode 3H from Off

1C	Turn Off
2C	Next Mode
1H	Increase Brightness/Strobe
2H	Decrease Brightness/Strobe
5C	Momentary Mode
Candle -> Bike -> Party -> Tactical -> Lightning	

## Aux Colors 7H from Off or Lockout

- Red
- Yellow (Red+Green)
- Green
- Cyan (Green+Blue)
- Blue
- Purple (Blue+Red)
- White (Red+Green+Blue)
- Disco
- Rainbow
- Voltage