



*The Stinger Folding Motorcycle Trailer*

**Trailer In A Bag  
Owners Manual  
&  
Warranty Information**

[www.stingertrailer.com](http://www.stingertrailer.com)

## **PLEASE READ BEFORE USING YOUR** **STINGER TRAILER**

1. Assemble trailer (instructions included on next page or see video online)
2. Trailer must be hooked to vehicle before loading or unloading motorcycle.
3. Check that trailer is properly assembled prior to loading motorcycle on trailer.
4. Place steel tube under rear of trailer before loading or unloading bike.
5. Bearings should be greased every 2,000 miles OR annually (see [www.stingertrailer.com](http://www.stingertrailer.com) for greasing video)
6. Trailer comes with flat four electrical plug. Owner needs to wire towing vehicle. (Some vehicles may require an inverter).
7. Inflate tires evenly (35-70 lbs as preferred) at all times.
8. Trailer must be level once mounted. Adjustable ball mounts work well for this. If you are unable to perfectly level, it is best to have the coupler slightly elevated.
9. Always use caution when assembling to avoid pinching of electrical cable or hands
10. Check bolts on trailer periodically. Especially fenders!
11. Be sure to use at least four (4) straps to tie down bike (see [www.stingertrailer.com](http://www.stingertrailer.com) for tie down video)
12. Adjust the cradle setting to set chock for your tire so the chock runs up the back of your front tire snugly (see [www.stingertrailer.com](http://www.stingertrailer.com) for chock setting video)

Visit [www.stingertrailer.com](http://www.stingertrailer.com) for video demonstration

## **TRAILER IN A BAG ASSEMBLY**

1. Remove all contents from box
2. Feed the trailers electrical cable through the steel tube from the front section through the middle
3. Once cable is through attach front section of trailer to middle and secure with pin
4. Be careful to not pinch the wires
5. Attach axels to the back section of the trailer and secure each with 5/8 hitch pin and R clip
6. Feed the cable through again so it comes out the back end of the trailer, then attach the front section of the trailer to the back
7. Set the ramp on the rear of the trailer and insert lower pin and R clip first
8. Raise ramp and insert second pin on top
9. Once ramp is raised and secure, add the Tail Light Bracket with the hardware provided
10. Plug in trailer lights
11. Secure the front tie down bar with 2 (two) 5/16 quick pins
12. Assemble front tire stop
13. Place the tire stop in position to what would approximately center the motorcycle on the trailer
14. Position condor chuck with tab toward the rear of the trailer
15. Double check everything is secure
16. Attach trailer to vehicle and you are ready to load your motorcycle

Visit **[www.stingertrailer.com](http://www.stingertrailer.com)** for video demonstrations

# **STINGER TRAILER LIMITED WARRANTY**

Stingertrailer.com warrants to the original retail purchaser that the Stinger Trailer is free from defects in material and workmanship; and agrees to repair or replace, at Stingertrailer.com's discretion. Any defective parts are free of charge within Two (2) years from the date of purchase, if the product is used for personal use only.

The warranty is not transferable and does not cover damage that is a result of defects, other than in material or workmanship. Warranty does not cover damage caused by unreasonable use, including the failure to provide reasonable and necessary maintenance. Also, the warranty obligations do not apply to conditions resulting from misuse, alteration, or accident. In addition, this warranty does not cover replacement of non-defective parts (such as electrical wires, plugs, tires and lights) that may wear and need to be replaced within the warranty period in connection to regular maintenance.

## **DAMAGES NOT COVERED UNDER WARRANTY DUE TO MISUSE**

Warranty will not cover damages caused by travelling more than the designated 80 mph maximum that the tires are rated at, as well as not following instruction labels located on trailer and instruction sheet provided to consumer at time of purchase.

## **HOW TO OBTAIN WARRANTY SERVICE**

Warranty service can be obtained from Stingertrailer.com (1-800-577-8809). Shipping charges for parts sent back to the repair center are the responsibility of the purchaser depending on the type of defect to the product.

**[www.stingertrailer.com](http://www.stingertrailer.com)**